
PARTS CATALOG

トーハツ船外機
パーツ カタログ

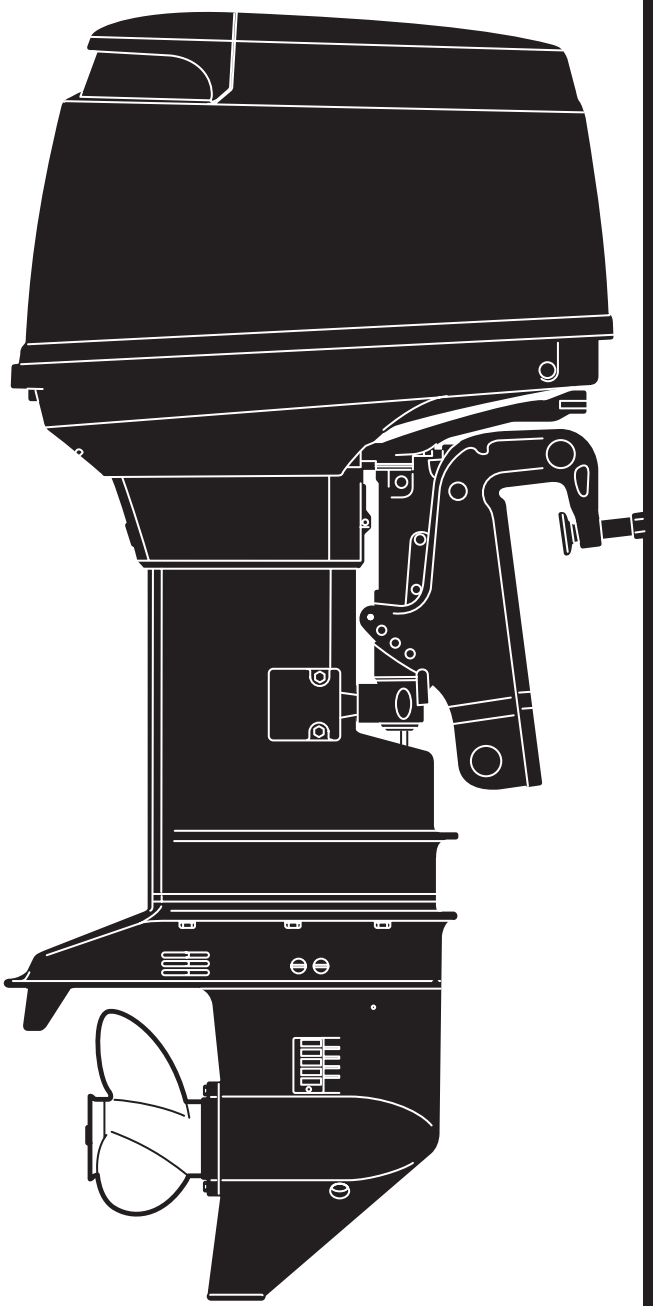

TOHATSU

MD 30B$_2$
40B$_2$
50B$_2$

Serial Number 000001AA~

OB NO.002-21048-3
1104

パーツカタログのご使用について

1. このパーツカタログは、2011 年 1 月現在で編集しております。

2. 新設、廃止または、変更が生じた場合は、サービスブルテン等にてお知らせ致しますので、その都度、ご訂正ください。

3. イラストレーション（部品図）は部品検査の目安として記載していますので現品と形状が異なる場合があります。

4. イラストが一つに対して複数の品番がありますので枝番と適用モデルを確認してからご注文願います。

適用モデル

Ref. No. 見出番号	Part No. 部品番号	Description 部品名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備考
2-1		3T5-00050-1	Crankshaft Ass'y W/Gear クランクシャフトアッシ(W/ギヤ)	1	1	1	
2-2		3J2-00114-0	* Main Bearing 6305 * メインベアリング 6305	1	1	1	
2-3		3C8-09060-0	* Oil Pump Drive Gear * オイルポンプドライブギヤ	1	1	1	
2-4		945107-2500	* C-Ring d=25 * Cリング d=25	1	1	1	
2-5	1	3GF-00001-1	Piston (STD) ピストン (STD)	3	3	3	STD
2-5	2	3GF-00004-1	Piston (0.5 O/S) ピストン (0.5O/S)	3	3	3	OPT

2-5
- 仕様違い
- イラスト位置 No.
- Fig. No.

5. アッセンブリまたは、キットでの販売部品は、その構成する部品の頭に (*) 印をつけて表しています。

6. 本文中に記載されている記号は、次の様になっています。

STD	: スタンダード	OPT	: オプション
O/S	: オーバーサイズ	Ass'y	: アッセンブリ
DO	: 国内	EX	: 海外
AR	: 必要に応じて選択	EU	: 欧州連合

7. オーダー上の注意
塗装部品の注文に当っては、以下に従ってください。
パーツナンバーの 4 桁目が “B”・“Q” 記号のものは塗装されています。現在の塗装色はパワーヘッドがブラック (B)、ロワユニットがアクアマリンブルー (Q)、プロペラがブラック（B）です。
[例示]

エンジンショートブロックキット	ロワユニットアッシ（L）
3GFB87090-3	3T5Q87302-3
B: ブラック	Q: アクアマリンブルー

8. ボルト・ナット・ワッシャのサイズ記号に付いて

ボルト　916124 - 0845
- 首下長さ
- 径
- 座付き (0): 座なし

ナット・ワッシャ　940121 - 0800
- 径

9. 標準部品のホースは、長巻（備考を参照）に代替されます。

ホース　98AB - 50 - 250
- 長さ
- 径


HOW TO USE THIS PARTS CATALOG

1. This Parts Catalog provides information available as of the end of January, 2011.

2. Please keep the Parts Catalog updated each time when receiving the Service Bulletin describing the addition, abolition and/or change of parts.

3. Actual shapes of parts may be different from the illustrations shown in this Parts Catalog because they are described only as a guide for searching parts.

4. One illustration is given more than one article number. Please confirm the sub-number and applicable model before ordering parts.

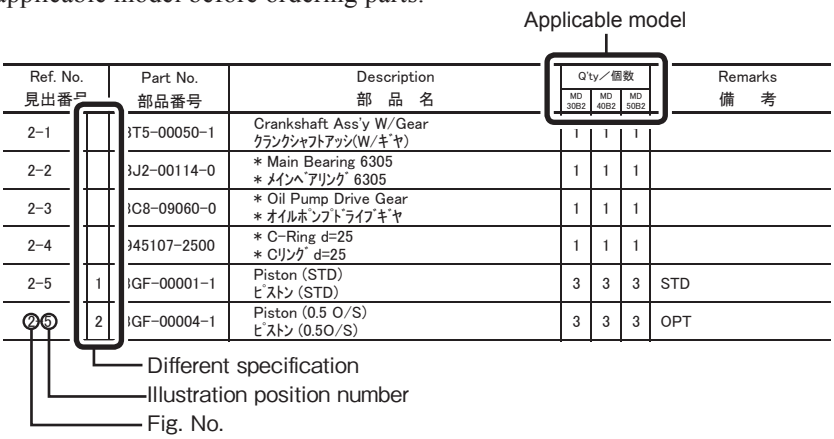

5. Given mark in (∗) to part number shows assembly or kit part.

6. Marks in this Parts Catalog show.

STD	: Standard	OPT	: Optional Parts
O/S	: Over size	Ass'y	: Assembly
DO	: Domestic Model	EX	: Export Model
AR	: As required	EU	: European Union

7. Attention to order
   Please order painted parts in accordance with following.
   The parts that fourth figure of the parts number is (B), (Q) have painted. Present coloring of power head is black (B), lower unit is aqua marine blue (Q) and propeller is black (B).
   [Example]

Engine Short Block Kit	Lower Unit Assy (L)
3GFB87090-3	3T5Q87302-3
B: Black	Q: Aquamarine Blue

8. About dimensional identification of bolts, nuts and washers.

Bolt 916124 - 0845
- Length below neck
- Diameter
- Washer based (0) : No washer

Nuts & Washers 940121 - 0800
- Diameter

9. Hose, that is a standard part, is replaced with long hose.

Hose 98AB - 50 - 250
- Length
- Diameter

目　　次
CONTENTS

Fig. 1 CYLINDER・CRANK CASE
シリンダ・クランクケース ····· 1

Fig. 2 ピストン・クランクシャフト
PISTON・CRANKSHAFT ····· 5

Fig. 3 AIR CHAMBER (AIR BOX)
エアチャンバ ····· 7

Fig. 4 AIR RAIL
エアレール ····· 9

Fig. 5 AIR COMPRESSOR
エアコンプレッサ ····· 13

Fig. 6 FFP ASS'Y
FFP アッシ ····· 17

Fig. 7 THROTTLE
スロットル ····· 19

Fig. 8 VAPOR SEPARATOR・FUEL LINE
ベーパセパレータ・フュエルライン ····· 23

Fig. 9 MAGNETO
マグネト ····· 27

Fig. 10 ELECTRIC PARTS (ECU・DIAGRAM)
エレクトリックパーツ（ECU・ダイヤフラム） ····· 29

Fig. 11 ELECTRIC PARTS (STARTER MOTOR)
エレクトリックパーツ（スタータモータ） ····· 33

Fig. 12 OIL PUMP
オイルポンプ ····· 37

Fig. 13 DRIVE SHAFT HOUSING
ドライブシャフトハウジング ····· 41

Fig. 14 GEAR CASE (DRIVE SHAFT)
ギヤケース（ドライブシャフト） ····· 45

Fig. 15 GEAR CASE (DRIVE SHAFT) (MWD50・Big Foot)
ギヤケース（ドライブシャフト）（MWD50・ビッグフット） ····· 49

Fig. 16 GEAR CASE (PROPELLER SHAFT)
ギヤケース（プロペラシャフト） ····· 53

Fig. 17 GEAR CASE (PROPELLER SHAFT) (MWD50・Big Foot)
ギヤケース（プロペラシャフト）（MWD50・ビッグフット） ····· 57

Fig. 18 BRACKET (1) MANUAL TILT
ブラケット（1）マニュアルチルト ····· 61

Fig. 19 MANUAL TILT (M Model)
マニュアルチルト（M Model） ····· 65

Fig. 20 BRACKET (2) POWER TRIM・TILT/GAS ASSIST
ブラケット（2）パワートリム・チルト／ガスアシスト ····· 67

Fig. 21 POWER TRIM・TILT
パワートリム・チルト ····· 73

Fig. 22 TILLER HANDLE (F Model)
ティラハンドル（F Model） ····· 75

Fig. 23 SWITCH BOX (F Model)
スイッチボックス（F Model） ····· 79

Fig. 24 BOTTOM COWL (MOTOR COVER LOWER)
ボトムカウル（モータカバーロワ） ····· 81

SHIFT
Fig. 25 シフト ····· 85

TOP COWL
Fig. 26 トップカウル ····· 89

SEPARATE FUEL TANK
Fig. 27 セパレートフュエルタンク ····· 91

COMPONENT PARTS OF REMOTE CONTROL BOX
Fig. 28 リモコンボックス構成部品 ····· 93

COMPONENT PARTS OF REMOTE CONTROL BOX (ELECTRICAL PARTS)
Fig. 29 リモコンボックス構成部品（電装品関係） ····· 97

ACCESSORIES
Fig. 30 アクセサリ ····· 99

OPTIONAL PARTS (1)
Fig. 31 オプショナルパーツ (1) ····· 103

OPTIONAL PARTS (2)
Fig. 32 オプショナルパーツ (2) ····· 107

OPTIONAL PARTS (3)
Fig. 33 オプショナルパーツ (3) ····· 111

ASSEMBLY・KIT
Fig. 34 アッセンブリキット ····· 113


RIGGING・KIT
Fig. 35 リギングキット ····· 115

索引 ····· 115


INDEX ····· 123

INDEX (Parts Number) ····· 129


CYLINDER・CRANK CASE
Fig. 1　シリンダ・クランクケース

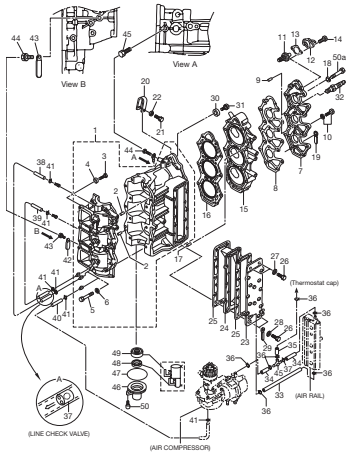


PISTON・CRANKSHAFT
Fig. 2　ピストン・クランクシャフト

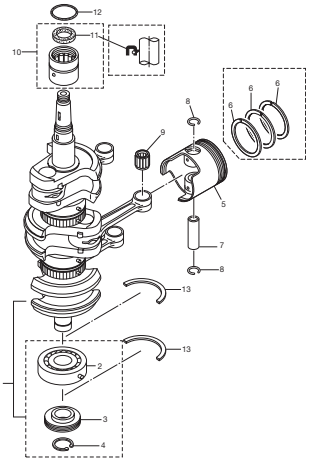


AIR CHAMBER (AIR BOX)
Fig. 3　エアチャンバ

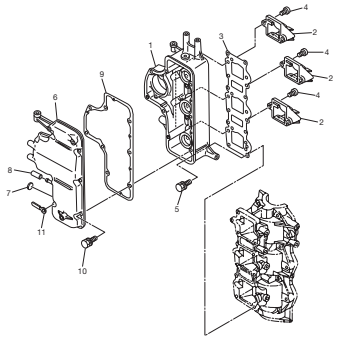


AIR RAIL
Fig. 4　エアレール

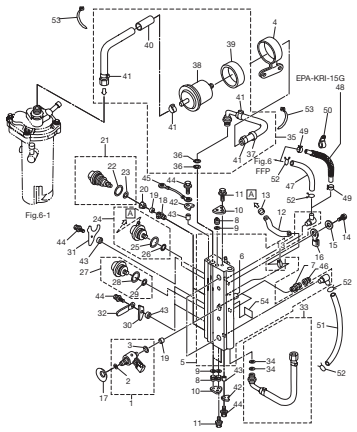


AIR COMPRESSOR
Fig. 5　エアコンプレッサ

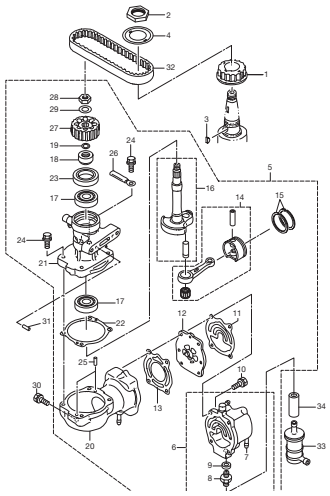


FFP ASS'Y
Fig. 6　FFP アッシ

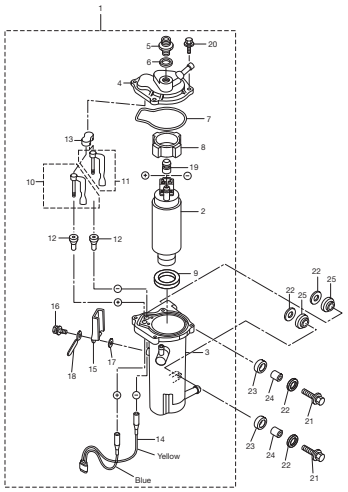


THROTTLE
Fig. 7　スロットル

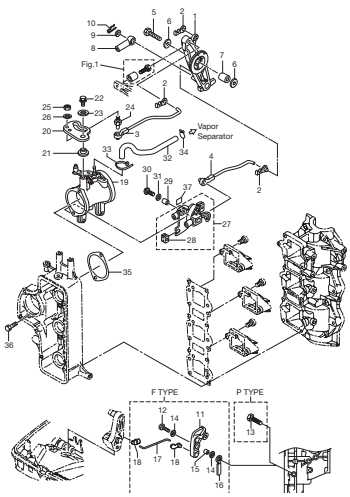


VAPOR SEPARATOR・FUEL LINE
Fig. 8　ベーパセパレータ・フュエルライン

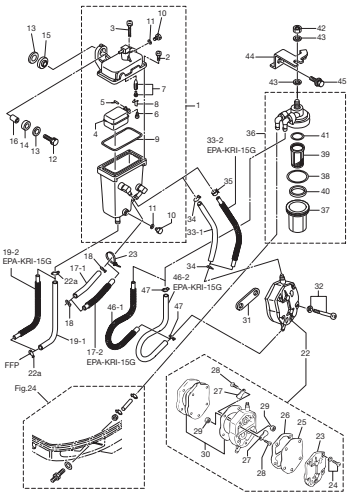


MAGNETO
Fig. 9　マグネト

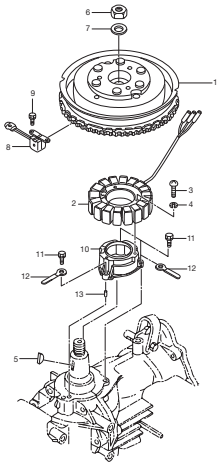


ELECTRIC PARTS (ECU・DIAGRAM)
Fig. 10　エレクトリックパーツ（ECU・ダイヤフラム）

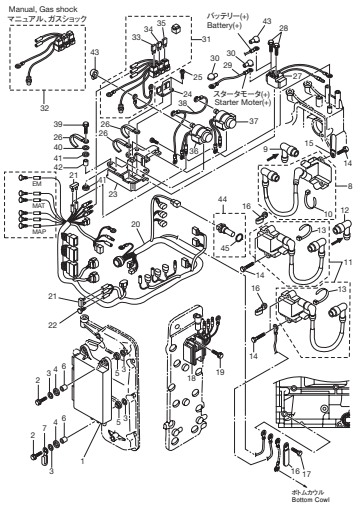


ELECTRIC PARTS (STARTER MOTOR)
Fig. 11　エレクトリックパーツ（スタータモータ）

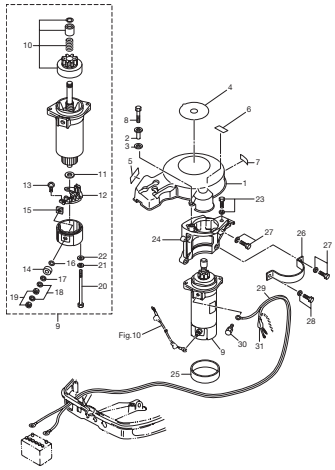


OIL PUMP
Fig. 12　オイルポンプ

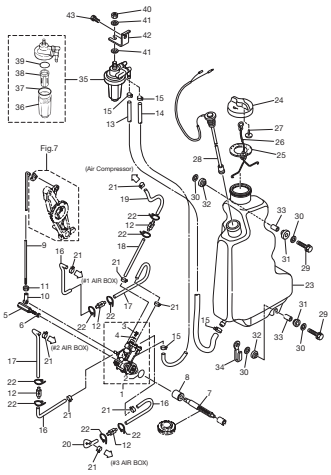


DRIVE SHAFT HOUSIN
Fig. 13　ドライブシャフトハウジング

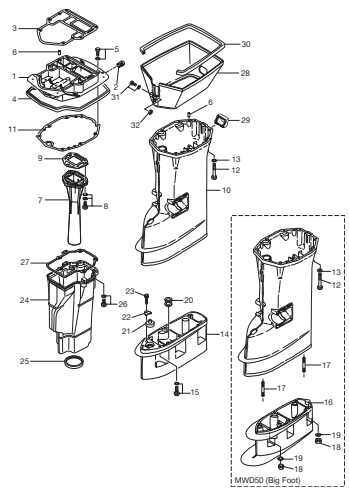


GEAR CASE (DRIVE SHAFT)
Fig. 14　ギヤケース（ドライブシャフト）

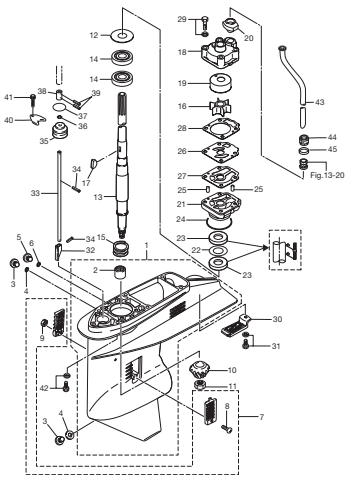


GEAR CASE (DRIVE SHAFT) (MWD50・Big Foot)
Fig. 15　ギヤケース（ドライブシャフト）(MWD50・ビッグフット)

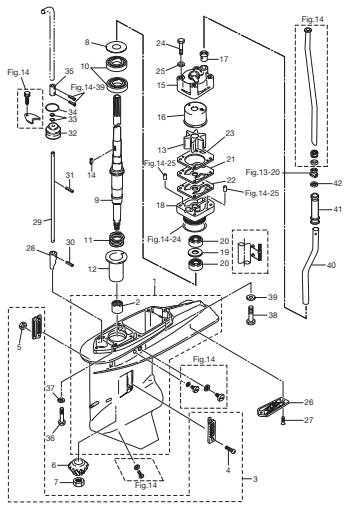


GEAR CASE (PROPELLER SHAFT)
Fig. 16　ギヤケース（プロペラシャフト）

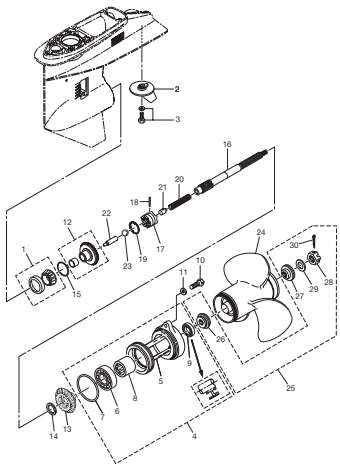


GEAR CASE (PROPELLER SHAFT) (MWD50・Big Foot)
Fig. 17　ギヤケース（プロペラシャフト）(MWD50・ビッグフット)

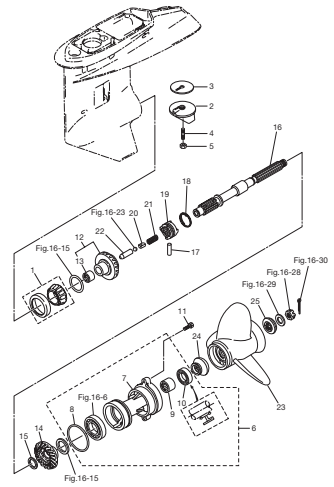


BRACKET (1) MANUAL TILT
Fig. 18　ブラケット（1）マニュアルチルト

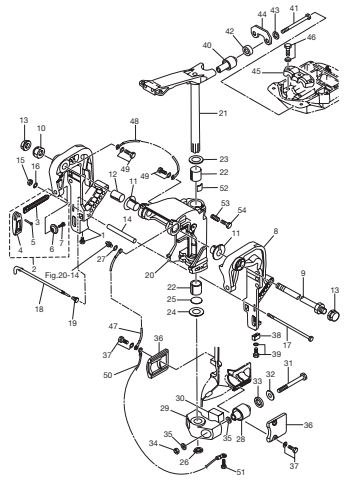


MANUAL TILT (M Model)
Fig. 19　マニュアルチルト（M Model）

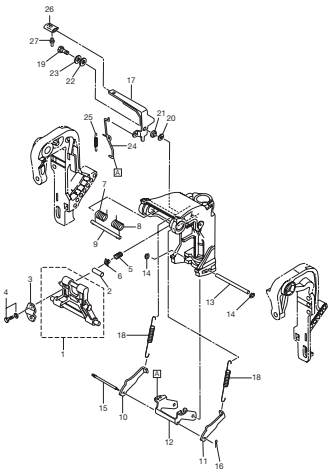


BRACKET (2) POWER TRIM・TILT/GAS ASSIST
Fig. 20　ブラケット（2）パワートリム・チルト／ガスアシスト

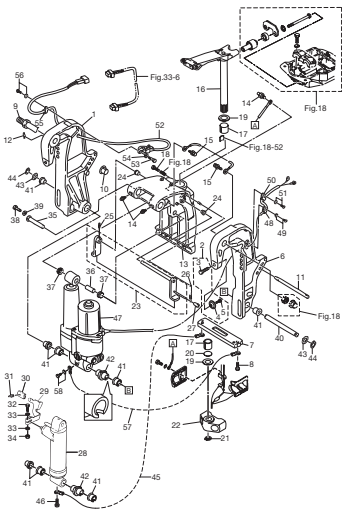


POWER TRIM・TILT
Fig. 21　パワートリム・チルト

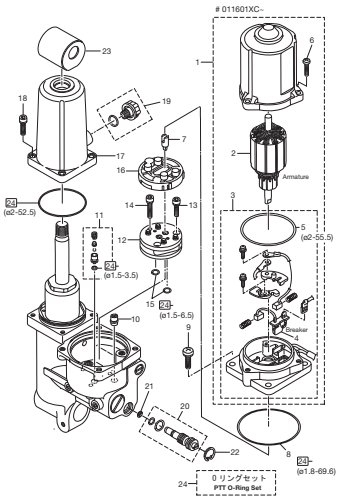


TILLER HANDLE (F Model)
Fig. 22　ティラハンドル（FModel）

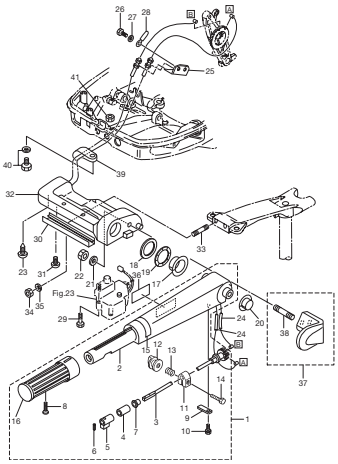


SWITCH BOX (F Model)
Fig. 23　スイッチボックス（F Model）

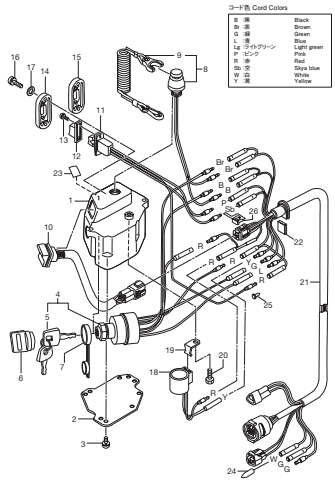


BOTTOM COWL (MOTOR COVER LOWER)
Fig. 24　ボトムカウル（モータカバーロワ）

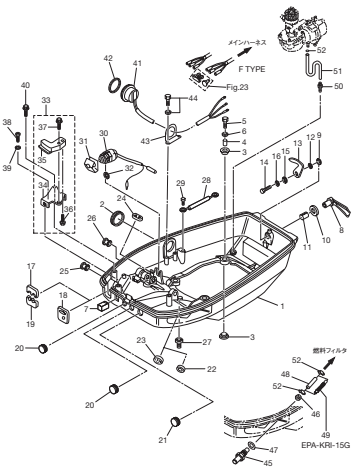


SHIFT
Fig. 25　シフト

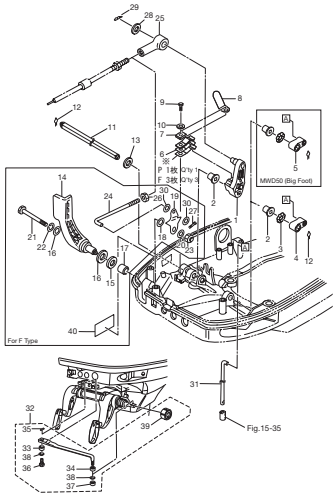


TOP COWL
Fig. 26　トップカウル

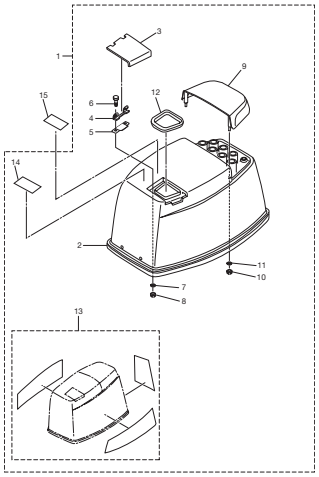


SEPARATE FUEL TANK
Fig. 27　セパレートフュエルタンク

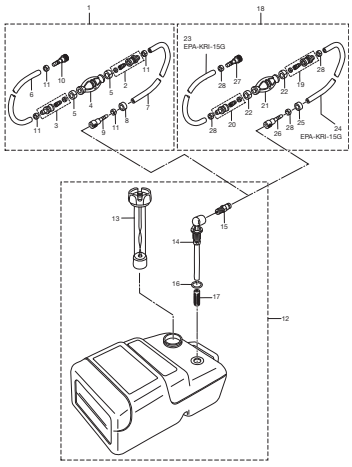


COMPONENT PARTS OF REMOTE CONTROL BOX
Fig. 28　リモコンボックス構成部品

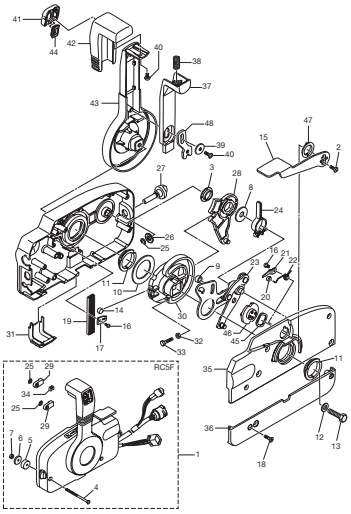


COMPONENT PARTS OF REMOTE CONTROL BOX (ELECTRICAL PARTS)
Fig. 29　リモコンボックス構成部品（電装品関係）

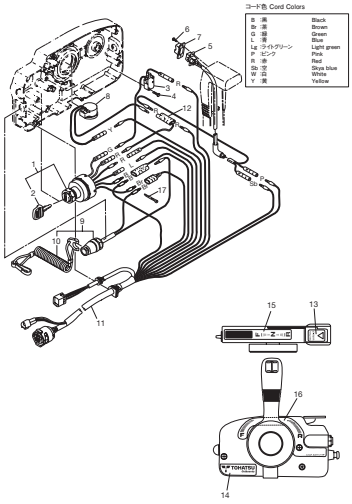


ACCESSORIES
Fig. 30　アクセサリ

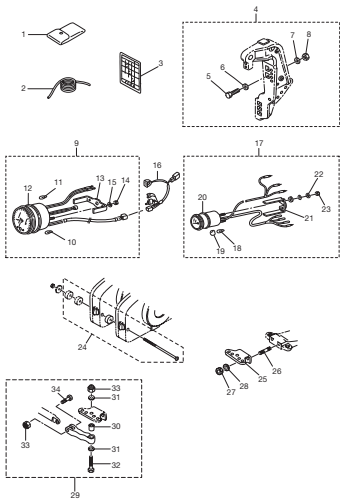


OPTIONAL PARTS (1)
Fig. 31　オプショナルパーツ（1）

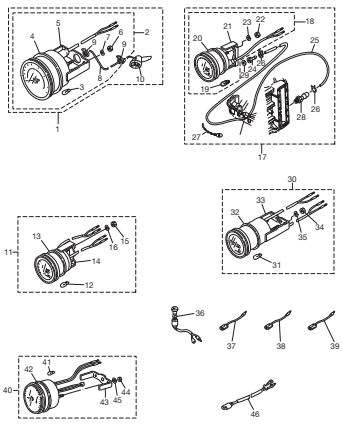


OPTIONAL PARTS (2)
Fig. 32　オプショナルパーツ（2）

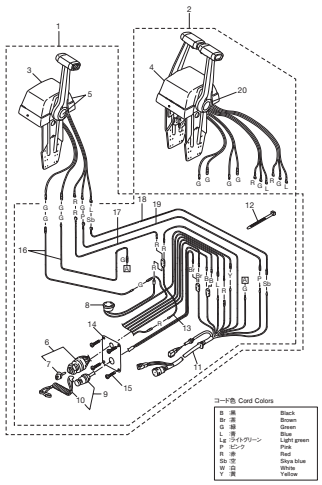


OPTIONAL PARTS (3)
Fig. 33　オプショナルパーツ（3）

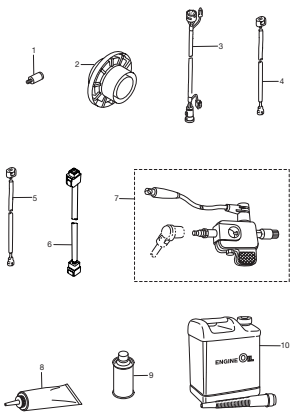


ASSEMBLY KIT
Fig. 34　アッセンブリキット

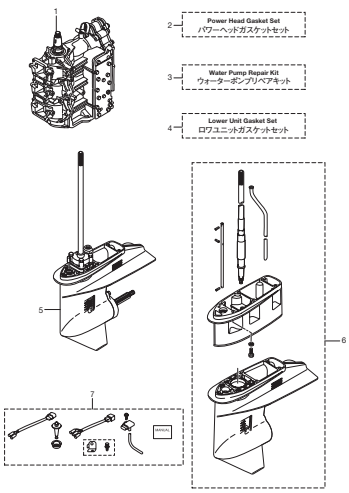

RIGGING・KIT
Fig. 35　リギングキット

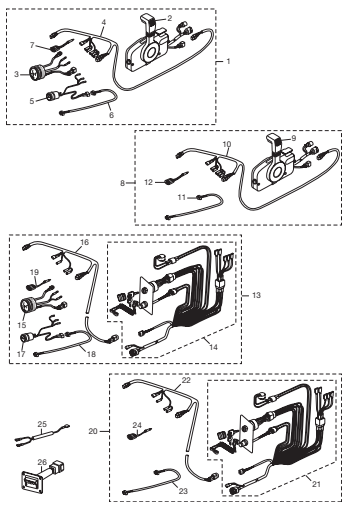


CYLINDER・CRANK CASE
Fig. 1　シリンダ・クランクケース

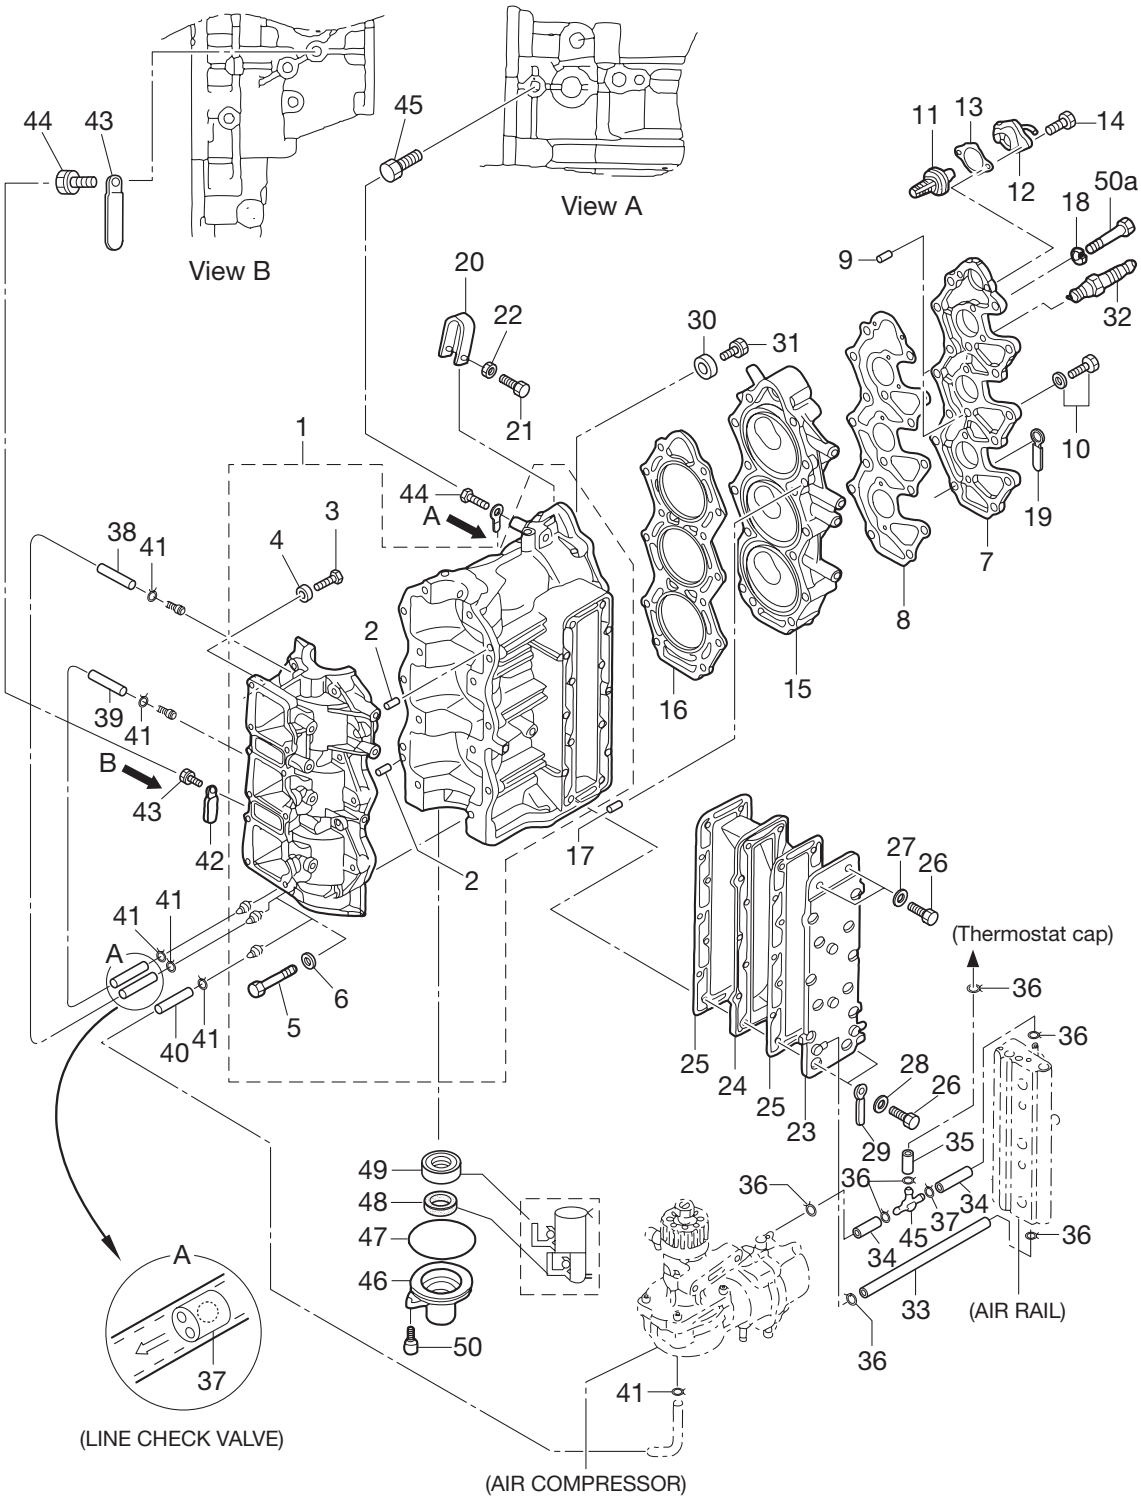


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
1-1	3T5B01100-0	Cyl Block・Crankcase Ass'y ｼﾘﾝﾀﾞ・ｸﾗﾝｸｹｰｽｱｯｼ	1	1	1	
1-2	345-01111-0	* Dowel Pin 6-12 *ﾀﾞｳｪﾙﾋﾟﾝ 6-12	2	2	2	
1-3	910103-0618	* Bolt *ﾎﾞﾙﾄ	1	1	1	
1-4	353-76079-0	* Collar 6.2-9-9.3 *ｶﾗｰ 6.2-9-9.3	1	1	1	
1-5	916124-0845	* Bolt *ﾎﾞﾙﾄ	14	14	14	
1-6	940121-0800	* Washer *ﾜｯｼｬ	14	14	14	
1-7	3T5B01021-0	Cylinder Head Cover ｼﾘﾝﾀﾞﾍｯﾄﾞｶﾊﾞｰ	1	1	1	
1-8	3T5-01024-0	Cylinder Head Cover Gasket ｼﾘﾝﾀﾞﾍｯﾄﾞｶﾊﾞｰｶﾞｽｹｯﾄ	1	1	1	
1-9	334-65012-0	Dowel Pin 4-10 ﾀﾞｳｪﾙﾋﾟﾝ 4-10	2	2	2	
1-10	910121-5620	Bolt ﾎﾞﾙﾄ	4	4	4	
1-11	345-01030-0	Thermostat ｻｰﾓｽﾀｯﾄ	1	1	1	
1-12	3T5B01031-1	Thermostat Cap Ass'y ｻｰﾓｽﾀｯﾄｷｬｯﾌﾟｱｯｼ	1	1	1	
1-13	3T5-01032-0	Thermostat Cap Gasket ｻｰﾓｽﾀｯﾄｷｬｯﾌﾟｶﾞｽｹｯﾄ	1	1	1	
1-14	9101E3-5625	Bolt ﾎﾞﾙﾄ	2	2	2	
1-15	3GFB01091-0	Cylinder Head ｼﾘﾝﾀﾞﾍｯﾄﾞ	1	1	1	
1-16	3T5-01005-0	Cylinder Head Gasket ｼﾘﾝﾀﾞﾍｯﾄﾞｶﾞｽｹｯﾄ	1	1	1	
1-17	345-01111-0	Dowel Pin 6-12 ﾀﾞｳｪﾙﾋﾟﾝ 6-12	2	2	2	
1-18	345-01015-0	Washer 8.5-19.5-3.2 ﾜｯｼｬ 8.5-19.5-3.2	14	14	14	
1-19	3T5-06971-1	Clamp 8.5-85P ｸﾗﾝﾌﾟ 8.5-85P	1	1	1	
1-20	3C8-01513-1	Hanger ﾊﾝｶﾞ	1	1	1	
1-21	9101F4-0835	Bolt ﾎﾞﾙﾄ	1	1	1	
1-22	940121-0800	Washer ﾜｯｼｬ	1	1	1	
1-23	3Z5B02300-1	Exhaust Cover Ass'y ｴｷｿﾞｰｽﾄｶﾊﾞｰｱｯｼ	1	1	1	
1-24	3C8-02302-0	Exhaust Cover (Inner) ｴｷｿﾞｰｽﾄｶﾊﾞｰ (ｲﾝﾅ)	1	1	1	
1-25	3C8-02305-2	Exhaust Cover Gasket ｴｷｿﾞｰｽﾄｶﾊﾞｰｶﾞｽｹｯﾄ	2	2	2	
1-26	9161F9-0630	Bolt ﾎﾞﾙﾄ	14	14	14	
1-27	940103-0600	Washer ﾜｯｼｬ	2	2	2	
1-28	940121-0600	Washer ﾜｯｼｬ	12	12	12	
1-29	3T4-06972-1	Clamp 6.5-87P ｸﾗﾝﾌﾟ 6.5-87P	1	1	1	
1-30	338-60218-2	Anode ｱﾉｰﾄﾞ	1	1	1	

CYLINDER・CRANK CASE
Fig. 1　シリンダ・クランクケース

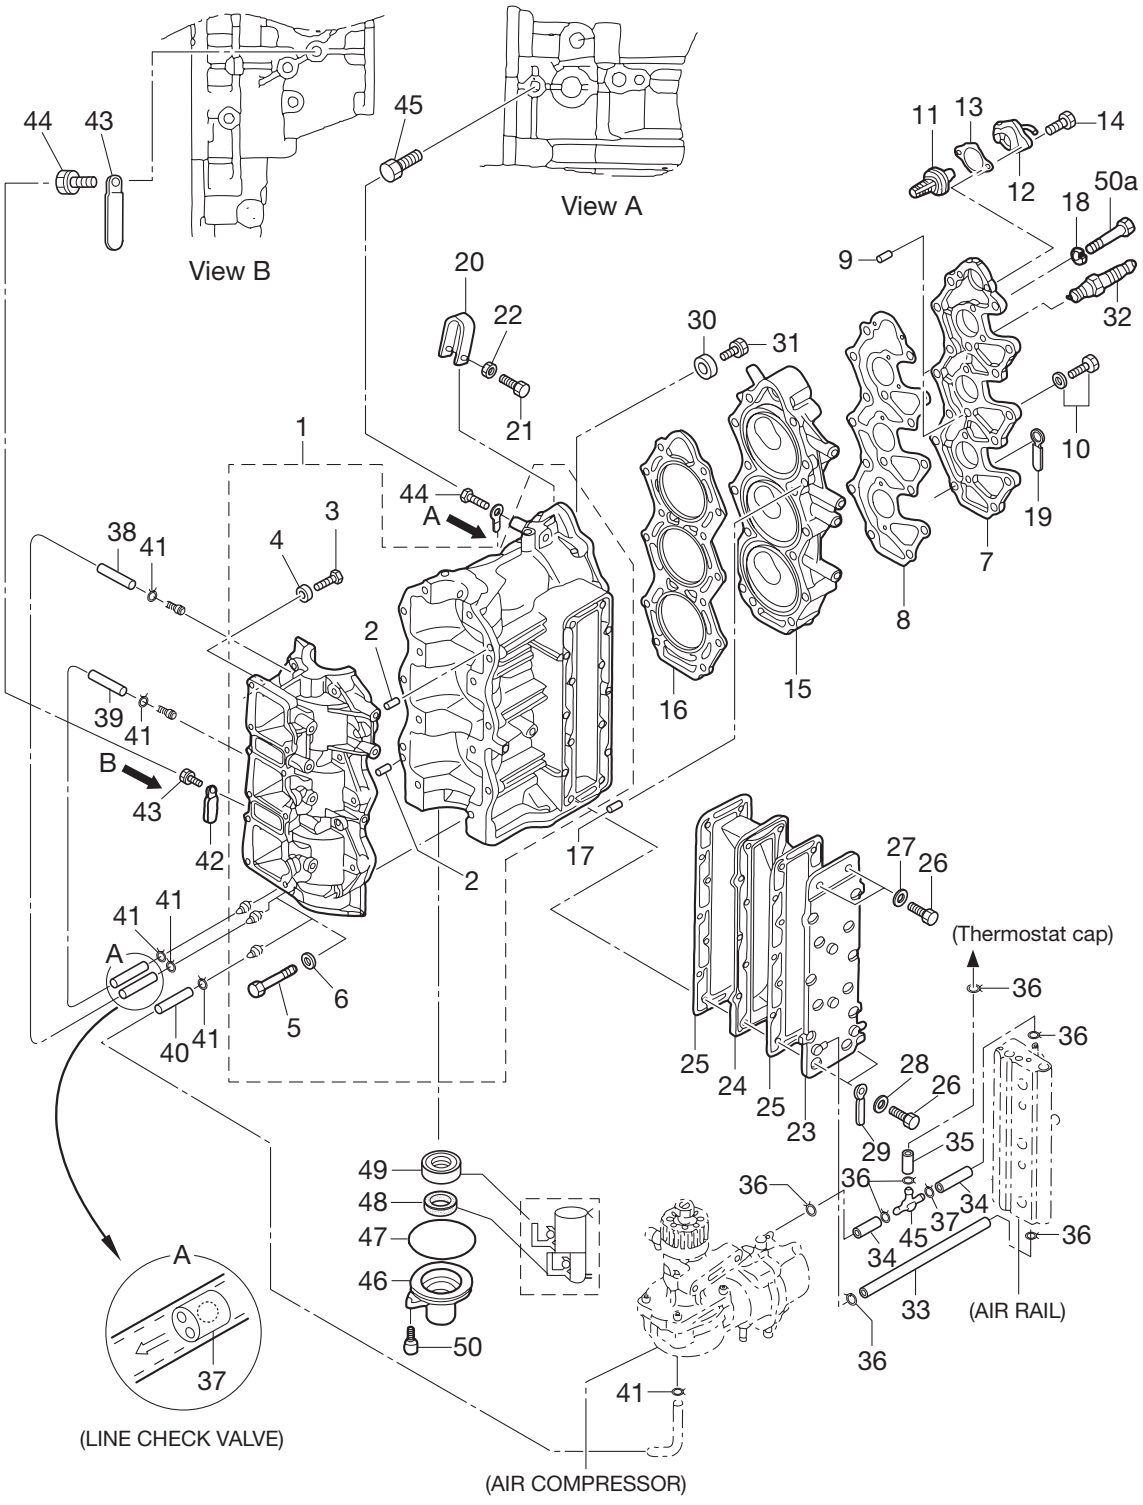


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
1-31	910103-5620	Bolt ﾎﾞﾙﾄ	1	1	1	
1-32	9701-1-1111	Spark Plug (IZFR6Q) ｽﾊﾟｰｸﾌﾟﾗｸﾞ (IZFR6Q)	3	3	3	
1-33	98AB-50-250	Hose ﾎｰｽ	1	1	1	98AB-501000
1-34	98AB-50-075	Hose ﾎｰｽ	2	2	2	98AB-501000
1-35	98AB-50-115	Hose ﾎｰｽ	1	1	1	98AB-501000
1-36	338-02215-0	Clip Fuel Pipe φ10 ｸﾘｯﾌﾟ ﾌｭｴﾙﾊﾟｲﾌﾟ φ10	8	8	8	
1-37	393-01160-0	Check Valve ﾁｪｯｸﾊﾞﾙﾌﾞ	2	2	2	for Lubrication Pipe
1-38	98AL-40-355	Hose ﾎｰｽ	1	1	1	98AL-401000
1-39	98AL-40-205	Hose ﾎｰｽ	1	1	1	98AL-401000
1-40	98AL-40-335	Hose ﾎｰｽ	1	1	1	98AL-401000
1-41	338-01133-0	Clip φ7 ｸﾘｯﾌﾟ φ7	6	6	6	
1-42	309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P	1	1	1	
1-43	910103-0610	Bolt ﾎﾞﾙﾄ	1	1	1	
1-44	910103-5610	Bolt ﾎﾞﾙﾄ	1	1	1	
1-45	3T7-01175-0	T-Nipple Ass'y W/Valve T-ﾆｯﾌﾟﾙ ｱｯｼ (W/ﾊﾞﾙﾌﾞ)	1	1	1	
1-46	3C8-01291-0	Crankcase Head ｸﾗﾝｸｹｰｽﾍｯﾄﾞ	1	1	1	
1-47	346-01216-0	O-Ring 1.7-59 Oﾘﾝｸﾞ 1.7-59	1	1	1	
1-48	3T5-00122-0	Oil Seal 25-40-8 ｵｲﾙｼｰﾙ 25-40-8	1	1	1	
1-49	3C8-01215-0	Oil Seal 16-28-7 ｵｲﾙｼｰﾙ 16-28-7	1	1	1	
1-50	910103-5620	Bolt ﾎﾞﾙﾄ	2	2	2	
1-50a	916189-0865	Bolt ﾎﾞﾙﾄ	14	14	14	

PISTON・CRANKSHAFT
Fig. 2　ピストン・クランクシャフト

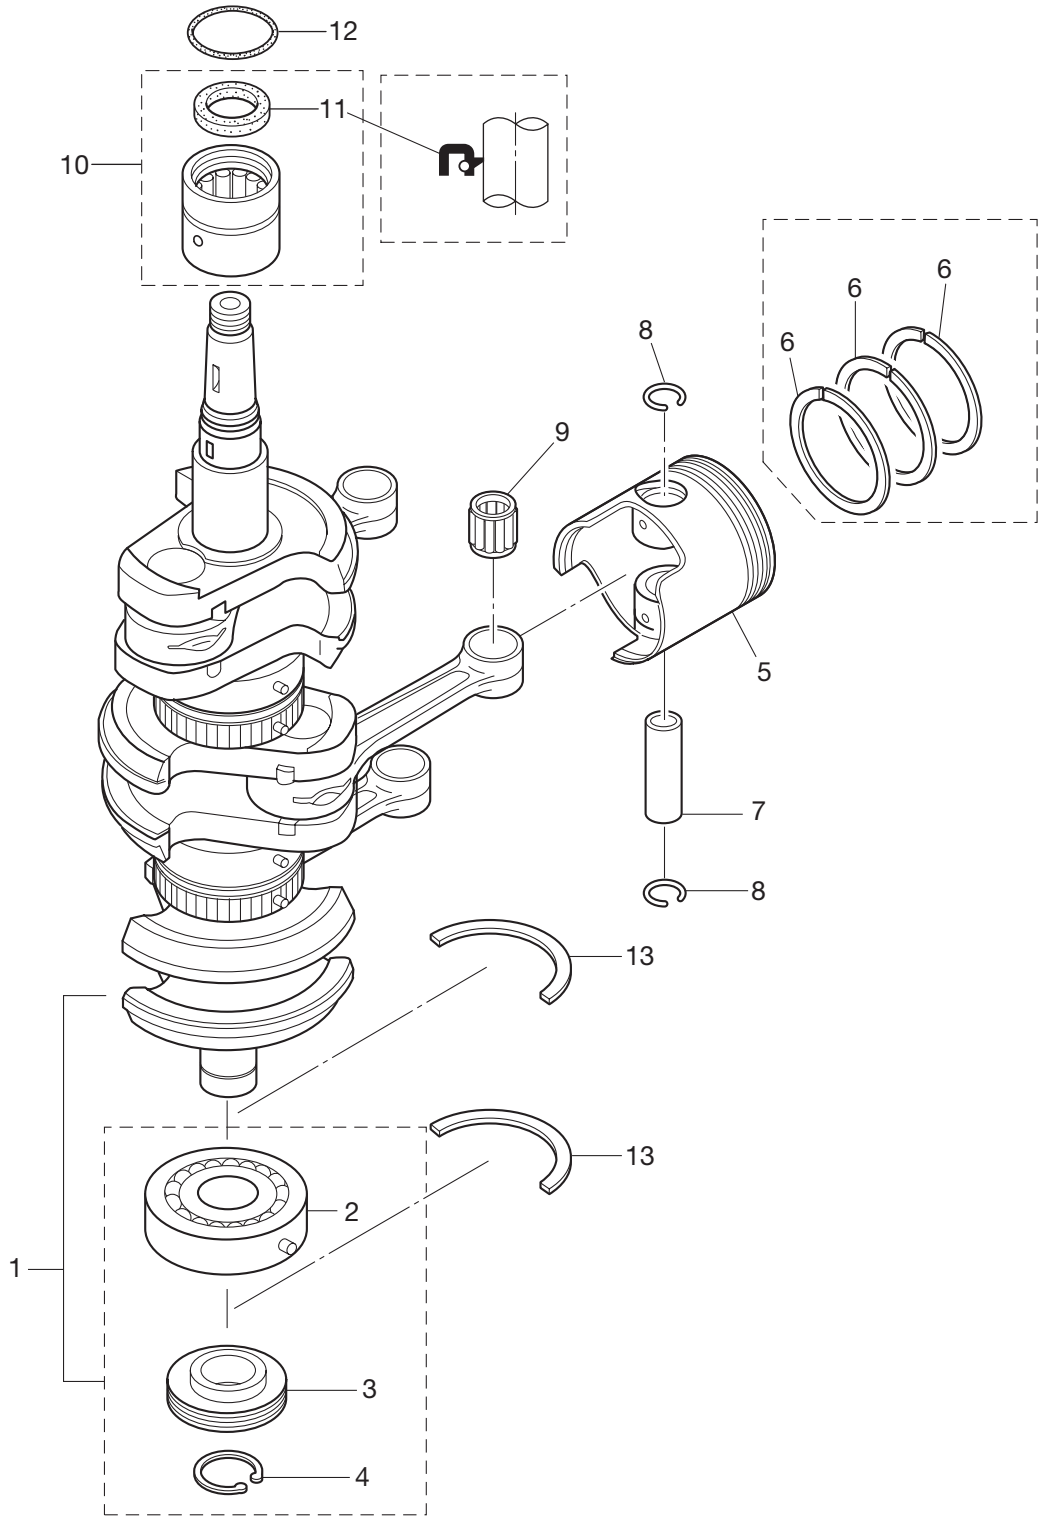


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
2-1		3T5-00050-1	Crankshaft Ass'y W/Gear ｸﾗﾝｸｼｬﾌﾄｱｯｼ(W/ｷﾞﾔ)	1	1	1	
2-2		3J2-00114-0	* Main Bearing 6305 * ﾒｲﾝﾍﾞｱﾘﾝｸﾞ 6305	1	1	1	
2-3		3C8-09060-0	* Oil Pump Drive Gear * ｵｲﾙﾎﾟﾝﾌﾟﾄﾞﾗｲﾌﾞｷﾞﾔ	1	1	1	
2-4		945107-2500	* C-Ring d=25 * Cﾘﾝｸﾞ d=25	1	1	1	
2-5	1	3GF-00001-1	Piston (STD) ﾋﾟｽﾄﾝ (STD)	3	3	3	STD
2-5	2	3GF-00004-1	Piston (0.5 O/S) ﾋﾟｽﾄﾝ (0.5O/S)	3	3	3	OPT
2-6	1	3T5-00011-0	Piston Ring (STD) ﾋﾟｽﾄﾝﾘﾝｸﾞ (STD)	9	9	9	STD
2-6	2	3T5-00014-0	Piston Ring (0.5 O/S) ﾋﾟｽﾄﾝﾘﾝｸﾞ (0.5O/S)	9	9	9	OPT
2-7		3C8-00021-1	Piston Pin ﾋﾟｽﾄﾝﾋﾟﾝ	3	3	3	
2-8		334-00024-1	Piston Pin Clip ﾋﾟｽﾄﾝﾋﾟﾝｸﾘｯﾌﾟ	6	6	6	
2-9		345-00042-0	Roller Bearing 17-21-27 ﾛｰﾗﾍﾞｱﾘﾝｸﾞ 17-21-27	3	3	3	
2-10		3T5-00113-0	Main Bearing Upper ﾒｲﾝﾍﾞｱﾘﾝｸﾞ ｱｯﾊﾟ	1	1	1	
2-11		3T5-00121-0	* Oil Seal 36-46-6 * ｵｲﾙｼｰﾙ 36-46-6	1	1	1	
2-12		353-00108-0	O-Ring 2.4-44.7 Oﾘﾝｸﾞ 2.4-44.7	1	1	1	
2-13		346-00115-0	Thrust Plate Crankshaft ｽﾗｽﾄﾌﾟﾚｰﾄ ｸﾗﾝｸｼｬﾌﾄ	2	2	2	

AIR CHAMBER (AIR BOX)
Fig. 3　エアチャンバ

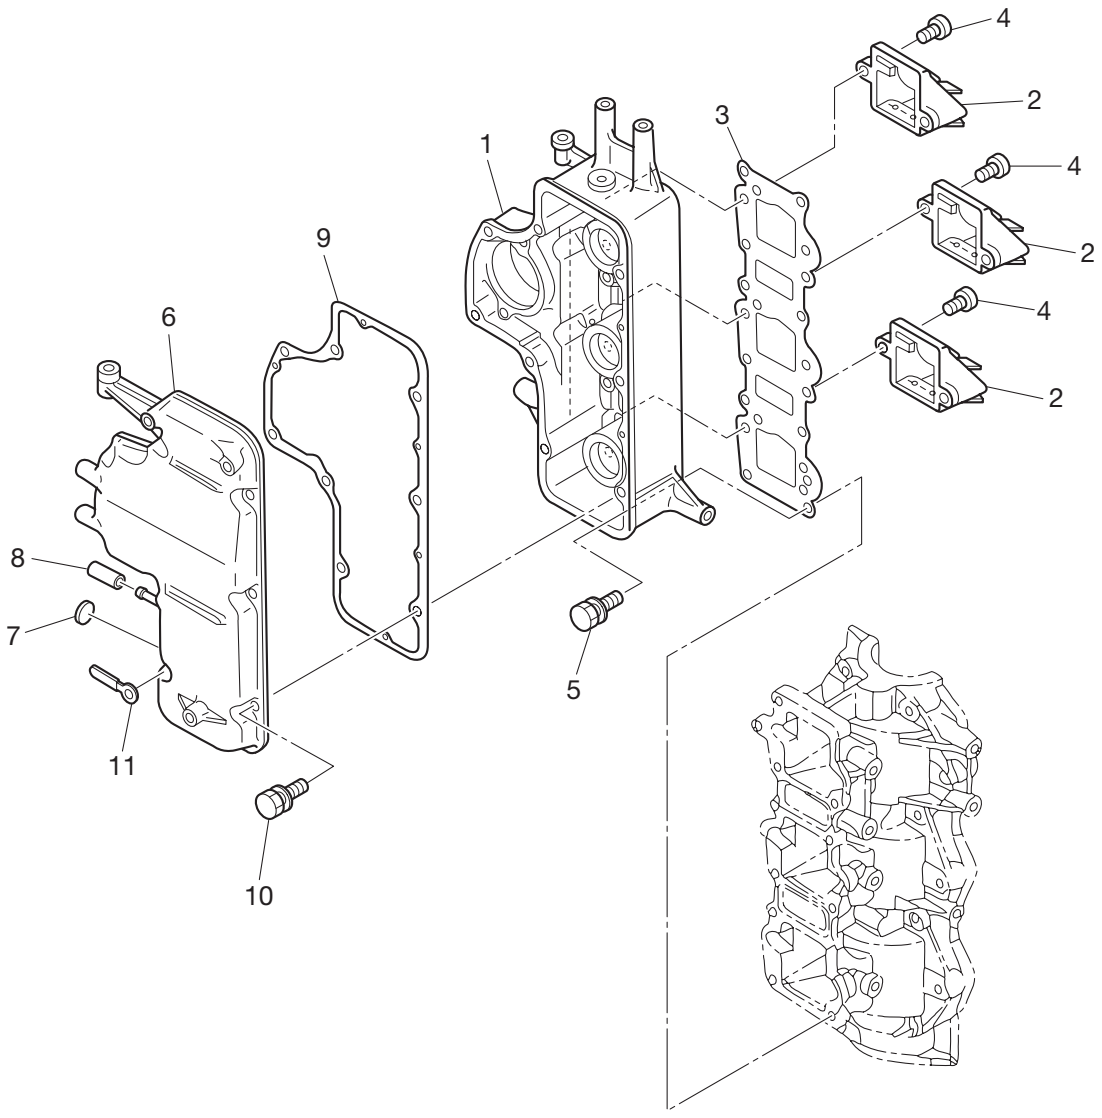


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
3-1	3T5B02240-0	Air Chamber Ass'y ｴｱﾁｬﾝﾊﾞｱｯｼ	1	1	1	
3-2	3T5-02100-1	Reed Valve Ass'y ﾘｰﾄﾞﾊﾞﾙﾌﾞｱｯｼ	3	3	3	
3-3	3T5-02104-1	Intake Manifold Gasket ｲﾝﾃｰｸﾏﾆﾎｰﾙﾄﾞｶﾞｽｹｯﾄ	1	1	1	
3-4	921521-6516	Screw ｽｸﾘｭ	6	6	6	
3-5	3T5-02241-0	Pre Coated Bolt 6-25 ﾌﾟﾚｺｰﾄ ﾎﾞﾙﾄ 6-25	12	12	12	
3-6	3GFB02246-0	Air Chamber Cover Ass'y ｴｱﾁｪﾝﾊﾞｶﾊﾞｰｱｯｼ	1	1	1	with Nipple
3-7	345-76092-0	Grommet ｸﾞﾛﾒｯﾄ	1	1	1	
3-8	3GF-01139-0	Sealing Cap ｼｰﾘﾝｸﾞｷｬｯﾌﾟ	1	1	1	
3-9	3T5-02245-0	Air Chamber Cover Gasket ｴｱﾁｬﾝﾊﾞｶﾊﾞｰｶﾞｽｹｯﾄ	1	1	1	
3-10	910103-5625	Bolt ﾎﾞﾙﾄ	8	8	8	
3-11	3Z5-06972-1	Clamp 7-120P ｸﾗﾝﾌﾟ 7-120P	1	1	1	

AIR RAIL
Fig. 4　エアレール

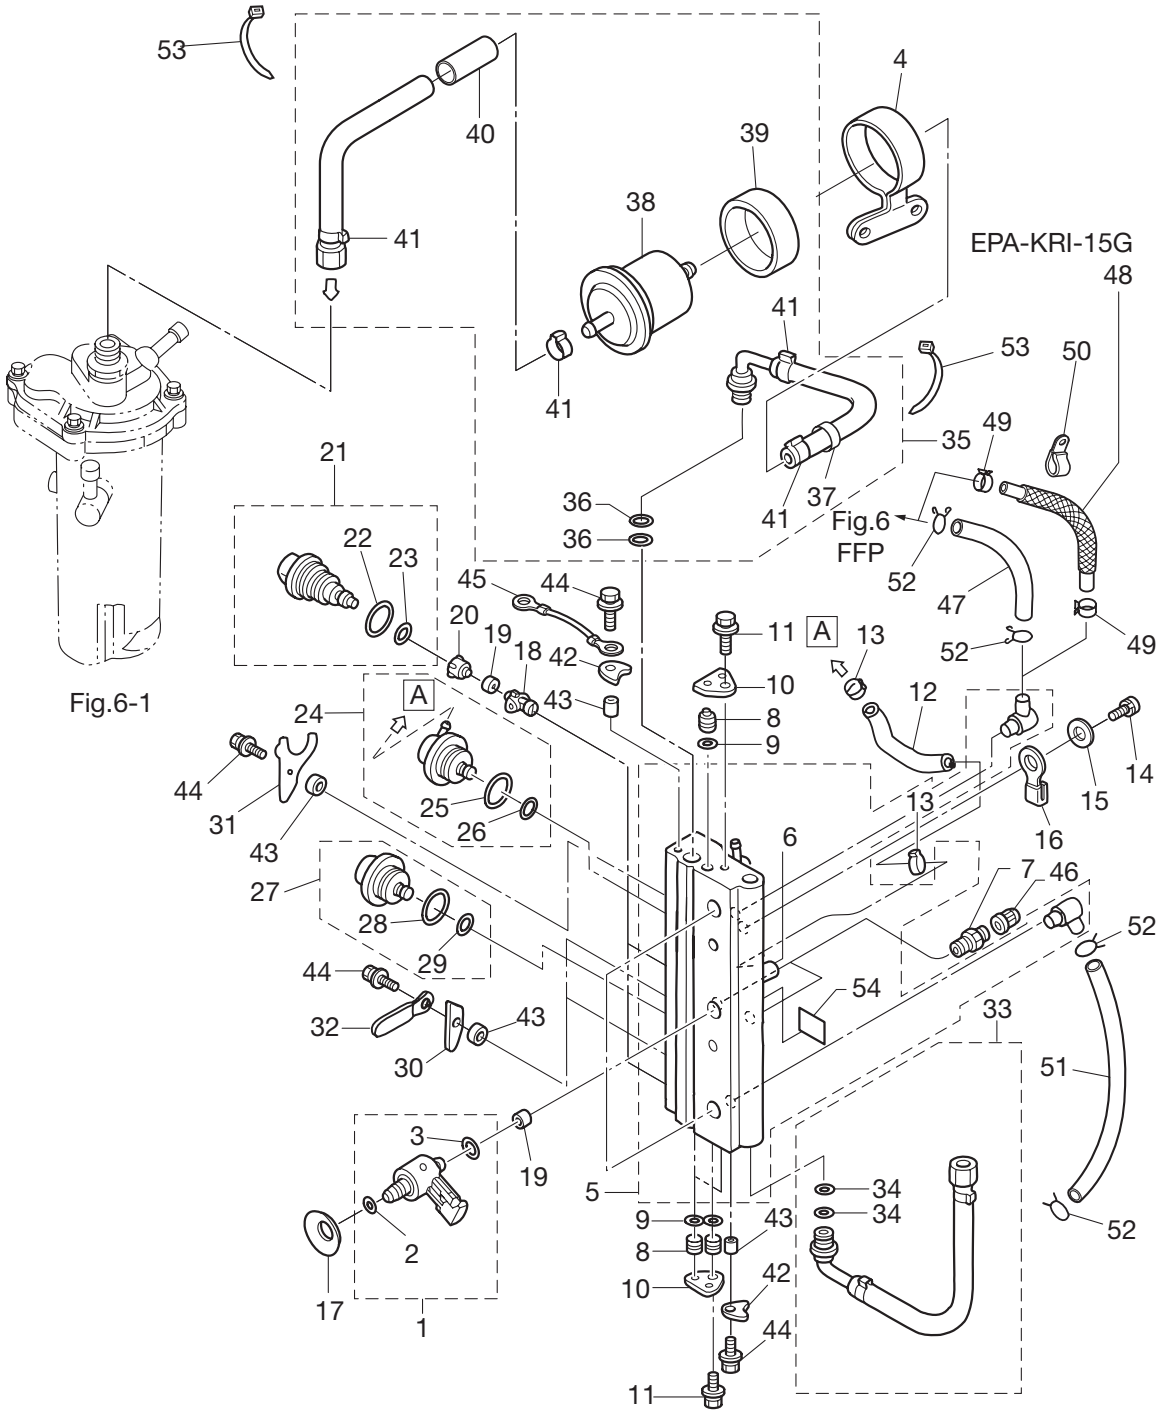


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
4-1	3GF-10310-0	Air Injector Complete ｴｱｲﾝｼﾞｪｸﾀｺﾝﾌﾟﾘｰﾄ	3	3	3	
4-2	3T5-10317-0	* O-Ring 5-52 * Oﾘﾝｸﾞ 5-52	1	1	1	
4-3	3Y9-10311-1	* O-Ring 2.4-9.5 * Oﾘﾝｸﾞ 2.4-9.5	1	1	1	
4-4	3Z5-10144-0	Fuel Filter Band ﾌｭｴﾙﾌｨﾙﾀﾊﾞﾝﾄﾞ	1	1	1	
4-5	3T5-10080-1	Air Rail Ass'y ｴｱﾚｰﾙｱｯｼ	1	1	1	
4-6	3T5-10166-0	* L-Nipple * L-ﾆｯﾌﾟﾙ	1	1	1	
4-7	3T5-10098-0	Valve Ass'y (Pressure Check) ﾊﾞﾙﾌﾞｱｯｼ (ﾌﾟﾚｯｼｬｰﾁｪｯｸ)	2	2	2	
4-8	3T5-10167-0	Plug 10.5 ﾌﾟﾗｸﾞ 10.5	3	3	3	
4-9	3T5-10164-1	O-Ring 6.8-1.9 Oﾘﾝｸﾞ 6.8-1.9	3	3	3	
4-10	3T5-10165-0	Plug Stopper ﾌﾟﾗｸﾞｽﾄｯﾊﾟ	2	2	2	
4-11	910103-6612	Bolt ﾎﾞﾙﾄ	2	2	2	
4-12	98AY-45-105	Hose ﾎｰｽ	1	1	1	
4-13	3T5-10091-0	Clamp 29/64 ｸﾗﾝﾌﾟ 29/64	2	2	2	
4-14	910103-0865	Bolt ﾎﾞﾙﾄ	2	2	2	
4-15	940103-0800	Washer ﾜｯｼｬ	2	2	2	
4-16	3T5-06972-1	Clamp 8.5-70P ｸﾗﾝﾌﾟ 8.5-70P	1	1	1	
4-17	3Y9-10312-0	Disc Spring ﾃﾞｨｽｸｽﾌﾟﾘﾝｸﾞ	3	3	3	
4-18	3T5-10314-0	Fuel Injector Insert ﾌｭｴﾙｲﾝｼﾞｪｸﾀｲﾝｻｰﾄ	3	3	3	
4-19	3T5-10316-0	Seal Compression ｼｰﾙ ｺﾝﾌﾟﾚｯｼｮﾝ	6	6	6	
4-20	3T5-10315-0	Fuel Injector Adapter ﾌｭｴﾙｲﾝｼﾞｪｸﾀｱﾀﾞﾌﾟﾀ	3	3	3	
4-21	3T5-10300-0	Fuel Injector Ass'y ﾌｭｴﾙｲﾝｼﾞｪｸﾀｱｯｼ	3	3	3	
4-22	3T5-10304-0	* O-Ring 2.8-20.2 * Oﾘﾝｸﾞ 2.8-20.2	1	1	1	
4-23	3T5-10303-0	* O-Ring 3.5-735 * Oﾘﾝｸﾞ 3.5-735	1	1	1	
4-24	3T5-10148-0	Fuel Regulator Ass'y ﾌｭｴﾙﾚｷﾞｭﾚｰﾀｱｯｼ	1	1	1	
4-25	3T5-10095-0	* O-Ring 2.5-20 * Oﾘﾝｸﾞ 2.5-20	1	1	1	
4-26	3T5-10094-0	* O-Ring 2.5-5 * Oﾘﾝｸﾞ 2.5-5	1	1	1	
4-27	3GF-10090-0	Air Regulator Ass'y ｴｱﾚｷﾞｭﾚｰﾀ	1	1	1	
4-28	3T5-10095-0	* O-Ring 2.5-20 * Oﾘﾝｸﾞ 2.5-20	1	1	1	
4-29	3T5-10094-0	* O-Ring 2.5-5 * Oﾘﾝｸﾞ 2.5-5	1	1	1	
4-30	3T5-10302-0	Holding Plate ﾎｰﾙﾃﾞｨﾝｸﾞﾌﾟﾚｰﾄ	2	2	2	

AIR RAIL
Fig. 4　エアレール

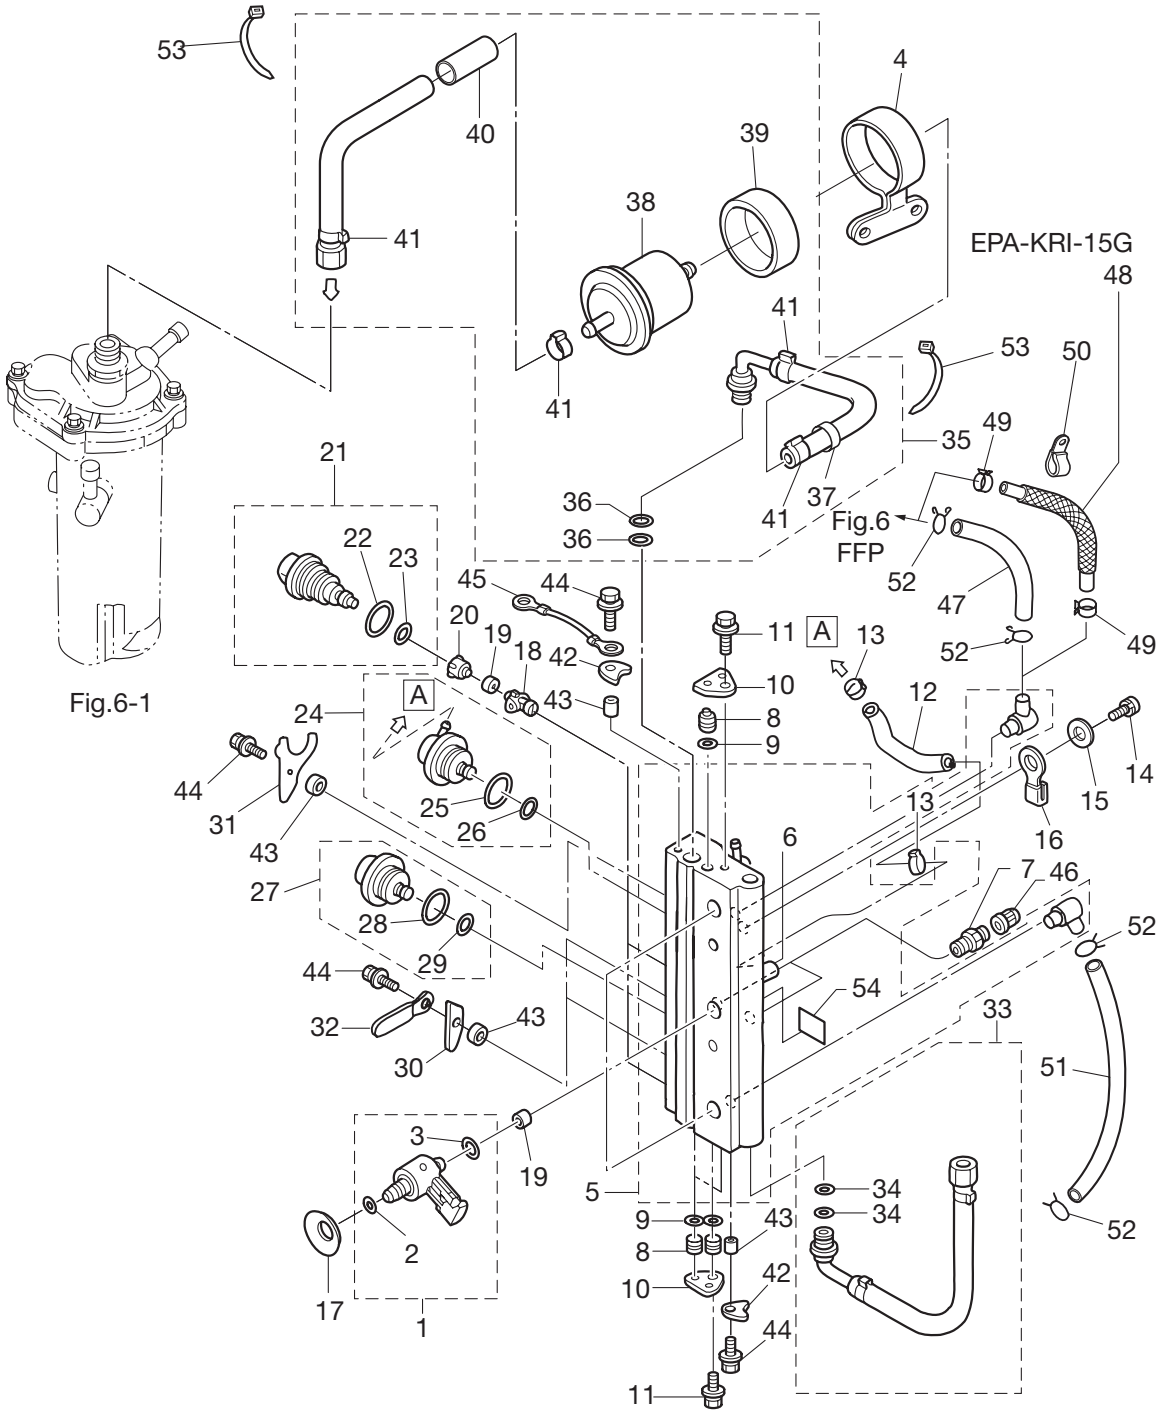


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
4-31	3Y9-10302-0	Holding Plate ﾎｰﾙﾃﾞｨﾝｸﾞﾌﾟﾚｰﾄ	1	1	1	
4-32	309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P	1	1	1	
4-33	3T5-10088-0	Air Hose Ass'y ｴｱﾎｰｽｱｯｼ	1	1	1	
4-34	3T5-10162-0	* O-Ring 9.8-1.9 * Oﾘﾝｸﾞ 9.8-1.9	2	2	2	
4-35	3GF-10089-0	Fuel Hose Ass'y ﾌｭｴﾙﾎｰｽｱｯｼ	1	1	1	
4-36	3T5-10162-0	* O-Ring 9.8-1.9 * Oﾘﾝｸﾞ 9.8-1.9	2	2	2	
4-37	3Z4-06157-0	* Protector *ﾌﾟﾛﾃｸﾀ	1	1	1	
4-38	3T5B10143-0	* High Pressure Fuel Filter * 高圧ﾌｭｴﾙﾌｨﾙﾀ	1	1	1	
4-39	3T5-10145-0	* Fuel Filter Rubber Mount *ﾌｭｴﾙﾌｨﾙﾀﾗﾊﾞｰﾏｳﾝﾄ	1	1	1	
4-40	3U1-06157-0	* Protector φ18-150 *ﾌﾟﾛﾃｸﾀ φ18-150	1	1	1	
4-41	3T5-10086-0	* Clamp 21/32 *ｸﾗﾝﾌﾟ 21/32	4	4	4	
4-42	3T5-10169-0	Holding Plate ﾎｰﾙﾃﾞｨﾝｸﾞﾌﾟﾚｰﾄ	2	2	2	
4-43	3T5-10153-0	Collar 6.7-12.7-3 ｶﾗｰ 6.7-12.7-3	5	5	5	
4-44	910103-6616	Bolt ﾎﾞﾙﾄ	5	5	5	
4-45	3A3-62396-1	Ground (Earth Wire) L=110 ｸﾞﾗﾝﾄﾞ(ｱｰｽﾜｲﾔ) L=110	1	1	1	
4-46	3T5-10099-0	Cap Valve ｷｬｯﾌﾟ ﾊﾞﾙﾌﾞ	2	2	2	
4-47	98AB-50-530	Hose ﾎｰｽ	1	1	1	without for USA model 98AB-501000
4-48	3GJ-02165-0	Fuel Hose W/Protector ﾌｭｴﾙﾎｰｽ (W/ﾌﾟﾛﾃｸﾀ)		1	1	Low Permeation Parts (for USA model)
4-49	3AB-35143-0	Clip ｸﾘｯﾌﾟ	2	2	2	
4-50	345-06915-0	Clamp 6.5-14 ｸﾗﾝﾌﾟ 6.5-14	1	1	1	
4-51	98AB-50-280	Hose ﾎｰｽ	1	1	1	98AB-501000
4-52	338-02215-0	Clip Fuel Pipe φ10 ｸﾘｯﾌﾟ ﾌｭｴﾙﾊﾟｲﾌﾟ φ10	4	4	4	
4-53	3T5-84398-0	Band Lead Wire 104 ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 104	3	3	3	
4-54	3T5-72196-0	Air Rail Decal ｴｱﾚｰﾙﾃﾞｶｰﾙ	1	1	1	

AIR COMPRESSOR
Fig. 5　エアコンプレッサ

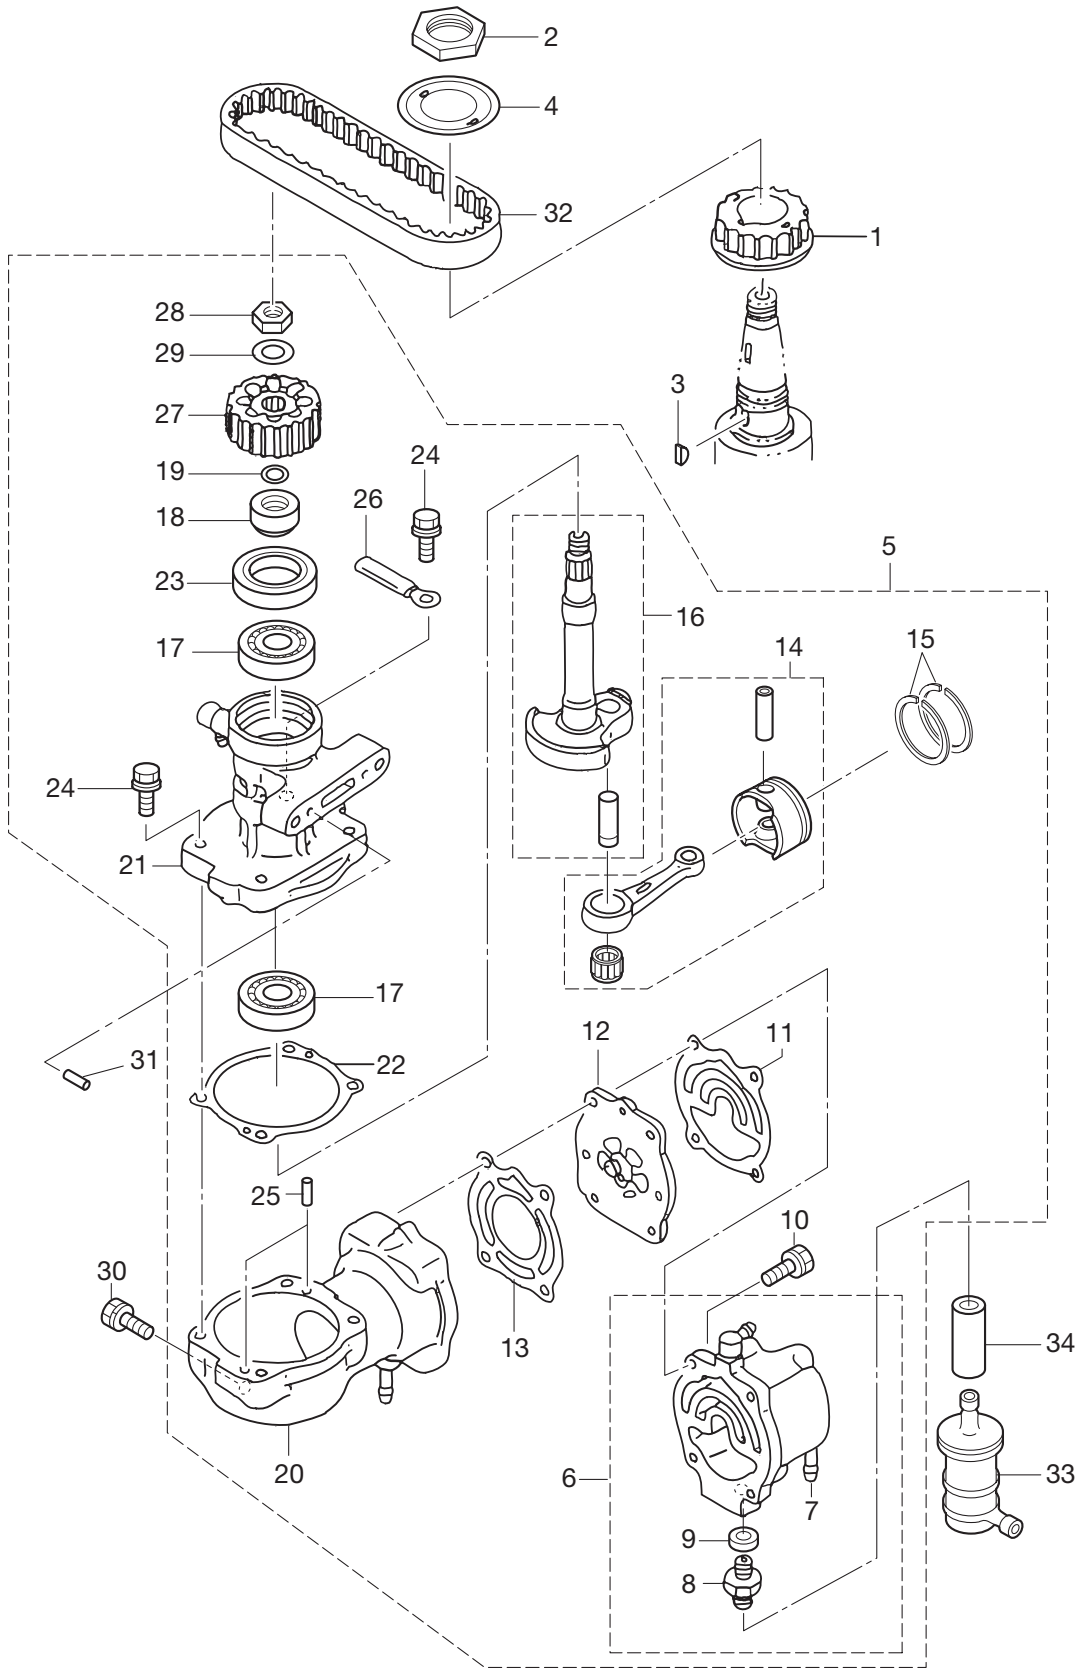


Ref. No. 見出番号	Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備　考
5-1	3T5-10060-0	Drive Pulley ﾄﾞﾗｲﾌﾞﾌﾟｰﾘ	1	1	1	
5-2	3T5-10068-2	Nut Pulley ﾅｯﾄ ﾌﾟｰﾘ	1	1	1	
5-3	3T5-10131-0	Key Drive Pulley ｷｰ ﾄﾞﾗｲﾌﾞﾌﾟｰﾘ	1	1	1	
5-4	3T5-10063-0	Belt Guide ﾍﾞﾙﾄｶﾞｲﾄﾞ	1	1	1	
5-5	3GFB10000-0	Air Compressor Ass'y ｴｱｺﾝﾌﾟﾚｯｻ ｱｯｼ	1	1	1	
5-6	3GFB10009-0	* Compressor Head Ass'y * ｺﾝﾌﾟﾚｯｻﾍｯﾄﾞｱｯｼ	1	1	1	
5-7	3T1-02093-1	** Nipple ** ﾆｯﾌﾟﾙ	1	1	1	
5-8	3T5-04308-0	** Adapter ** ｱﾀﾞﾌﾟﾀ	1	1	1	
5-9	3T5-04309-0	** Metal Washer 10.2-17-2 ** ﾜｯｼｬ ﾒﾀﾙ 10.2-17-2	1	1	1	
5-10	910124-7630	* Bolt * ﾎﾞﾙﾄ	4	4	4	
5-11	3T5-10012-1	* Gasket Compressor Head * ｶﾞｽｹｯﾄ ｺﾝﾌﾟﾚｯｻﾍｯﾄﾞ	1	1	1	
5-12	3T5-10010-0	* Reed Valve Ass'y * ﾘｰﾄﾞﾊﾞﾙﾌﾞｱｯｼ	1	1	1	
5-13	3T5-10019-0	* Gasket Valve Seat * ｶﾞｽｹｯﾄ ﾊﾞﾙﾌﾞｼｰﾄ	1	1	1	
5-14	3GF-87330-0	* Piston・Connecting Rod Ass'y * ﾋﾟｽﾄﾝ・ｺﾈｸﾃｨﾝｸﾞﾛｯﾄﾞｱｯｼ	1	1	1	
5-15	3T5-10025-0	* Air Compressor Piston Ring * ｴｱｺﾝﾌﾟﾚｯｻﾋﾟｽﾄﾝﾘﾝｸﾞ	2	2	2	
5-16	3GF-87331-0	* Compressor Crankshaft Ass'y * ｺﾝﾌﾟﾚｯｻｸﾗﾝｸｼｬﾌﾄｱｯｼ	1	1	1	
5-17	9601-0-6203	* Ball Bearing 6203 * ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6203	2	2	2	
5-18	3T1-10042-0	* Collar 13.5-25-13 * ｶﾗｰ 13.5-25-13	1	1	1	
5-19	3T5-10046-0	* O-Ring 1.9-13 * Oﾘﾝｸﾞ 1.9-13	1	1	1	
5-20	3GFB10048-0	* Air Compressor Cylinder Ass'y * ｴｱｺﾝﾌﾟﾚｯｻｼﾘﾝﾀﾞｱｯｼ	1	1	1	
5-21	3T5B10051-0	* Air Compressor Housing Ass'y * ｴｱｺﾝﾌﾟﾚｯｻﾊｳｼﾞﾝｸﾞｱｯｼ	1	1	1	
5-22	3T5-10054-0	* Gasket Compressor Housing * ｶﾞｽｹｯﾄ ｺﾝﾌﾟﾚｯｻﾊｳｼﾞﾝｸﾞ	1	1	1	
5-23	3T5-10041-0	* Oil Seal 25-45-8 * ｵｲﾙｼｰﾙ 25-45-8	1	1	1	
5-24	910103-5625	* Bolt * ﾎﾞﾙﾄ	4	4	4	
5-25	334-65012-0	* Dowel Pin 4-10 * ﾀﾞｳｪﾙﾋﾟﾝ 4-10	2	2	2	
5-26	309-06972-0	* Clamp 6.5-47.5P * ｸﾗﾝﾌﾟ 6.5-47.5P	1	1	1	
5-27	3T5-10062-0	* Driven Pulley * ﾄﾞﾘﾌﾞﾝﾌﾟｰﾘ	1	1	1	
5-28	309-00132-0	* Nut (Magneto) 10-P1.25 * ﾅｯﾄ(ﾏｸﾞﾈｯﾄ) 10-P1.25	1	1	1	
5-29	3B7-01116-0	* Washer 10.5-20-3.2 * ﾜｯｼｬ 10.5-20-3.2	1	1	1	
5-30	910103-7835	Bolt ﾎﾞﾙﾄ	3	3	3	

AIR COMPRESSOR
Fig. 5　エアコンプレッサ

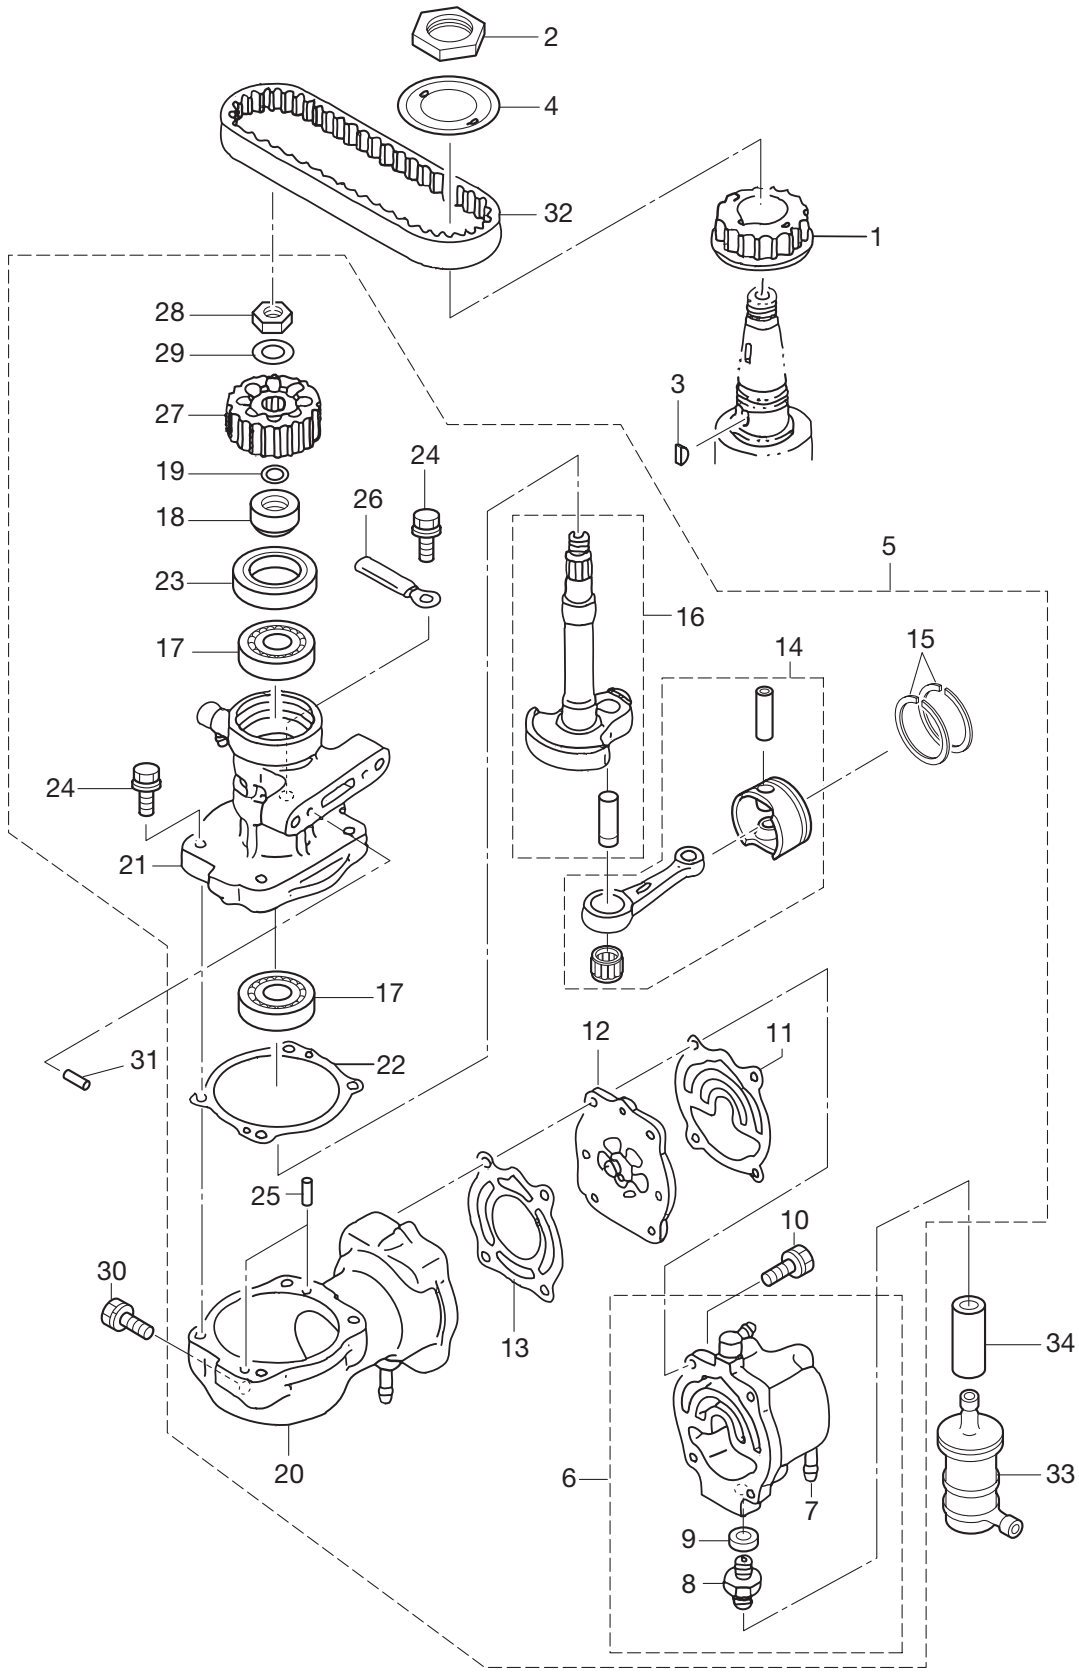


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
5-31	334-65012-0	Dowel Pin 4-10 ﾀﾞｳｪﾙﾋﾟﾝ 4-10	2	2	2	
5-32	3T5-10061-0	Drive Belt ﾄﾞﾗｲﾌﾞﾍﾞﾙﾄ	1	1	1	
5-33	3GF-10130-0	Air Filter Ass'y ｴｱﾌｨﾙﾀｱｯｼ	1	1	1	
5-34	98AT130-060	Hose ﾎｰｽ	1	1	1	

FFP ASS'Y
Fig. 6 FFP アッシ

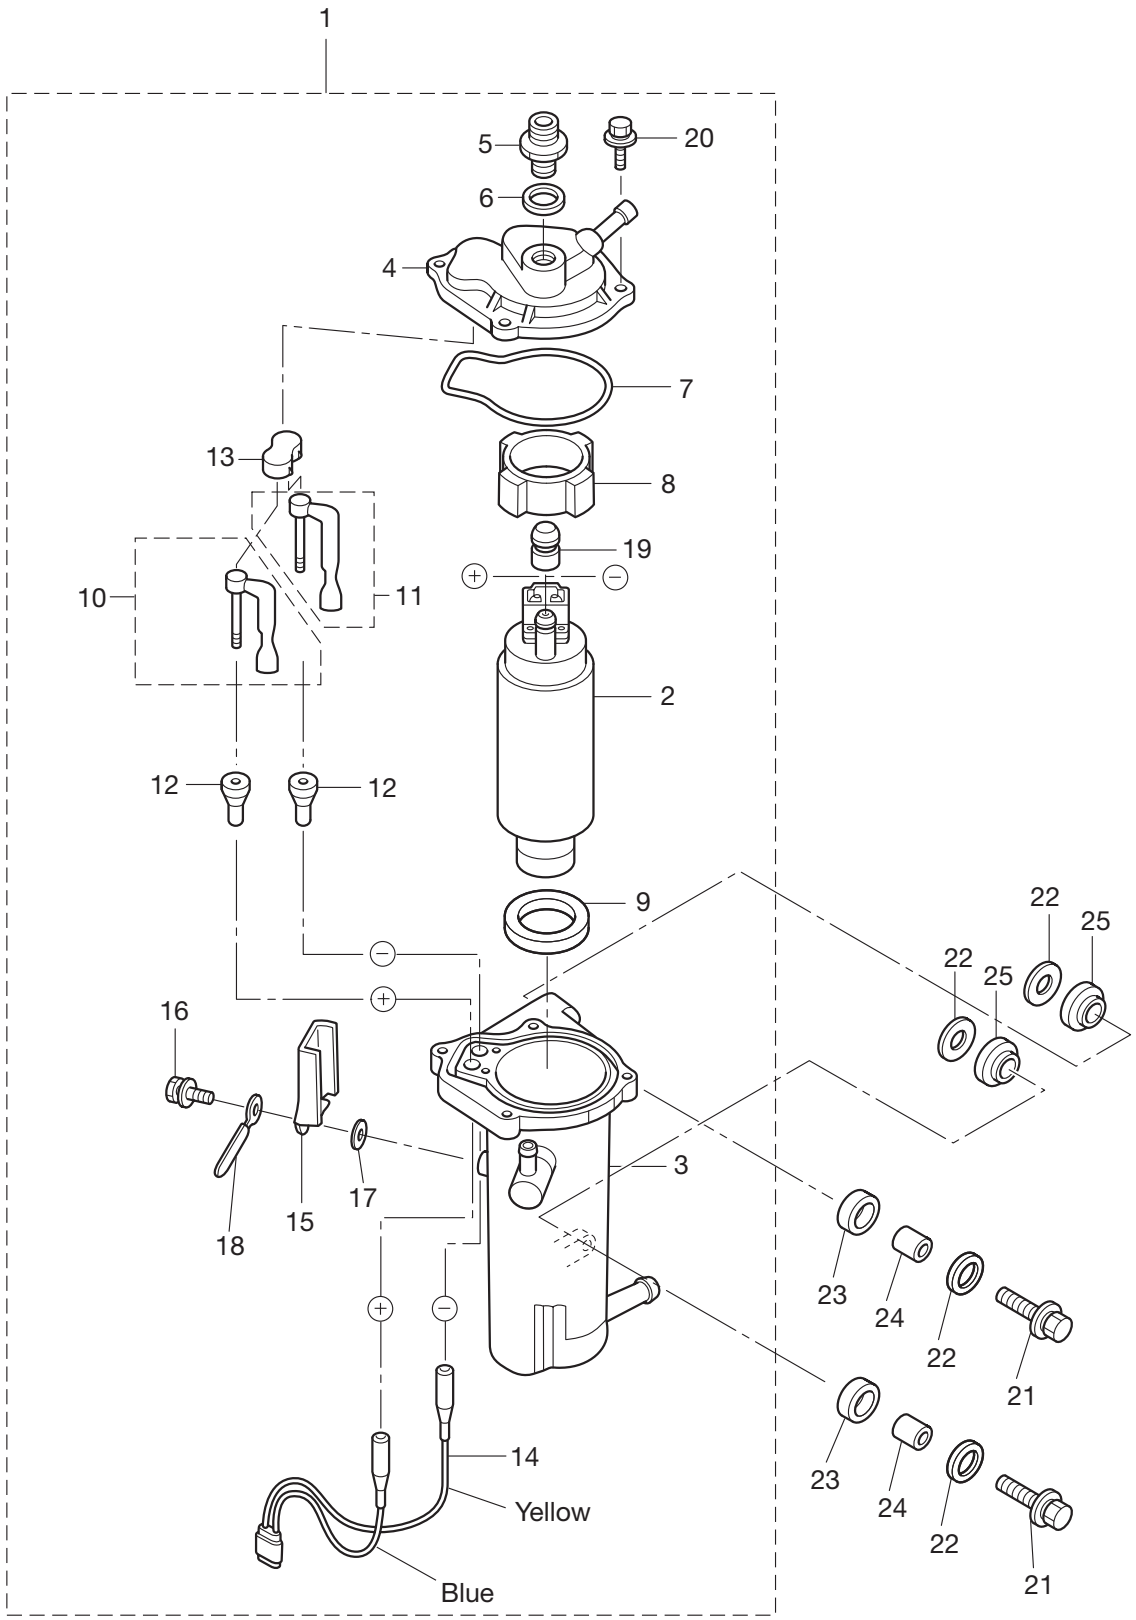


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
6-1	3T5-04310-0	Fuel Feed Pump Ass'y ﾌｭｴﾙﾌｨｰﾄﾞﾎﾟﾝﾌﾟｱｯｼ	1	1	1	
6-2	3T5-04302-0	* Fuel Feed Pump * ﾌｭｴﾙﾌｨｰﾄﾞﾎﾟﾝﾌﾟ	1	1	1	
6-3	3T5-04311-0	* Case Ass'y FFP * ｹｰｽｱｯｼ FFP	1	1	1	
6-4	3T5-04312-0	* Upper Case Ass'y FFP * ｱｯﾊﾟｹｰｽｱｯｼ FFP	1	1	1	
6-5	3T5-04308-0	* Adapter * ｱﾀﾞﾌﾟﾀ	1	1	1	
6-6	3T5-04309-0	* Washer Metal 10.2-17-2 * ﾜｯｼｬ ﾒﾀﾙ 10.2-17-2	1	1	1	
6-7	3T5-04116-0	* Gasket FFP * ｶﾞｽｹｯﾄ FFP	1	1	1	FFP
6-8	3T5-04313-0	* Grommet FFP * ｸﾞﾛﾒｯﾄ FFP	1	1	1	FFP Upper
6-9	3T5-04314-0	* Grommet FFP Lower * ｸﾞﾛﾒｯﾄ FFP ﾛﾜ	1	1	1	FFP Lower
6-10	3T5-04236-0	* Cable Terminal Ass'y (Positive) * ｹｰﾌﾞﾙﾀｰﾐﾅﾙｱｯｼ (+)	1	1	1	
6-11	3T5-04237-0	* Cable Terminal Ass'y (Negative) * ｹｰﾌﾞﾙﾀｰﾐﾅﾙｱｯｼ (-)	1	1	1	
6-12	3T5-04317-0	* Grommet Cable Terminal * ｸﾞﾛﾒｯﾄ ｹｰﾌﾞﾙﾀｰﾐﾅﾙ	2	2	2	
6-13	3T5-04318-0	* Grommet Cable Terminal Upper * ｸﾞﾛﾒｯﾄ ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ｱｯﾊﾟ	1	1	1	
6-14	3T5-04238-0	* Cord FFP * ｺｰﾄﾞ FFP	1	1	1	FFP
6-15	3T5-04239-0	* Cord Cover FFP * ｺｰﾄﾞｶﾊﾞｰ FFP	1	1	1	FFP
6-16	910103-5512	* Bolt * ﾎﾞﾙﾄ	1	1	1	
6-17	940103-0500	* Washer * ﾜｯｼｬ	1	1	1	
6-18	309-06972-0	* Clamp 6.5-47.5P * ｸﾗﾝﾌﾟ 6.5-47.5P	1	1	1	
6-19	3T5-04319-0	* Grommet Pipe * ｸﾞﾛﾒｯﾄ ﾊﾟｲﾌﾟ	1	1	1	
6-20	910103-6518	* Bolt * ﾎﾞﾙﾄ	4	4	4	
6-21	910103-6630	Bolt ﾎﾞﾙﾄ	2	2	2	
6-22	3C8-66308-0	Washer 6-16-1.5 ﾜｯｼｬ 6-16-1.5	4	4	4	
6-23	3F3-06920-0	Rubber Mount 8.5-12-2 ﾗﾊﾞｰﾏｳﾝﾄ 8.5-12-2	2	2	2	
6-24	346-67114-1	Spacer 6.2-9-15.7 ｽﾍﾟｰｻ 6.2-9-15.7	2	2	2	
6-25	3T5-06920-0	Rubber Mount ﾗﾊﾞｰﾏｳﾝﾄ	2	2	2	

THROTTLE
Fig. 7　スロットル

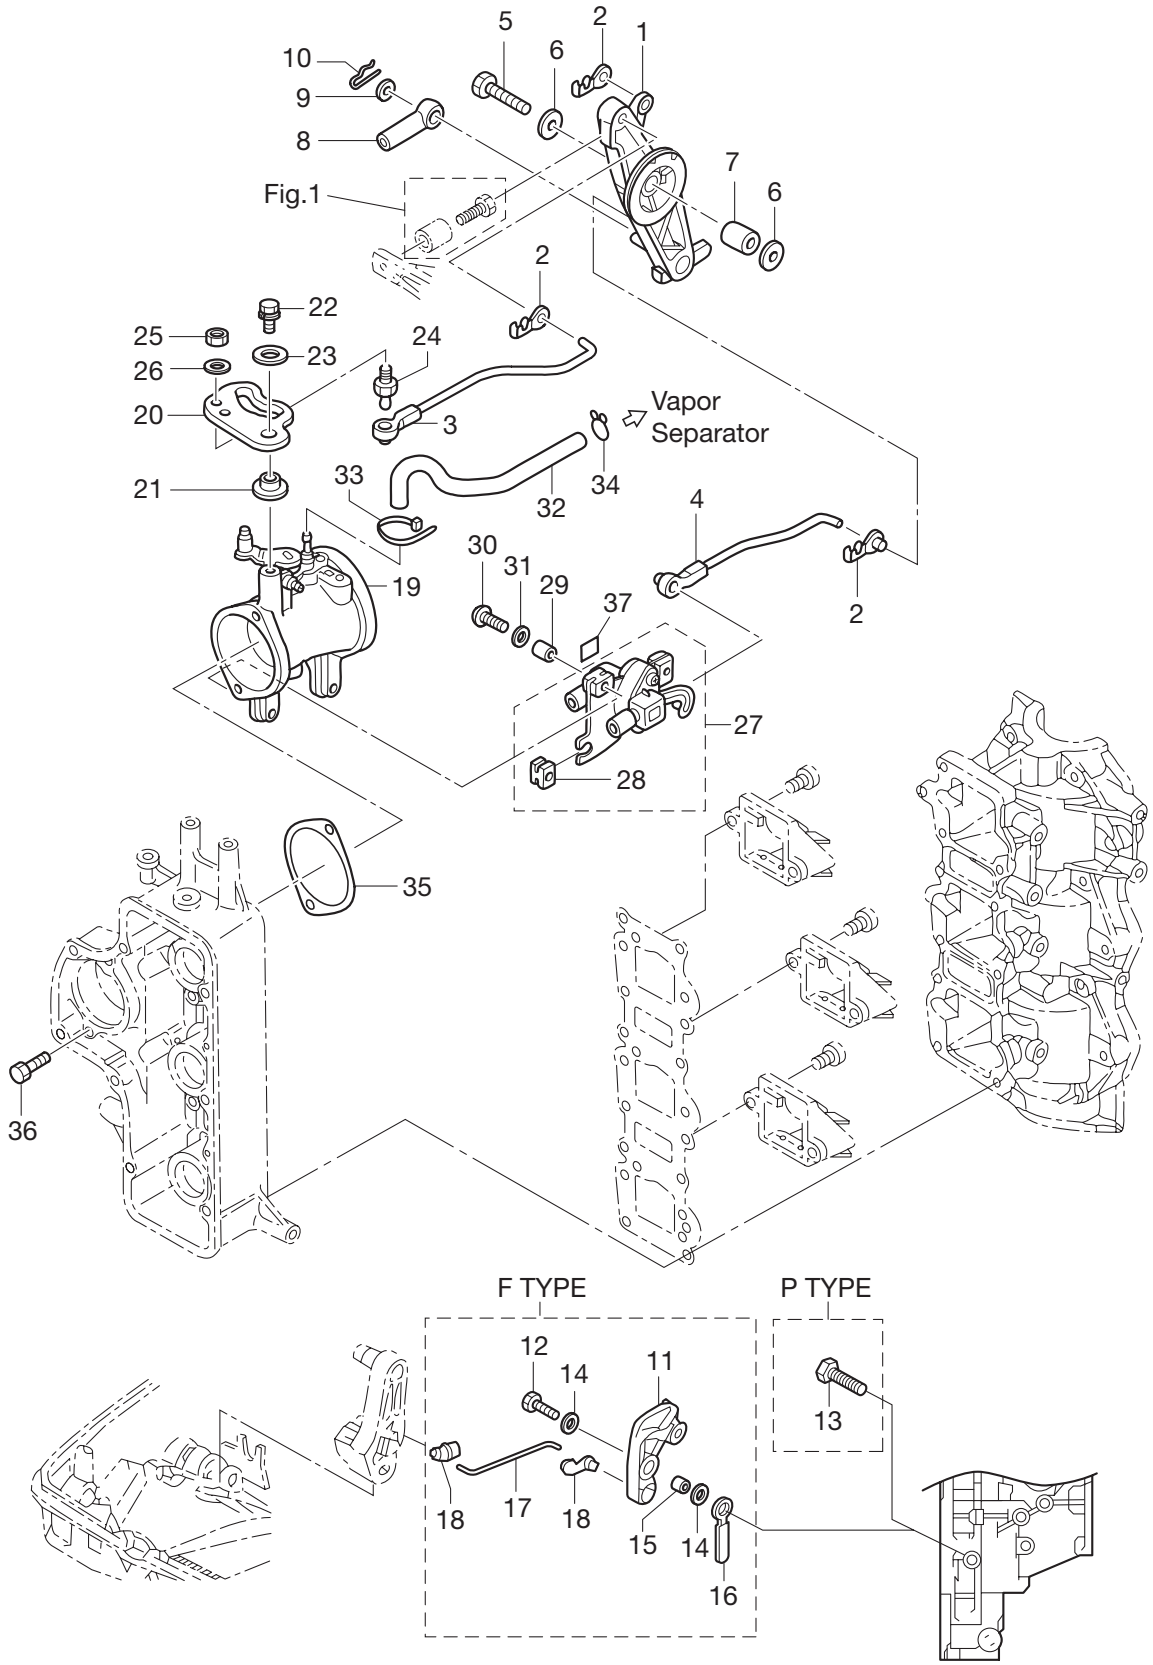


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
7-1		3C8-63711-1	Advancer Arm ｱﾄﾞﾊﾞﾝｻｱｰﾑ	1	1	1	
7-2		3C8-63733-0	Rod Snap 5-3 ﾛｯﾄﾞｽﾅｯﾌﾟ 5-3	3	3	3	
7-3		3T5-63702-1	Link Rod Ass'y (Throttle) ﾘﾝｸﾛｯﾄﾞｱｯｼ (ｽﾛｯﾄﾙ)	1	1	1	
7-4		3T5-10109-1	Link Rod Ass'y (TPS) ﾘﾝｸﾛｯﾄﾞｱｯｼ (TPS)	1	1	1	
7-5		910103-0635	Bolt ﾎﾞﾙﾄ	1	1	1	
7-6		346-67115-0	Washer 6.5-21-1 ﾜｯｼｬ 6.5-21-1	2	2	2	
7-7		3C8-63732-0	Collar 6.2-12-17 ｶﾗｰ 6.2-12-17	1	1	1	
7-8		3B7-83715-1	Cable Joint ｹｰﾌﾞﾙｼﾞｮｲﾝﾄ	1	1	1	for "P" Type
7-9		3AA-83719-0	Washer 8.5-18-1.6 ﾜｯｼｬ 8.5-18-1.6	1	1	1	for "P" Type
7-10		951603-0800	Snap Pin d=8 ｽﾅｯﾌﾟﾋﾟﾝ d=8	1	1	1	for "P" Type
7-11		3C8-05213-0	Throttle Limiter Arm ｽﾛｯﾄﾙﾘﾐｯﾀｱｰﾑ		1	1	for "F" Type
7-12		9101F4-0625	Bolt ﾎﾞﾙﾄ		1	1	for "F" Type
7-13		910103-0610	Bolt ﾎﾞﾙﾄ	1	1	1	for "P" Type
7-14		940103-0600	Washer ﾜｯｼｬ		2	2	for "F" Type
7-15		353-76079-0	Collar 6.2-9-9.3 ｶﾗｰ 6.2-9-9.3		1	1	for "F" Type
7-16		398-06972-0	Clamp 6.5-67P ｸﾗﾝﾌﾟ 6.5-67P	1	1	1	
7-17		3C8-05221-0	Throttle Limiter Rod 3.5-56 ｽﾛｯﾄﾙﾘﾐｯﾀﾛｯﾄﾞ 3.5-56		1	1	for "F" Type
7-18		3C8-05223-0	Rod Snap B 3.5-4 ﾛｯﾄﾞｽﾅｯﾌﾟ B 3.5-4		2	2	for "F" Type
7-19	1	3GF-10100-0	Throttle Body Ass'y ｽﾛｯﾄﾙﾎﾞﾃﾞｨｱｯｼ		1	1	50ps/40ps(for Italy model) mark 3GF
7-19	2	3GG-10100-0	Throttle Body Ass'y ｽﾛｯﾄﾙﾎﾞﾃﾞｨｱｯｼ		1		40ps mark 3GG
7-19	3	3GM-10100-0	Throttle Body Ass'y ｽﾛｯﾄﾙﾎﾞﾃﾞｨｱｯｼ	1			30ps mark 3GM
7-20		3T5-63718-0	Throttle Cam ｽﾛｯﾄﾙｶﾑ	1	1	1	
7-21		3T5-63721-0	Bushing 6-24-7 ﾌﾞｯｼﾝｸﾞ 6-24-7	1	1	1	
7-22		910103-6618	Bolt ﾎﾞﾙﾄ	1	1	1	
7-23		346-67115-0	Washer 6.5-21-1 ﾜｯｼｬ 6.5-21-1	1	1	1	
7-24		346-05228-1	Ball Joint B ﾎﾞｰﾙｼﾞｮｲﾝﾄ B	1	1	1	
7-25		930203-0600	Nut ﾅｯﾄ	1	1	1	
7-26		940103-0600	Washer ﾜｯｼｬ	1	1	1	
7-27		3T5-10110-0	TPS Ass'y TPSｱｯｼ	1	1	1	
7-28		3T5-10107-0	* Rubber Mount *ﾗﾊﾞｰﾏｳﾝﾄ	3	3	3	

THROTTLE
Fig. 7　スロットル

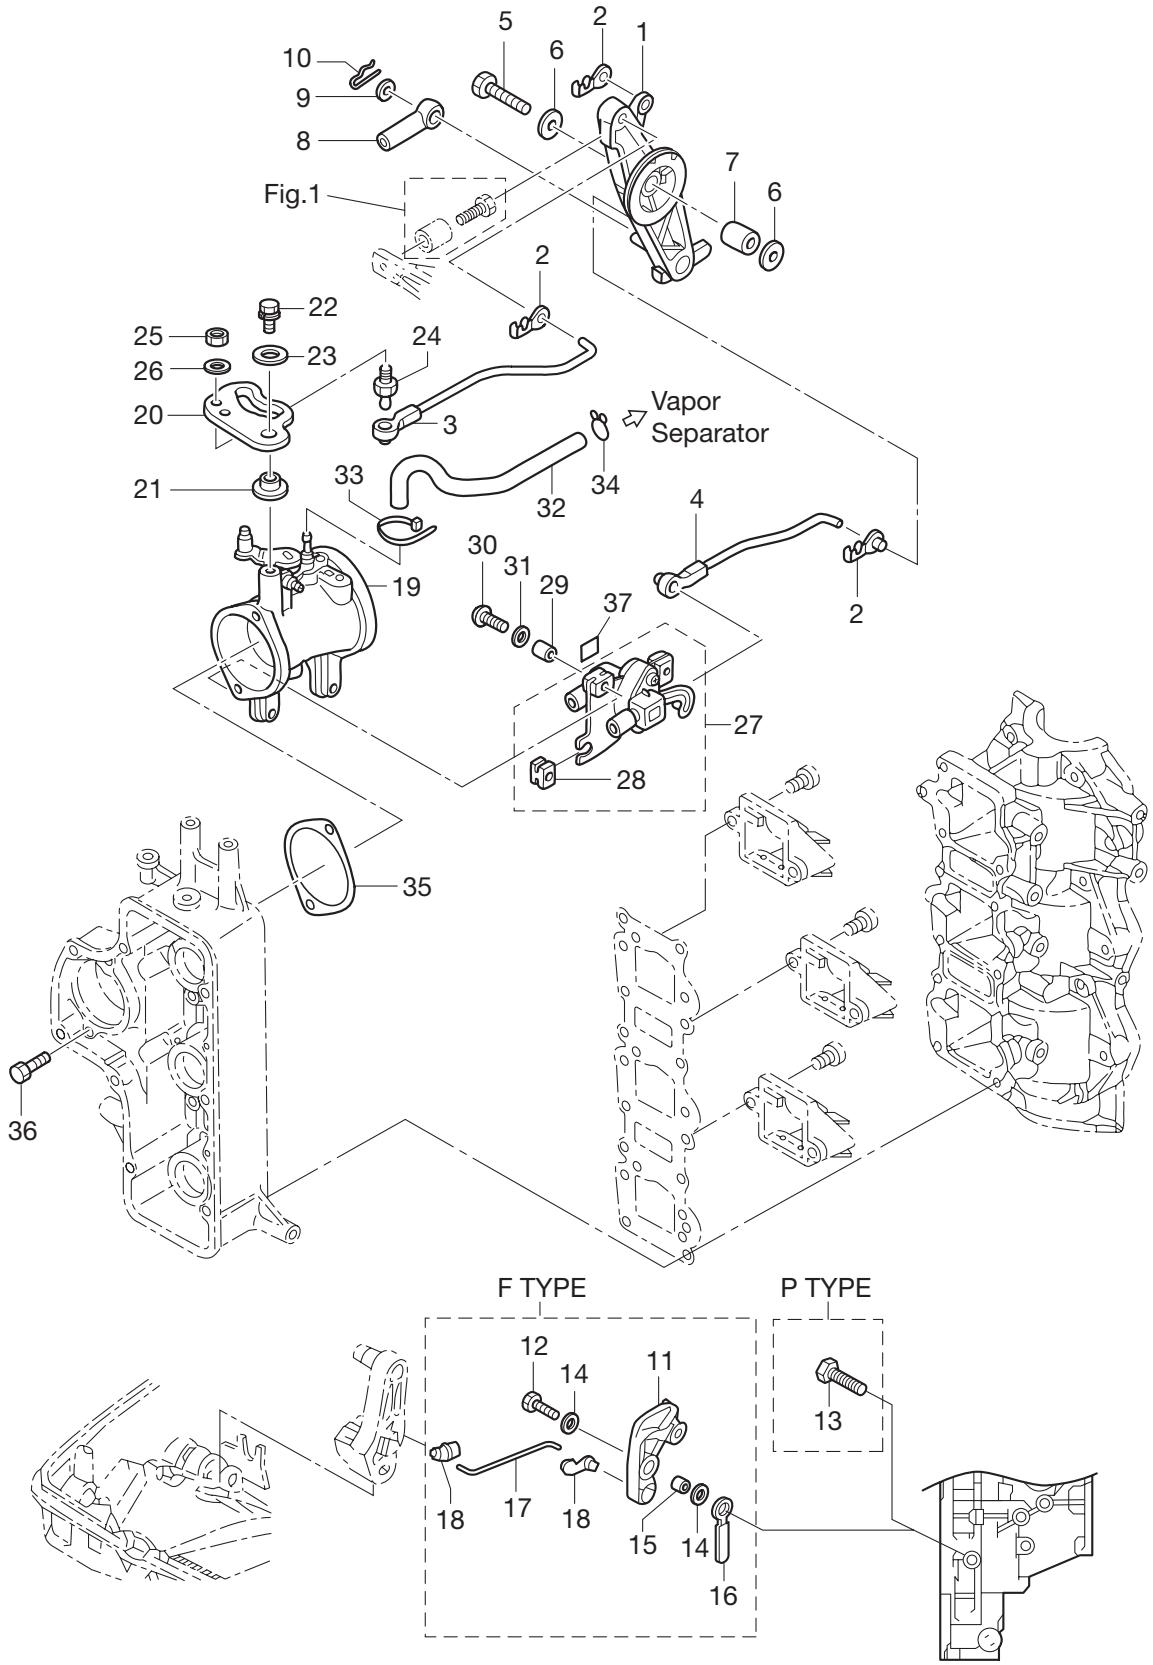


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
7-29		3T5-10128-0	Collar 4.2-6-10.5 ｶﾗｰ 4.2-6-10.5	3	3	3	
7-30		921503-6420	Screw ｽｸﾘｭ	3	3	3	
7-31		3T5-10129-0	Washer 4.2-12.5-0.8 ﾜｯｼｬ 4.2-12.5-0.8	3	3	3	
7-32		98AB-30-310	Hose ﾎｰｽ	1	1	1	98AB-301000
7-33		3T5-84398-0	Band Lead Wire 104 ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 104	1	1	1	
7-34		338-01133-0	Clip φ7 ｸﾘｯﾌﾟ φ7	1	1	1	
7-35		3T5-10104-0	Gasket Throttle Body ｶﾞｽｹｯﾄ ｽﾛｯﾄﾙﾎﾞﾃﾞｨ	1	1	1	
7-36		3T5-02241-0	Bolt 6-25 Precoated ﾎﾞﾙﾄ 6-25ﾌﾟﾚｺｰﾄ	2	2	2	
7-37		3T5-72195-0	TPS Decal TPSﾃﾞｶｰﾙ	1	1	1	

VAPOR SEPARATOR・FUEL LINE
Fig. 8 ベーパセパレータ・フュエルライン

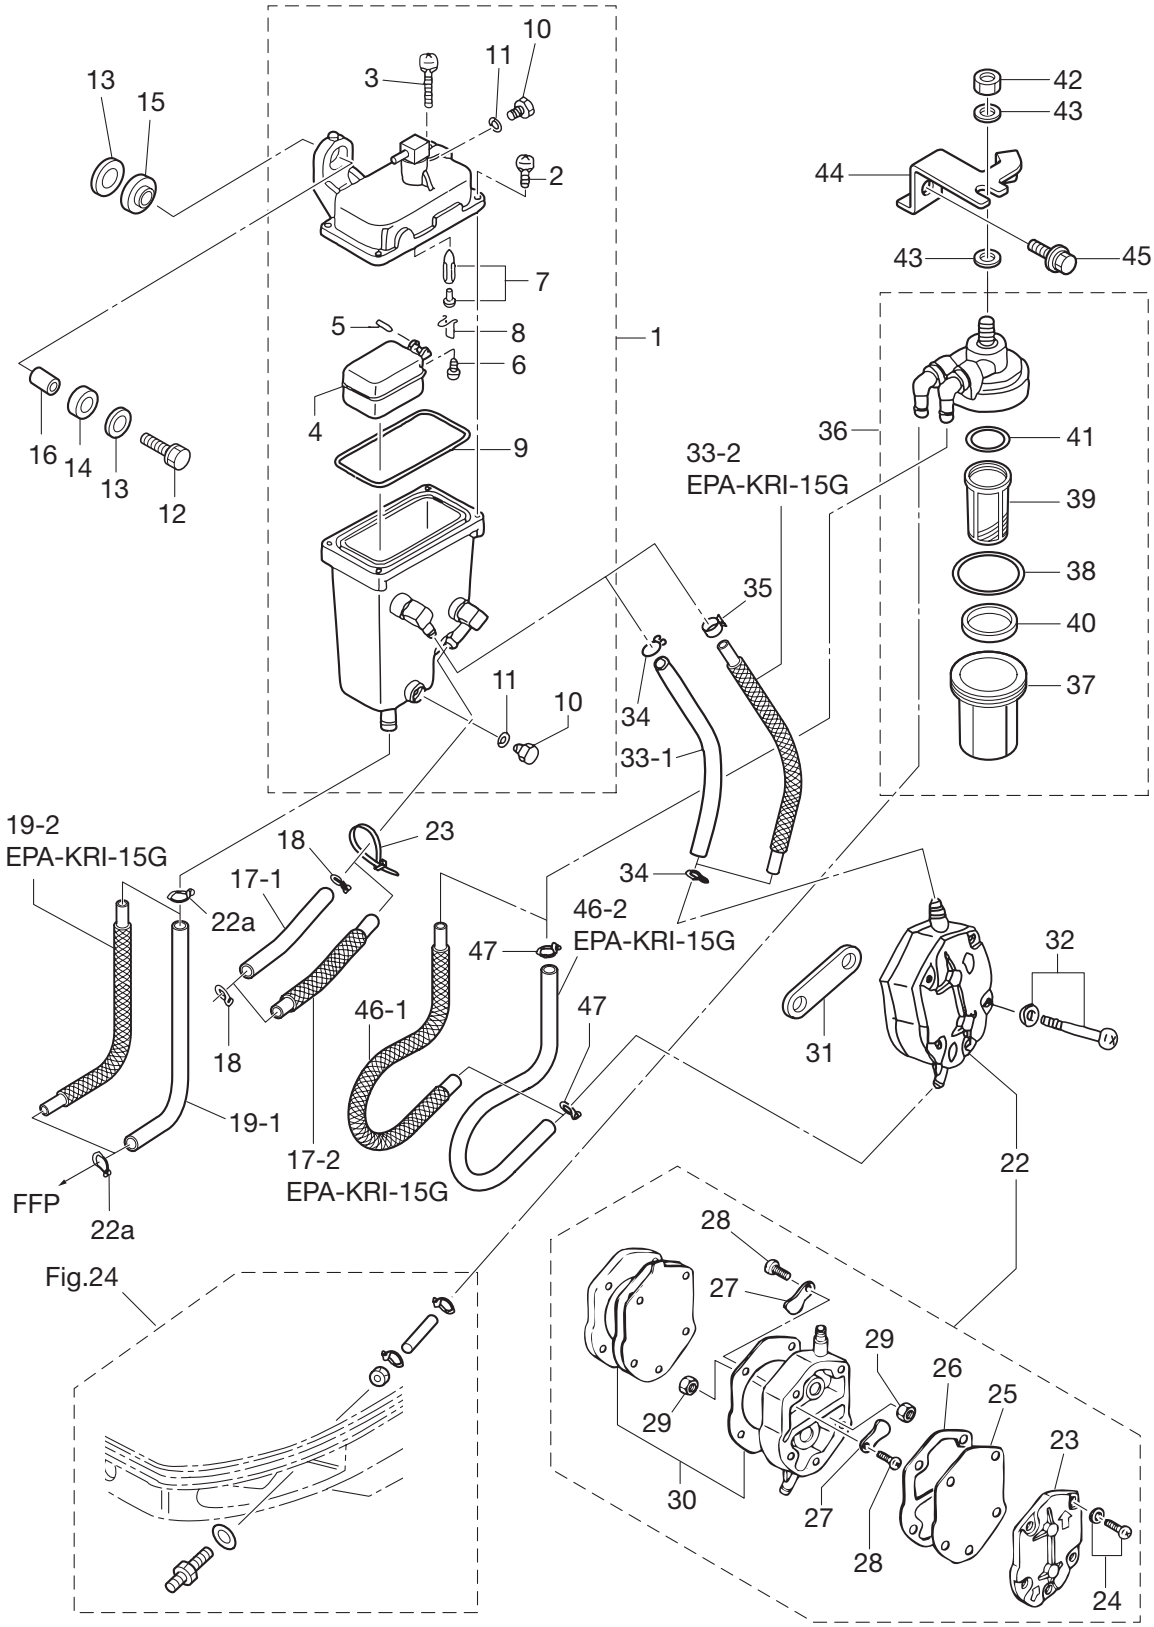


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
8-1		3T5-10150-1	Vapor Separator Ass'y ﾍﾞｰﾊﾟｾﾊﾟﾚｰﾀ	1	1	1	
8-2		922531-6414	* Screw * ｽｸﾘｭ	3	3	3	
8-3		921503-6430	* Screw * ｽｸﾘｭ	1	1	1	
8-4		3T5-03230-0	* Float Vapor Separator * ﾌﾛｰﾄ ﾍﾞｰﾊﾟｾﾊﾟﾚｰﾀ	1	1	1	
8-5		3F3-03232-0	* Float Arm Pin * ﾌﾛｰﾄｱｰﾑﾋﾟﾝ	1	1	1	
8-6		921503-0408	* Screw * ｽｸﾘｭ	1	1	1	
8-7		3R3-03239-0	* Float Valve Ass'y W/Valve Pin * ﾌﾛｰﾄﾊﾞﾙﾌﾞｱｯｼ (W/ﾊﾞﾙﾌﾞﾋﾟﾝ)	1	1	1	with Valve Pin
8-8		344-03244-0	* Clip * ｸﾘｯﾌﾟ	1	1	1	
8-9		3T5-03235-0	* O-Ring * Oﾘﾝｸﾞ	1	1	1	
8-10		345-03292-0	* Drain Screw * ﾄﾞﾚﾝｽｸﾘｭ	2	2	2	
8-11		336-03293-0	* O-Ring * Oﾘﾝｸﾞ	2	2	2	
8-12		910103-6630	Bolt ﾎﾞﾙﾄ	2	2	2	
8-13		346-67115-0	Washer 6.5-21-1 ﾜｯｼｬ 6.5-21-1	4	4	4	
8-14		346-67113-0	Mount Moter Cover Lower ﾏｳﾝﾄ ﾓｰﾀｶﾊﾞｰﾛｱ	2	2	2	
8-15		3B7-06920-0	Rubber Mount 8.5-14-2.5 ﾗﾊﾞｰﾏｳﾝﾄ 8.5-14-2.5	2	2	2	
8-16		346-67114-1	Spacer 6.2-9-15.7 ｽﾍﾟｰｻ 6.2-9-15.7	2	2	2	
8-17	1	98AB-50-075	Hose ﾎｰｽ	1	1	1	STD 98AB-501000
8-17	2	3GF-02135-0	Low Permeation Hose ﾛｰﾊﾟｰﾐｪｰｼｮﾝﾎｰｽ		1	1	Low Permeation Parts (for USA model)
8-18		338-02215-0	Clip Fuel Pipe φ10 ｸﾘｯﾌﾟ ﾌｭｴﾙﾊﾟｲﾌﾟ φ10	2	2	2	
8-19	1	98AB-70-180	Hose ﾎｰｽ	1	1	1	STD 98AB-701000
8-19	2	3GF-02170-0	Fuel Hose W/Protector ﾌｭｴﾙﾎｰｽ (W/ﾌﾟﾛﾃｸﾀ)		1	1	Low Permeation Parts (for USA model)
8-22a		3C7-02215-0	Clip φ12 ｸﾞﾘｯﾌﾟ φ12	2	2	2	
8-21		3T5-84398-0	Band Lead Wire 104 ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 104	1	1	1	
8-22		356-04000-1	Fuel Pump Ass'y ﾌｭｴﾙﾎﾟﾝﾌﾟｱｯｼ	1	1	1	
8-23		334-04004-0	* Pump Cover * ﾎﾟﾝﾌﾟｶﾊﾞｰ	1	1	1	
8-24		9225F2-6528	* Screw * ｽｸﾘｭ	3	3	3	
8-25		334-04005-0	* Pump Diaphragm * ﾎﾟﾝﾌﾟﾀﾞｲﾔﾌﾗﾑ	1	1	1	
8-26		334-04007-0	* Diaphragm Gasket B * ﾀﾞｲﾔﾌﾗﾑｶﾞｽｹｯﾄ B	1	1	1	
8-27		356-04044-0	* Check Valve * ﾁｪｯｸﾊﾞﾙﾌﾞ	2	2	2	
8-28		921722-0306	* Screw * ｽｸﾘｭ	2	2	2	

VAPOR SEPARATOR・FUEL LINE
Fig. 8　ベーパセパレータ・フュエルライン

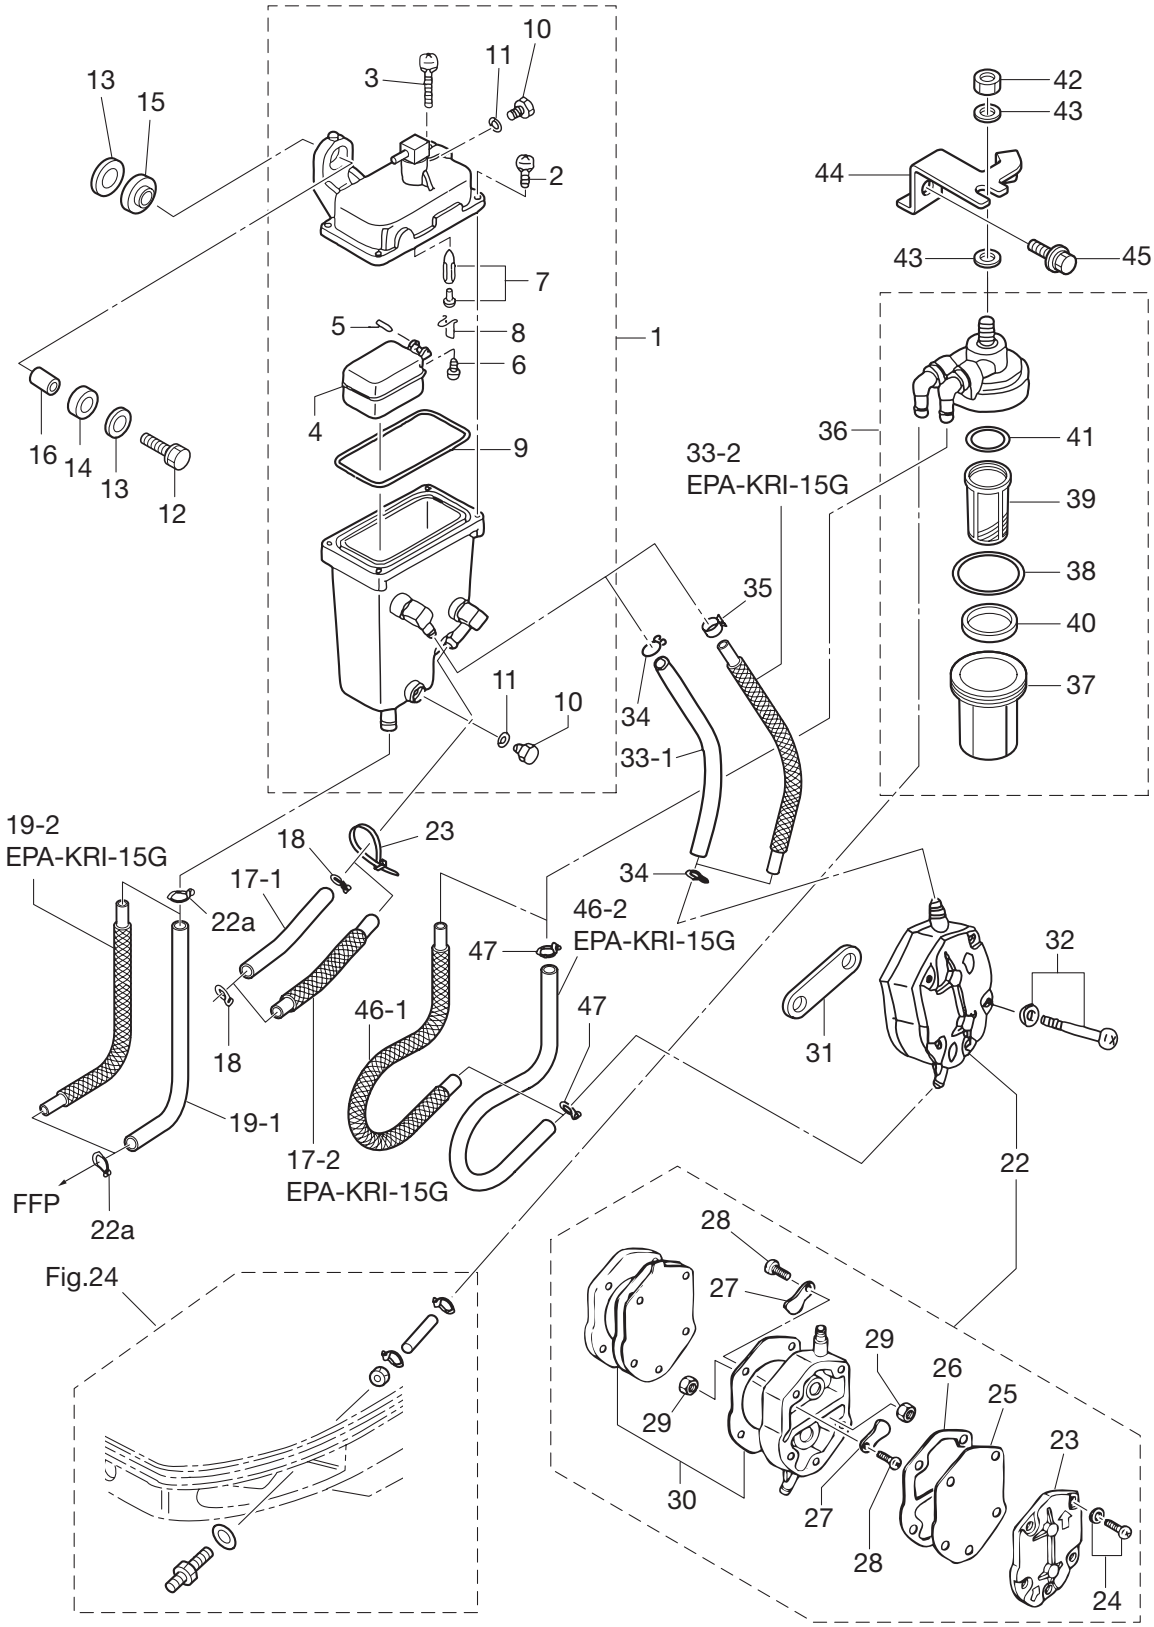


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
8-29		930222-0300	* Nut * ナット	2	2	2	
8-30		356-04030-0	* Diaphragm Gasket Set * ダイヤフラムガスケットセット	1	1	1	
8-31		346-04901-1	Gasket Fuel Pump ガスケット フュエルポンプ	1	1	1	
8-32		910103-6640	Bolt ボルト	2	2	2	
8-33	1	98AB-50-190	Hose ホース	1	1	1	STD 98AB-501000
8-33	2	3GG-02135-0	Low Permeation Hose ローパーミエーションホース		1	1	Low Permeation Parts (for USA model)
8-34		338-02215-0	Clip Fuel Pipe φ10 クリップ フュエルパイプ φ10	1	1	1	
8-35		3AB-35143-0	Clip クリップ	1	1	1	
8-36		3T5-02230-0	Fuel Filter Ass'y フュエルフィルタアッシ	1	1	1	
8-37		3B7-02237-0	* Cup * カップ	1	1	1	
8-38		3B7-02235-0	* O-Ring A * Oリング A	1	1	1	
8-39		3B7-02234-0	* Filter * フィルタ	1	1	1	
8-40		3T5-02229-0	* Float Fuel Filter * フロート フュエルフィルタ	1	1	1	
8-41		3B7-02236-0	* O-Ring B * Oリング B	1	1	1	
8-42		930103-0800	Nut ナット	1	1	1	
8-43		940103-0800	Washer ワッシャ	2	2	2	
8-44		3GF-02239-0	Plate Filter プレート フィルタ	1	1	1	
8-45		910103-6614	Bolt ボルト	1	1	1	
8-46	1	98AB-50-260	Hose ホース	1	1	1	STD 98AB-501000
8-46	2	3GF-02165-0	Fuel Hose W/Protector フュエルホース (W/プロテクタ)		1	1	Low Permeation Parts (for USA model)
8-47		338-02215-0	Clip Fuel Pipe φ10 クリップ フュエルパイプ φ10	2	2	2	

MAGNETO
Fig. 9　マグネト

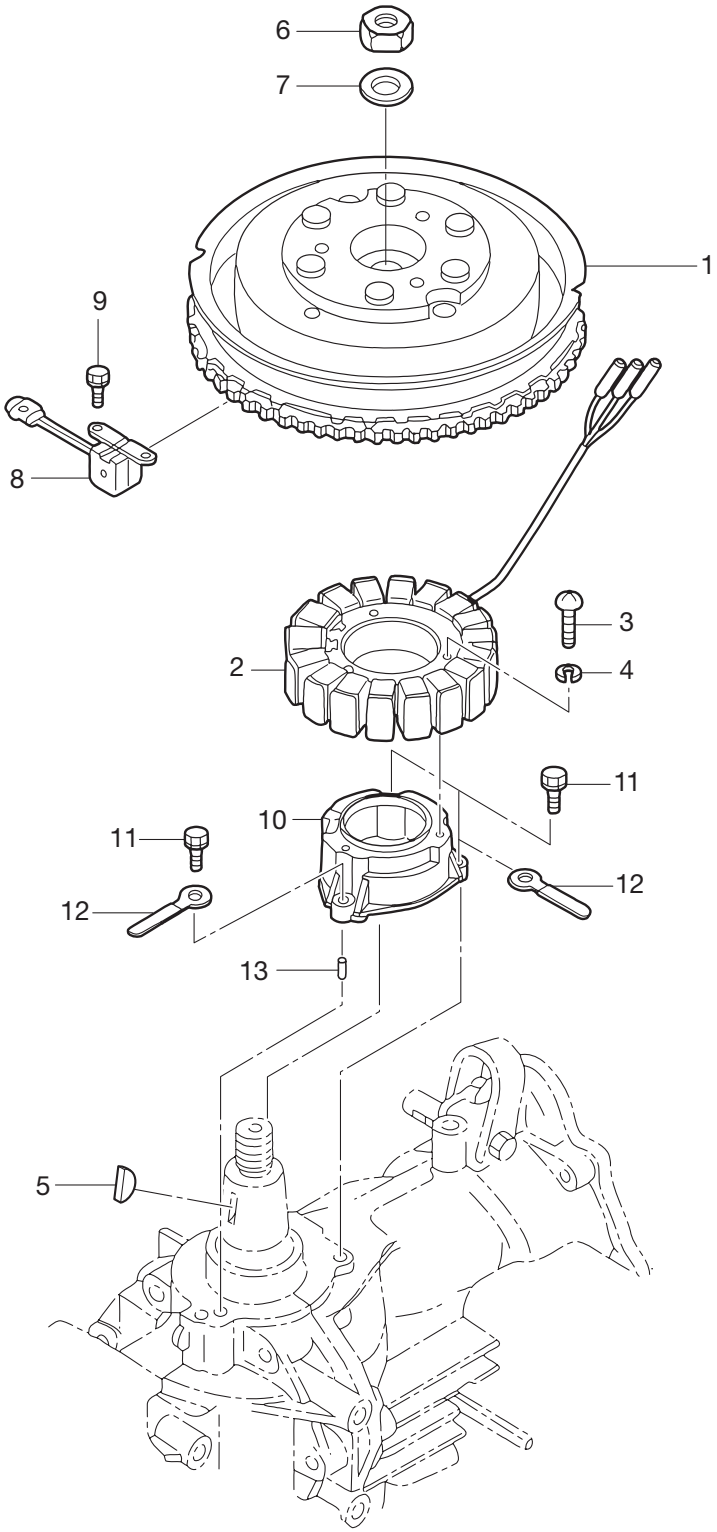


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
9-1	3T5-06191-0	Flywheel W/Ring Gear ﾌﾗｲﾎｲｰﾙ (W/ﾘﾝｸﾞｷﾞﾔ)	1	1	1	F4T601-71
9-2	3Y9-06123-0	Alternator Ass'y ｵﾙﾀﾈｰﾀｱｯｼ	1	1	1	
9-3	921503-0635	Screw ｽｸﾘｭ	3	3	3	
9-4	941303-0600	Spring Washer ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	3	3	3	
9-5	334-00131-0	Key (Magneto) ｷｰ (ﾏｸﾞﾈﾄ)	1	1	1	
9-6	353-00132-0	Nut 18P1.5 ﾅｯﾄ 18P1.5	1	1	1	
9-7	353-00133-0	Washer 19-34-3 ﾜｯｼｬ 19-34-3	1	1	1	
9-8	3T5-06145-0	Pick-Up Coil ﾋﾟｯｸｱｯﾌﾟｺｲﾙ	1	1	1	Crank Position Sensor
9-9	910103-6512	Bolt ﾎﾞﾙﾄ	2	2	2	
9-10	3T5-06008-1	Coil Bracket ｺｲﾙﾌﾞﾗｹｯﾄ	1	1	1	
9-11	910103-7625	Bolt ﾎﾞﾙﾄ	3	3	3	
9-12	309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P	2	2	2	
9-13	334-65012-0	Dowel Pin 4-10 ﾀﾞｳｪﾙﾋﾟﾝ 4-10	2	2	2	

ELECTRIC PARTS (ECU・DIAGRAM)
Fig. 10　エレクトリックパーツ（ECU･ダイヤフラム）

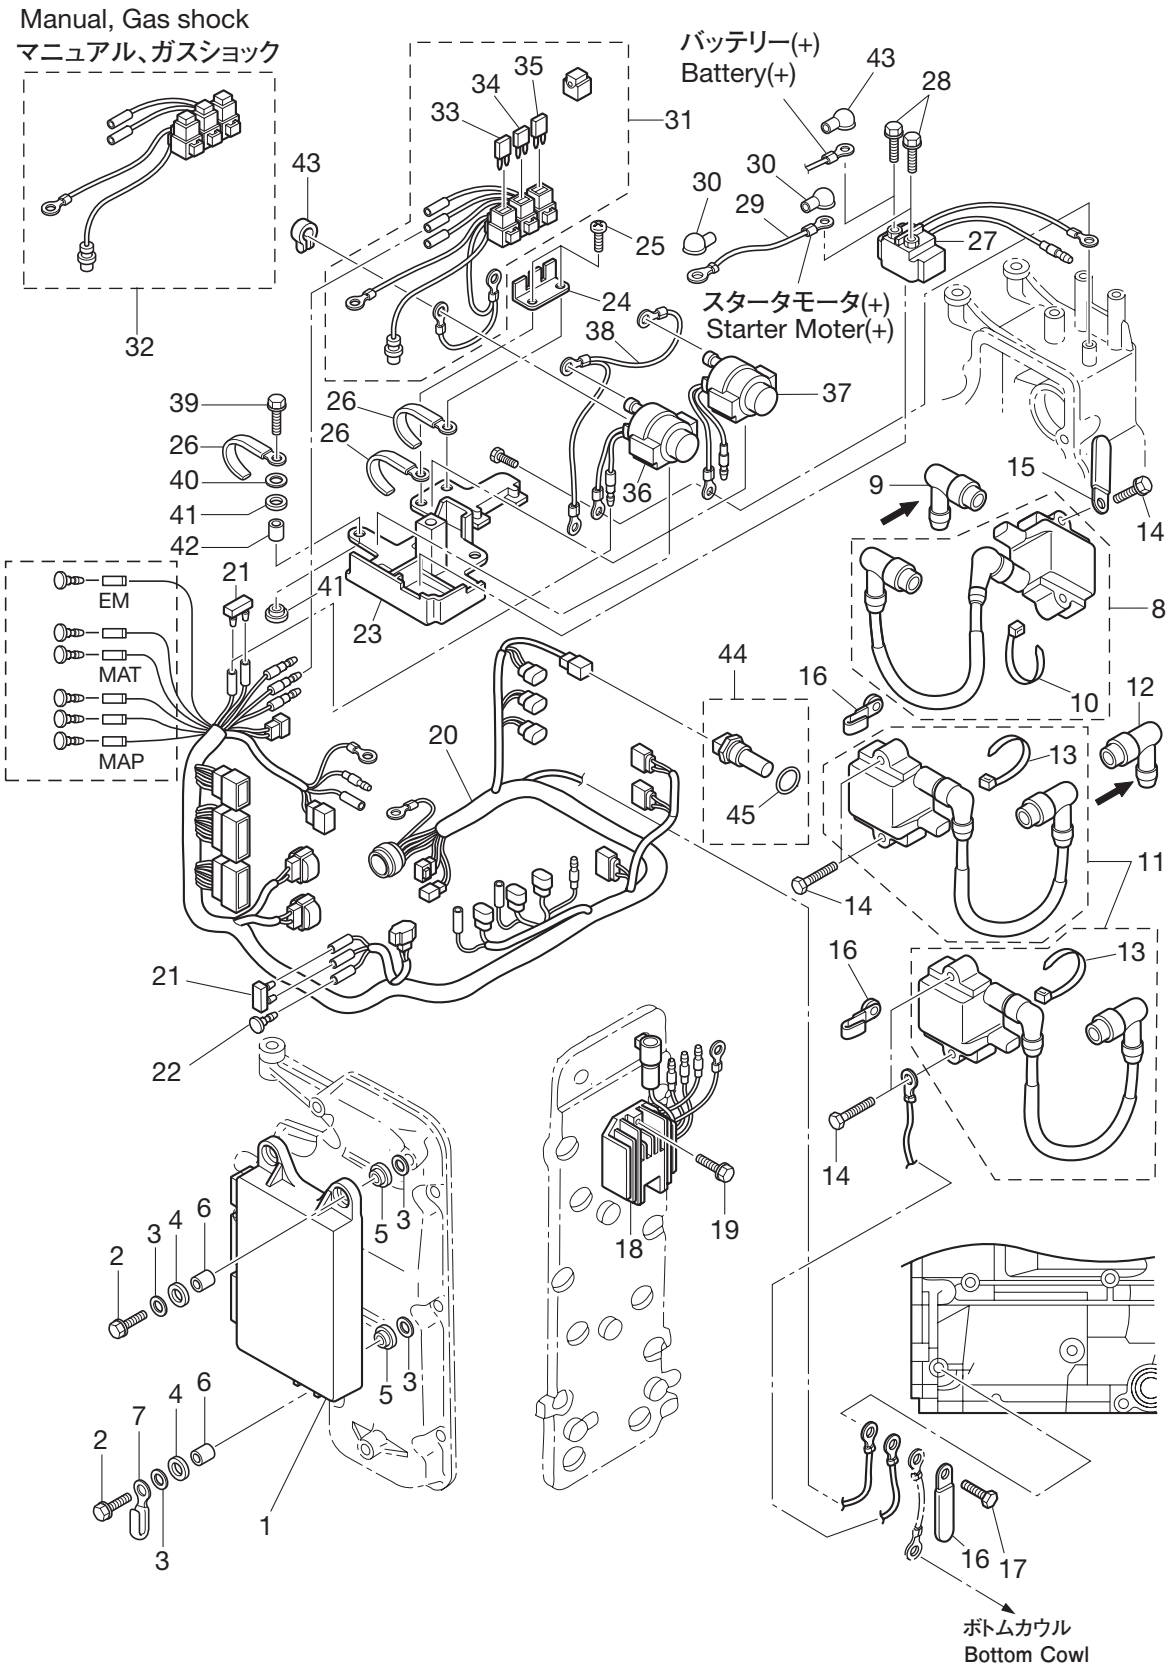


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
10-1	1	3GF-06401-0	ECU Ass'y ECUｱｯｼ		1	1	50ps 40ps(Italy) Label 3GF09AA
10-1	2	3GG-06401-0	ECU Ass'y ECUｱｯｼ		1		40ps Label 3GG09AA (without for Italy 40ps)
10-1	3	3GM-06401-0	ECU Ass'y ECUｱｯｼ	1			30ps Label 3GM09AA
10-2		910103-6630	Bolt ﾎﾞﾙﾄ	3	3	3	
10-3		346-67115-0	Washer 6.5-21-1 ﾜｯｼｬ 6.5-21-1	6	6	6	
10-4		346-67113-0	Mount Moter Cover Lower ﾏｳﾝﾄ ﾓｰﾀｶﾊﾞｰﾛｱ	3	3	3	
10-5		3B7-06920-0	Rubber Mount 8.5-14-2.5 ﾗﾊﾞｰﾏｳﾝﾄ 8.5-14-2.5	3	3	3	
10-6		3T5-67114-0	Spacer 6.2-9-16.6 ｽﾍﾟｰｻ 6.2-9-16.6	3	3	3	
10-7		309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P	1	1	1	
10-8		3Z5-06469-0	Ignition Coil W/Resistance Cap #1 ｲｸﾞﾆｯｼｮﾝｺｲﾙ (W/ﾚｼﾞｽﾀﾝｽｷｬﾌﾟ) #1	1	1	1	#1
10-9		3H6-06999-0	* Plug Cap W/Resistance *ﾌﾟﾗｸﾞｷｬｯﾌﾟ (W/ﾚｼﾞｽﾀﾝｽ)	1	1	1	#1
10-10		369-84398-0	* Band Lead Wire 158 *ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 158	1	1	1	#1
10-11		3Z5-06470-0	Ignition Coil W/Resistance Cap #2,3 ｲｸﾞﾆｯｼｮﾝｺｲﾙ (W/ﾚｼﾞｽﾀﾝｽｷｬﾌﾟ) #2,3	2	2	2	#2､#3
10-12		3H6-06999-0	* Plug Cap W/Resistance *ﾌﾟﾗｸﾞｷｬｯﾌﾟ (W/ﾚｼﾞｽﾀﾝｽ)	1	1	1	#2､#3
10-13		369-84398-0	* Band Lead Wire 158 *ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 158	1	1	1	#2､#3
10-14		910103-7635	Bolt ﾎﾞﾙﾄ	6	6	6	
10-15		309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P	1	1	1	
10-16		3T4-06972-1	Clamp 6.5-87P ｸﾗﾝﾌﾟ 6.5-87P	3	3	3	
10-17		910103-6614	Bolt ﾎﾞﾙﾄ	1	1	1	
10-18		3Z5-76060-2	Rectifier Complete ﾚｸﾁﾌｧｲﾔｺﾝﾌﾟﾘｰﾄ	1	1	1	
10-19		910103-5620	Bolt ﾎﾞﾙﾄ	2	2	2	
10-20		3GF-76110-0	Cord Ass'y ｺｰﾄﾞｱｯｼ	1	1	1	
10-21	1	3A3-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		1	1	for “EFT” Type
10-21	2	353-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		2	2	for Manual & Gas Assist
10-21	3	353-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ			2	for MD50B2EPOL-EXEU
10-22	1	353-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		1	1	for “EFT” Type
10-22	2	3A3-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		1	1	for Manual & Gas Assist
10-22	3	3A3-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ			1	for MD50B2EPOL-EXEU
10-23		3T5-72585-0	Solenoid Switch Bracket Ass'y ｿﾚﾉｲﾄﾞｽｲｯﾁﾌﾞﾗｹｯﾄｱｯｼ	1	1	1	
10-24		3T9-76064-0	Fuse Holder Bracket ﾋｭｰｽﾞﾎﾙﾀﾞﾌﾞﾗｹｯﾄ	1	1	1	

ELECTRIC PARTS (ECU・DIAGRAM)
Fig. 10　エレクトリックパーツ（ECU･ダイヤフラム）

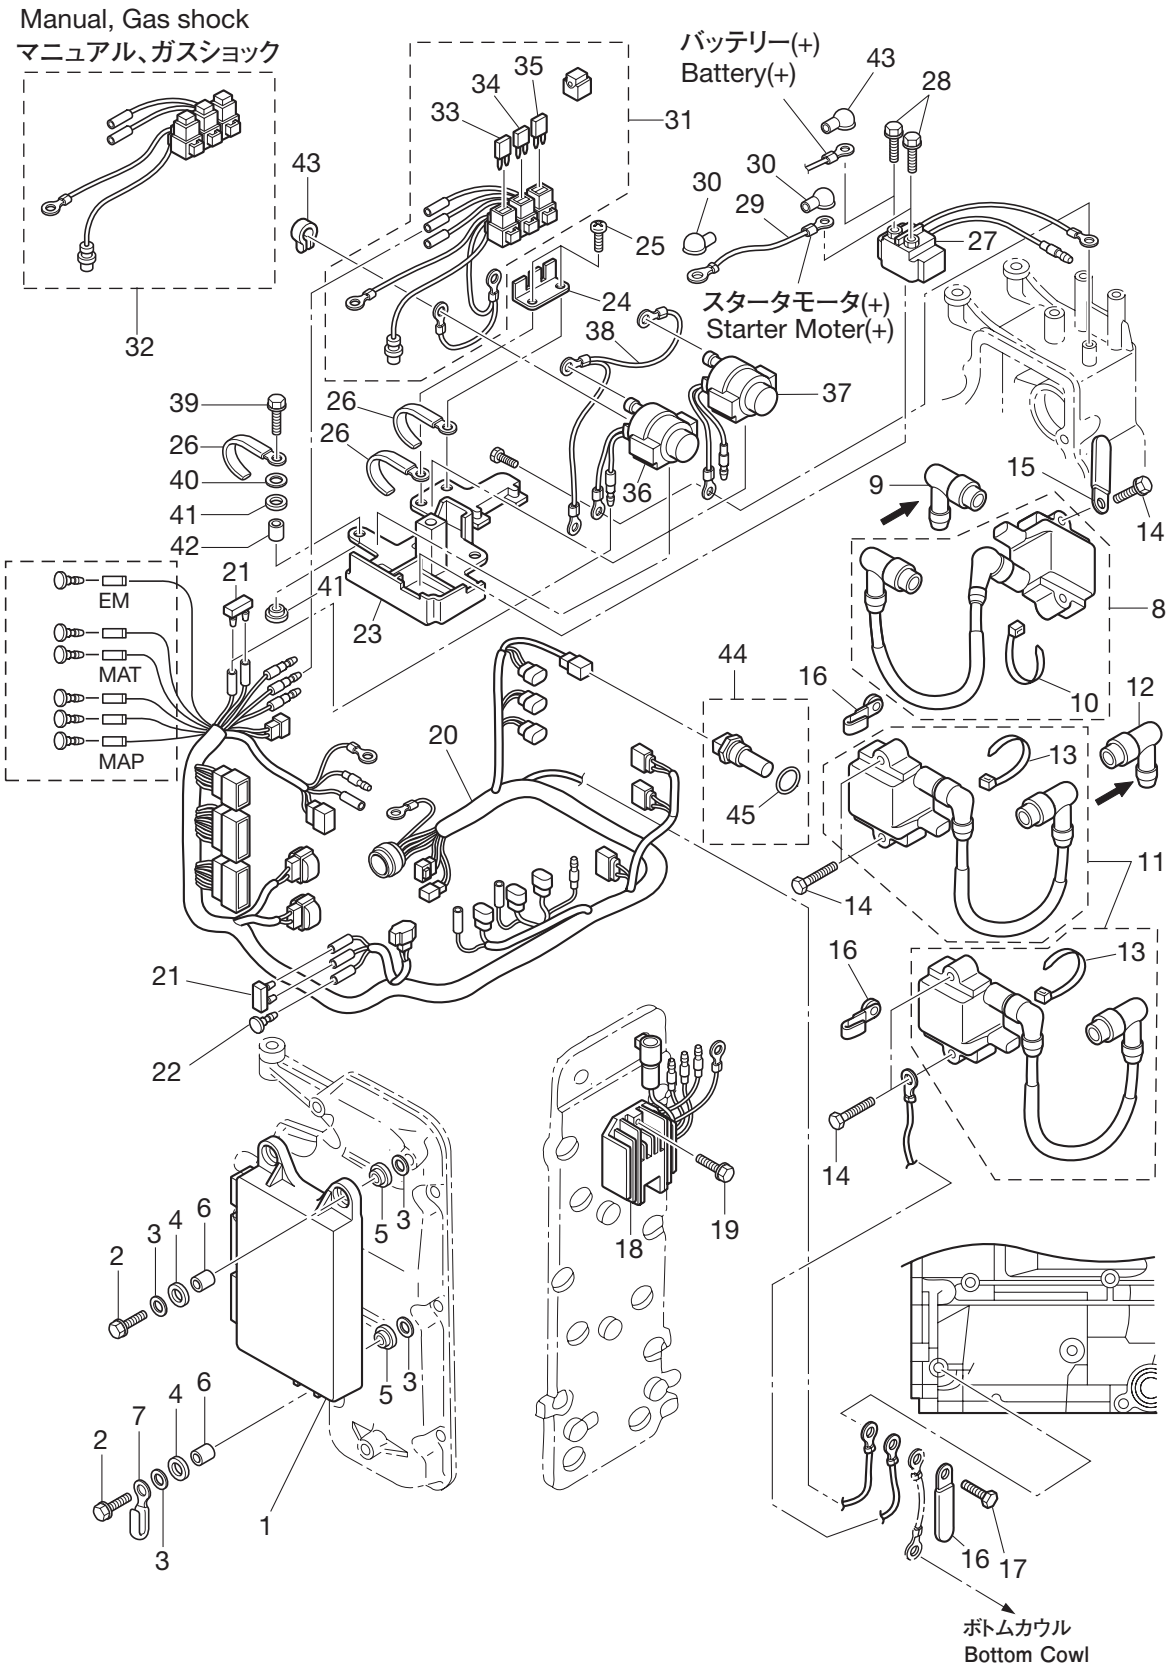


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
10-25	3T5-06437-0	Tapping Screw 6-16 ﾀｯﾋﾟﾝｸﾞｽｸﾘｭ 6-16	2	2	2	
10-26	3T4-06972-1	Clamp 6.5-87P ｸﾗﾝﾌﾟ 6.5-87P	3	3	3	
10-27	3H8-76040-0	Starter Solenoid ｽﾀｰﾀｿﾚﾉｲﾄﾞ	1	1	1	
10-28	910103-5610	Bolt ﾎﾞﾙﾄ	2	2	2	
10-29	3R3-76141-0	Starter Cable L=270 ｽﾀｰﾀｹｰﾌﾞﾙ L=270	1	1	1	
10-30	3A3-76145-0	Terminal Cap Starter ﾀｰﾐﾅﾙｷｬｯﾌﾟ ｽﾀｰﾀ	2	2	2	
10-31	3Y9-76062-1	Fuse Wire Ass'y ﾋｭｰｽﾞﾜｲﾔｱｯｼ	1	1	1	for “PTT” Type
10-32	3Z5-76066-0	Fuse Wire Ass'y ﾋｭｰｽﾞﾜｲﾔｱｯｼ		1	1	for Manual & Gas Assist
10-33	3T5-76249-0	* Fuse 30A *ﾋｭｰｽﾞ 30A	1	1	1	
10-34	3Y9-76248-0	* Fuse 25A *ﾋｭｰｽﾞ 25A	1	1	1	
10-35	3T5-76246-0	* Fuse 15A *ﾋｭｰｽﾞ 15A	1	1	1	
10-36	3C8-72580-0	PTT Solenoid Switch (A) PTTｿﾚﾉｲﾄﾞｽｲｯﾁ (A)	1	1	1	UP, for “PTT” Type
10-37	3C8-72581-0	PTT Solenoid Switch (B) PTTｿﾚﾉｲﾄﾞｽｲｯﾁ (B)	1	1	1	DN, for “PTT” Type
10-38	3T5-76142-1	Ground Cable ｸﾞﾗﾝﾄﾞｹｰﾌﾞﾙ	1	1	1	for “PTT” Type L=285,L=140
10-39	910103-6625	Bolt ﾎﾞﾙﾄ	3	3	3	
10-40	3C8-66308-0	Washer 6-16-1.5 ﾜｯｼｬ 6-16-1.5	3	3	3	
10-41	3F3-06920-0	Rubber Mount 8.5-12-2 ﾗﾊﾞｰﾏｳﾝﾄ 8.5-12-2	6	6	6	
10-42	3T5-76079-0	Collar 6.2-9-10.7 ｶﾗｰ 6.2-9-10.7	3	3	3	
10-43	3A3-76145-0	Terminal Cap Starter ﾀｰﾐﾅﾙｷｬｯﾌﾟ ｽﾀｰﾀ	3	3	3	for “PTT” Type
10-44	3Y9-72514-0	Water Temperature Sensor W/O-Ring ｳｫｰﾀﾃﾝﾌﾟｾﾝｻ (W/Oﾘﾝｸﾞ)	1	1	1	
10-45	3G9-66136-0	* O-Ring 2.0-10.0 *Oﾘﾝｸﾞ 2.0-10.0	1	1	1	

ELECTRIC PARTS (STARTER MOTOR)
Fig. 11　エレクトリックパーツ（スタータモータ）

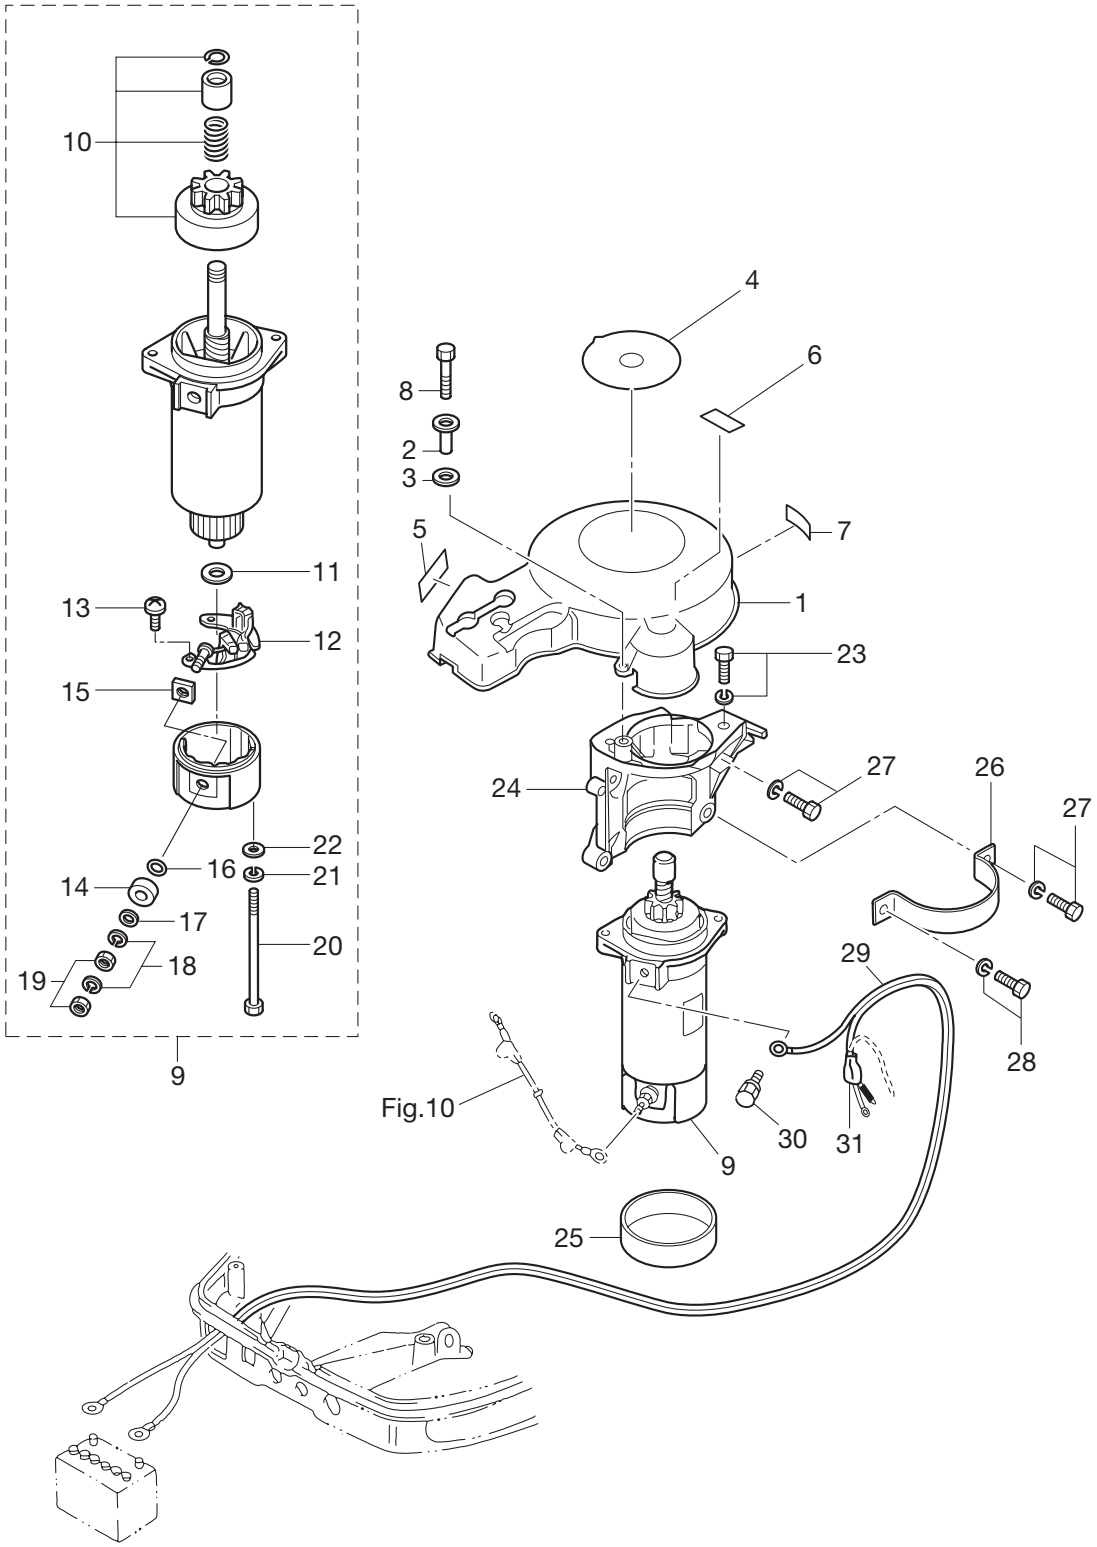


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
11-1	3T5-06301-0	Ring Gear Cover ﾘﾝｸﾞｷﾞﾔｶﾊﾞｰ	1	1	1	
11-2	3GF-06304-0	Collar ｶﾗｰ	3	3	3	
11-3	3B7-06305-0	Rubber Mount 9-16-4.3 ﾗﾊﾞｰﾏｳﾝﾄ 9-16-4.3	3	3	3	
11-4	3R0-72181-0	Caution Decal (B) ｺｰｼｮﾝﾃﾞｶｰﾙ B	1	1	1	
11-5	3Y9-72194-0	Fuse Decal ﾋｭｰｽﾞﾃﾞｶｰﾙ	1	1	1	
11-6	3T5-72186-0	Pressure Decal ﾌﾟﾚｯｼｬﾃﾞｶｰﾙ	1	1	1	
11-7	3FW-72026-0	Spark Plug Decal ｽﾊﾟｰｸﾌﾟﾗｸﾞﾃﾞｶｰﾙ	1	1	1	
11-8	910103-0625	Bolt ﾎﾞﾙﾄ	3	3	3	
11-9	3C8-76010-1	Starter Motor Ass'y ｽﾀｰﾀﾓｰﾀｱｯｼ	1	1	1	
11-10	3C8-76015-0	* Pinion Ass'y *ﾋﾟﾆｵﾝｱｯｼ	1	1	1	
11-11	3C8-75015-0	* Washer *ﾜｯｼｬｰ	1	1	1	
11-12	3C8-75014-0	* Brush Holder Ass'y *ﾌﾞﾗｼﾎﾙﾀﾞｱｯｼ	1	1	1	
11-13	921521-6408	* Screw *ｽｸﾘｭ	2	2	2	
11-14	3C8-75016-0	* Bushing 1 *ﾌﾞｯｼﾝｸﾞ 1	1	1	1	
11-15	3C8-75017-0	* Bushing 2 *ﾌﾞｯｼﾝｸﾞ 2	1	1	1	
11-16	3C8-75018-0	* O-Ring *Oﾘﾝｸﾞ	1	1	1	
11-17	940103-0600	* Washer *ﾜｯｼｬ	1	1	1	
11-18	941303-0600	* Spring Washer *ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
11-19	930203-0600	* Nut *ﾅｯﾄ	2	2	2	
11-20	3C8-75019-0	* Bolt *ﾎﾞﾙﾄ	2	2	2	
11-21	941321-0500	* Spring Washer *ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
11-22	940221-0500	* Washer *ﾜｯｼｬ	2	2	2	
11-23	910103-6825	Bolt ﾎﾞﾙﾄ	2	2	2	
11-24	3T5B05101-0	Bracket Fan Motor ﾌﾞﾗｹｯﾄ ﾌｧﾝﾓｰﾀ	1	1	1	
11-25	3C8-76007-0	Damper Starter Motor ﾀﾞﾝﾊﾟ ｽﾀｰﾀﾓｰﾀ	1	1	1	
11-26	3C8-76009-0	Starter Motor Band ｽﾀｰﾀﾓｰﾀﾊﾞﾝﾄﾞ	1	1	1	
11-27	910103-6825	Bolt ﾎﾞﾙﾄ	4	4	4	
11-28	910103-6820	Bolt ﾎﾞﾙﾄ	1	1	1	
11-29	3B7-76120-2	Battery Cable L=3000 ﾊﾞｯﾃﾘｹｰﾌﾞﾙ L=3000	1	1	1	
11-30	910103-6616	Bolt ﾎﾞﾙﾄ	1	1	1	

ELECTRIC PARTS (STARTER MOTOR)
Fig. 11　エレクトリックパーツ（スタータモータ）

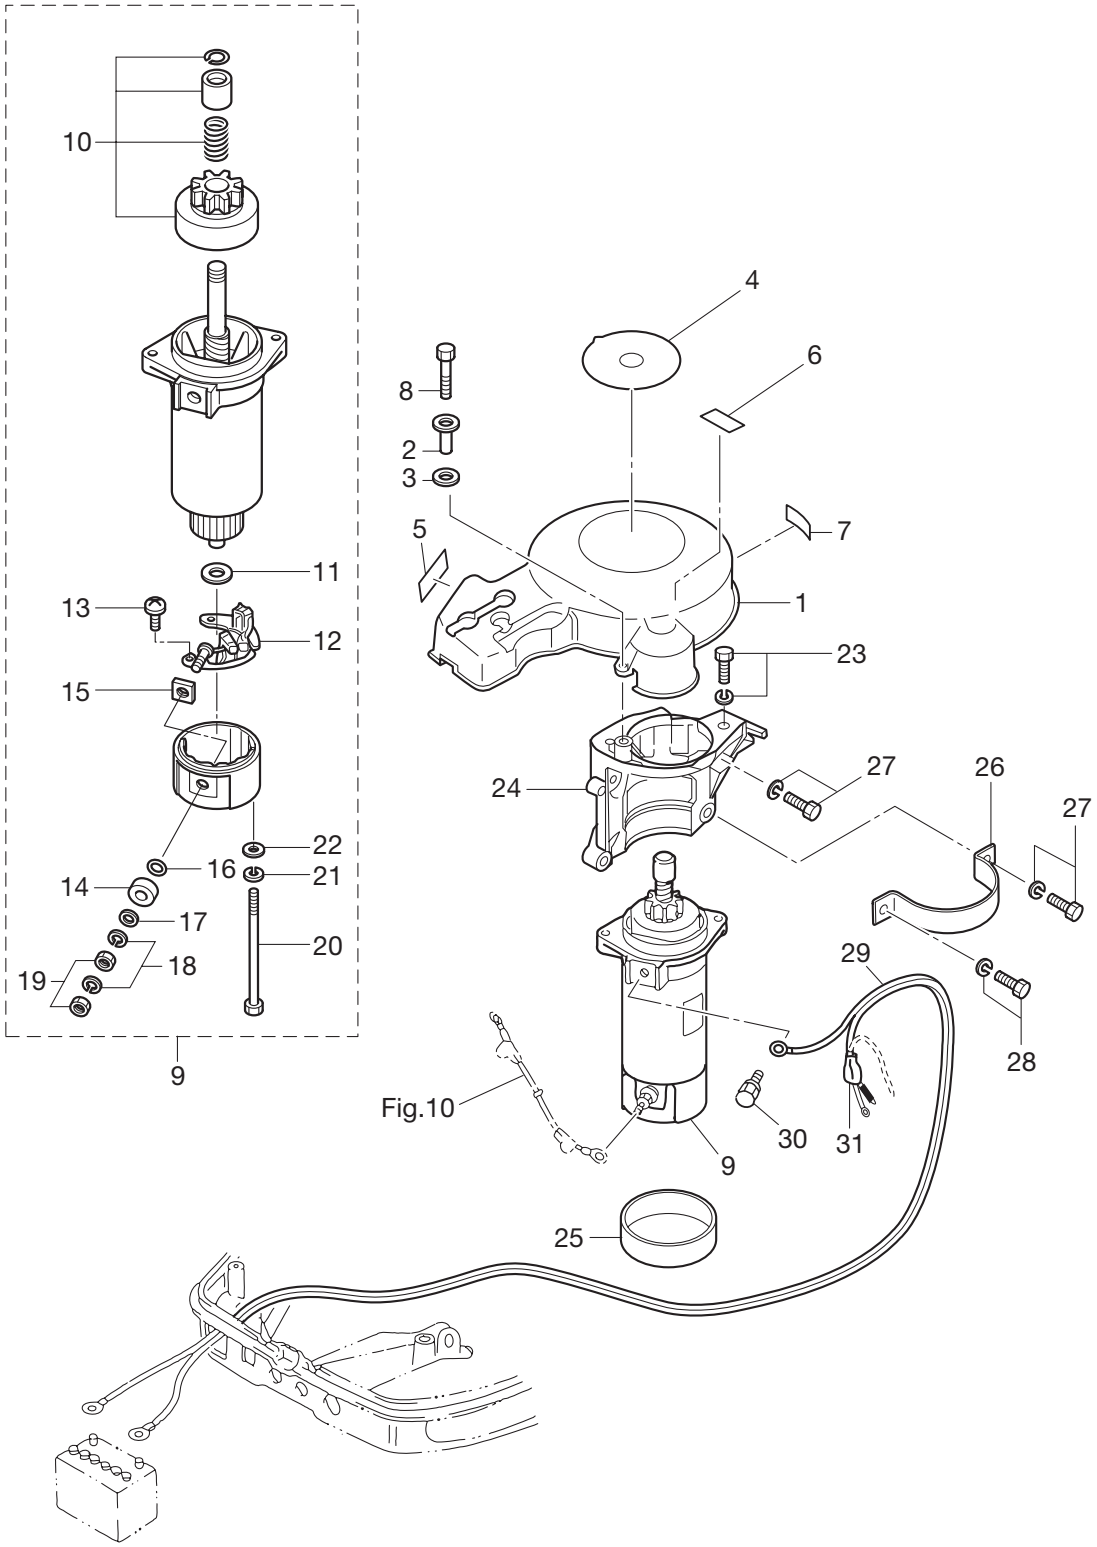


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
11-31		3B7-76145-0	Terminal Cap ﾀｰﾐﾅﾙｷｬｯﾌﾟ	1	1	1	

OIL PUMP
Fig. 12　オイルポンプ

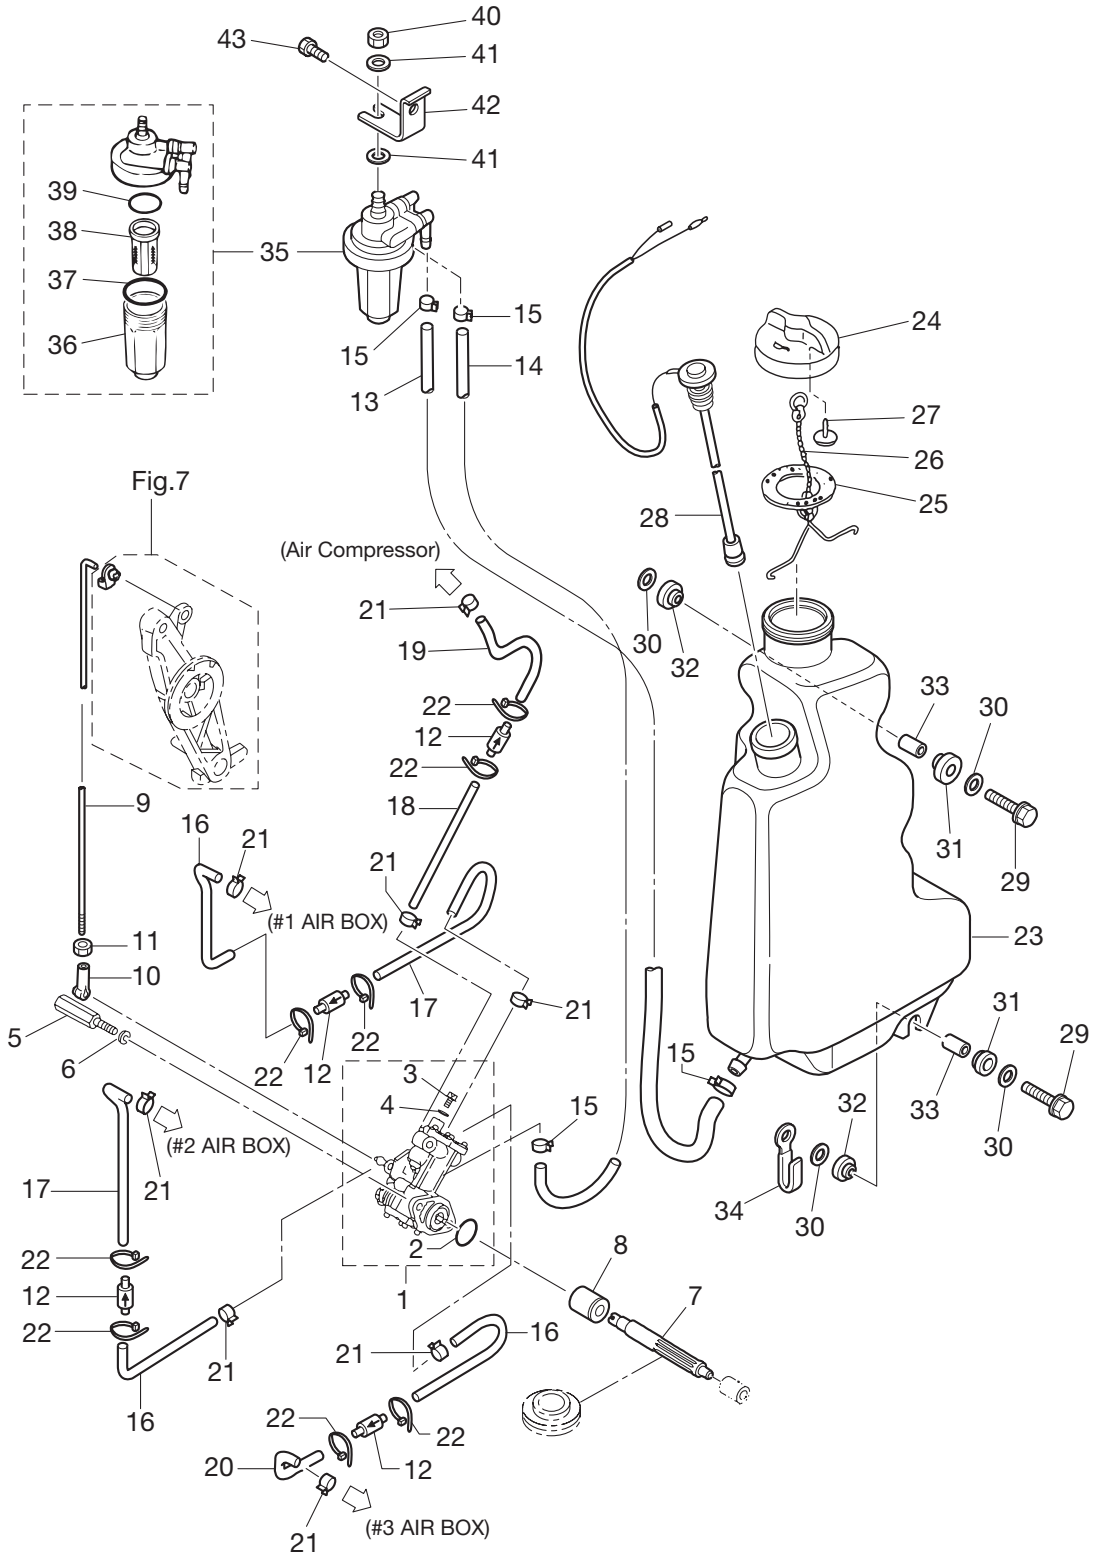


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
12-1		3T5-09000-0	Oil Pump Ass'y ｵｲﾙﾎﾟﾝﾌﾟｱｯｼ	1	1	1	
12-2		3B7-09002-0	* O-Ring 1.6-19.2 * Oﾘﾝｸﾞ 1.6-19.2	1	1	1	
12-3		3B7-09004-0	* Air Vent Bolt * ｴｱﾍﾞﾝﾄﾎﾞﾙﾄ	1	1	1	
12-4		3B7-09006-0	* Washer * ﾜｯｼｬ	1	1	1	
12-5		3C8-09050-1	Oil Pump Bolt ｵｲﾙﾎﾟﾝﾌﾟﾎﾞﾙﾄ	2	2	2	
12-6		941303-0600	Spring Washer ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
12-7		3C8-09065-0	Oil Pump Driven Gear ｵｲﾙﾎﾟﾝﾌﾟﾄﾞﾘﾌﾞﾝｷﾞﾔ	1	1	1	
12-8		3C8-09069-0	Bushing 9-20-20.8 ﾌﾞｯｼﾝｸﾞ 9-20-20.8	1	1	1	
12-9		3C8-09053-1	Oil Pump Rod φ4.5-190 ｵｲﾙﾎﾟﾝﾌﾟﾛｯﾄﾞ φ4.5-190	1	1	1	
12-10		3B7-05243-0	Ball Joint Connector ﾎﾞｰﾙｼﾞｮｲﾝﾄｺﾈｸﾀ	1	1	1	
12-11		930103-0500	Nut ﾅｯﾄ	1	1	1	
12-12		3B7-09075-1	Check Valve Complete ﾁｪｯｸﾊﾞﾙﾌﾞｺﾝﾌﾟﾘｰﾄ	4	4	4	
12-13		99AA-6-0570	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-6-1000
12-14		99AA-6-0175	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-6-1000
12-15		3AB-35143-0	Clip φ9.4 ｸﾘｯﾌﾟ φ9.4	4	4	4	
12-16	1	99AA-2-0200	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-16	2	99AA-2-0200	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-16	3	99AA-2-0200	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-17	1	99AA-2-0140	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-17	2	99AA-2-0140	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-18		99AA-2-0120	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-19		99AA-2-0160	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-20		99AA-2-0100	Pipe ﾊﾟｲﾌﾟ	1	1	1	99AA-2-1000
12-21		3B7-09052-0	Clip φ6.9 ｸﾘｯﾌﾟ φ6.9	8	8	8	
12-22		3T5-84398-0	Band Lead Wire 104 ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 104	8	8	8	
12-23		3T5-71010-0	Oil Tank ｵｲﾙﾀﾝｸ	1	1	1	
12-24		3C8-71015-0	Oil Filler Cap ｵｲﾙﾌｨﾗｷｬｯﾌﾟ	1	1	1	
12-25		3C8-71016-0	Gasket 36-52-2 ｶﾞｽｹｯﾄ 36-52-2	1	1	1	
12-26		3C8-71017-0	Cap Hook Tank ｷｬｯﾌﾟﾌｯｸ ﾀﾝｸ	1	1	1	
12-27		3C8-71018-0	Oil Tank Cap Check Valve ｵｲﾙﾀﾝｸﾁｪｯｸﾊﾞﾙﾌﾞ	1	1	1	

OIL PUMP
Fig. 12　オイルポンプ

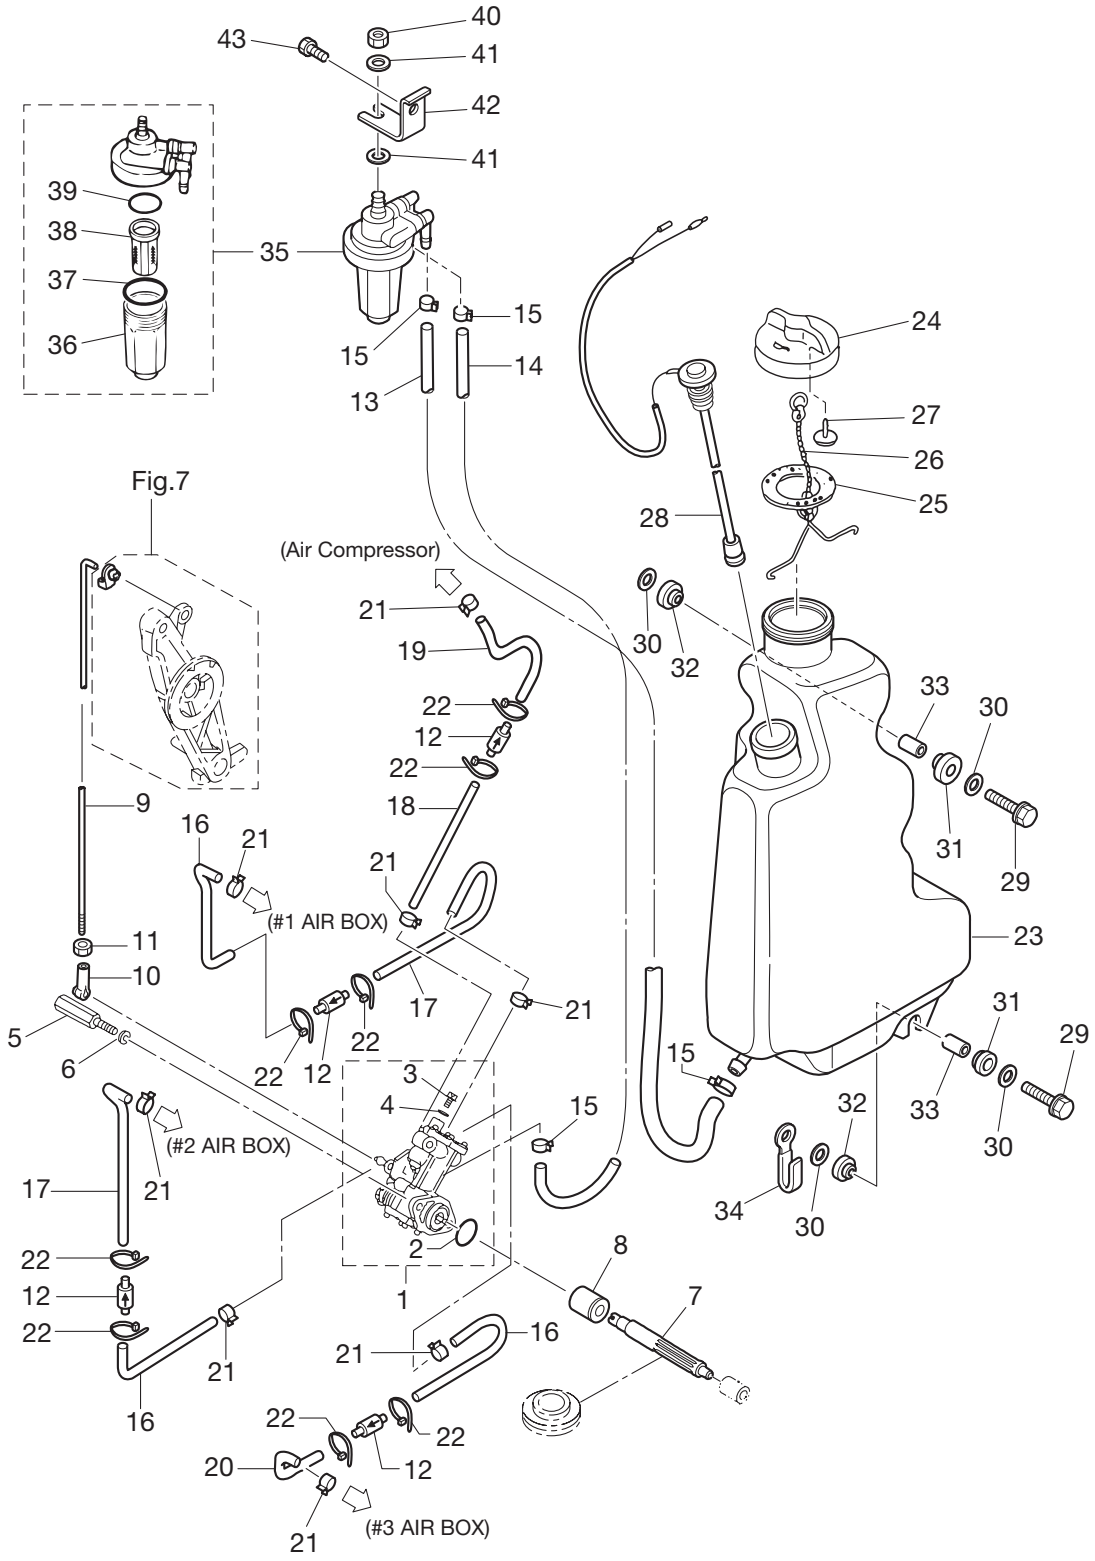


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
12-28	3T5-71020-0	Oil Level Sensor オイルレベルセンサ	1	1	1	
12-29	910103-6630	Bolt ボルト	2	2	2	
12-30	346-67115-0	Washer 6.5-21-1 ワッシャ 6.5-21-1	4	4	4	
12-31	346-67113-0	Mount Moter Cover Lower マウント モータカバーロア	2	2	2	
12-32	3B7-06920-0	Rubber Mount 8.5-14-2.5 ラバーマウント 8.5-14-2.5	2	2	2	
12-33	346-67114-1	Spacer 6.2-9-15.7 スペーサ 6.2-9-15.7	2	2	2	
12-34	3T4-06972-1	Clamp 6.5-87P クランプ 6.5-87P	1	1	1	
12-35	3C7-71030-0	Oil Filter Ass'y オイルフィルタアッシ	1	1	1	
12-36	3B7-02237-0	* Cup * カップ	1	1	1	
12-37	3B7-02235-0	* O-Ring A * Oリング A	1	1	1	
12-38	3C7-71033-0	* Filter * フィルタ	1	1	1	
12-39	3B7-02236-0	* O-Ring B * Oリング B	1	1	1	
12-40	930103-0800	Nut ナット	1	1	1	
12-41	940103-0800	Washer ワッシャ	2	2	2	
12-42	3T5-02239-0	Plate Filter プレート フィルタ	1	1	1	
12-43	910103-6614	Bolt ボルト	1	1	1	

DRIVE SHAFT HOUSING
Fig. 13　ドライブシャフトハウジング

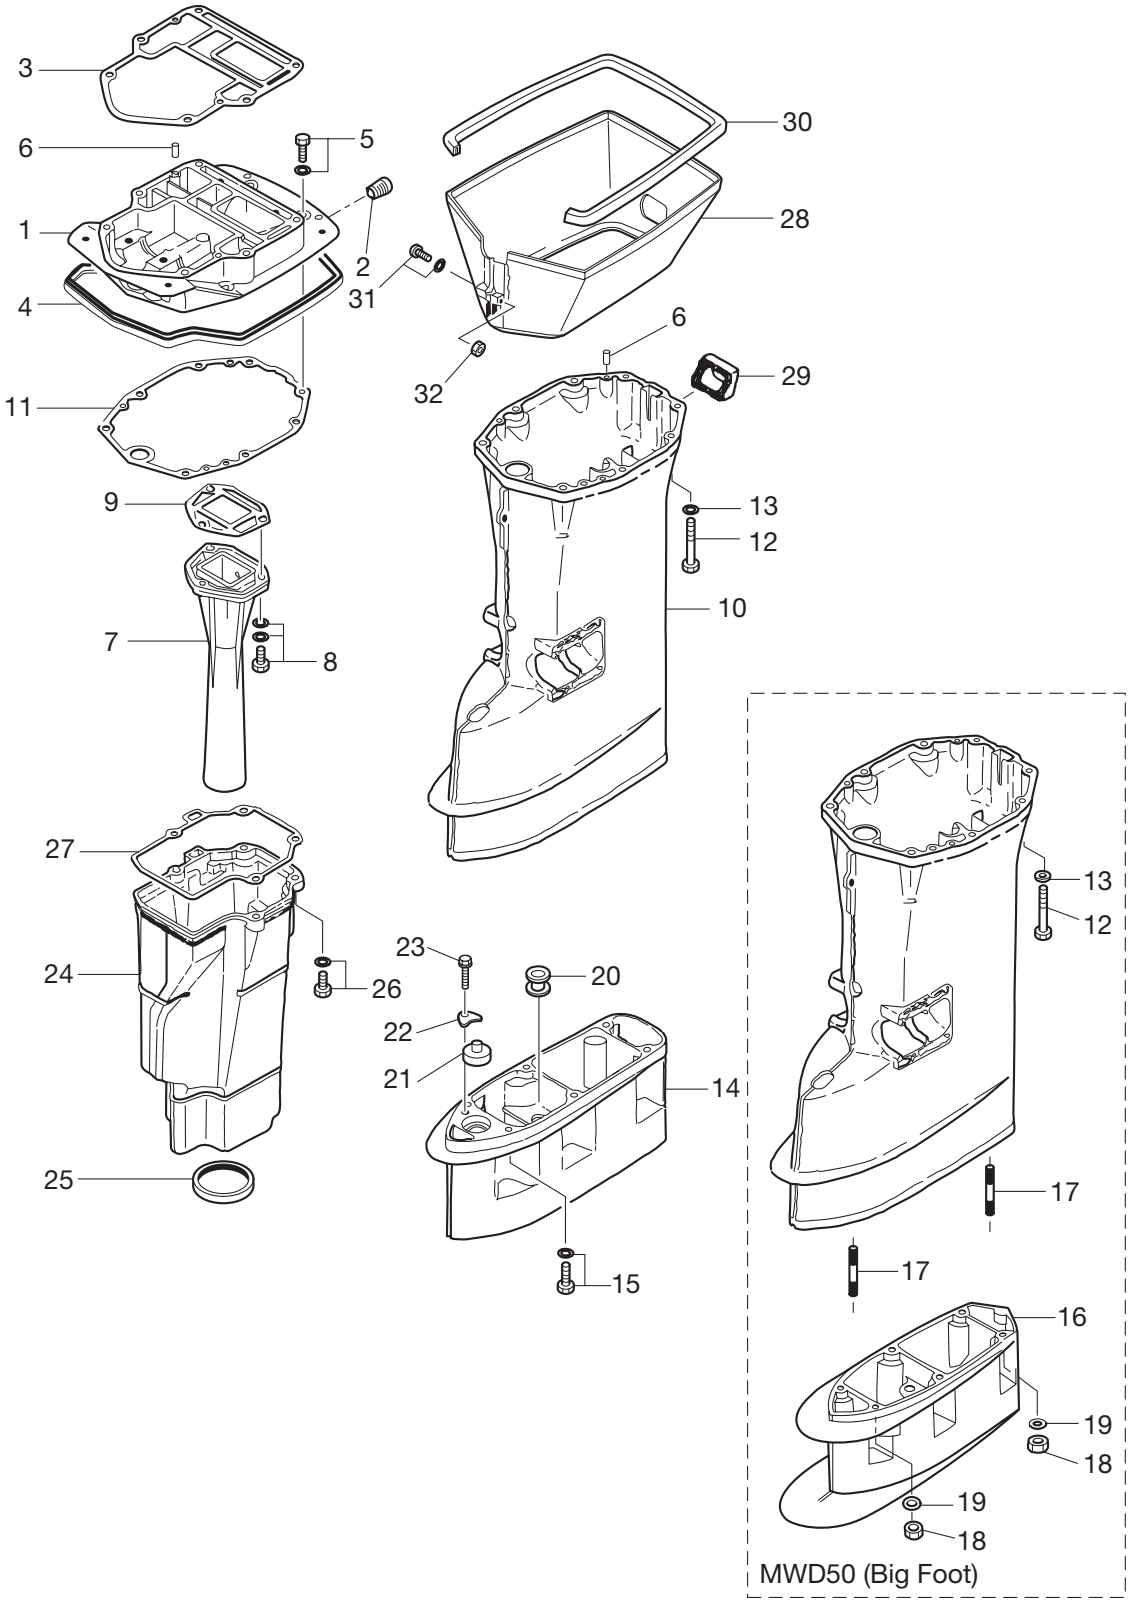


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
13-1		3T5Q01301-0	Engine Basement ｴﾝｼﾞﾝﾍﾞｰｽﾒﾝﾄ	1	1	1	
13-2		3H6-07257-0	Exhaust Plug ｴｷｿﾞｰｽﾄﾌﾟﾗｸﾞ	1	1	1	
13-3		3C8-01303-4	Engine Basement Gasket ｴﾝｼﾞﾝﾍﾞｰｽﾒﾝﾄｶﾞｽｹｯﾄ	1	1	1	
13-4		3C8-67116-0	Engine Basement Seal ｴﾝｼﾞﾝﾍﾞｰｽﾒﾝﾄｼｰﾙ	1	1	1	
13-5		910103-5625	Bolt ﾎﾞﾙﾄ	4	4	4	
13-6		345-01111-0	Dowel Pin 6-12 ﾀﾞｳｪﾙﾋﾟﾝ 6-12	4	4	4	
13-7		3E3-02311-0	Exhaust Pipe ｴｷｿﾞｰｽﾄﾊﾟｲﾌﾟ	1	1	1	
13-8		3C8-02319-0	Bolt ﾎﾞﾙﾄ	3	3	3	
13-9		3C8-02312-2	Exhaust Pipe Gasket ｴｷｿﾞｰｽﾄﾊﾟｲﾌﾟｶﾞｽｹｯﾄ	1	1	1	
13-10	1	3C8Q61191-2	Drive Shaft Housing (S) ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞ (S)		1	1	for Transom“S”
13-10	2	3C8Q61192-2	Drive Shaft Housing (L) ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞ (L)	1	1	1	for Transom“L”/“UL”
13-11		3C8-61012-2	Drive Shaft Housing Gasket ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞｶﾞｽｹｯﾄ	1	1	1	
13-12		9161F4-0880	Bolt ﾎﾞﾙﾄ	6	6	6	
13-13		9401E3-0800	Washer ﾜｯｼｬ	6	6	6	
13-14		3C8Q61110-0	Extension Housing ｴｸｽﾃﾝｼｮﾝﾊｳｼﾞﾝｸﾞ		1	1	for Transom “UL”
13-15		9101E3-5835	Bolt ﾎﾞﾙﾄ		6	6	for Transom “UL”
13-16		3S7Q61110-0	Extension Housing Ass'y (UL) ｴｸｽﾃﾝｼｮﾝﾊｳｼﾞﾝｸﾞｱｯｼ (UL)			1	for MWD50 (Big Foot)
13-17		9153E3-0825	Stud Bolt ｽﾀｯﾄﾞﾎﾞﾙﾄ			6	for MWD50 (Big Foot)
13-18		930103-0800	Nut ﾅｯﾄ			6	for MWD50 (Big Foot)
13-19		9402E3-0800	Washer ﾜｯｼｬ			6	for MWD50 (Big Foot)
13-20	1	346-65204-0	Water Pipe Auxiliary Mount ｳｫｰﾀﾊﾟｲﾌﾟｵｳｷｼﾘｱﾘﾏｳﾝﾄ	1	1	1	for Transom “S” “L”
13-20	2	346-65204-0	Water Pipe Auxiliary Mount ｳｫｰﾀﾊﾟｲﾌﾟｵｳｷｼﾘｱﾘﾏｳﾝﾄ		1	1	for Transom “UL” Water Pipe Locking Rubber
13-21		346-66037-0	Cam Rod Holder ｶﾑﾛｯﾄﾞﾎﾙﾀﾞ		1	1	for Transom “UL”
13-22		353-66024-0	Stopper Drive Shaft Housing ｽﾄｯﾊﾟ ﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞ		1	1	for Transom “UL”
13-23		910103-6612	Bolt ﾎﾞﾙﾄ		1	1	for Transom “UL”
13-24		3C8-61180-0	Exhaust Housing ｴｷｿﾞｰｽﾄﾊｳｼﾞﾝｸﾞ	1	1	1	
13-25		3C8-61182-0	Grommet Exhaust Housing ｸﾞﾛﾒｯﾄ ｴｷｿﾞｰｽﾄﾊｳｼﾞﾝｸﾞ	1	1	1	
13-26		3C8-61184-0	Bolt ﾎﾞﾙﾄ	4	4	4	
13-27		3C8-61181-2	Exhaust Housing Gasket ｴｷｿﾞｰｽﾄﾊｳｼﾞﾝｸﾞｶﾞｽｹｯﾄ	1	1	1	
13-28		3C8Q61210-0	Apron ｴﾌﾟﾛﾝ	1	1	1	

DRIVE SHAFT HOUSING
Fig. 13　ドライブシャフトハウジング

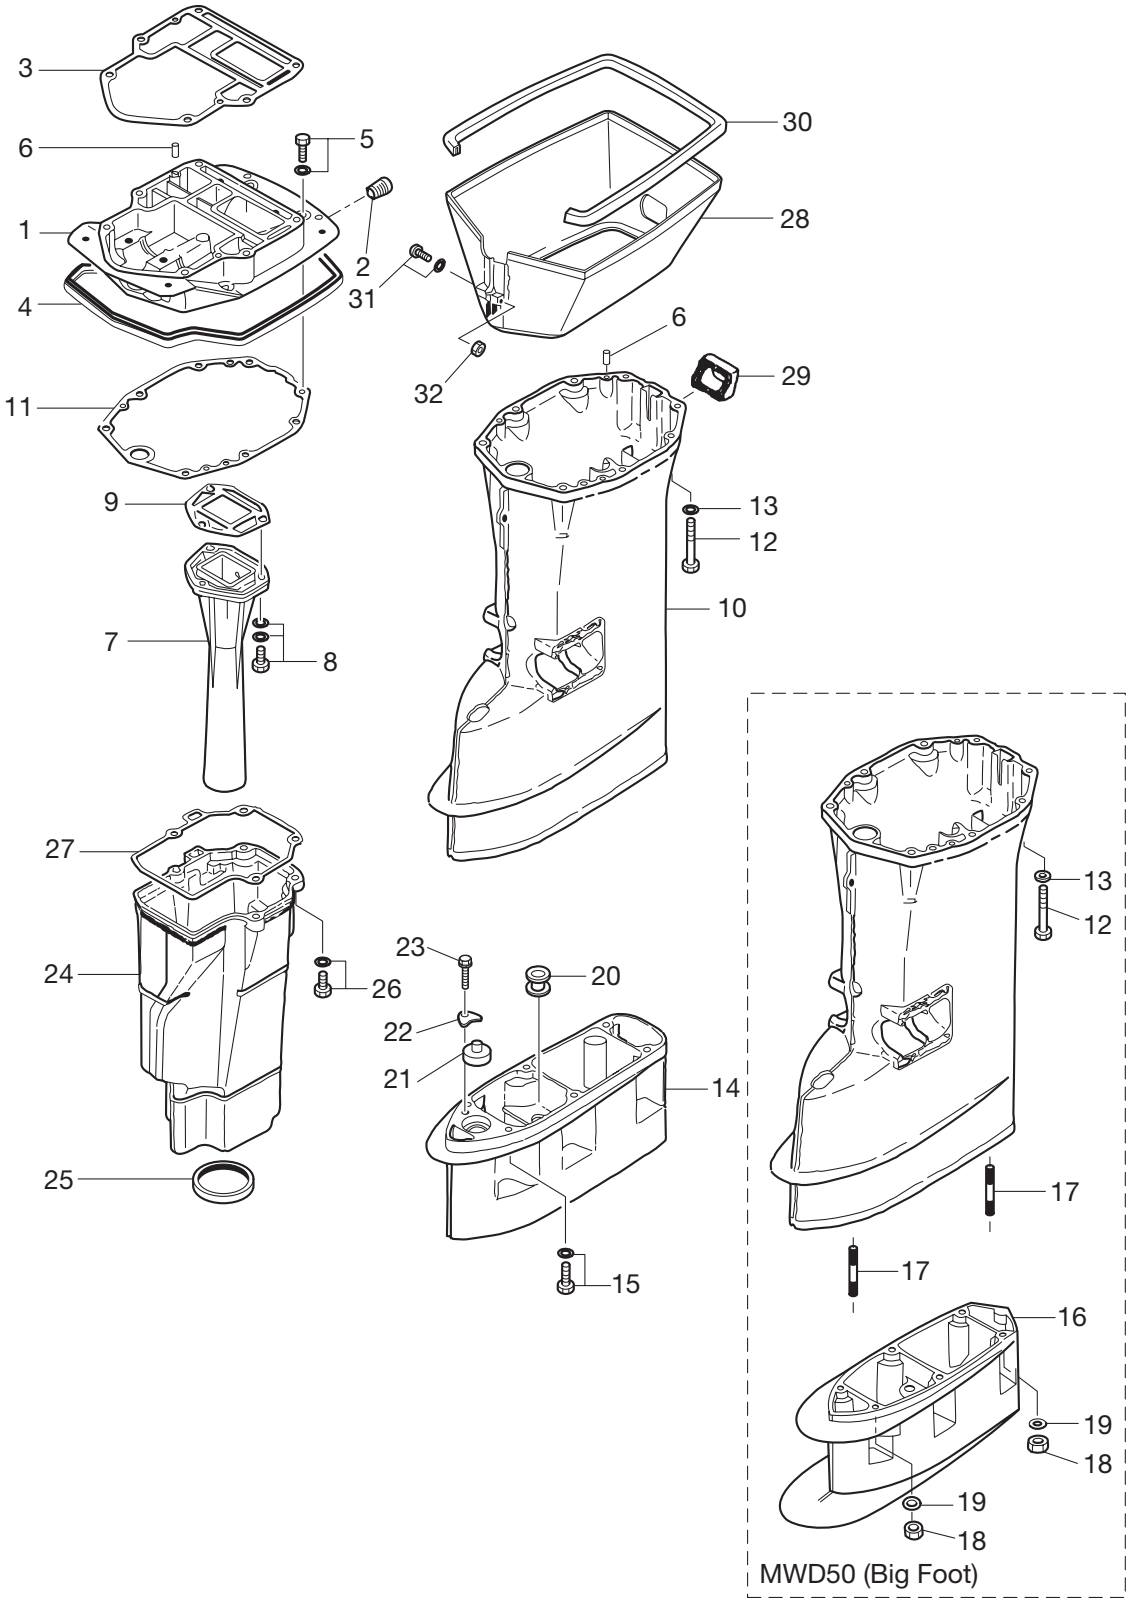


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
13-29		3C8-61212-0	Grommet Splash Pan ｸﾞﾛﾒｯﾄ ｽﾌﾟﾗｯｼｭﾊﾟﾝ	1	1	1	
13-30		3C8-61213-0	Seal Rubber Splash Pan ｼｰﾙ ﾗﾊﾞｰ ｽﾌﾟﾗｯｼｭﾊﾟﾝ	1	1	1	
13-31		9215E3-5540	Screw ｽｸﾘｭ	1	1	1	
13-32		930403-0500	Nylon Nut ﾅｲﾛﾝﾅｯﾄ	1	1	1	

GEAR CASE (DRIVE SHAFT)
Fig. 14　ギヤケース（ドライブシャフト）

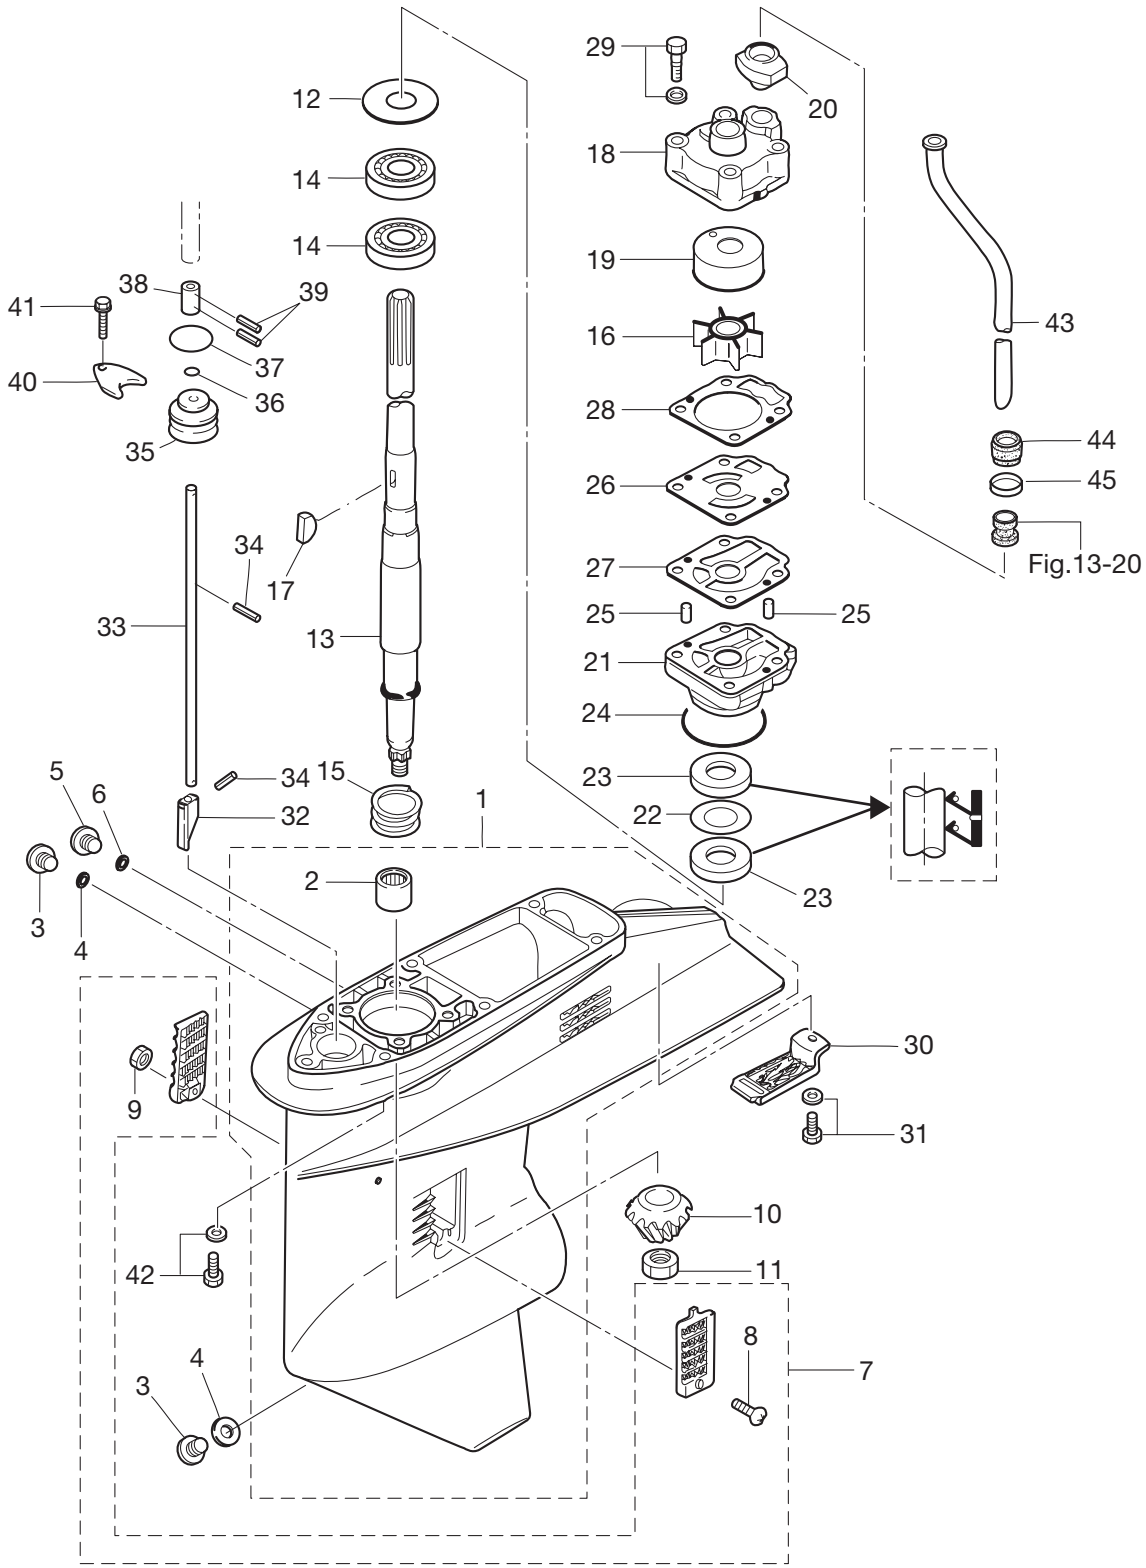


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
14-1	1	3C8Q60000-0	Gear Case Ass'y ｷﾞﾔｹｰｽｱｯｼ	1	1	1	for Transom “S”/“L”
14-1	2	3C8Q60090-0	Gear Case Ass'y W/Subwater Pipe ｷﾞﾔｹｰｽｱｯｼ (W/ｻﾌﾞｳｫｰﾀﾊﾟｲﾌﾟ)		1	1	for Transom “UL” with Subwater Pipe
14-2		345-60211-0	* Roller Bearing 22-30-30 * ﾛｰﾗﾍﾞｱﾘﾝｸﾞ 22-30-30	1	1	1	
14-3		332-60005-2	Plug ﾌﾟﾗｸﾞ	2	2	2	
14-4		332-60006-0	Gasket 8.1-15-1 ｶﾞｽｹｯﾄ 8.1-15-1	2	2	2	
14-5		3B7-60015-1	Plug Water ﾌﾟﾗｸﾞ ｳｫｰﾀ	1	1	1	
14-6		3B7-60016-1	Gasket 10.1-15-1 ｶﾞｽｹｯﾄ 10.1-15-1	1	1	1	
14-7		3C8-60205-1	Water Strainer Set ｳｫｰﾀｽﾄﾚｰﾅｾｯﾄ	1	1	1	
14-8		921503-0438	* Screw * ｽｸﾘｭ	1	1	1	
14-9		930403-0400	* Nylon Nut * ﾅｲﾛﾝﾅｯﾄ	1	1	1	
14-10		3C8-64020-2	Bevel Gear B ﾍﾞﾍﾞﾙｷﾞﾔ B	1	1	1	
14-11		3C8-64027-0	Nut Bevel Gear B ﾅｯﾄ ﾍﾞﾍﾞﾙｷﾞﾔ B	1	1	1	
14-12	1	345-64081-0	Shim 41-51.5-0.1 ｼﾑ 41-51.5-0.1	A	A	A	
14-12	2	345-64082-0	Shim 41-51.5-0.15 ｼﾑ 41-51.5-0.15	A	A	A	
14-12	3	345-64083-0	Shim 41-51.5-0.3 ｼﾑ 41-51.5-0.3	A	A	A	
14-12	4	345-64084-0	Shim 41-51.5-0.5 ｼﾑ 41-51.5-0.5	A	A	A	
14-13	1	3C8-64301-0	Drive Shaft (S) ﾄﾞﾗｲﾌﾞｼｬﾌﾄ (S)		1	1	for Transom“S”
14-13	2	3C8-64302-0	Drive Shaft (L) ﾄﾞﾗｲﾌﾞｼｬﾌﾄ (L)	1	1	1	for Transom“L”
14-13	3	3C8-64303-0	Drive Shaft (UL) ﾄﾞﾗｲﾌﾞｼｬﾌﾄ (UL)		1	1	for Transom“UL”
14-14		3C8-60213-0	Tapered Roller Bearing 6304 ﾃｰﾊﾟｰﾄﾞﾛｰﾗﾍﾞｱﾘﾝｸﾞ 6304	2	2	2	
14-15		3C8-64327-0	Drive Shaft Spring ﾄﾞﾗｲﾌﾞｼｬﾌﾄｽﾌﾟﾘﾝｸﾞ	1	1	1	
14-16		3C8-65021-2	Water Pump Impeller ｳｫｰﾀﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ	1	1	1	
14-17		332-65022-0	Key Pump Impeller ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ	1	1	1	
14-18		3T5-65016-0	Pump Case (Upper) ﾎﾟﾝﾌﾟｹｰｽ (ｱｯﾊﾟ)	1	1	1	
14-19		3T5-65011-0	Pump Case Liner ﾎﾟﾝﾌﾟｹｰｽﾗｲﾅ	1	1	1	
14-20		3C8-65014-0	Water Pipe Seal (Lower) ｳｫｰﾀﾊﾟｲﾌﾟｼｰﾙ (ﾛﾜ)	1	1	1	
14-21		3C8-65017-1	Pump Case (Lower) ﾎﾟﾝﾌﾟｹｰｽ (ﾛﾜ)	1	1	1	
14-22		3C8-64084-0	Shim 32.9-26-0.5 ｼﾑ 32.9-26-0.5	1	1	1	
14-23		3C8-60223-0	Oil Seal 17-33-6 ｵｲﾙｼｰﾙ 17-33-6	2	2	2	
14-24		345-65015-0	O-Ring 3.2-47 Oﾘﾝｸﾞ 3.2-47	1	1	1	

GEAR CASE (DRIVE SHAFT)
Fig. 14　ギヤケース（ドライブシャフト）

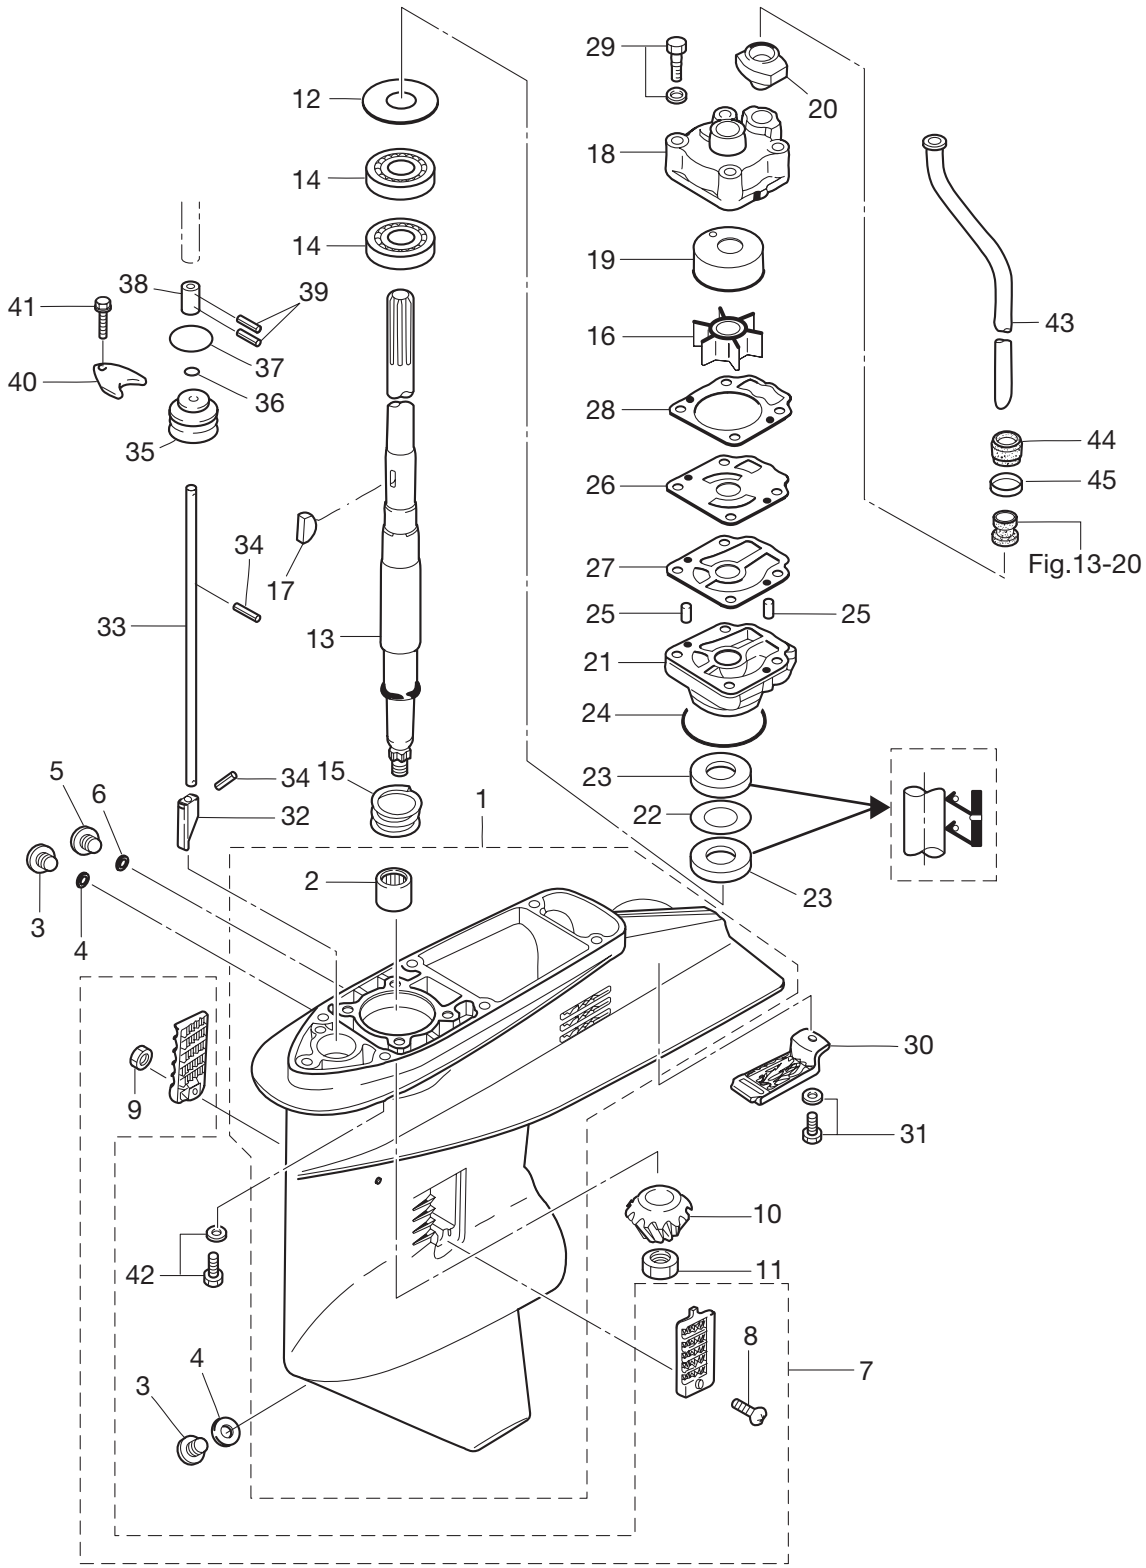


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
14-25		334-65012-0	Dowel Pin 4-10 ﾀﾞｳｪﾙﾋﾟﾝ 4-10	2	2	2	
14-26		3C8-65025-0	Water Pump Guide Plate ｳｫｰﾀﾎﾟﾝﾌﾟｶﾞｲﾄﾞﾌﾟﾚｰﾄ	1	1	1	
14-27		3C8-65029-2	Guide Plate Gasket ｶﾞｲﾄﾞﾌﾟﾚｰﾄｶﾞｽｹｯﾄ	1	1	1	
14-28		3T5-65018-2	Pump Case Gasket ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ	1	1	1	
14-29		9101E3-5855	Bolt ﾎﾞﾙﾄ	4	4	4	
14-30		3C8-60204-0	Sub-Water Inlet Strainer ｻﾌﾞｳｫｰﾀｲﾝﾚｯﾄｽﾄﾚｰﾅ	1	1	1	
14-31		910103-5616	Bolt ﾎﾞﾙﾄ	1	1	1	
14-32		3C8-66011-0	Clutch Cam ｸﾗｯﾁｶﾑ	1	1	1	
14-33	1	3C8-66012-0	Cam Rod (S) ｶﾑﾛｯﾄﾞ S		1	1	for Transom“S”
14-33	2	3C8-66013-0	Cam Rod (L) ｶﾑﾛｯﾄﾞ L	1	1	1	for Transom“L”
14-33	3	3C8-66014-0	Cam Rod (UL) ｶﾑﾛｯﾄﾞ UL		1	1	for Transom“UL”
14-34		951407-0312	Spring Pin ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ	2	2	2	
14-35		3C8-66031-1	Cam Rod Bushing ｶﾑﾛｯﾄﾞﾌﾞｯｼﾝｸﾞ	1	1	1	
14-36		332-66021-0	O-Ring 2.4-5.8 Oﾘﾝｸﾞ 2.4-5.8	1	1	1	
14-37		3C8-66032-0	O-Ring 3.5-21.7 Oﾘﾝｸﾞ 3.5-21.7	1	1	1	
14-38		3C8-66241-0	Shift Rod Joint ｼﾌﾄﾛｯﾄﾞｼﾞｮｲﾝﾄ	1	1	1	
14-39		951403-0312	Spring Pin ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ	2	2	2	
14-40		353-66024-0	Stopper Drive Shaft Housing ｽﾄｯﾊﾟﾄﾞﾗｲﾌﾞｼｬﾌﾄﾊｳｼﾞﾝｸﾞ	1	1	1	
14-41		910103-6612	Bolt ﾎﾞﾙﾄ	1	1	1	
14-42		9101E3-5835	Bolt ﾎﾞﾙﾄ	6	6	6	
14-43	1	3C8-65100-0	Water Pipe (S) ｳｫｰﾀﾊﾟｲﾌﾟ (S)		1	1	for Transom“S”
14-43	2	3C8-65110-0	Water Pipe (L) ｳｫｰﾀﾊﾟｲﾌﾟ (L)	1	1	1	for Transom“L”
14-43	3	3C8-65120-0	Water Pipe (UL) ｳｫｰﾀﾊﾟｲﾌﾟ (UL)		1	1	for Transom“UL”
14-44		345-65206-0	Water Pipe Seal (Upper) ｳｫｰﾀﾊﾟｲﾌﾟｼｰﾙ (ｱｯﾊﾟ)	1	1	1	
14-45		345-65205-0	Collar 18-20-4.5 ｶﾗｰ 18-20-4.5	1	1	1	

GEAR CASE (DRIVE SHAFT) (MWD50・Big Foot)
Fig. 15　ギヤケース（ドライブシャフト）（MWD50・ビッグフット）

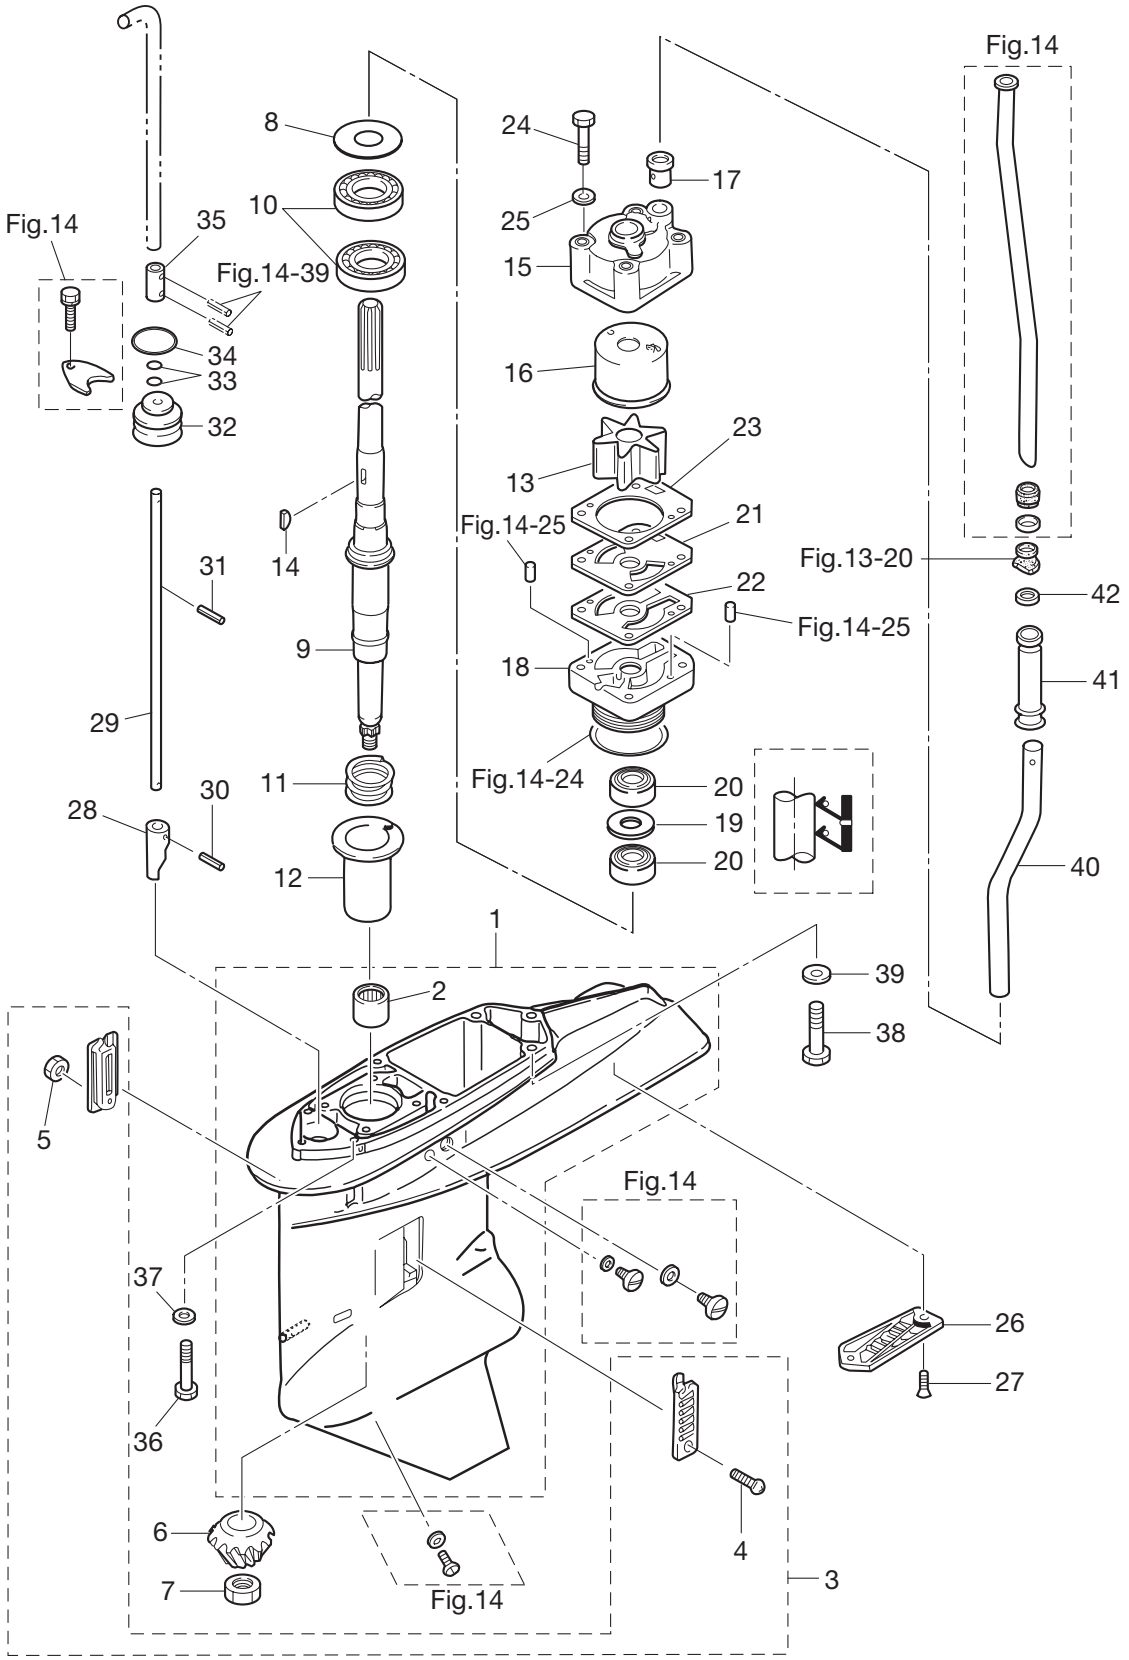


Ref. No. 見出番号		Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備　考
15-1		3S7Q60090-1	Gear Case Ass'y W/Subwater Pipe ｷﾞﾔｹｰｽｱｯｼ (W/ｻﾌﾞｳｫｰﾀﾊﾟｲﾌﾟ)			1	
15-2		353-60211-0	* Roller Bearing Propeller Shaft * ﾛｰﾗﾍﾞｱﾘﾝｸﾞ ﾌﾟﾛﾍﾟﾗｼｬﾌﾄ			1	
15-3		3B7-60205-0	Water Strainer Set ｳｫｰﾀｽﾄﾚｰﾅｾｯﾄ			1	
15-4		921503-0438	* Screw * ｽｸﾘｭ	1	1	1	
15-5		930403-0400	* Nylon Nut * ﾅｲﾛﾝﾅｯﾄ	1	1	1	
15-6		3F3-64020-0	Bevel Gear B ﾍﾞﾍﾞﾙｷﾞﾔ B			1	
15-7		353-64027-0	Nut Bevel Gear B ﾅｯﾄ ﾍﾞﾍﾞﾙｷﾞｱ B			1	
15-8	1	353-64081-0	Shim 44-50.5-0.1 ｼﾑ 44-50.5-0.1			A	
15-8	2	353-64082-0	Shim 44-50.5-0.15 ｼﾑ 44-50.5-0.15			A	
15-8	3	353-64083-0	Shim 44-50.5-0.3 ｼﾑ 44-50.5-0.3			A	
15-9	1	3S7-64302-0	Drive Shaft (L) ﾄﾞﾗｲﾌﾞｼｬﾌﾄ (L)			1	for Transom"L"
15-9	2	3S7-64303-0	Drive Shaft (UL) ﾄﾞﾗｲﾌﾞｼｬﾌﾄ (UL)			1	for Transom"UL"
15-10		3S7-60213-0	Ball Bearing 6205R ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6205R			2	
15-11		353-64327-0	Drive Shaft Spring ﾄﾞﾗｲﾌﾞｼｬﾌﾄｽﾌﾟﾘﾝｸﾞ			1	
15-12		3A3-64328-0	Drive Shaft Spring Guide ﾄﾞﾗｲﾌﾞｼｬﾌﾄｽﾌﾟﾘﾝｸﾞｶﾞｲﾄﾞ			1	
15-13		3B7-65021-2	Water Pump Impeller ｳｫｰﾀﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ			1	
15-14		3B7-65022-0	Key Pump Impeller ｷｰ ﾎﾟﾝﾌﾟｲﾝﾍﾟﾗ			1	
15-15		3B7-65016-0	Pump Case Sub-Ass'y (Upper) ﾎﾟﾝﾌﾟｹｰｽｻﾌﾞｱｯｼ (ｱｯﾊﾟ)			1	
15-16		3B7-65238-0	Pump Case Liner (Chrome Plated) ﾎﾟﾝﾌﾟｹｰｽﾗｲﾅ ｸﾛﾑﾒｯｷ			1	
15-17		3B7-65014-0	Water Pipe Seal (Lower) ｳｫｰﾀﾊﾟｲﾌﾟｼｰﾙ (ﾛﾜ)			1	
15-18		3F3-65017-1	Pump Case (Lower) ﾎﾟﾝﾌﾟｹｰｽ (ﾛﾜ)			1	
15-19		3F3-64084-0	Shim 36.5-30-0.5 ｼﾑ 36.9-30-0.5			1	
15-20		3F3-60223-0	Oil Seal 22-37-8 ｵｲﾙｼｰﾙ 22-37-8			2	
15-21		3F3-65239-1	Water Pump Guide Plate (Chrome Plated) ｳｫｰﾀﾎﾟﾝﾌﾟｶﾞｲﾄﾞﾌﾟﾚｰﾄ (ｸﾛﾑﾒｯｷ)			1	
15-22		3B7-65029-0	Guide Plate Gasket ｶﾞｲﾄﾞﾌﾟﾚｰﾄｶﾞｽｹｯﾄ			1	
15-23		3B7-65018-0	Pump Case Gasket ﾎﾟﾝﾌﾟｹｰｽｶﾞｽｹｯﾄ			1	
15-24		9161E3-0880	Bolt ﾎﾞﾙﾄ			4	
15-25		940103-0800	Washer ﾜｯｼｬ			4	
15-26		3F3-60204-0	Sub-Water Inlet Strainer ｻﾌﾞｳｫｰﾀｲﾝﾚｯﾄｽﾄﾚｰﾅ			1	
15-27		921503-0608	Screw ｽｸﾘｭ			2	

GEAR CASE (DRIVE SHAFT) (MWD50・Big Foot)
Fig. 15　ギヤケース（ドライブシャフト）（MWD50・ビッグフット）

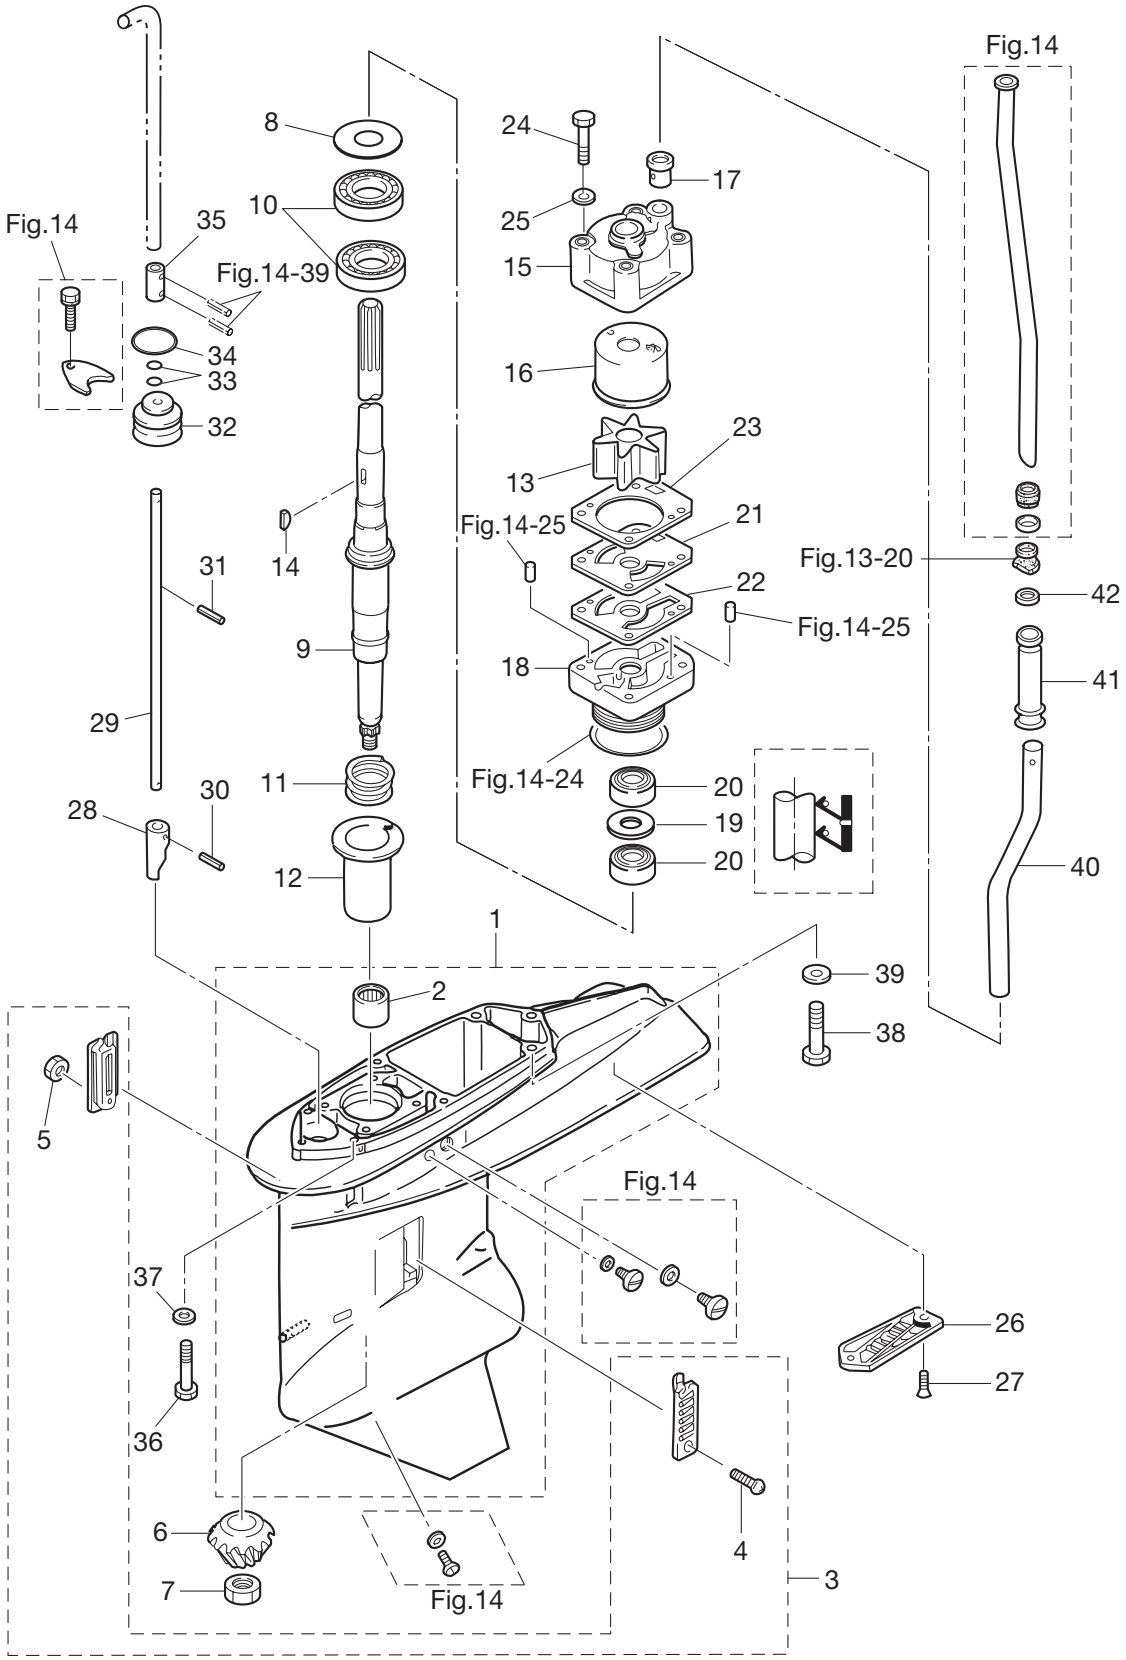


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
15-28		3S7-66011-0	Clutch Cam ｸﾗｯﾁｶﾑ			1	
15-29	1	3S7-66013-0	Cam Rod (L) ｶﾑﾛｯﾄﾞ L			1	for Transom“L”
15-29	2	3S7-66014-0	Cam Rod (UL) ｶﾑﾛｯﾄﾞ UL			1	for Transom“UL”
15-30		951403-3514	Spring Pin 3.5-14 ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ 3.5-14			1	
15-31		951403-3510	Spring Pin 3.5-10 ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ 3.5-10			1	
15-32		3B7-66031-1	Cam Rod Bushing ｶﾑﾛｯﾄﾞﾌﾞｯｼﾝｸﾞ			1	
15-33		345-66021-0	O-Ring 1.9-6.8 Oﾘﾝｸﾞ 1.9-6.8			2	
15-34		3B7-66023-0	O-Ring 3.5-27.7 Oﾘﾝｸﾞ 3.5-27.7			1	
15-35		3S7-66241-0	Shift Rod Joint ｼﾌﾄﾛｯﾄﾞｼﾞｮｲﾝﾄ			1	
15-36		3T1-60001-1	Bolt 8-35 ﾎﾞﾙﾄ 8-35			4	
15-37		9402E3-0800	Washer ﾜｯｼｬ			4	
15-38		3B7-60001-5	Bolt 10-40 ﾎﾞﾙﾄ 10-40			2	
15-39		9402E3-1000	Washer ﾜｯｼｬ			2	
15-40		3S7-60252-0	Extension Pipe ｴｸｽﾃﾝｼｮﾊﾟﾝﾊﾟｲﾌﾟ			1	
15-41		3S7-60251-0	Joint Hose ｼﾞｮｲﾝﾄﾎｰｽ			1	
15-42		345-65205-0	Collar 18-20-4.5 ｶﾗｰ 18-20-4.5			1	

GEAR CASE (PROPELLER SHAFT)
Fig. 16　ギヤケース（プロペラシャフト）

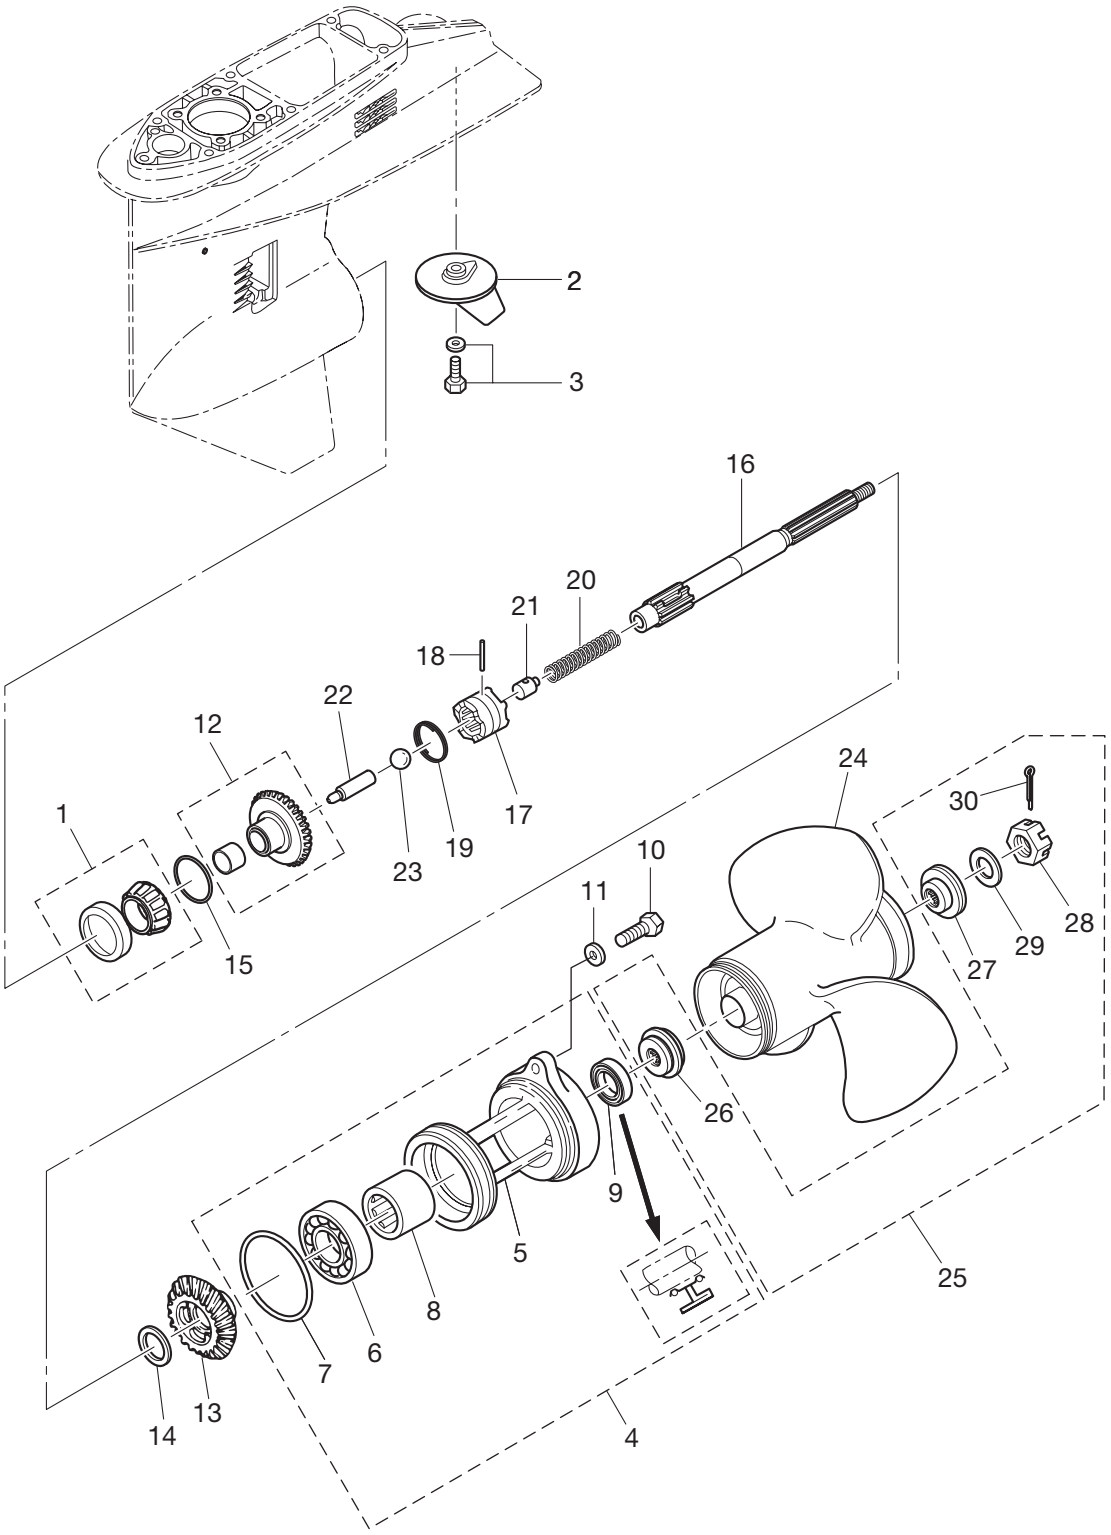


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
16-1		345-60215-0	Tapered Roller Bearing 32007 ﾃｰﾊﾟｰﾄﾞﾛｰﾗﾍﾞｱﾘﾝｸﾞ 32007	1	1	1	
16-2		3C8-60217-1	Trim Tab ﾄﾘﾑﾀﾌﾞ	1	1	1	
16-3		910103-5620	Bolt ﾎﾞﾙﾄ	1	1	1	
16-4		3C8Q60100-0	Propeller Shaft Housing Ass'y ﾌﾟﾛﾍﾟﾗｼｬﾌﾄﾊｳｼﾞﾝｸﾞｱｯｼ	1	1	1	
16-5		3C8Q60101-0	* Propeller Shaft Housing *ﾌﾟﾛﾍﾟﾗｼｬﾌﾄﾊｳｼﾞﾝｸﾞ	1	1	1	
16-6		9601-0-6007	* Ball Bearing 6007 *ﾎﾞｰﾙﾍﾞｱﾘﾝｸﾞ 6007	1	1	1	
16-7		345-60103-0	* O-Ring 3.53-69.44 *Oﾘﾝｸﾞ 3.53-69.44	1	1	1	
16-8		345-60211-0	* Roller Bearing 22-30-30 *ﾛｰﾗﾍﾞｱﾘﾝｸﾞ 22-30-30	1	1	1	
16-9		334-60223-0	* Oil Seal 22-36-10 *ｵｲﾙｼｰﾙ 22-36-10	1	1	1	
16-10		3C8-60108-1	Pre-Coated Bolt ﾌﾟﾚｺｰﾄﾎﾞﾙﾄ	2	2	2	
16-11		9401E3-0600	Washer ﾜｯｼｬ	2	2	2	
16-12		3C8-64010-1	Bevel Gear Ass'y (A) ﾍﾞﾍﾞﾙｷﾞﾔ A ｱｯｼ	1	1	1	
16-13		3C8-64030-0	Bevel Gear C ﾍﾞﾍﾞﾙｷﾞﾔ C	1	1	1	
16-14		345-64032-0	Washer 22.1-28-3 ﾜｯｼｬ 22.1-28-3	1	1	1	
16-15	1	353-64036-0	Shim 36-44-0.3 ｼﾑ 36-44-0.3	A	A	A	
16-15	2	353-64037-0	Shim 36-44-0.15 ｼﾑ 36-44-0.15	A	A	A	
16-15	3	353-64038-0	Shim 36-44-0.1 ｼﾑ 36-44-0.1	A	A	A	
16-16		3C8-64211-0	Propeller Shaft ﾌﾟﾛﾍﾟﾗｼｬﾌﾄ	1	1	1	
16-17		3C8-64215-2	Clutch ｸﾗｯﾁ	1	1	1	
16-18		3C8-64217-0	Pin Clutch ﾋﾟﾝ ｸﾗｯﾁ	1	1	1	
16-19		3C8-64219-1	Snap Pin Clutch ｽﾅｯﾌﾟ ｸﾗｯﾁﾋﾟﾝ	1	1	1	
16-20		3C8-64221-0	Spring Clutch ｽﾌﾟﾘﾝｸﾞ ｸﾗｯﾁ	1	1	1	
16-21		3C8-64222-0	Spring Retainer Clutch ｽﾌﾟﾘﾝｸﾞﾘﾃｰﾅ ｸﾗｯﾁ	1	1	1	
16-22		3C8-64223-1	Push Rod Clutch ﾌﾟｯｼｭﾛｯﾄﾞ ｸﾗｯﾁ	1	1	1	
16-23		965002-0803	Ball Steel 3/8 ﾎﾞｰﾙ ｽﾁｰﾙ 3/8	1	1	1	
16-24	1	3T5B64527-0	Propeller Ass'y (13″) ﾌﾟﾛﾍﾟﾗｱｯｼ (13″)		1	1	STD.50ps/Italy 40ps
16-24	2	3T5B64523-0	Propeller Ass'y (11″) ﾌﾟﾛﾍﾟﾗｱｯｼ (11″)	1			STD.30ps
16-24	3	3T5B64525-0	Propeller Ass'y (12″) ﾌﾟﾛﾍﾟﾗｱｯｼ (12″)		1		STD.40ps
16-24	4	348B64108-0	Propeller Ass'y (7″) ﾌﾟﾛﾍﾟﾗｱｯｼ (7″)	1	1	1	OPT
16-24	5	3T5B64518-0	Propeller Ass'y (9″) ﾌﾟﾛﾍﾟﾗｱｯｼ (9″)	1	1	1	OPT

GEAR CASE (PROPELLER SHAFT)
Fig. 16　ギヤケース（プロペラシャフト）

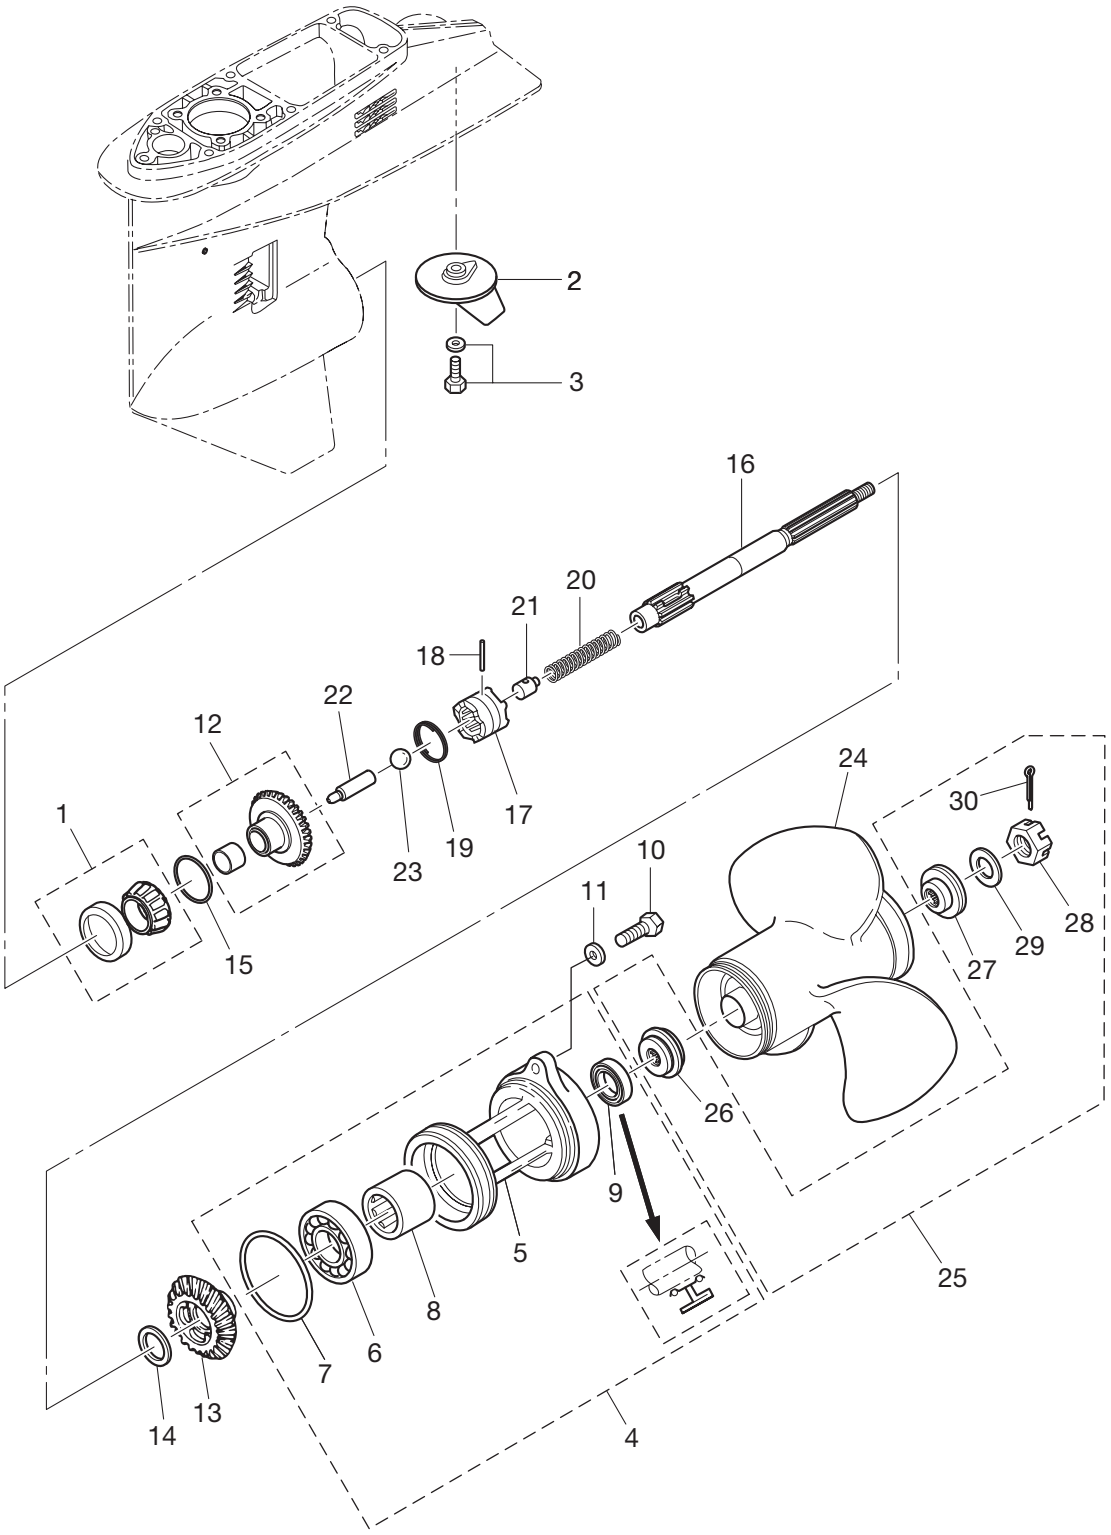


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
16-24	6	3T5B64529-0	Propeller Ass'y (14″) ﾌﾟﾛﾍﾟﾗｱｯｼ (14″)	1	1	1	OPT
16-24	7	3T5B64532-0	Propeller Ass'y (15″) ﾌﾟﾛﾍﾟﾗｱｯｼ (15″)	1	1	1	OPT
16-25		3T5-87326-0	Propeller Hardware Kit ﾌﾟﾛﾍﾟﾗﾊｰﾄﾞｳｪｱｷｯﾄ	1	1	1	
16-26		3C8-64231-0	* Thrust Holder Propeller * ｽﾗｽﾄﾎﾙﾀﾞ ﾌﾟﾛﾍﾟﾗ	1	1	1	
16-27		348-64232-0	* Stopper Propeller * ｽﾄｯﾊﾟ ﾌﾟﾛﾍﾟﾗ	1	1	1	
16-28		353-64121-0	* Propeller Nut * ﾌﾟﾛﾍﾟﾗﾅｯﾄ	1	1	1	
16-29		345-64124-0	* Washer 17-32-3 * ﾜｯｼｬ 17-32-3	1	1	1	
16-30		951503-0325	* Split Pin 3-25 * ｽﾌﾟﾘｯﾄﾋﾟﾝ 3-25	1	1	1	

GEAR CASE (PROPELLER SHAFT) (MWD50・Big Foot)
Fig. 17　ギヤケース（プロペラシャフト）（MWD50・ビッグフット）

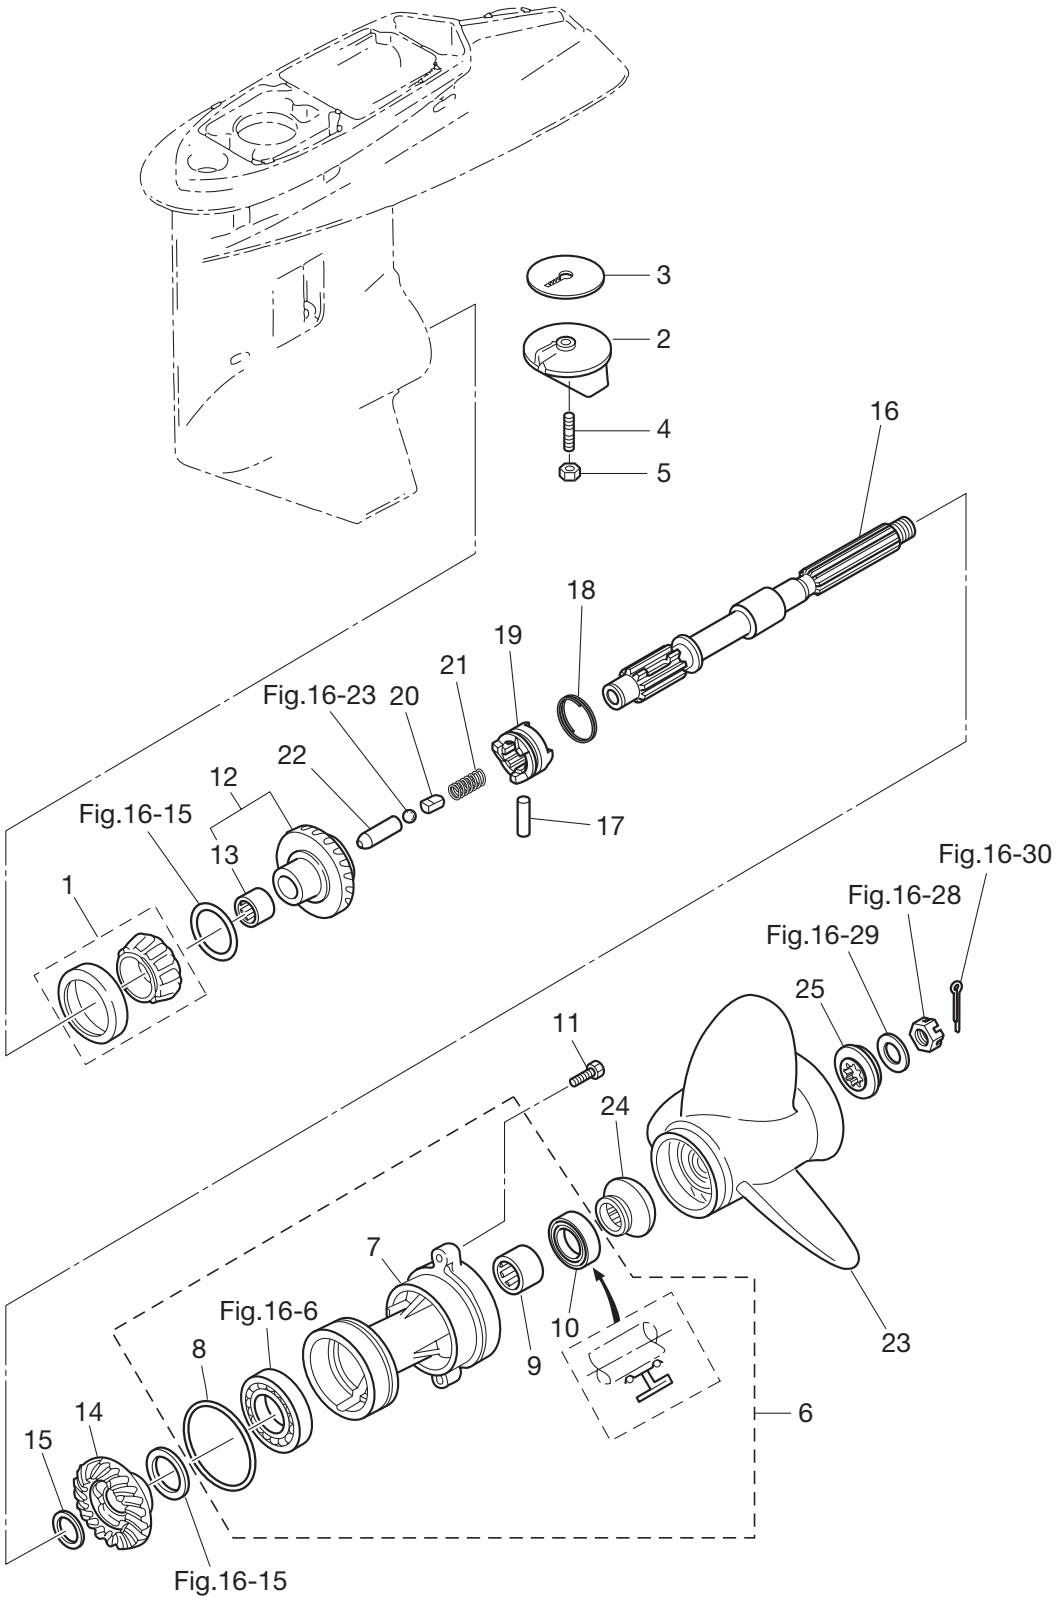


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
17-1		3F3-60215-0	Tapered Roller Bearing 32007JR ﾃｰﾊﾟｰﾄﾞﾛｰﾗﾍﾞｱﾘﾝｸﾞ 32007JR			1	
17-2		3B7-60217-1	Trim Tab ﾄﾘﾑﾀﾌﾞ			1	
17-3		3B7-60219-0	Trim Tab Gasket ﾄﾘﾑﾀﾌﾞｶﾞｽｹｯﾄ			1	
17-4		915303-0825	Stud Bolt ｽﾀｯﾄﾞﾎﾞﾙﾄ			1	
17-5		930403-0800	Nylon Nut ﾅｲﾛﾝﾅｯﾄ			1	
17-6		3A3Q60100-0	Propeller Shaft Housing Ass'y ﾌﾟﾛﾍﾟﾗｼｬﾌﾄﾊｳｼﾞﾝｸﾞｱｯｼ			1	
17-7		3A3Q60101-0	* Propeller Shaft Housing *ﾌﾟﾛﾍﾟﾗｼｬﾌﾄﾊｳｼﾞﾝｸﾞ			1	
17-8		353-60103-0	* O-Ring 3.5-74.6 *Oﾘﾝｸﾞ 3.5-74.6			1	
17-9		353-60211-0	* Roller Bearing Propeller Shaft *ﾛｰﾗﾍﾞｱﾘﾝｸﾞ ﾌﾟﾛﾍﾟﾗｼｬﾌﾄ			1	
17-10		353-60111-0	* Oil Seal 25-38-10 *ｵｲﾙｼｰﾙ 25-38-10			1	
17-11		3C7-60108-2	Pre-Coated Bolt 8-30 ﾌﾟﾚｺｰﾄﾎﾞﾙﾄ 8-30			2	
17-12		3F3-64010-3	Bevel Gear Ass'y (A) ﾍﾞﾍﾞﾙｷﾞﾔｱｯｼA			1	
17-13		345-64011-0	* Roller Bearing 202720 *ﾛｰﾗﾍﾞｱﾘﾝｸﾞ 202720			1	
17-14		3F3-64030-0	Bevel Gear C ﾍﾞﾍﾞﾙｷﾞﾔ C			1	
17-15	1	353-64032-0	Washer Bevel Gear C 22.1-28-3.0 ﾜｯｼｬ ﾍﾞﾍﾞﾙｷﾞｱ C 22.1-28-3.0			A	
17-15	2	353-64034-0	Washer 22.1-28-2.75 ﾜｯｼｬ 22.1-28-2.75			A	
17-15	3	353-64035-0	Washer 22.1-28-2.5 ﾜｯｼｬ 22.1-28-2.5			A	
17-16		3A3-64211-0	Propeller Shaft ﾌﾟﾛﾍﾟﾗｼｬﾌﾄ			1	
17-17		353-64218-1	Pin Clutch ﾋﾟﾝ ｸﾗｯﾁ			1	
17-18		353-64219-2	Snap Pin Clutch ｽﾅｯﾌﾟ ｸﾗｯﾁﾋﾟﾝ			1	
17-19		3F3-64215-0	Clutch ｸﾗｯﾁ			1	
17-20		3A3-64222-0	Spring Retainer Clutch ｽﾌﾟﾘﾝｸﾞﾘﾃｰﾅ ｸﾗｯﾁ			1	
17-21		346-64221-0	Spring Clutch ｽﾌﾟﾘﾝｸﾞ ｸﾗｯﾁ			1	
17-22		353-64223-1	Push Rod Clutch ﾌﾟｯｼｭﾛｯﾄﾞ ｸﾗｯﾁ			1	
17-23	1	353B64104-0	Propeller Ass'y 12″ ﾌﾟﾛﾍﾟﾗｱｯｼ 12″			1	50ps STD
17-23	2	353B64101-0	Propeller Ass'y 9″ ﾌﾟﾛﾍﾟﾗｱｯｼ 9″			1	OPT
17-23	3	353B64102-0	Propeller Ass'y 10″ ﾌﾟﾛﾍﾟﾗｱｯｼ 10″			1	OPT
17-23	4	353B64103-0	Propeller Ass'y 11″ ﾌﾟﾛﾍﾟﾗｱｯｼ 11″			1	OPT
17-23	5	353B64105-0	Propeller Ass'y 13″ ﾌﾟﾛﾍﾟﾗｱｯｼ 13″			1	OPT
17-23	6	353B64106-0	Propeller Ass'y 14″ ﾌﾟﾛﾍﾟﾗｱｯｼ 14″			1	OPT

GEAR CASE (PROPELLER SHAFT) (MWD50・Big Foot)
Fig. 17　ギヤケース（プロペラシャフト）（MWD50・ビッグフット）

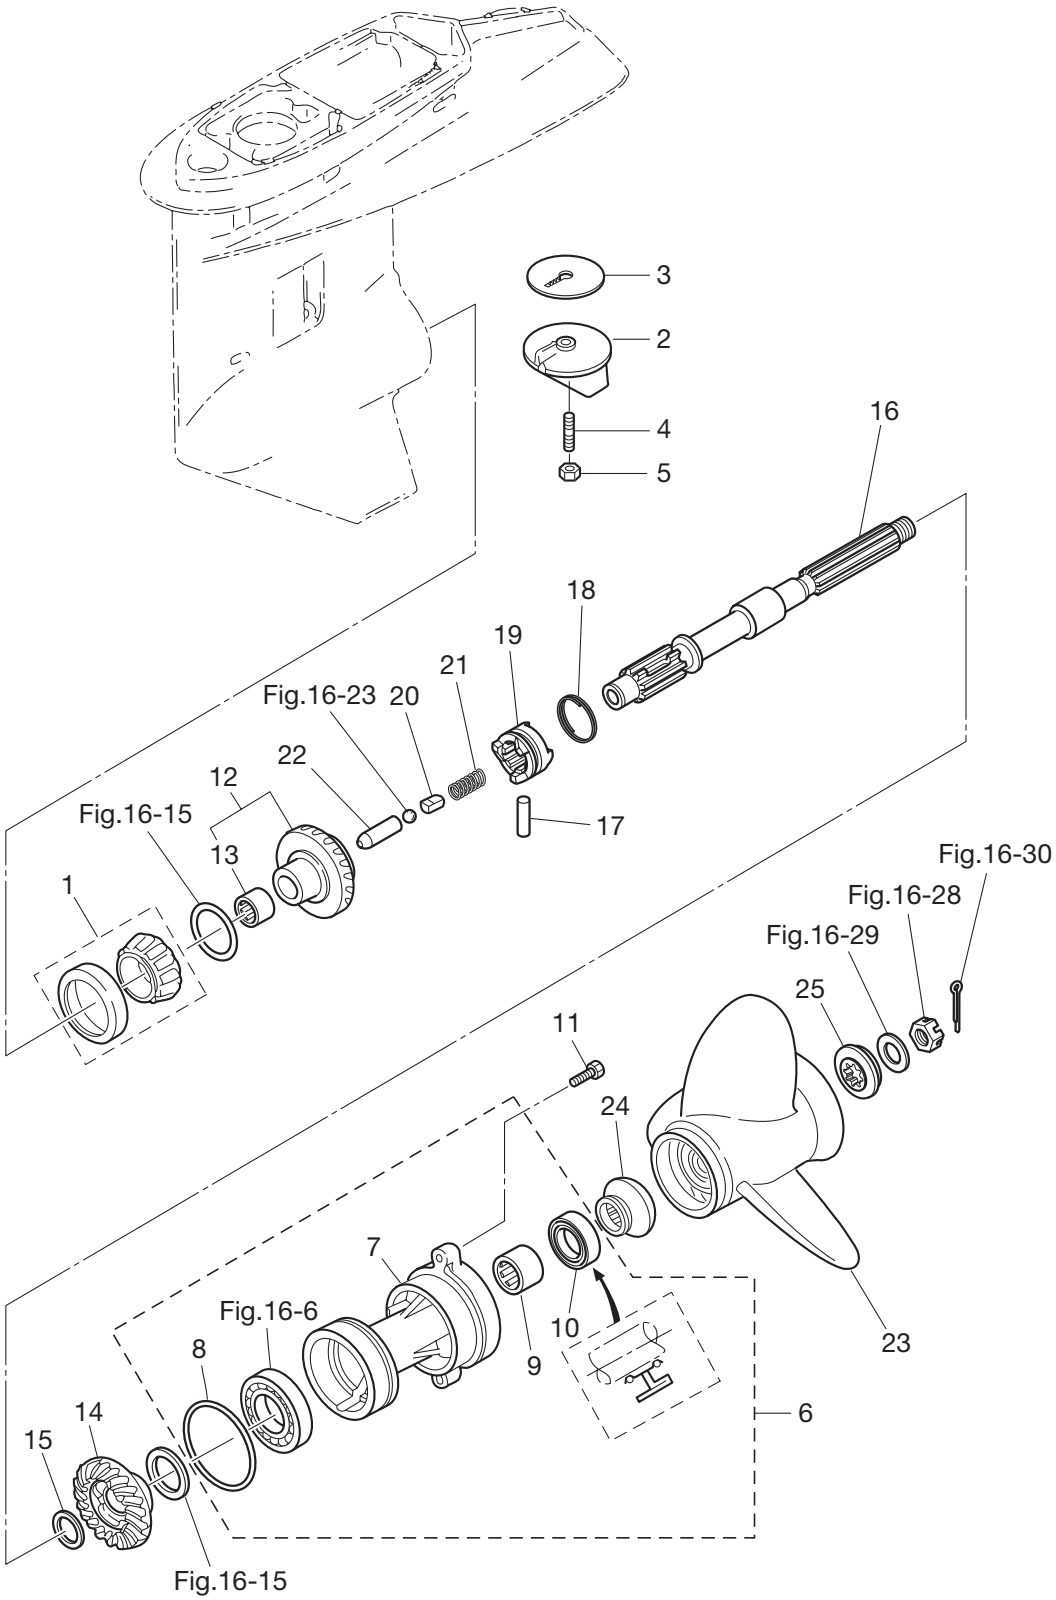


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
17-23	7	353B64107-0	Propeller Ass'y 15″ ﾌﾟﾛﾍﾟﾗｱｯｼ 15″			1	OPT
17-23	8	353B64108-0	Propeller Ass'y 16.5″ ﾌﾟﾛﾍﾟﾗｱｯｼ 16.5″			1	OPT
17-23	9	353B64109-0	Propeller Ass'y 17.5″ ﾌﾟﾛﾍﾟﾗｱｯｼ 17.5″			1	OPT
17-24		353-64231-0	Thrust Holder A Propeller ｽﾗｽﾄﾎﾙﾀﾞ A ﾌﾟﾛﾍﾟﾗ			1	
17-25		353-64233-0	Stopper A Propeller ｽﾄｯﾊﾟ A ﾌﾟﾛﾍﾟﾗ			1	

BRACKET (1) MANUAL TILT
Fig. 18 ブラケット（1）マニュアルチルト

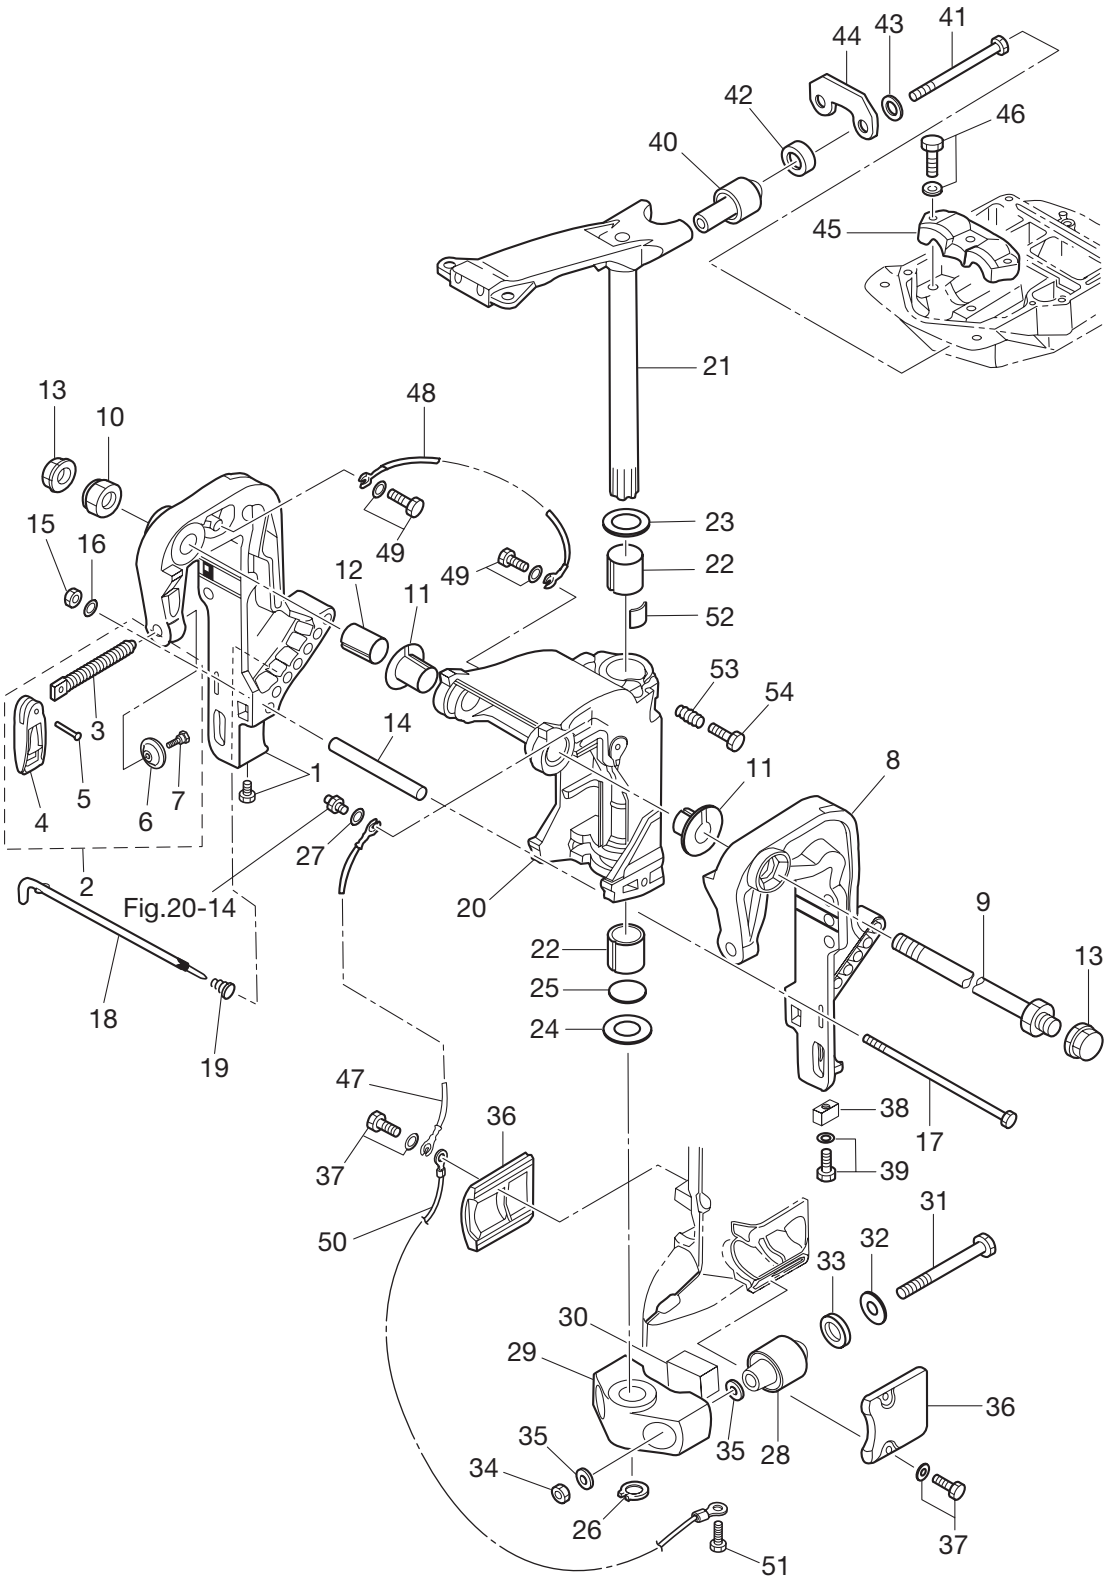


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
18-1	3C8Q62112-0	Clamp Bracket (R) ｸﾗﾝﾌﾟﾌﾞﾗｹｯﾄ (R)		1	1	Stern Bracket (Right) Starboard
18-2	3E3Q62105-0	Clamp Screw Kit ｸﾗﾝﾌﾟｽｸﾘｭｷｯﾄ		1	1	
18-3	3E3-62106-0	* Clamp Screw * ｸﾗﾝﾌﾟｽｸﾘｭ		1	1	
18-4	332Q62102-1	* Clamp Screw Handle * ｸﾗﾝﾌﾟｽｸﾘｭﾊﾝﾄﾞﾙ		1	1	
18-5	3C8-62104-2	* Rivet 3-22 * ﾘﾍﾞｯﾄ 3-22		1	1	
18-6	332-62101-1	* Clamp Screw Pad * ｸﾗﾝﾌﾟｽｸﾘｭﾊﾟｯﾄﾞ		1	1	
18-7	3C8-62107-0	* Shoulder Bolt * ｼｮﾙﾀﾞｰﾎﾞﾙﾄ		1	1	
18-8	3C8Q62113-0	Clamp Bracket (L) ｸﾗﾝﾌﾟﾌﾞﾗｹｯﾄ (L)		1	1	Stern Bracket (Left) Port
18-9	3AC-62191-0	Swivel Bracket Shaft Ass'y ｽｲﾍﾞﾙﾌﾞﾗｹｯﾄｼｬﾌﾄｱｯｼ		1	1	Bracket Bolt
18-10	346-62124-1	Nylon Nut 7/8 ﾅｲﾛﾝﾅｯﾄ 7/8	1	1	1	
18-11	349-62126-0	Bushing 26-32 ﾌﾞｯｼﾝｸﾞ 26-32		2	2	
18-12	3C8-62132-0	Bushing 22-25-35.5 ﾌﾞｯｼﾝｸﾞ 22-25-35.5		1	1	
18-13	346-62127-0	Cap Nut Bracket Bolt ｷｬｯﾌﾟﾅｯﾄ ﾌﾞﾗｹｯﾄﾎﾞﾙﾄ	2	2	2	for "F" Type FIG20"P" type
18-14	3C8-62117-1	Distance Piece ﾃﾞｨｽﾀﾝｽﾋﾟｰｽ		1	1	
18-15	930103-0800	Nut ﾅｯﾄ		1	1	
18-16	9401E3-0800	Washer ﾜｯｼｬ		1	1	
18-17	3C8-62120-1	Bolt 8-170 ﾎﾞﾙﾄ 8-170		1	1	
18-18	3C8-62121-1	Thrust Rod ｽﾗｽﾄﾛｯﾄﾞ		1	1	
18-19	345-62122-2	Thrust Rod Spring ｽﾗｽﾄﾛｯﾄﾞｽﾌﾟﾘﾝｸﾞ		1	1	
18-20	3C8Q62310-3	Swivel Bracket ｽｲﾍﾞﾙﾌﾞﾗｹｯﾄ		1	1	
18-21	3C8Q62010-3	Steering Shaft Ass'y ｽﾃｱﾘﾝｸﾞｼｬﾌﾄｱｯｼ		1	1	
18-22	345-62417-0	Bushing 26-32 ﾌﾞｯｼﾝｸﾞ 26-32		2	2	
18-23	3A0-62423-2	Thrust Plate (Upper) ｽﾗｽﾄﾌﾟﾚｰﾄ (ｱｯﾊﾟ)		1	1	
18-24	346-62424-1	Thrust Plate (Lower) ｽﾗｽﾄﾌﾟﾚｰﾄ (ﾛﾜ)		1	1	
18-25	345-62415-0	O-Ring 3.5-25.7 Oﾘﾝｸﾞ 3.5-25.7		1	1	
18-26	945103-2500	C-Ring d=25 Cﾘﾝｸﾞ d=25		1	1	
18-27	940103-0600	Washer ﾜｯｼｬ		1	1	
18-28	3C8-61302-0	Rubber Mount (Lower) ﾗﾊﾞｰﾏｳﾝﾄ (ﾛﾜ)	2	2	2	
18-29	3C8Q61411-3	Mount Bracket ﾏｳﾝﾄﾌﾞﾗｹｯﾄ		1	1	
18-30	3C8-61336-0	Damper (Lower) ﾀﾞﾝﾊﾟ (ﾛﾜ)	1	1	1	

BRACKET (1) MANUAL TILT
Fig. 18 ブラケット（1）マニュアルチルト

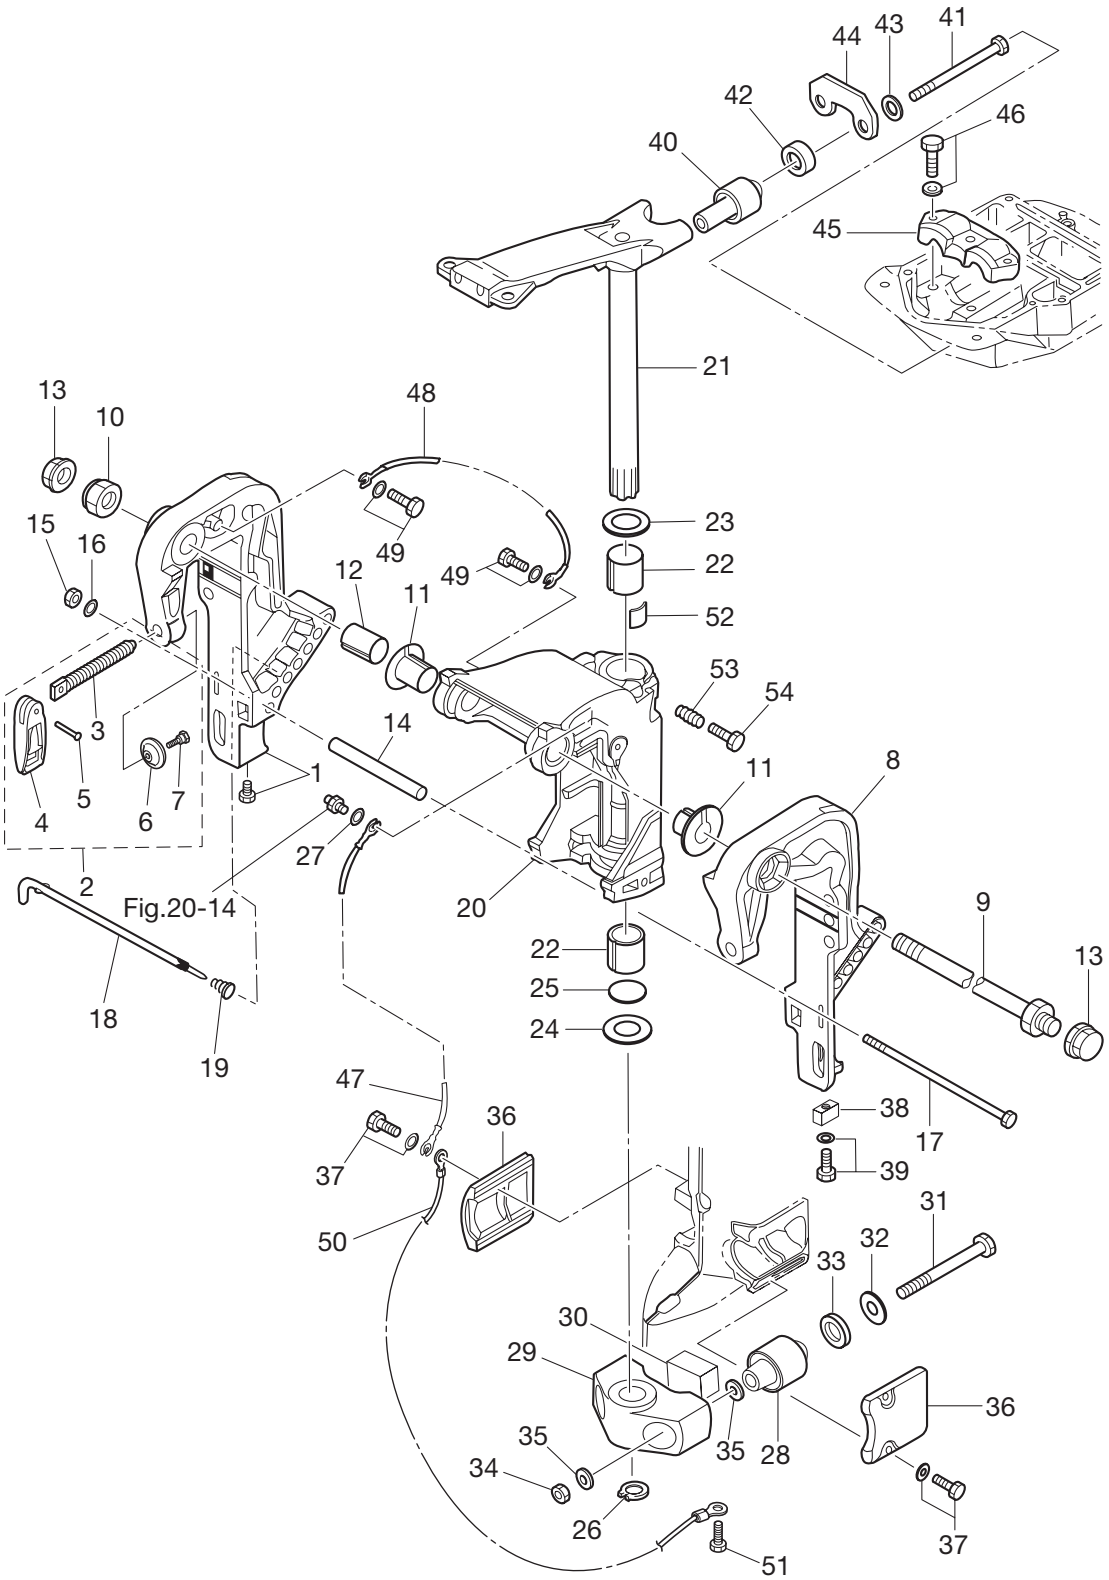


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
18-31	3C8-61321-1	Bolt Lower Mount Rubber ﾎﾞﾙﾄ ﾛﾜﾏｳﾝﾄﾗﾊﾞｰ	2	2	2	
18-32	353-61334-0	Washer 13-34-3 ﾜｯｼｬ 13-34-3	2	2	2	
18-33	3C7-61338-0	Damper Rubber ﾀﾞﾝﾊﾟﾗﾊﾞｰ	2	2	2	
18-34	930403-1200	Nylon Nut ﾅｲﾛﾝﾅｯﾄ	2	2	2	
18-35	9402E3-1200	Washer ﾜｯｼｬ	4	4	4	
18-36	3C8Q61342-0	Mount Holding Plate (Lower) ﾏｳﾝﾄﾎｰﾙﾃﾞｨﾝｸﾞﾌﾟﾚｰﾄ (ﾛﾜ)	2	2	2	Rubber Mount Cap (Lower)
18-37	9101E3-5620	Bolt ﾎﾞﾙﾄ	4	4	4	
18-38	3B7-60218-1	Anode ｱﾉｰﾄﾞ		1	1	
18-39	910103-5635	Bolt ﾎﾞﾙﾄ		1	1	
18-40	3E3-61301-1	Rubber Mount (Upper) ﾗﾊﾞｰﾏｳﾝﾄ (ｱｯﾊﾟ)	2	2	2	
18-41	353-61307-1	Bolt ﾎﾞﾙﾄ	2	2	2	
18-42	3E3-61333-0	Damper (Upper) ﾀﾞﾝﾊﾟ (ｱｯﾊﾟ)	2	2	2	
18-43	353-61335-0	Washer ﾜｯｼｬ	2	2	2	
18-44	3E3-61335-0	Lock Plate Upper ﾛｯｸﾌﾟﾚｰﾄ ｱｯﾊﾟ	1	1	1	
18-45	3C8-61341-0	Mount Holding Plate (Upper) ﾏｳﾝﾄﾎｰﾙﾃﾞｨﾝｸﾞﾌﾟﾚｰﾄ (ｱｯﾊﾟ)	1	1	1	Rubber Mount Cap (Upper)
18-46	9101E3-5835	Bolt ﾎﾞﾙﾄ	3	3	3	
18-47	3C8-62396-1	Earth Wire (Ground) L=210 ｱｰｽﾜｲﾔ (ｸﾞﾗﾝﾄﾞ) L=210	1	1	1	
18-48	398-62396-1	Earth Wire (Ground) L=130 ｱｰｽﾜｲﾔ (ｸﾞﾗﾝﾄﾞ) L=130	1	1	1	
18-49	9101E3-5612	Bolt ﾎﾞﾙﾄ		2	2	
18-50	3A3-62396-1	Earth Wire (Ground) L=110 ｱｰｽﾜｲﾔ (ｸﾞﾗﾝﾄﾞ) L=110	1	1	1	
18-51	9101E3-5612	Bolt ﾎﾞﾙﾄ	1	1	1	
18-52	345-62441-0	Friction Piece ﾌﾘｸｼｮﾝﾋﾟｰｽ	1	1	1	
18-53	346-62421-1	Friction Spring ﾌﾘｸｼｮﾝｽﾌﾟﾘﾝｸﾞ	1	1	1	
18-54	9101E3-0830	Bolt ﾎﾞﾙﾄ		1	1	

MANUAL TILT (M Model)
Fig. 19 マニュアルチルト（M Model）

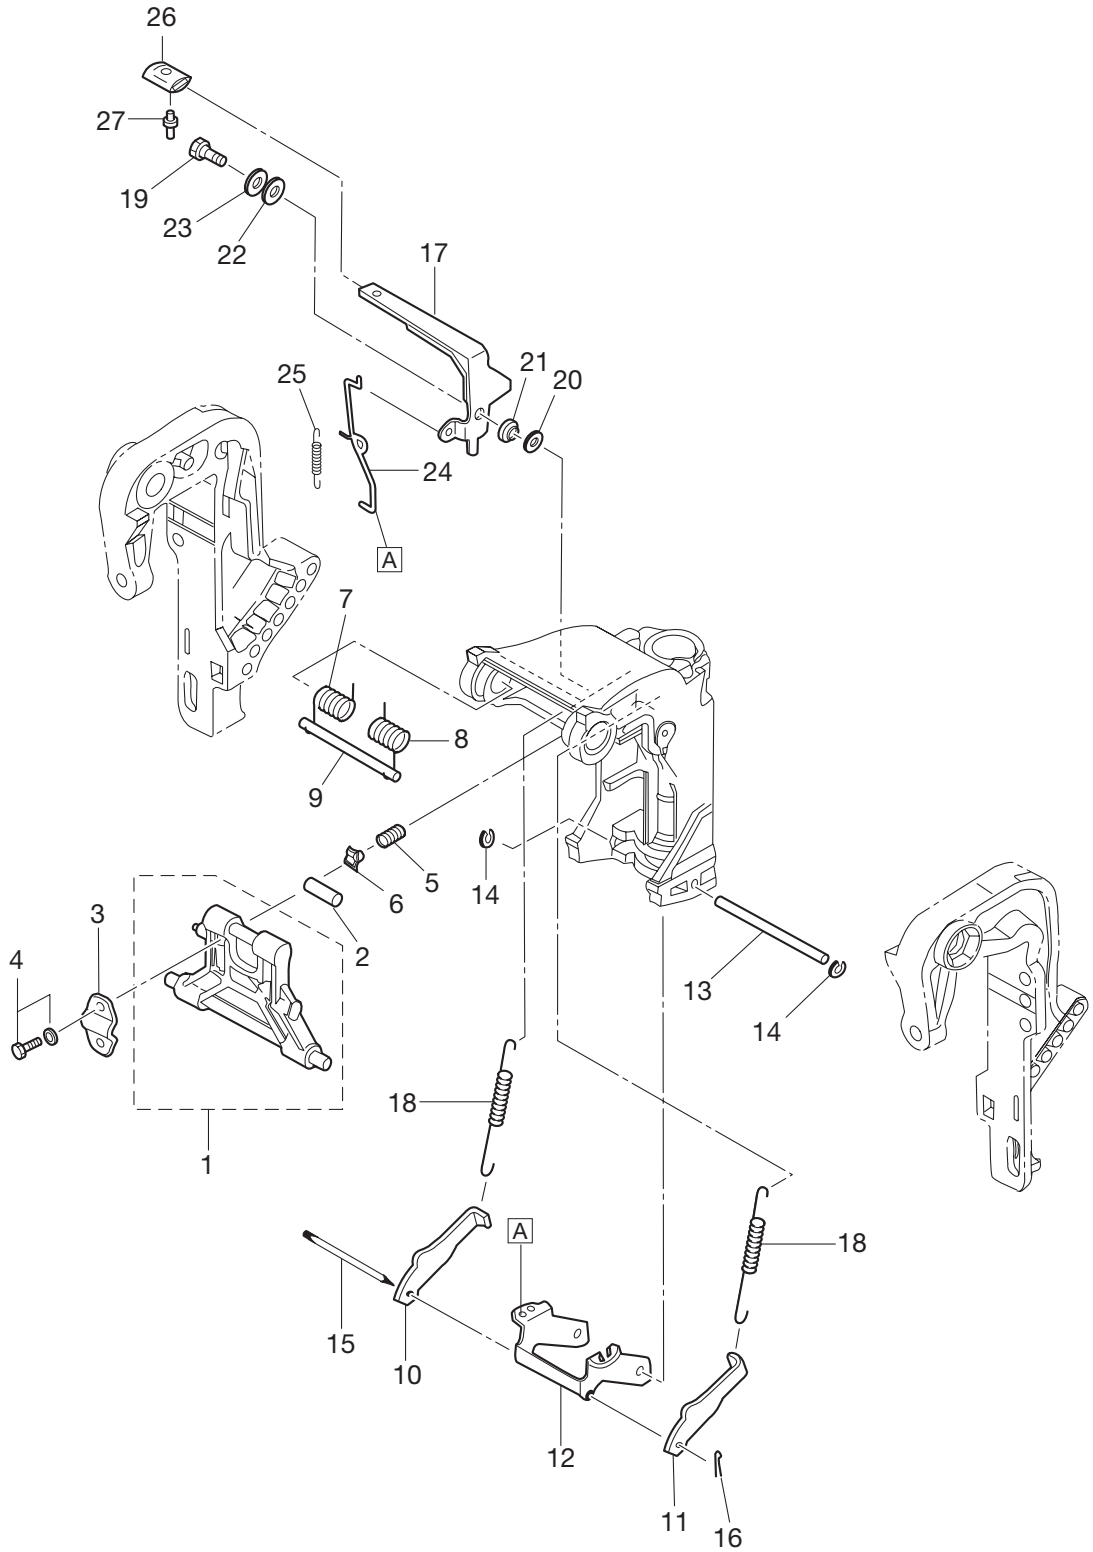


Ref. No. 見出番号		Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備　考
19-1		3C8Q62431-0	Tilt Stopper Ass'y ﾁﾙﾄｽﾄｯﾊﾟｱｯｼ		1	1	
19-2		346-62437-0	Bushing 10.2-12-29.5 ﾌﾞｯｼﾝｸﾞ 10.2-12-29.5		1	1	
19-3		346-62439-1	Setting Plate ｾｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ		1	1	
19-4		9101E3-5820	Bolt ﾎﾞﾙﾄ		2	2	
19-5		3C8-62421-1	Friction Spring ﾌﾘｸｼｮﾝｽﾌﾟﾘﾝｸﾞ		1	1	
19-6		346-62438-0	Setting Piece Tilt Stopper ｾｯﾃｨﾝｸﾞﾋﾟｰｽ ﾁﾙﾄｽﾄｯﾊﾟｰ		1	1	
19-7		3E3-62141-0	Tilt Assistant Spring (R) ﾁﾙﾄｱｼｽﾀﾝﾄｽﾌﾟﾘﾝｸﾞ (R)		1	1	
19-8		3E3-62142-0	Tilt Assistant Spring (L) ﾁﾙﾄｱｼｽﾀﾝﾄｽﾌﾟﾘﾝｸﾞ (L)		1	1	
19-9		3C8-62143-0	Tilt Assistant Shaft ﾁﾙﾄｱｼｽﾀﾝﾄｼｬﾌﾄ		1	1	
19-10		3C8-66352-2	Reverse Lock (L) ﾘﾊﾞｰｽﾛｯｸ (L)		1	1	
19-11		3C8-66351-2	Reverse Lock (R) ﾘﾊﾞｰｽﾛｯｸ (R)		1	1	
19-12		3C8-66313-4	Reverse Lock Arm ﾘﾊﾞｰｽﾛｯｸｱｰﾑ		1	1	
19-13		3C8-66319-1	Reverse Lock Shaft ﾘﾊﾞｰｽﾛｯｸｼｬﾌﾄ		1	1	
19-14		945303-0600	E-Ring d=6 Eﾘﾝｸﾞ d=6		2	2	
19-15		3C8-66321-0	Reverse Lock Rod ﾘﾊﾞｰｽﾛｯｸﾛｯﾄﾞ		1	1	
19-16		951503-0212	Split Pin ｽﾌﾟﾘｯﾄﾋﾟﾝ		1	1	
19-17		3E3-62436-1	Tilt Stopper Lever ﾁﾙﾄｽﾄｯﾊﾟﾚﾊﾞｰ		1	1	
19-18	1	3C8-66332-2	Reverse Lock Spring (L) ﾘﾊﾞｰｽﾛｯｸｽﾌﾟﾘﾝｸﾞ (L)		2	2	for Transom “L”
19-18	2	3C8-66331-2	Reverse Lock Spring (S) ﾘﾊﾞｰｽﾛｯｸｽﾌﾟﾘﾝｸﾞ (S)		2	2	for Transom “S”
19-19		3AL-05254-0	Shoulder Bolt 6-8 ｼｮﾙﾀﾞﾎﾞﾙﾄ 6-8		1	1	
19-20		3R0-66308-0	Washer 6-16-1.5 ﾜｯｼｬ 6-16-1.5		1	1	
19-21		3AL-05212-0	Bushing ﾌﾞｯｼﾝｸﾞ		1	1	
19-22		3AA-83719-0	Washer 8.5-18-1.6 ﾜｯｼｬ 8.5-18-1.6		1	1	
19-23		940103-0800	Washer ﾜｯｼｬ		1	1	
19-24		3C8-66318-1	Link B ﾘﾝｸ B		1	1	
19-25		3C8-66336-0	Spring B ｽﾌﾟﾘﾝｸﾞ B		1	1	
19-26		346-66333-0	Reverse Lock Lever Grip ﾘﾊﾞｰｽﾛｯｸﾚﾊﾞｰｸﾞﾘｯﾌﾟ		1	1	
19-27		346-66334-0	Stopper Reverse Lock Lever Grip ｽﾄｯﾊﾟ ﾘﾊﾞｰｽﾛｯｸﾚﾊﾞｰｸﾞﾘｯﾌﾟ		1	1	

BRACKET (2) POWER TRIM・TILT/GAS ASSIST
Fig. 20 ブラケット（2）パワートリム・チルト／ガスアシスト

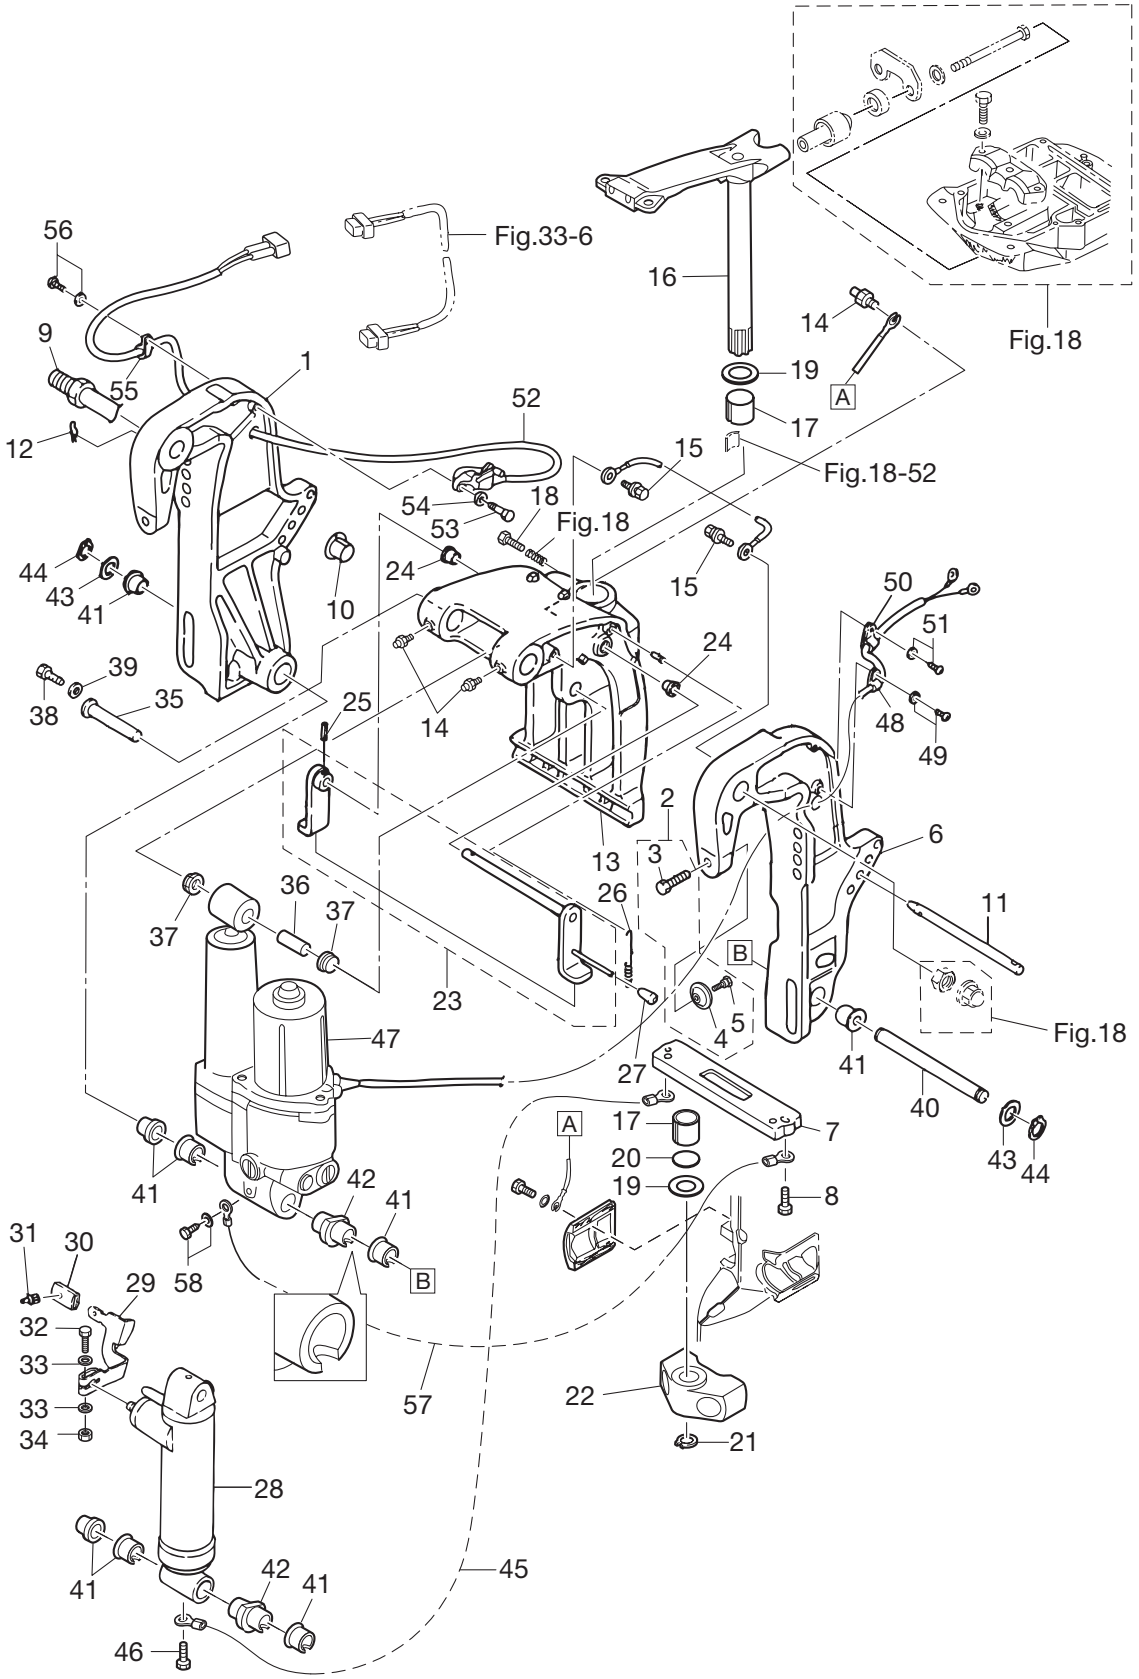


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
20-1	1	3GFQ77211-0	Clamp Bracket (PTT-R) ｸﾗﾝﾌﾟﾌﾞﾗｹｯﾄ (PTT-R)	1	1	1	Stern Bracket (Right) Starboard
20-1	2	3GGQ77211-0	Clamp Bracket (PTT-R) ｸﾗﾝﾌﾟﾌﾞﾗｹｯﾄ (PTT-R)		1	1	for Gas Assist Model
20-2		3C8-77217-0	Clamp Screw Kit ｸﾗﾝﾌﾟｽｸﾘｭｷｯﾄ	1	1	1	
20-3		3C8-77216-0	Clamp Screw (PTT) *ｸﾗﾝﾌﾟｽｸﾘｭ (PTT)	1	1	1	
20-4		332-62101-1	Clamp Screw Pad *ｸﾗﾝﾌﾟｽｸﾘｭﾊﾟｯﾄﾞ	1	1	1	
20-5		3C8-62107-0	Shoulder Bolt *ｼｮﾙﾀﾞｰﾎﾞﾙﾄ	1	1	1	
20-6		3GFQ77212-0	Clamp Bracket (PTT-L) ｸﾗﾝﾌﾟﾌﾞﾗｹｯﾄ (PTT-L)	1	1	1	Stern Bracket (Left) Port
20-7		3C7-60218-2	Anode Stern Bracket ｱﾉｰﾄﾞ ｽﾀｰﾝﾌﾞﾗｹｯﾄ	1	1	1	
20-8		910103-6630	Bolt ﾎﾞﾙﾄ	2	2	2	
20-9		3AD-62191-0	Swivel Bracket Shaft Ass'y ｽｲﾍﾞﾙﾌﾞﾗｹｯﾄｼｬﾌﾄｱｯｼ	1	1	1	Bracket Bolt
20-10		3C8-77213-0	Bushing Bracket Bolt ﾌﾞｯｼﾝｸﾞ ﾌﾞﾗｹｯﾄﾎﾞﾙﾄ	2	2	2	
20-11		3R0-77118-0	PTT Thrust Rod PTTｽﾗｽﾄﾛｯﾄﾞ	1	1	1	
20-12		951603-1000	Snap Pin ｽﾅｯﾌﾟﾋﾟﾝ	1	1	1	
20-13		3Z7Q77208-1	Swivel Bracket Ass'y (PTT) ｽｲﾍﾞﾙﾌﾞﾗｹｯﾄｱｯｼ (PTT)	1	1	1	
20-14		344-67177-1	Grease Fitting ｸﾞﾘｽﾌｨｯﾃｨﾝｸﾞ	3	3	3	
20-15	1	9101E3-5612	Bolt ﾎﾞﾙﾄ		1	1	for Gas Assist Model
20-15	2	9101E3-5612	Bolt ﾎﾞﾙﾄ	1	1	1	
20-16		3Z5Q62010-0	Steering Shaft Ass'y ｽﾃｱﾘﾝｸﾞｼｬﾌﾄｱｯｼ	1	1	1	
20-17		353-62417-0	Bushing Bracket Shaft ﾌﾞｯｼﾝｸﾞ ﾌﾞﾗｹｯﾄｼｬﾌﾄ	2	2	2	
20-18		9101E3-0830	Bolt ﾎﾞﾙﾄ	1	1	1	
20-19		353-62423-1	Thrust Plate (Upper) ｽﾗｽﾄﾌﾟﾚｰﾄ (ｱｯﾊﾟ)	2	2	2	
20-20		353-62415-0	O-Ring Bracket Shaft 3.5-29.7 Oﾘﾝｸﾞ ﾌﾞﾗｹｯﾄｼｬﾌﾄ 3.5-29.7	1	1	1	
20-21		945103-2800	C-Ring d=28 Cﾘﾝｸﾞ d=28	1	1	1	
20-22		3Z5Q61411-1	Mount Bracket ﾏｳﾝﾄﾌﾞﾗｹｯﾄ	1	1	1	
20-23	1	3R0Q62470-0	Tilt Stopper Ass'y ﾁﾙﾄｽﾄｯﾊﾟｱｯｼ		1	1	for Gas Assist Model
20-23	2	3Z5-62470-1	Tilt Stopper Ass'y ﾁﾙﾄｽﾄｯﾊﾟｱｯｼ	1	1	1	
20-24		353-63207-0	Collar 10.2-12-12 ｶﾗｰ 10.2-12-12	2	2	2	
20-25		951403-3516	Spring Pin ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ	1	1	1	
20-26		3R0-62473-0	Tilt Stopper Spring ﾁﾙﾄｽﾄｯﾊﾟｽﾌﾟﾘﾝｸﾞ	1	1	1	
20-27		369-62433-1	Tilt Stopper Grip ﾁﾙﾄｽﾄｯﾊﾟｸﾞﾘｯﾌﾟ	1	1	1	

BRACKET (2) POWER TRIM・TILT/GAS ASSIST
Fig. 20 ブラケット（2）パワートリム・チルト／ガスアシスト

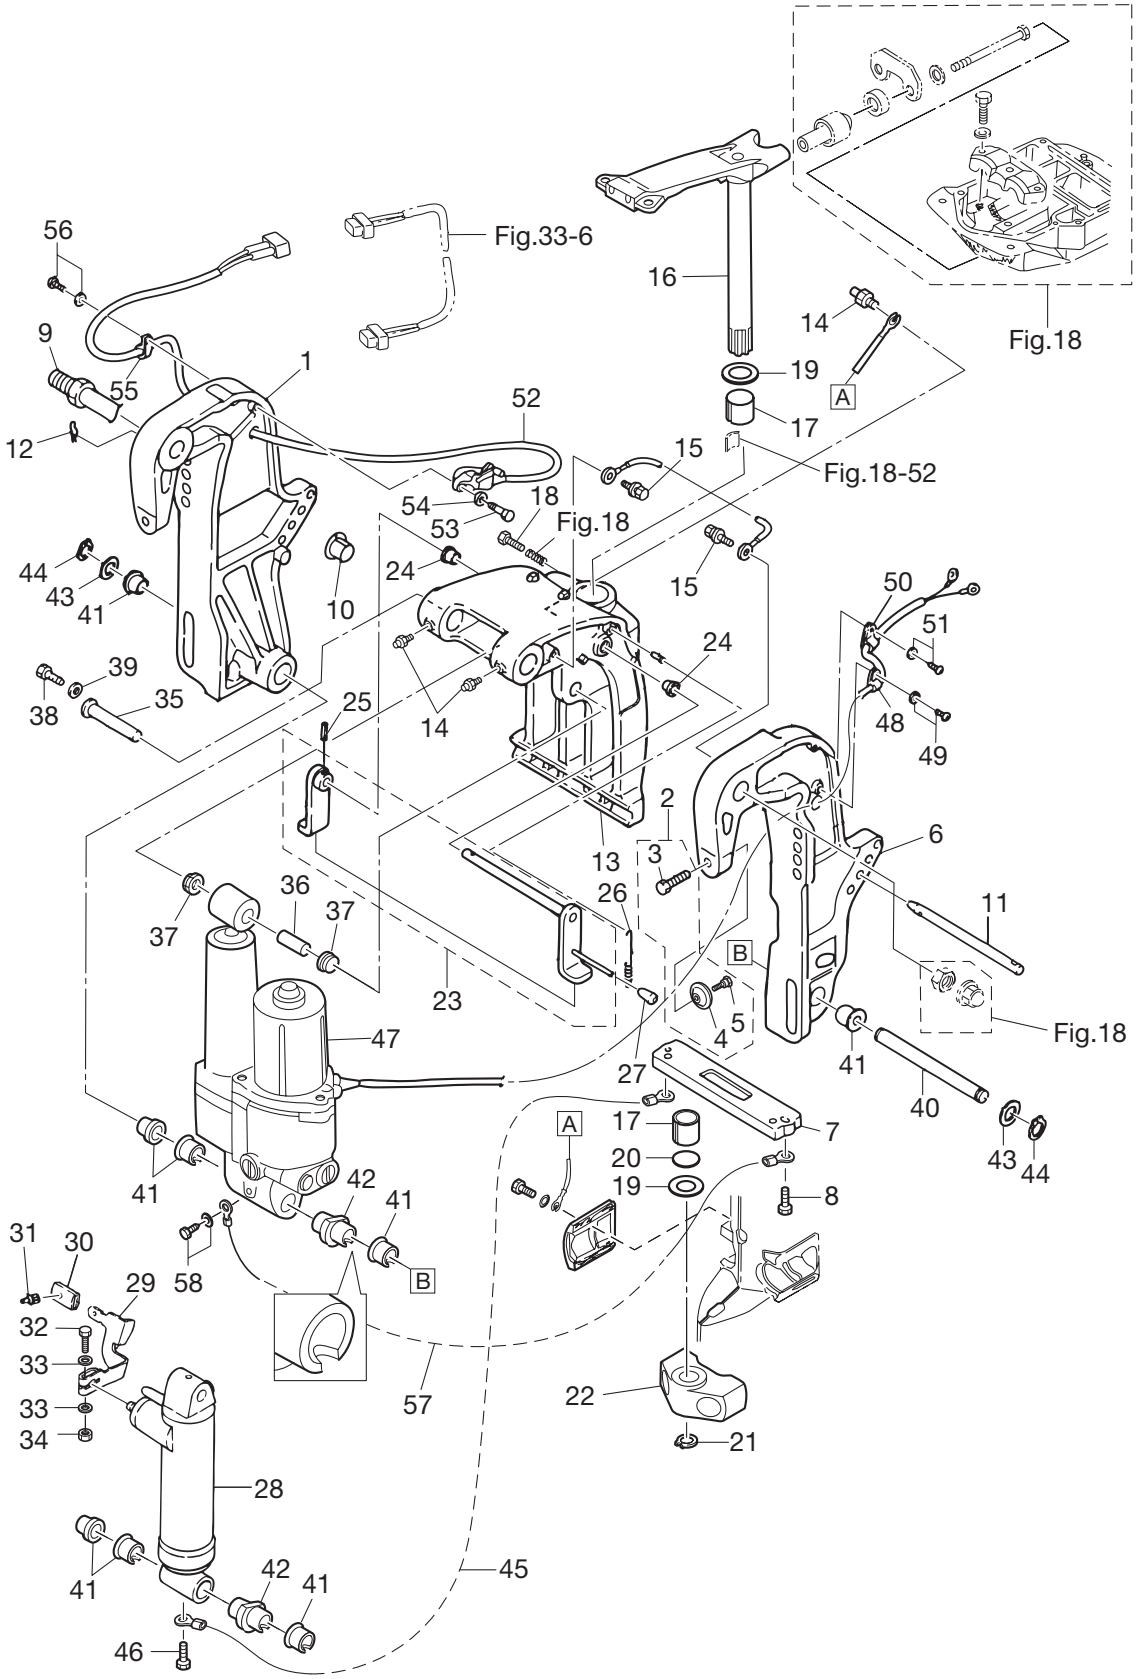


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
20-28		3Z5-77601-0	Gas Shock Absorber ｶﾞｽｼｮｯｸｱﾌﾞｿｰﾊﾞ		1	1	for Gas Assist Model
20-29		3R0-66311-0	Reverse Lock Lever ﾘﾊﾞｰｽﾛｯｸﾚﾊﾞｰ		1	1	for Gas Assist Model
20-30		3AL-66333-0	Reverse Lock Lever Grip ﾘﾊﾞｰｽﾛｯｸﾚﾊﾞｰｸﾞﾘｯﾌﾟ		1	1	for Gas Assist Model
20-31		346-66334-0	Stopper Reverse Lock Lever Grip ｽﾄｯﾊﾟ ﾘﾊﾞｰｽﾛｯｸﾚﾊﾞｰｸﾞﾘｯﾌﾟ		1	1	for Gas Assist Model
20-32		3V2-60001-0	Bolt ﾎﾞﾙﾄ		1	1	for Gas Assist Model
20-33	1	9401E3-0600	Washer ﾜｯｼｬ		1	1	for Gas Assist Model
20-33	2	940103-0600	Washer ﾜｯｼｬ		1	1	for Gas Assist Model
20-34		9301E3-0600	Nut ﾅｯﾄ		1	1	for Gas Assist Model
20-35	1	3R0-77071-1	Cylinder Pin (Upper) ｼﾘﾝﾀﾞﾋﾟﾝ (ｱｯﾊﾟ)		1	1	for Gas Assist Model
20-35	2	3R0-77071-1	Cylinder Pin (Upper) ｼﾘﾝﾀﾞﾋﾟﾝ (ｱｯﾊﾟ)	1	1	1	for PTT Model
20-36	1	3R0-77075-0	Bushing 13-16-40 ﾌﾞｯｼﾝｸﾞ 13-16-40		1	1	for Gas Assist Model
20-36	2	3R0-77075-0	Bushing 13-16-40 ﾌﾞｯｼﾝｸﾞ 13-16-40	1	1	1	for PTT Model
20-37	1	3R0-77076-0	Bushing 13-17-19.5 ﾌﾞｯｼﾝｸﾞ 13-17-19.5		2	2	for Gas Assist Model
20-37	2	3R0-77076-0	Bushing 13-17-19.5 ﾌﾞｯｼﾝｸﾞ 13-17-19.5	2	2	2	for PTT Model
20-38	1	910103-0612	Bolt ﾎﾞﾙﾄ		1	1	for Gas Assist Model
20-38	2	9101E3-0612	Bolt ﾎﾞﾙﾄ	1	1	1	for PTT Model
20-39	1	345-05122-1	Washer 6.5-23-1.5 ﾜｯｼｬ 6.5-23-1.5		1	1	for Gas Assist Model
20-39	2	345-05122-1	Washer 6.5-23-1.5 ﾜｯｼｬ 6.5-23-1.5	1	1	1	for PTT Model
20-40	1	3R0-77101-1	Cylinder Pin (Lower) ｼﾘﾝﾀﾞﾋﾟﾝ (ﾛﾜ)		1	1	for Gas Assist Model
20-40	2	3R0-77101-1	Cylinder Pin (Lower) ｼﾘﾝﾀﾞﾋﾟﾝ (ﾛﾜ)	1	1	1	for PTT Model
20-41	1	3C8-77076-1	Bushing 18-24-22 ﾌﾞｯｼﾝｸﾞ 18-24-22		5	5	for Gas Assist Model
20-41	2	3C8-77076-1	Bushing 18-24-22 ﾌﾞｯｼﾝｸﾞ 18-24-22	5	5	5	for PTT Model
20-42	1	3Z5-77103-0	Bushing 18-24-60 ﾌﾞｯｼﾝｸﾞ 18-24-60		1	1	for Gas Assist Model
20-42	2	3Z5-77103-0	Bushing 18-24-60 ﾌﾞｯｼﾝｸﾞ 18-24-60	1	1	1	for PTT Model
20-43	1	3R0-77112-0	Washer 18.2-34-1 ﾜｯｼｬ 18.2-34-1		2	2	for Gas Assist Model
20-43	2	3R0-77112-0	Washer 18.2-34-1 ﾜｯｼｬ 18.2-34-1	2	2	2	for PTT Model
20-44	1	945103-1800	C-Ring Cﾘﾝｸﾞ		2	2	for Gas Assist Model
20-44	2	945103-1800	C-Ring Cﾘﾝｸﾞ d=18	2	2	2	for PTT Model
20-45		3C8-62396-1	Earth Wire(Ground) ｱｰｽﾜｲﾔ (ｸﾞﾗﾝﾄﾞ)		1	1	for Gas Assist Model
20-46		910103-5608	Bolt ﾎﾞﾙﾄ		1	1	for Gas Assist Model

BRACKET (2) POWER TRIM・TILT/GAS ASSIST
Fig. 20 ブラケット（2）パワートリム・チルト／ガスアシスト

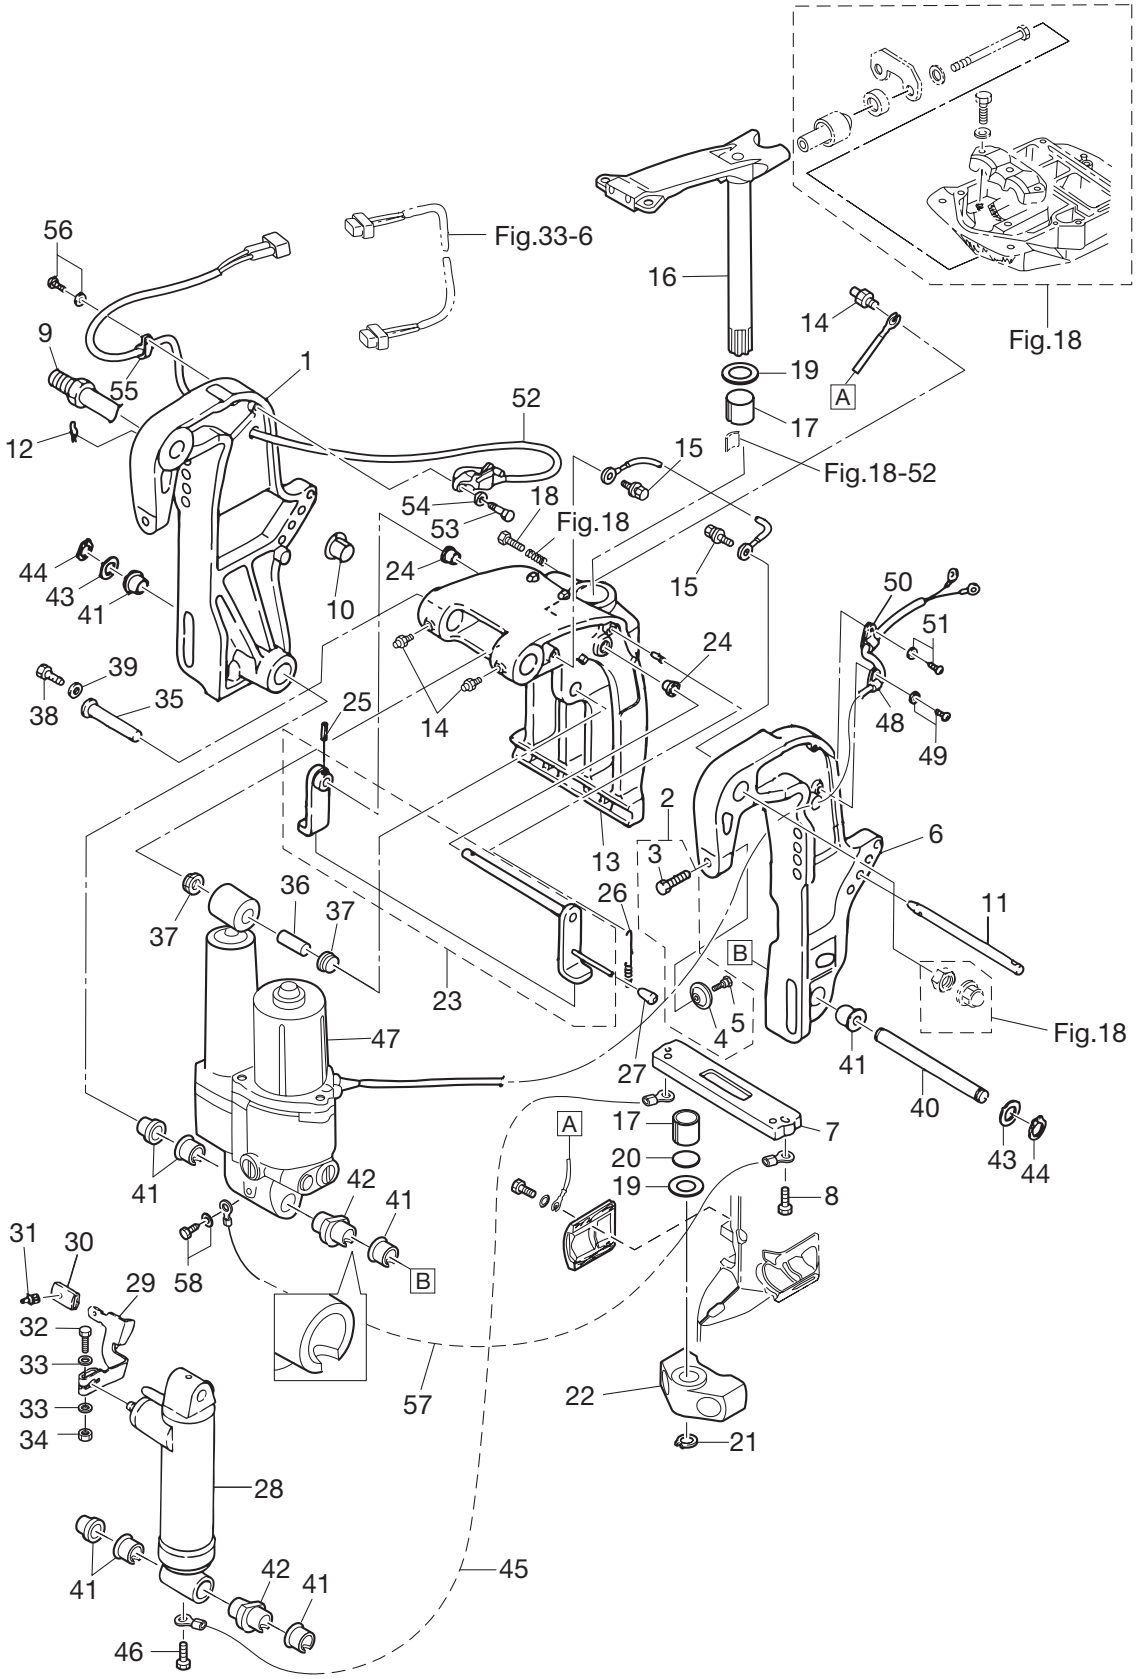


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
20-47	3Z5-77150-1	PTT Ass'y PTTｱｯｼ	1	1	1	for PTT Model
20-48	336-06973-0	Clamp 6-9.5L ｸﾗﾝﾌﾟ 6-9.5L	1	1	1	for PTT Model
20-49	921503-5612	Screw ｽｸﾘｭ	1	1	1	for PTT Model
20-50	345-06915-0	Clamp 6.5-14 ｸﾗﾝﾌﾟ 6.5-14	1	1	1	for PTT Model
20-51	921503-5612	Screw ｽｸﾘｭ	1	1	1	for PTT Model
20-52	3Z4-72574-0	Trim Sensor L=1700 ﾄﾘﾑｾﾝｻ L=1700	1	1	1	for PTT Model
20-53	910103-0620	Bolt ﾎﾞﾙﾄ	2	2	2	for "P" Type
20-54	3C8-66308-0	Washer 6-16-1.5 ﾜｯｼｬ 6-16-1.5	2	2	2	for "P" Type
20-55	336-06973-0	Clamp 6-9.5L ｸﾗﾝﾌﾟ 6-9.5L	1	1	1	for "P" Type
20-56	921503-5612	Screw ｽｸﾘｭ	1	1	1	for "P" Type
20-57	398-62396-1	Ground (Earth Wire) L=130 ｱｰｽﾜｲﾔ (ｸﾞﾗﾝﾄﾞ) L=130	1	1	1	PTTAss'y ～ Anode Stern Bracket
20-58	9101E3-5612	Bolt ﾎﾞﾙﾄ	1	1	1	

POWER TRIM・TILT
Fig. 21　パワートリム・チルト

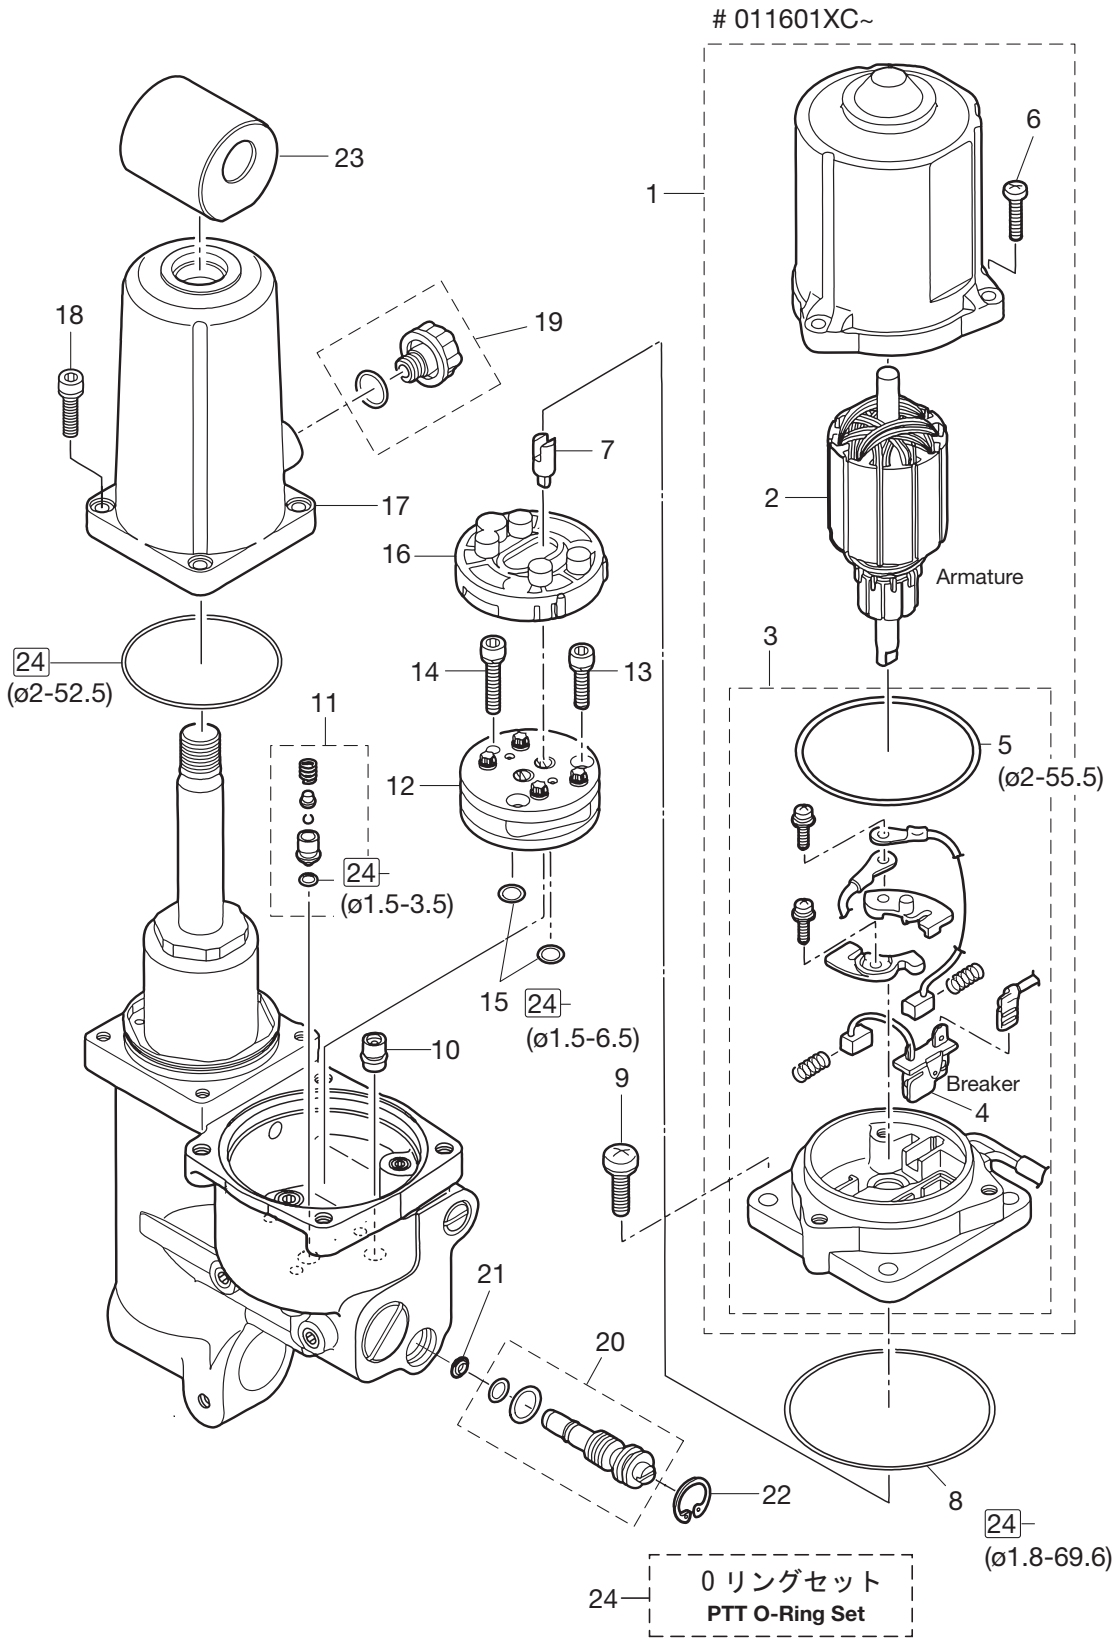


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
21-1	3Z5-77180-0	Motor Ass'y ﾓｰﾀｰｱｯｼ	1	1	1	
21-2	3Z5-77190-0	* Armature Ass'y * ｱｰﾏﾁｭｱｱｯｼ	1	1	1	
21-3	3Z5-77192-0	* Motor Bracket Ass'y * ﾓｰﾀﾌﾞﾗｹｯﾄｱｯｼ	1	1	1	
21-4	3Z5-77191-0	** Breaker ** ﾌﾞﾚｰｶ	1	1	1	
21-5	3Z5-77182-0	** O-Ring 2-55.5 ** Oﾘﾝｸﾞ 2-55.5	1	1	1	
21-6	921503-0520	* Screw * ｽｸﾘｭ	3	3	3	
21-7	3Z5-77166-0	Coupling Pump ｶｯﾌﾟﾘﾝｸﾞ ﾎﾟﾝﾌﾟ	1	1	1	
21-8	3B7-77167-0	O-Ring 1.8-69.6 Oﾘﾝｸﾞ 1.8-69.6	1	1	1	
21-9	3Z5-77194-0	Screw ｽｸﾘｭ	4	4	4	
21-10	3Z5-77460-0	Valve Ass'y ﾊﾞﾙﾌﾞｱｯｼ	1	1	1	
21-11	3Z5-77450-0	Relief Valve Ass'y ﾘﾘｰﾌﾊﾞﾙﾌﾞｱｯｼ	1	1	1	
21-12	3B7-77430-0	Pump ﾎﾟﾝﾌﾟ	1	1	1	
21-13	3B7-77432-1	Bolt ﾎﾞﾙﾄ	2	2	2	
21-14	3B7-77431-1	Bolt ﾎﾞﾙﾄ	1	1	1	
21-15	3B7-77433-0	O-Ring 1.5-6.5 Oﾘﾝｸﾞ 1.5-6.5	2	2	2	
21-16	3B7-77434-1	Filter ﾌｨﾙﾀ	1	1	1	
21-17	3Z5-77165-0	Reserve Tank ﾘｻﾞｰﾌﾞﾀﾝｸ	1	1	1	
21-18	3Z5-77159-0	Bolt ﾎﾞﾙﾄ	4	4	4	
21-19	3Z5-77221-0	Cap Ass'y W/O-Ring ｷｬｯﾌﾟｱｯｼ (W/Oﾘﾝｸﾞ)	1	1	1	
21-20	3Z5-77175-0	Manual Valve Ass'y W/O-Ring×2 ﾏﾆｭｱﾙﾊﾞﾙﾌﾞ (W/Oﾘﾝｸﾞ×2)	1	1	1	
21-21	3R0-77173-0	Seal Washer ｼｰﾙﾜｯｼｬ	1	1	1	
21-22	3Z5-77171-0	C-Ring Cﾘﾝｸﾞ	1	1	1	
21-23	3Z5-77367-0	Joint Metal ｼﾞｮｲﾝﾄ ﾒﾀﾙ	1	1	1	
21-24	3Z5-77225-0	PTT O-Ring Set PTT Oﾘﾝｸﾞｾｯﾄ	1	1	1	

TILLER HANDLE (F Model)
Fig. 22 ティラハンドル（FModel）

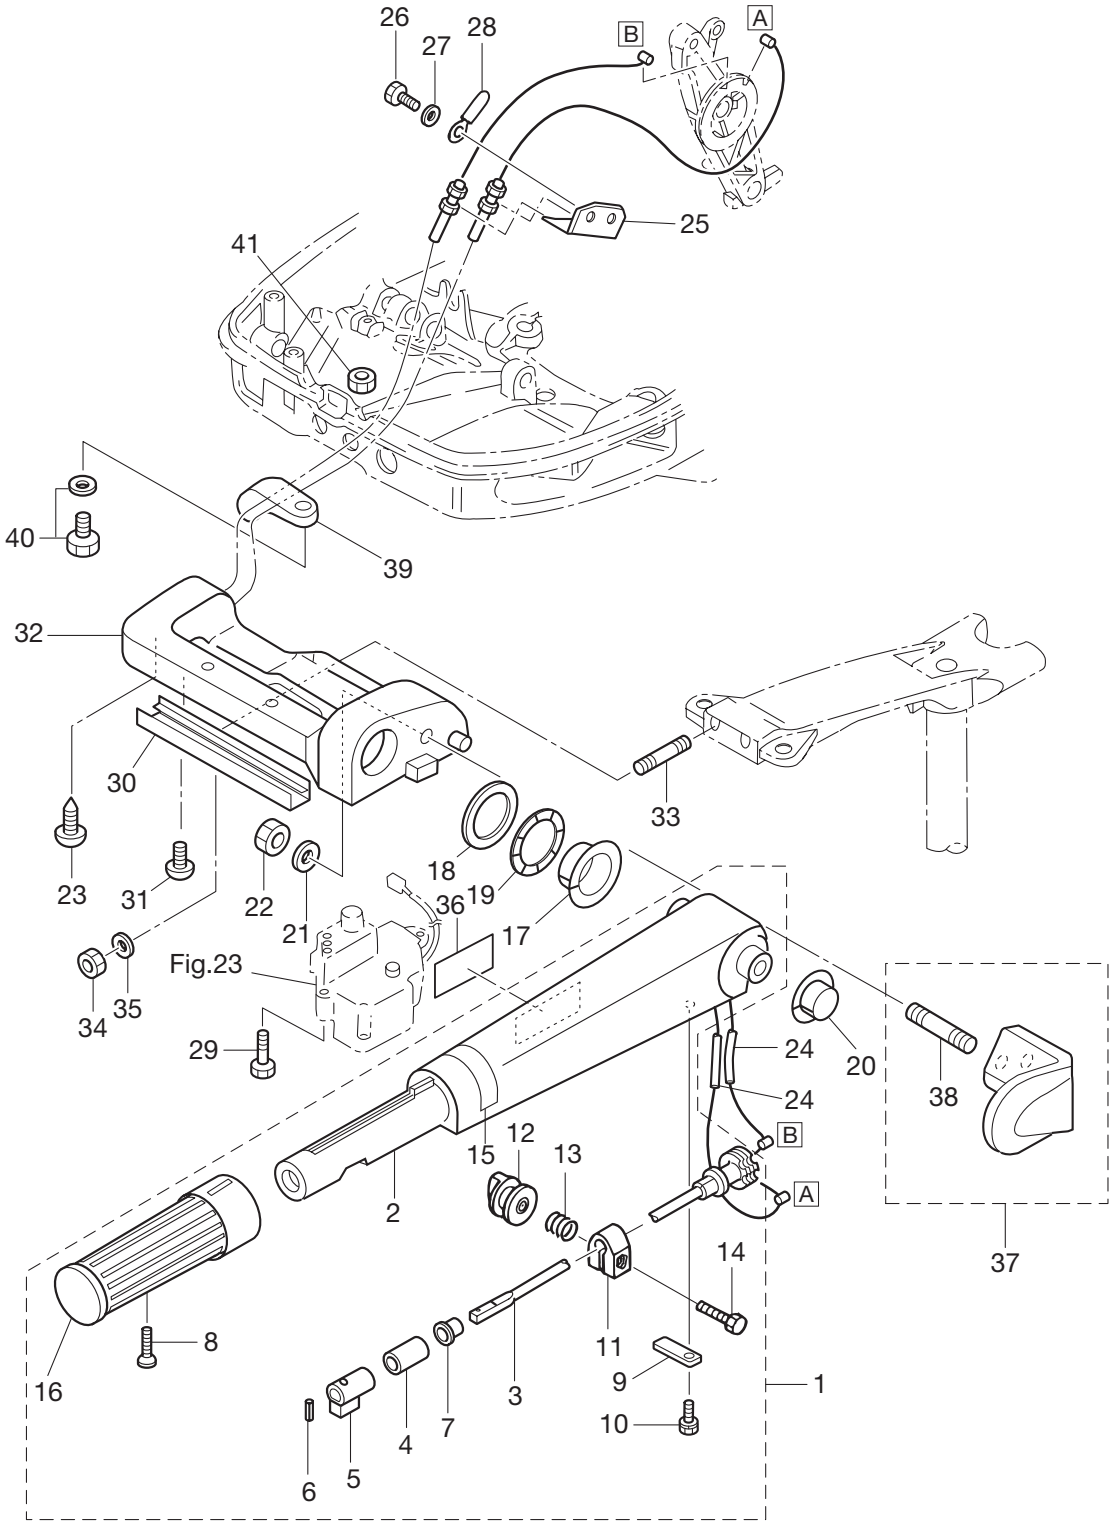


Ref. No. 見出番号	Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備　考
22-1	3T5Q63003-1	Tiller Handle Ass'y ﾃｨﾗﾊﾝﾄﾞﾙｱｯｼ		1	1	Steering Handle A'ssy
22-2	3C8Q63011-2	* Tiller Handle * ﾃｨﾗﾊﾝﾄﾞﾙ		1	1	
22-3	3C8-63041-1	* Throttle Shaft * ｽﾛｯﾄﾙｼｬﾌﾄ		1	1	
22-4	345-63048-0	* Throttle Shaft Damper A * ｽﾛｯﾄﾙｼｬﾌﾄﾀﾞﾝﾊﾟ A		1	1	
22-5	398-63053-0	* Spacer Throttle Shaft A * ｽﾍﾟｰｻ ｽﾛｯﾄﾙｼｬﾌﾄ A		1	1	
22-6	951403-0310	* Spring Pin * ｽﾌﾟﾘﾝｸﾞﾋﾟﾝ		1	1	
22-7	350-63046-0	* Bushing 8.4-10-11 * ﾌﾞｯｼﾝｸﾞ 8.4-10-11		1	1	
22-8	921803-0525	* Screw * ｽｸﾘｭ		1	1	
22-9	3C8-63063-0	* Throttle Shaft Support * ｽﾛｯﾄﾙｼｬﾌﾄｻﾎﾟｰﾄ		1	1	
22-10	9101E3-5612	* Bolt * ﾎﾞﾙﾄ		1	1	
22-11	3V1-63035-1	* Friction Piece * ﾌﾘｸｼｮﾝﾋﾟｰｽ		1	1	
22-12	3V1-63077-0	* Adjusting Nut * ｱｼﾞｬｽﾄﾅｯﾄ		1	1	
22-13	3V1-63036-0	* Spring * ｽﾌﾟﾘﾝｸﾞ		1	1	
22-14	9101E3-0625	* Bolt * ﾎﾞﾙﾄ		1	1	
22-15	3T5-72019-0	* Throttle Decal * ｽﾛｯﾄﾙﾃﾞｶｰﾙ		1	1	
22-16	398-63012-0	* Grip * ｸﾞﾘｯﾌﾟ		1	1	
22-17	3C8-63101-0	Bushing A Steering Handle ﾌﾞｯｼﾝｸﾞ A ｽﾃｱﾘﾝｸﾞﾊﾝﾄﾞﾙ		1	1	
22-18	3B2-63108-0	Washer 30-45-1 ﾜｯｼｬ 30-45-1		1	1	
22-19	3B2-63109-0	Wave Washer 30-45-1.2 ｳｪｰﾌﾞﾜｯｼｬ 30-45-1.2		1	1	
22-20	3C8-63102-1	Bushing B Steering Handle ﾌﾞｯｼﾝｸﾞ B ｽﾃｱﾘﾝｸﾞﾊﾝﾄﾞﾙ		1	1	
22-21	9401E3-1000	Washer ﾜｯｼｬ		1	1	
22-22	930103-1000	Nut ﾅｯﾄ		1	1	
22-23	3C8-63607-0	Clip Throttle Wire ｸﾘｯﾌﾟ ｽﾛｯﾄﾙﾜｲﾔ		1	1	
22-24	3C8-63600-1	Throttle Wire ｽﾛｯﾄﾙﾜｲﾔ		2	2	
22-25	3C8-63508-1	Throttle Wire Bracket ｽﾛｯﾄﾙﾜｲﾔﾌﾞﾗｹｯﾄ		1	1	
22-26	910103-0614	Bolt ﾎﾞﾙﾄ		2	2	
22-27	940103-0600	Washer ﾜｯｼｬ		2	2	
22-28	309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P		1	1	
22-29	910103-6625	Bolt ﾎﾞﾙﾄ		2	2	
22-30	3T5-62004-0	Cord Holder ｺｰﾄﾞﾎﾙﾀﾞ		1	1	

TILLER HANDLE (F Model)
Fig. 22 ティラハンドル（FModel）

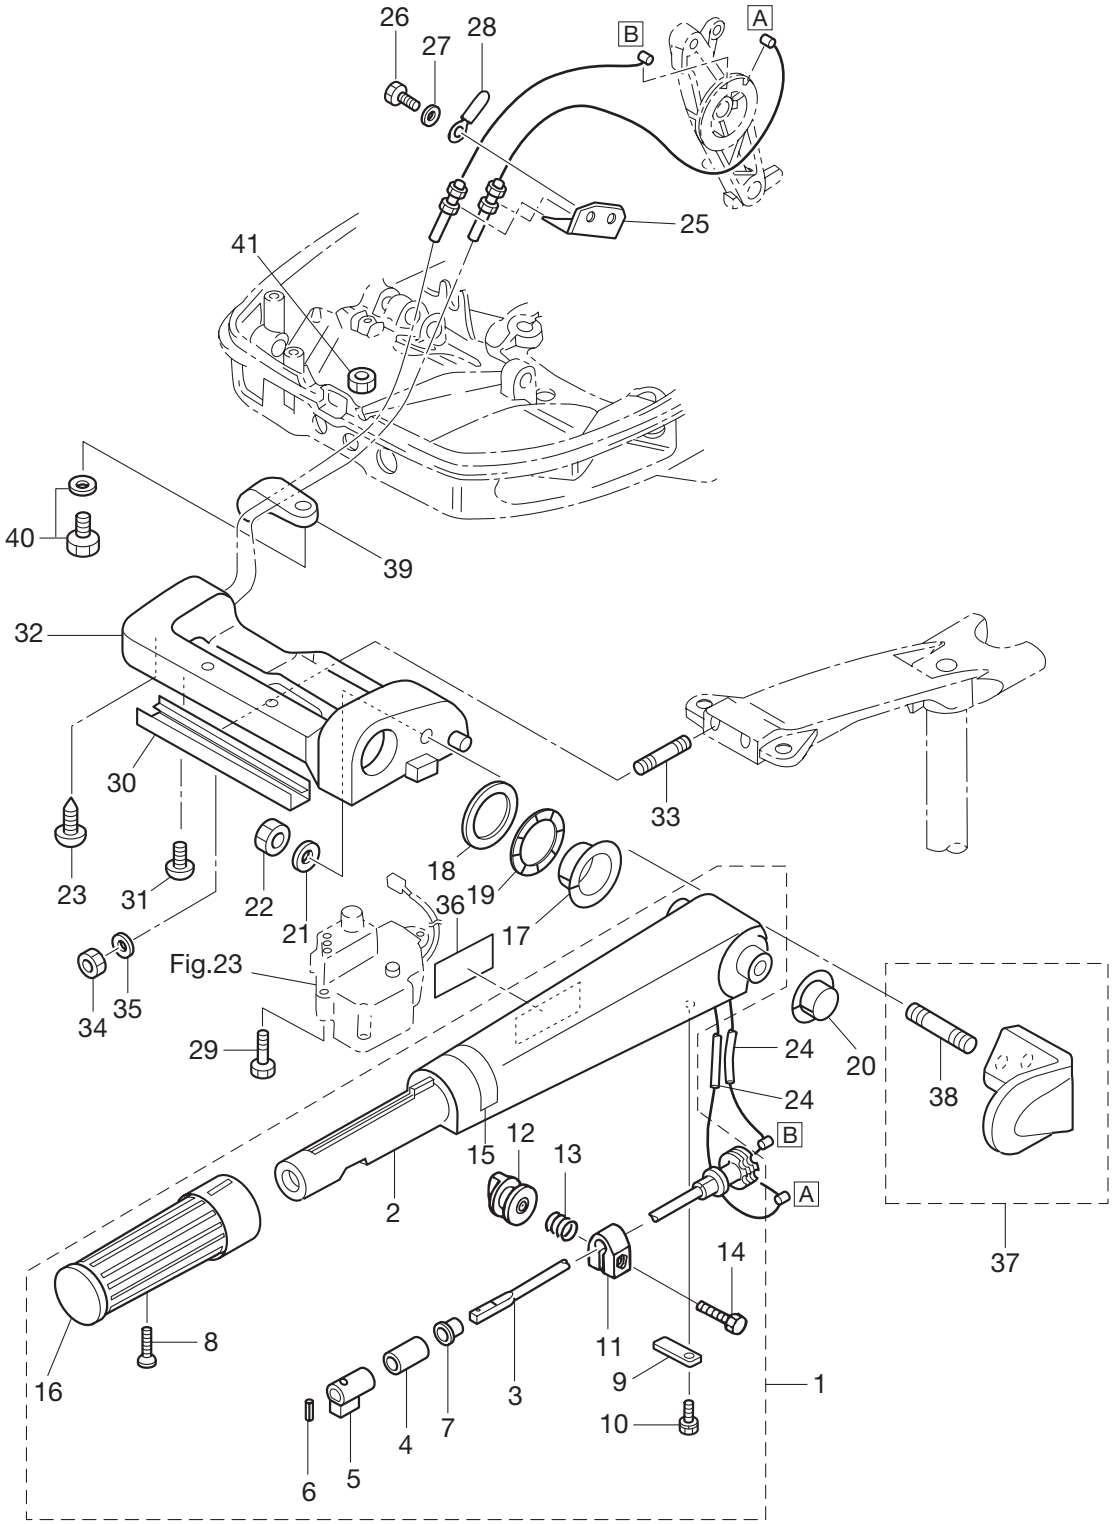


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
22-31	921903-0625	Screw ｽｸﾘｭ		2	2	
22-32	3C8Q62001-2	Steering Bracket ｽﾃｱﾘﾝｸﾞﾌﾞﾗｹｯﾄ		1	1	
22-33	9152E3-0845	Stud Bolt ｽﾀｯﾄﾞﾎﾞﾙﾄ		2	2	
22-34	930403-0800	Nylon Nut ﾅｲﾛﾝﾅｯﾄ		2	2	
22-35	9401E3-0800	Washer ﾜｯｼｬ		2	2	
22-36	3T5-84335-0	Main Switch Decal ﾒｲﾝｽｲｯﾁﾃﾞｶｰﾙ		1	1	
22-37	3C8Q63027-0	Tiller Handle Holder Ass'y ﾃｨﾗﾊﾝﾄﾞﾙﾎﾙﾀﾞｱｯｼ		1	1	
22-38	9153E3-1022	* Stud Bolt * ｽﾀｯﾄﾞﾎﾞﾙﾄ		1	1	
22-39	345-06915-0	Clamp 6.5-14 ｸﾗﾝﾌﾟ 6.5-14		1	1	
22-40	910103-5612	Bolt ﾎﾞﾙﾄ		1	1	
22-41	930103-0600	Nut ﾅｯﾄ		1	1	

SWITCH BOX (F Model)
Fig. 23 スイッチボックス（F Model）

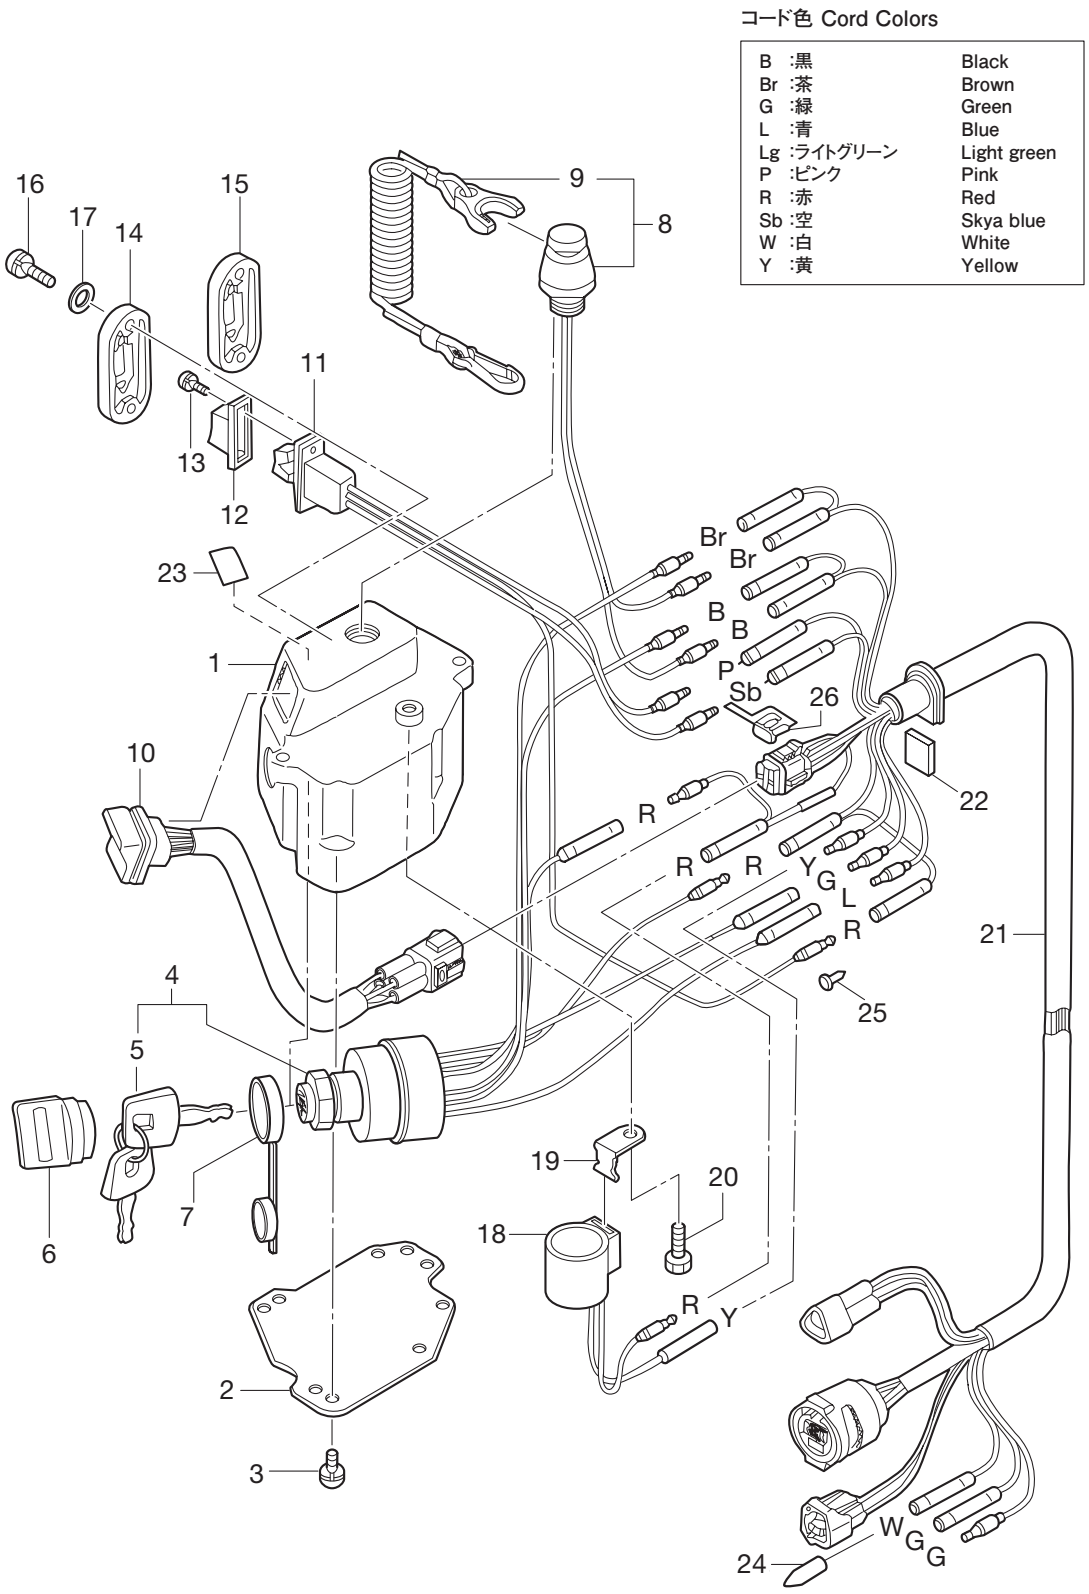


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
23-1		3T5Q76032-0	Switch Box ｽｲｯﾁﾎﾞｯｸｽ		1	1	
23-2		3T5-76230-0	Switch Box Cover ｽｲｯﾁﾎﾞｯｸｽｶﾊﾞｰ		1	1	
23-3		921503-5510	Screw ｽｸﾘｭ		4	4	
23-4		385-76020-1	Main Switch Ass'y ﾒｲﾝｽｲｯﾁｱｯｼ		1	1	
23-5	1	353-76203-1	* Main Switch Key (F-301) * ﾒｲﾝｽｲｯﾁｷｰ (F-301)		A	A	
23-5	2	353-76203-2	* Main Switch Key (F-302) * ﾒｲﾝｽｲｯﾁｷｰ (F-302)		A	A	
23-5	3	353-76203-3	* Main Switch Key (F-303) * ﾒｲﾝｽｲｯﾁｷｰ (F-303)		A	A	
23-6		385-76205-2	Main Switch Key Covering Cap ﾒｲﾝｽｲｯﾁｷｰｶﾊﾞｰﾘﾝｸﾞｷｬｯﾌﾟ		2	2	for USA model
23-7		3T5-76022-0	Main Switch Cap (Waterproof) ﾒｲﾝｽｲｯﾁｷｬｯﾌﾟ (ｳｫｰﾀｰﾌﾟﾙｰﾌ)		1	1	
23-8		3T5-06830-0	Stop Switch Ass'y W/Curl ｽﾄｯﾌﾟｽｲｯﾁｱｯｼ(W/ｶｰﾙ)		1	1	
23-9		353-06821-0	* Stop Switch Lanyard Ass'y W/Curl * ｽﾄｯﾌﾟｽｲｯﾁﾗﾝﾔｰﾄﾞｱｯｼ (W/ｶｰﾙ)		1	1	
23-10		3T5-71040-0	Pilot Lamp Ass'y ﾊﾟｲﾛｯﾄﾗﾝﾌﾟｱｯｼ		1	1	
23-11		3T5-72570-0	PTT Switch Ass'y PTTｽｲｯﾁｱｯｼ		1	1	for "EFT" Type
23-12		353-72591-0	PTT Switch Cover PTTｽｲｯﾁｶﾊﾞｰ		1	1	for "EFT" Type
23-13		921503-5206	Screw ｽｸﾘｭ		2	2	for "EFT" Type
23-14		3T5-72618-0	Grommet PTT Switch Ass'y ｸﾞﾛﾒｯﾄ PTTｽｲｯﾁｱｯｼ		1	1	for "EFT" Type
23-15		3T5-72611-0	PTT Switch Cover (B) PTTｽｲｯﾁｶﾊﾞ (B)		1	1	for Manual /Gas Assist
23-16		921503-0512	Screw ｽｸﾘｭ		2	2	
23-17		940103-0500	Washer ﾜｯｼｬ		2	2	
23-18		3C8-76171-0	Overheat Buzzer ｵｰﾊﾞﾋｰﾄﾌﾞｻﾞｰ		1	1	
23-19		3T5-76174-0	Stay Buzzer ｽﾃｰ ﾌﾞｻﾞｰ		1	1	
23-20		910103-6612	Bolt ﾎﾞﾙﾄ		1	1	
23-21		3GF-76119-0	Cord Ass'y C L=1000 ｺｰﾄﾞｱｯｼ C L=1000		1	1	
23-22		3B7-76035-0	Cover ｶﾊﾞｰ		1	1	
23-23		3T5-72198-0	Warning Lamp Decal ﾜｰﾆﾝｸﾞﾗﾝﾌﾟﾃﾞｶｰﾙ		1	1	
23-24		3T5-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		1	1	
23-25		3A3-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		1	1	for Manual /Gas Assist
23-26		353-76037-0	Cable Terminal Plug ｹｰﾌﾞﾙﾀｰﾐﾅﾙ ﾌﾟﾗｸﾞ		1	1	for Manual /Gas Assist

BOTTOM COWL (MOTOR COVER LOWER)
Fig. 24 ボトムカウル（モータカバーロワ）

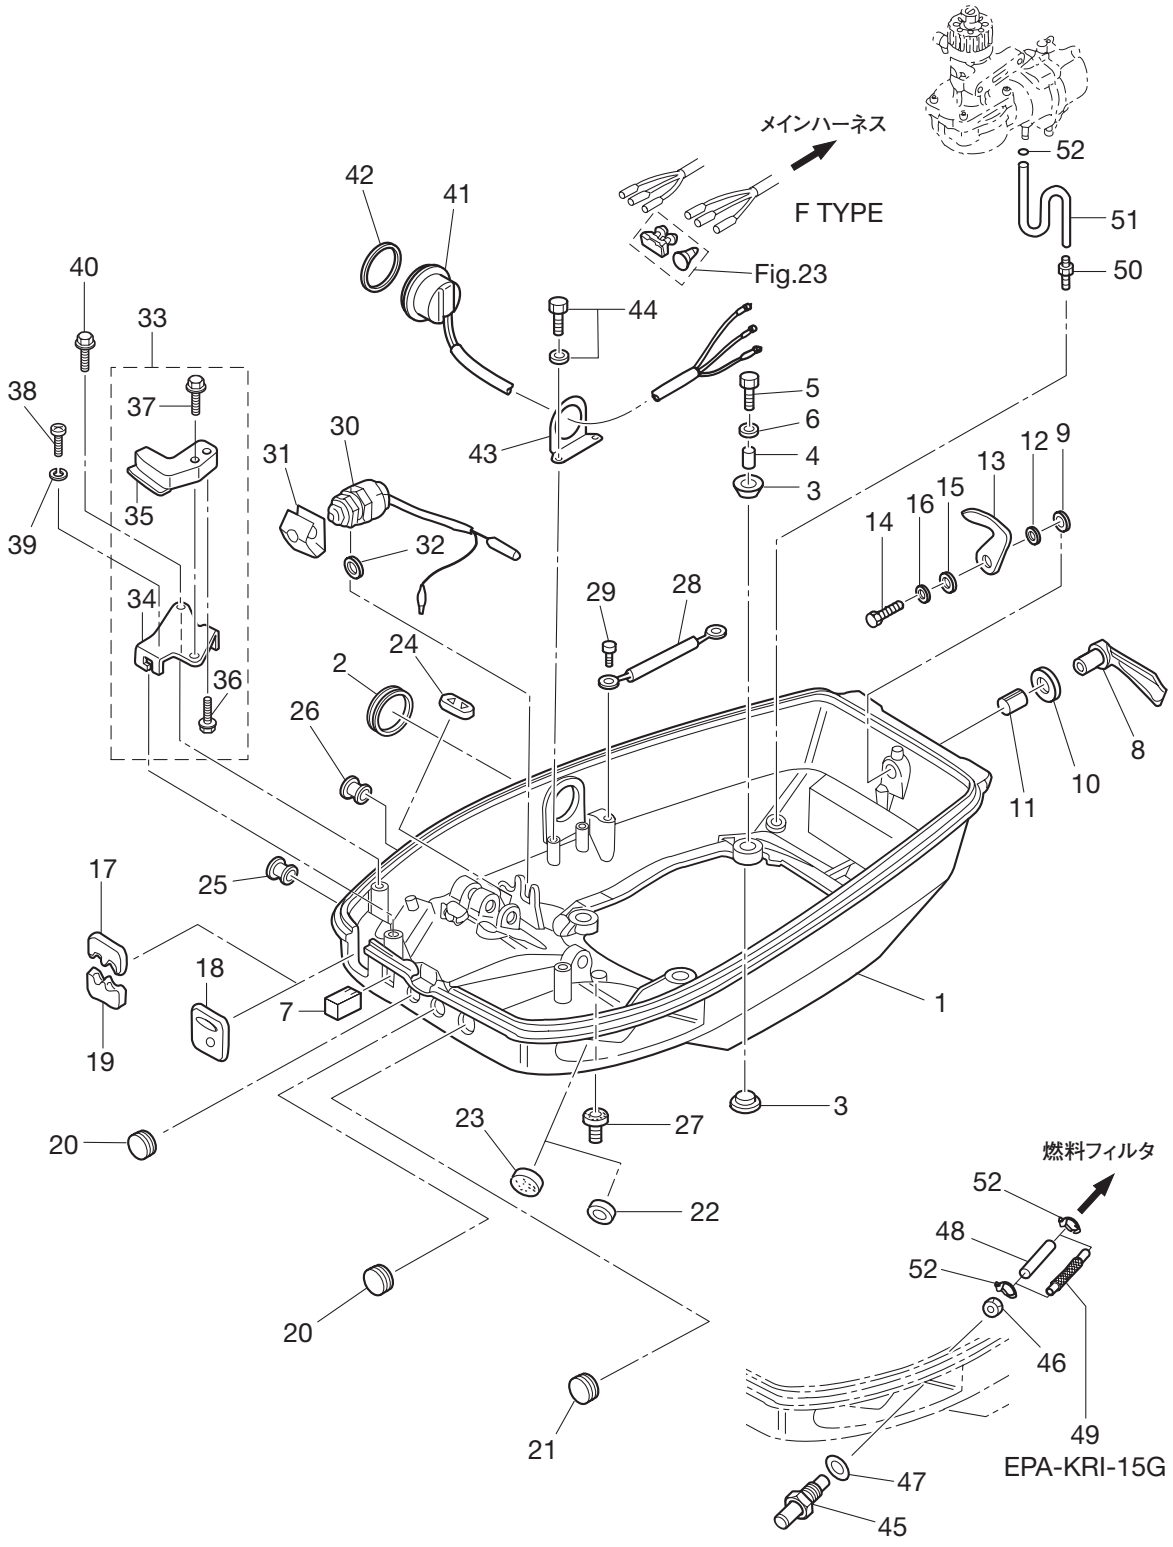


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
24-1		3C8Q67100-1	Bottom Cowl ﾎﾞﾄﾑｶｳﾙ	1	1	1	
24-2		3F3-72618-0	Grommet Power Trim・Tilt Switch ｸﾞﾛﾒｯﾄ ﾊﾟﾜｰﾄﾘﾑ･ﾁﾙﾄｽｲｯﾁ	1	1	1	
24-3		346-67113-0	Mount Moter Cover Lower ﾏｳﾝﾄ ﾓｰﾀｶﾊﾞｰﾛｱ	8	8	8	
24-4		346-67114-1	Spacer 6.2-9-15.7 ｽﾍﾟｰｻ 6.2-9-15.7	4	4	4	
24-5		9101E3-0630	Bolt ﾎﾞﾙﾄ	4	4	4	
24-6		346-67115-0	Washer 6.5-21-1 ﾜｯｼｬ 6.5-21-1	4	4	4	
24-7		3T5-67150-0	Plug Choke Knob ﾌﾟﾗｸﾞ ﾁｮｰｸﾉﾌﾞ	1	1	1	
24-8		3C8Q67141-0	Hook Lever ﾌｯｸﾚﾊﾞｰ	1	1	1	
24-9		3C8-67146-0	Washer 14-22-1 ﾜｯｼｬ 14-22-1	1	1	1	for “P” Type
24-10		338-67147-0	Seal Ring Hook Lever ｼｰﾙﾘﾝｸﾞ ﾌｯｸﾚﾊﾞｰ	1	1	1	
24-11		369-67105-0	Hook Lever Bushing ﾌﾞｯｼﾝｸﾞﾌｯｸﾚﾊﾞｰ	1	1	1	
24-12		941403-1400	Wave Washer ｳｪｰﾌﾞﾜｯｼｬ	1	1	1	for “P” Type
24-13		3C8-67142-1	Cover Hook ｶﾊﾞｰﾌｯｸ	1	1	1	
24-14		9101F4-0612	Bolt ﾎﾞﾙﾄ	1	1	1	
24-15		3C8-66308-0	Washer 6-16-1.5 ﾜｯｼｬ 6-16-1.5	1	1	1	for “P” Type
24-16		941303-0600	Spring Washer ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	1	1	1	for “P” Type
24-17		3C8-83732-0	Grommet Remote Control Cable ｸﾞﾛﾒｯﾄ ﾘﾓｺﾝｹｰﾌﾞﾙ	1	1	1	for “P” Type
24-18		3T5-67162-0	Grommet Battery Cord ｸﾞﾛﾒｯﾄ ﾊﾞｯﾃﾘｺｰﾄﾞ		1	1	for “F” Type
24-19		3C8-76116-1	Grommet Cord ｸﾞﾛﾒｯﾄ ｺｰﾄﾞ	1	1	1	for “P” Type
24-20		345-67117-0	Grommet 17-2.7 ｸﾞﾛﾒｯﾄ 17-2.7	2	2	2	
24-21		345-76092-0	Grommet ｸﾞﾛﾒｯﾄ	1	1	1	
24-22		338-67163-0	Grommet 18-2.5 ｸﾞﾛﾒｯﾄ 18-2.5	1	1	1	
24-23		345-67117-0	Grommet 17-2.7 ｸﾞﾛﾒｯﾄ 17-2.7		3	3	for Manual /Gas Assist
24-24	1	3C8-63621-0	Grommet Throttle Wire ｸﾞﾛﾒｯﾄ ｽﾛｯﾄﾙﾜｲﾔ		1	1	for “F” Type
24-24	2	3C8-63624-0	Grommet Throttle Hole ｸﾞﾛﾒｯﾄ ｽﾛｯﾄﾙﾎｰﾙ	1	1	1	for “P” Type
24-25		3B2-67187-0	Grommet Throttle Shaft ｸﾞﾛﾒｯﾄ ｽﾛｯﾄﾙｼｬﾌﾄ	1	1	1	for “P” Type
24-26		3B7-01046-0	Plug ﾌﾟﾗｸﾞ	1	1	1	
24-27		345-66226-0	Grommet 17-3 ｸﾞﾛﾒｯﾄ 17-3	1	1	1	
24-28		3N4-76142-1	Earth Wire(Ground) L=270 ｱｰｽﾜｲﾔ(ｸﾞﾗﾝﾄﾞ) L=270	1	1	1	
24-29		910103-6612	Bolt ﾎﾞﾙﾄ	1	1	1	

BOTTOM COWL (MOTOR COVER LOWER)
Fig. 24 ボトムカウル（モータカバーロワ）

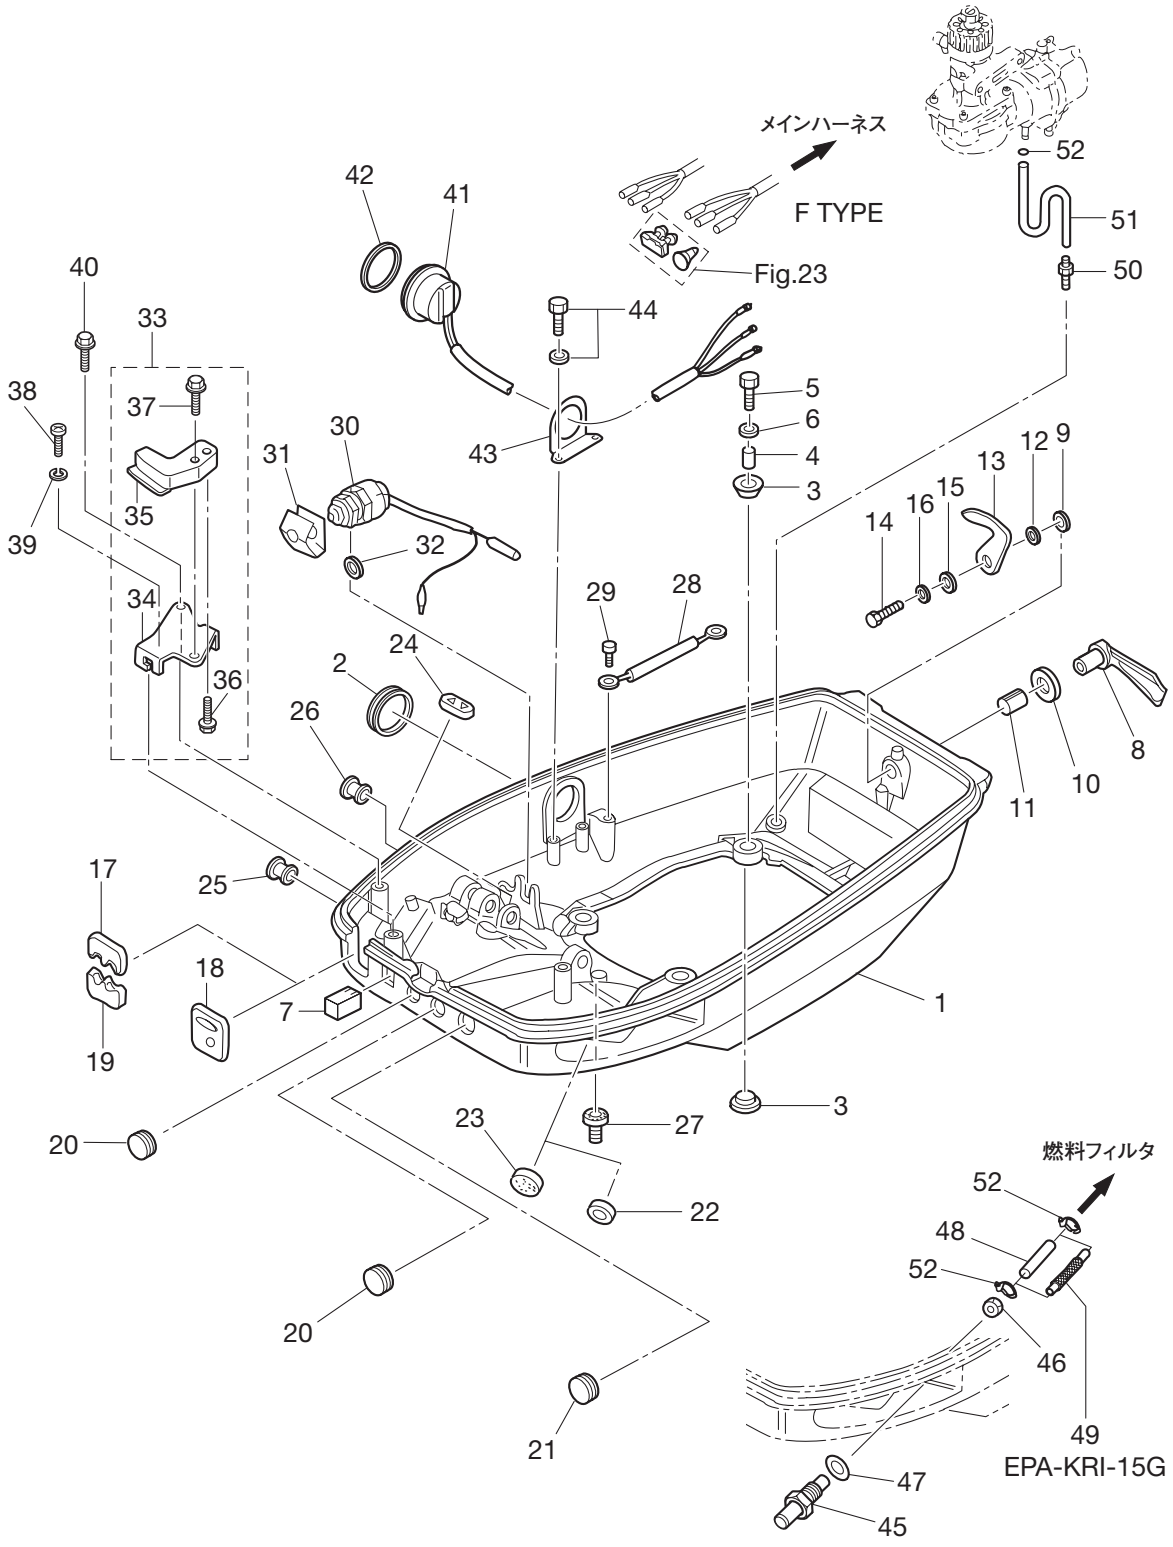


Ref. No. 見出番号	Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備　考
24-30	398-76080-0	Neutral Switch ﾆｭｰﾄﾗﾙｽｲｯﾁ		1	1	for "F" Type
24-31	398-76083-0	Neutral Switch Actuator ﾆｭｰﾄﾗﾙｽｲｯﾁｱｸﾁｴｰﾀ		1	1	for "F" Type
24-32	3B7-63731-0	Washer 12.5-24-1 ﾜｯｼｬ 12.5-24-1		1	1	for "F" Type
24-33	3C8Q83737-0	Cable Clip Bracket Ass'y ｹｰﾌﾞﾙｸﾘｯﾌﾟﾌﾞﾗｹｯﾄｱｯｼ	1	1	1	for "P" Type
24-34	3Z5-83738-0	*Clutch Cable Clip Bracket *ｸﾗｯﾁｹｰﾌﾞﾙｸﾘｯﾌﾟﾌﾞﾗｹｯﾄ	1	1	1	for "P" Type
24-35	3C8Q76118-0	*Clamp *ｸﾗﾝﾌﾟ	1	1	1	
24-36	910103-5612	*Bolt *ﾎﾞﾙﾄ	1	1	1	for "P" Type
24-37	910103-5625	Bolt ﾎﾞﾙﾄ	1	1	1	
24-38	3C8-83821-0	Screw 4-20 P0.5 ｽｸﾘｭ 4-20 P0.5	1	1	1	for "P" Type
24-39	941303-0400	Spring Washer ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	1	1	1	for "P" Type
24-40	910103-5616	Bolt ﾎﾞﾙﾄ 5-16	1	1	1	for "P" Type
24-41	3GF-72615-0	PTT Switch (B) Ass'y PTTｽｲｯﾁ(B)ｱｯｼ	1	1	1	for "P" Type
24-42	3F3-72616-1	Gasket PTT Switch ｶﾞｽｹｯﾄ PTTｽｲｯﾁ	1	1	1	for "P" Type
24-43	3GF-72617-0	PTT Switch Ass'y Bracket PTTｽｲｯﾁｱｯｼﾌﾞﾗｹｯﾄ	1	1	1	for "P" Type
24-44	910103-6614	Bolt ﾎﾞﾙﾄ	2	2	2	for "P" Type
24-45	3B2-70260-1	Fuel Connector (Engine Male) ﾌｭｴﾙｺﾈｸﾀ (ｴﾝｼﾞﾝ ﾒｰﾙ)	1	1	1	
24-46	332-70261-0	Nut M10P1.25 ﾅｯﾄ M10P1.25	1	1	1	
24-47	336-70112-0	Gasket 10.2-16-0.5 ｶﾞｽｹｯﾄ 10.2-16-0.5	1	1	1	
24-48	98AB-50-260	Hose ﾎｰｽ	1	1	1	98AB-501000
24-49	3GF-02165-0	Fuel Hose W/Protector ﾌｭｴﾙﾎｰｽ (W/ﾌﾟﾛﾃｸﾀ)		1	1	Low Permeation Parts (for USA model)
24-50	3T1-01138-0	Nipple Water ﾆｯﾌﾟﾙ ｳｫｰﾀ	1	1	1	
24-51	98AB-50-250	Hose ﾎｰｽ	1	1	1	98AB-501000
24-52	338-02215-0	Clip Fuel Pipe φ10 ｸﾘｯﾌﾟ ﾌｭｴﾙﾊﾟｲﾌﾟ φ10	3	3	3	

SHIFT
Fig. 25 シフト

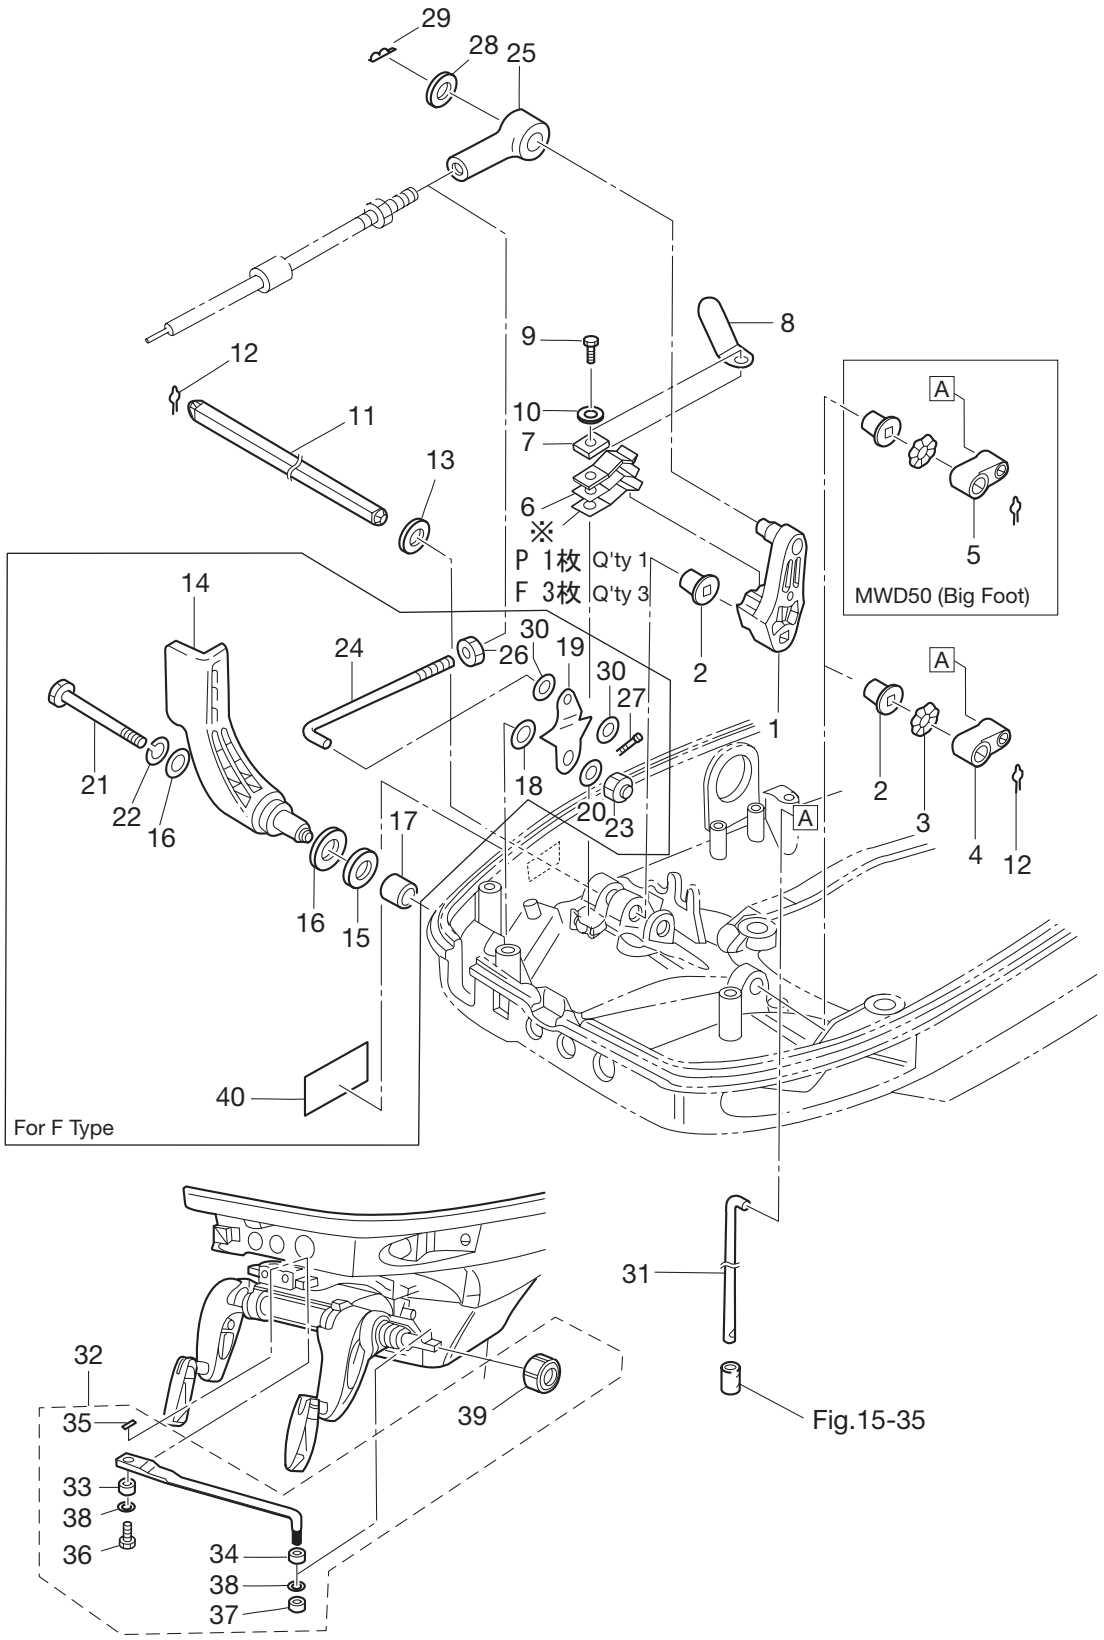


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
25-1		3C8-66122-1	Shift Arm ｼﾌﾄｱｰﾑ	1	1	1	
25-2		350-67101-0	Bushing Shift Lever Shaft ﾌﾞｯｼﾝｸﾞ ｼﾌﾄﾚﾊﾞｰｼｬﾌﾄ	2	2	2	
25-3		941403-1200	Wave Washer d=12 DWG ｳｪｰﾌﾞﾜｯｼｬ d=12 DWG	1	1	1	
25-4		3C8-66225-0	Shift Rod Lever ｼﾌﾄﾛｯﾄﾞﾚﾊﾞｰ	1	1	1	
25-5		3S7-66225-0	Shift Rod Lever ｼﾌﾄﾛｯﾄﾞﾚﾊﾞｰ			1	MW
25-6	1	3C8-66112-0	Shift Lever Stopper ｼﾌﾄﾚﾊﾞｰｽﾄｯﾊﾟ	1	1	1	for “P” Type
25-6	2	3C8-66112-0	Shift Lever Stopper ｼﾌﾄﾚﾊﾞｰｽﾄｯﾊﾟ		3	3	for “F” Type
25-7		3C8-66116-0	Shift Lever Stopper ｼﾌﾄﾚﾊﾞｰｽﾄｯﾊﾟ	1	1	1	for “P” Type
25-8		309-06972-0	Clamp 6.5-47.5P ｸﾗﾝﾌﾟ 6.5-47.5P		1	1	for “F” Type
25-9		9101F4-0614	Bolt ﾎﾞﾙﾄ	1	1	1	
25-10		940103-0600	Washer ﾜｯｼｬ	1	1	1	
25-11		3C8-66135-0	Shift Lever Shaft ｼﾌﾄﾚﾊﾞｰｼｬﾌﾄ	1	1	1	
25-12		951703-0800	Snap Retainer d=8 ｽﾅｯﾌﾟﾘﾃｰﾅ d＝8	2	2	2	
25-13		3AA-83719-0	Washer 8.5-18-1.6 ﾜｯｼｬ 8.5-18-1.6	1	1	1	for “P” Type
25-14		3T5-66110-0	Shift Lever ｼﾌﾄﾚﾊﾞｰ		1	1	for “F” Type
25-15		3T5-67147-0	Seal Ring 13.8-22-5 ｼｰﾙﾘﾝｸﾞ 13.8-22-5		1	1	for “F” Type
25-16		3C8-67146-0	Washer 14-22-1 ﾜｯｼｬ 14-22-1		2	2	for “F” Type
25-17		350-67105-0	Bushing 14-16.5-17.7 ﾌﾞｯｼﾝｸﾞ 14-16.5-17.7		1	1	for “F” Type
25-18		941403-1400	Wave Washer ｳｪｰﾌﾞﾜｯｼｬ		2	2	for “F” Type
25-19		3T5-66129-0	Shift Lever (Remote Control) ｼﾌﾄﾚﾊﾞｰ (ﾘﾓｰﾄｺﾝﾄﾛｰﾙ)		1	1	for “F” Type
25-20		3C8-66308-0	Washer 6-16-1.5 ﾜｯｼｬ 6-16-1.5		3	3	for “F” Type
25-21		910103-0670	Bolt ﾎﾞﾙﾄ		1	1	for “F” Type
25-22		941303-0600	Spring Washer ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ		2	2	for “F” Type
25-23		930403-0600	Nylon Nut ﾅｲﾛﾝﾅｯﾄ		1	1	for “F” Type
25-24		3T5-66134-0	Shift Lever Rod ｼﾌﾄﾚﾊﾞｰﾛｯﾄﾞ		1	1	for “F” Type
25-25	1	3B7-83715-1	Cable Joint ｹｰﾌﾞﾙｼﾞｮｲﾝﾄ		1	1	for “F” Type
25-25	2	3B7-83715-1	Cable Joint ｹｰﾌﾞﾙｼﾞｮｲﾝﾄ	1	1	1	for “P” Type
25-26		3B2-83865-0	Nut (No.10-32VNF) ﾅｯﾄ (No.10-32VNF)		1	1	for “F” Type
25-27		951503-0212	Split Pin ｽﾌﾟﾘｯﾄﾋﾟﾝ		1	1	for “F” Type
25-28	1	3AA-83719-0	Washer 8.5-18-1.6 ﾜｯｼｬ 8.5-18-1.6		2	2	for “F” Type

SHIFT
Fig. 25 シフト

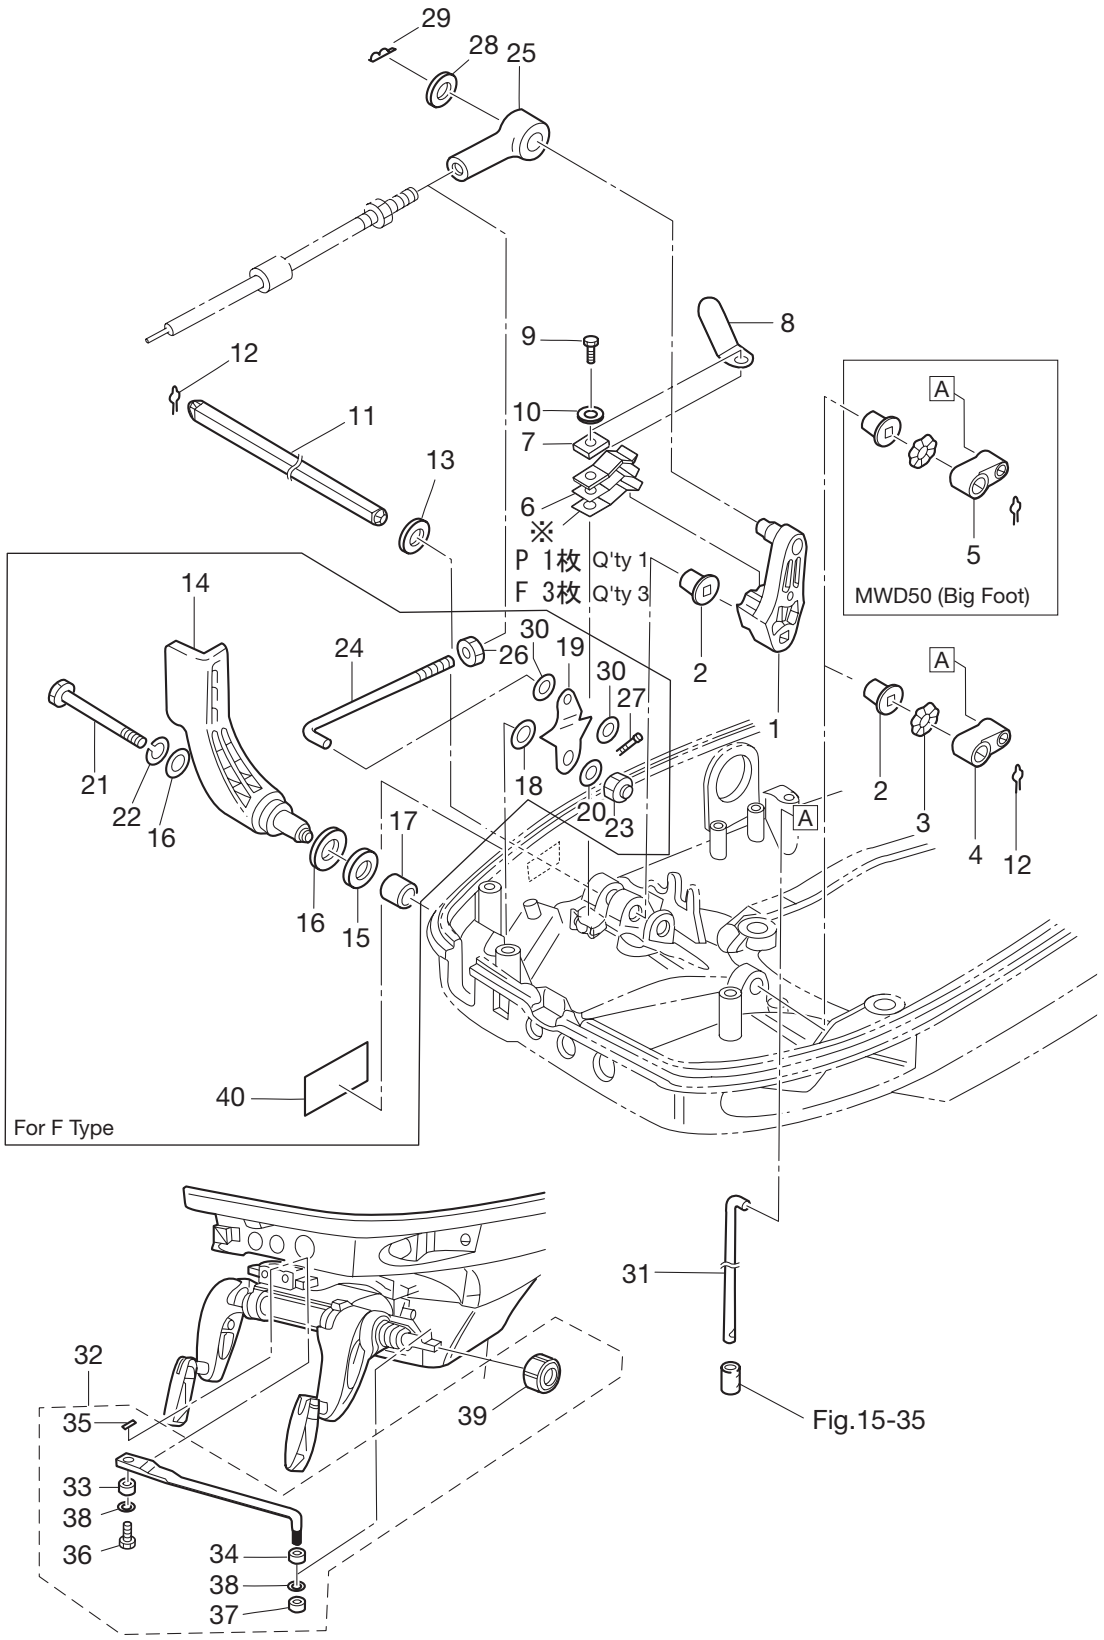


Ref. No. 見出番号		Part No. 部品番号	Description 部品名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備考
25-28	2	3AA-83719-0	Washer 8.5-18-1.6 ワッシャ 8.5-18-1.6	1	1	1	for “P” Type
25-29	1	951603-0800	Snap Pin d＝8 スナップピン d=8	1	1	1	for “F” Type
25-29	2	951603-0800	Snap Pin d＝8 スナップピン d=8	1	1	1	for “P” Type
25-30		940103-0500	Washer ワッシャ		2	2	for “F” Type
25-31		3C8-66211-0	Shift Rod シフトロッド	1	1	1	
25-32		3C8-84910-2	Drag Link Ass'y E ドラッグリンクアッシ E	1	1	1	for “P” Type
25-33		3C8-84914-1	* Collar 9.6-13-6.5 ＊カラー 9.6-13-6.5	1	1	1	for “P” Type
25-34		3C8-84916-0	* Collar 9.6-19-6 ＊カラー 9.6-19-6	1	1	1	for “P” Type
25-35		951503-0215	* Split Pin ＊スプリットピン	1	1	1	for “P” Type
25-36		3C8-84917-0	* Bolt 3/8-19 ＊ボルト 3/8-19	1	1	1	for “P” Type
25-37		353-84918-0	* Nylon Nut 3/8 ＊ナイロンナット 3/8	1	1	1	for “P” Type
25-38		353-84916-0	* Washer 9.6-18-2 ＊ワッシャ 9.6-18-2	2	2	2	for “P” Type
25-39		3F3-84908-0	* Seal Ring Drag Link ＊シールリングドラックリンク	1	1	1	for “P” Type
25-40		3T5-67578-0	Shift Decal シフトデカール		1	1	for “F” Type

TOP COWL
Fig. 26　トップカウル

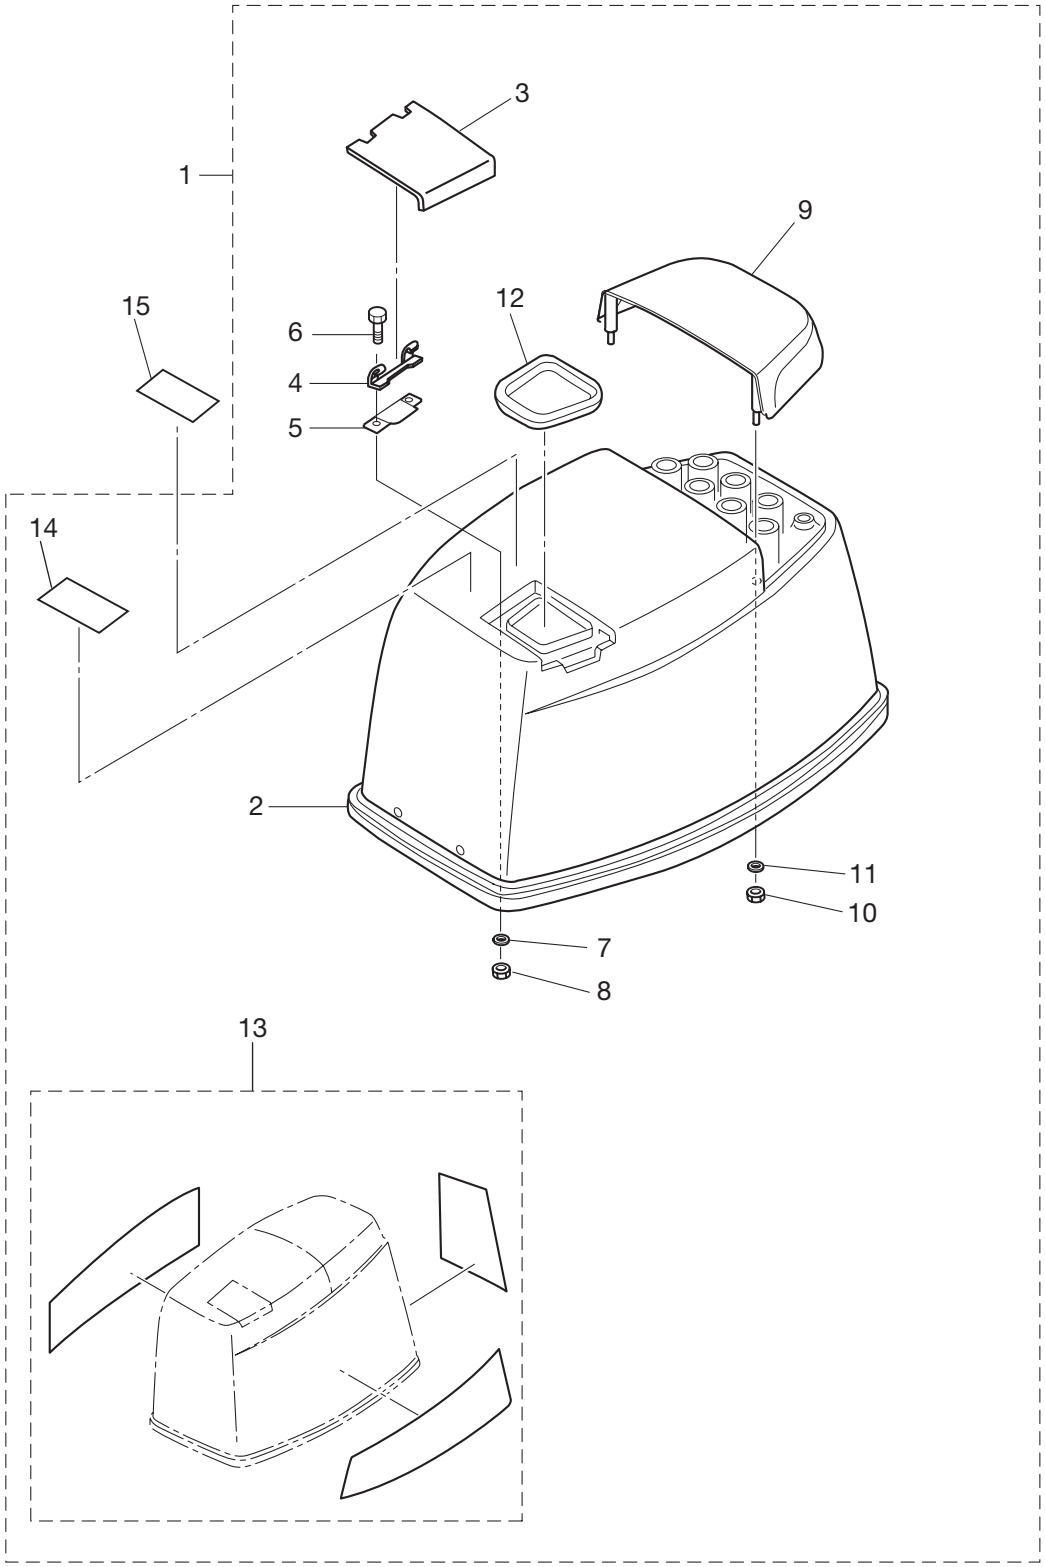

Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
26-1		3GFQ67645-1	Top Cowl Ass'y ﾄｯﾌﾟｶｳﾙｱｯｼ	1	1	1	
26-2		3C8-67501-0	* Top Cowl Seal *ﾄｯﾌﾟｶｳﾙｼｰﾙ	1	1	1	
26-3		3E3Q67210-1	* Filler Lid *ﾌｨﾗﾘｯﾄﾞ	1	1	1	
26-4		3B7-67211-0	* Filler Lid Hinge *ﾌｨﾗﾘｯﾄﾞﾋﾝｼﾞ	1	1	1	
26-5		3C8-67212-1	* Filler Lid Spring *ﾌｨﾗﾘｯﾄﾞ ｽﾌﾟﾘﾝｸﾞ	1	1	1	
26-6		910103-0614	* Bolt *ﾎﾞﾙﾄ	2	2	2	
26-7		941303-0600	* Spring Washer *ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
26-8		930103-0600	* Nut *ﾅｯﾄ	2	2	2	for Filler Lid
26-9		3E3Q67521-1	* Tilt Handle *ﾁﾙﾄﾊﾝﾄﾞﾙ	1	1	1	
26-10		930403-0600	* Nylon Nut 6P1.0 *ﾅｲﾛﾝﾅｯﾄ 6P1.0	4	4	4	for Tilt Handle
26-11		3C8-66308-0	* Washer 6-16-1.5 *ﾜｯｼｬ 6-16-1.5	4	4	4	
26-12		3E3-67213-0	* Seal Rubber Filler Lid *ｼｰﾙ ﾗﾊﾞｰ ﾌｨﾗﾘｯﾄﾞ	1	1	1	
26-13	1	3GF-87802-1	* Decal Set (MD50B2) *ﾃﾞｶｰﾙｾｯﾄ (MD50B2)			1	50ps
26-13	2	3GG-87802-1	* Decal Set (MD40B2) *ﾃﾞｶｰﾙｾｯﾄ (MD40B2)		1		40ps
26-13	3	3GM-87802-1	* Decal Set (MD30B2EU) *ﾃﾞｶｰﾙｾｯﾄ (MD30B2EU)	1			for EU 30ps
26-13	4	3GL-87802-1	* Decal Set (MD40B2 Italy) *ﾃﾞｶｰﾙｾｯﾄ (MD40B2ｲﾀﾘｱ)		1		for Italy 40ps
26-14		3C7-72180-3	* Caution Decal (A) *ｺｰｼｮﾝﾃﾞｶｰﾙ (A)	1	1	1	
26-15		3T1-72043-0	Oil Caution Decal ｵｲﾙｺｰｼｮﾝﾃﾞｶｰﾙ	1	1	1	


SEPARATE FUEL TANK
Fig. 27　セパレートフュエルタンク

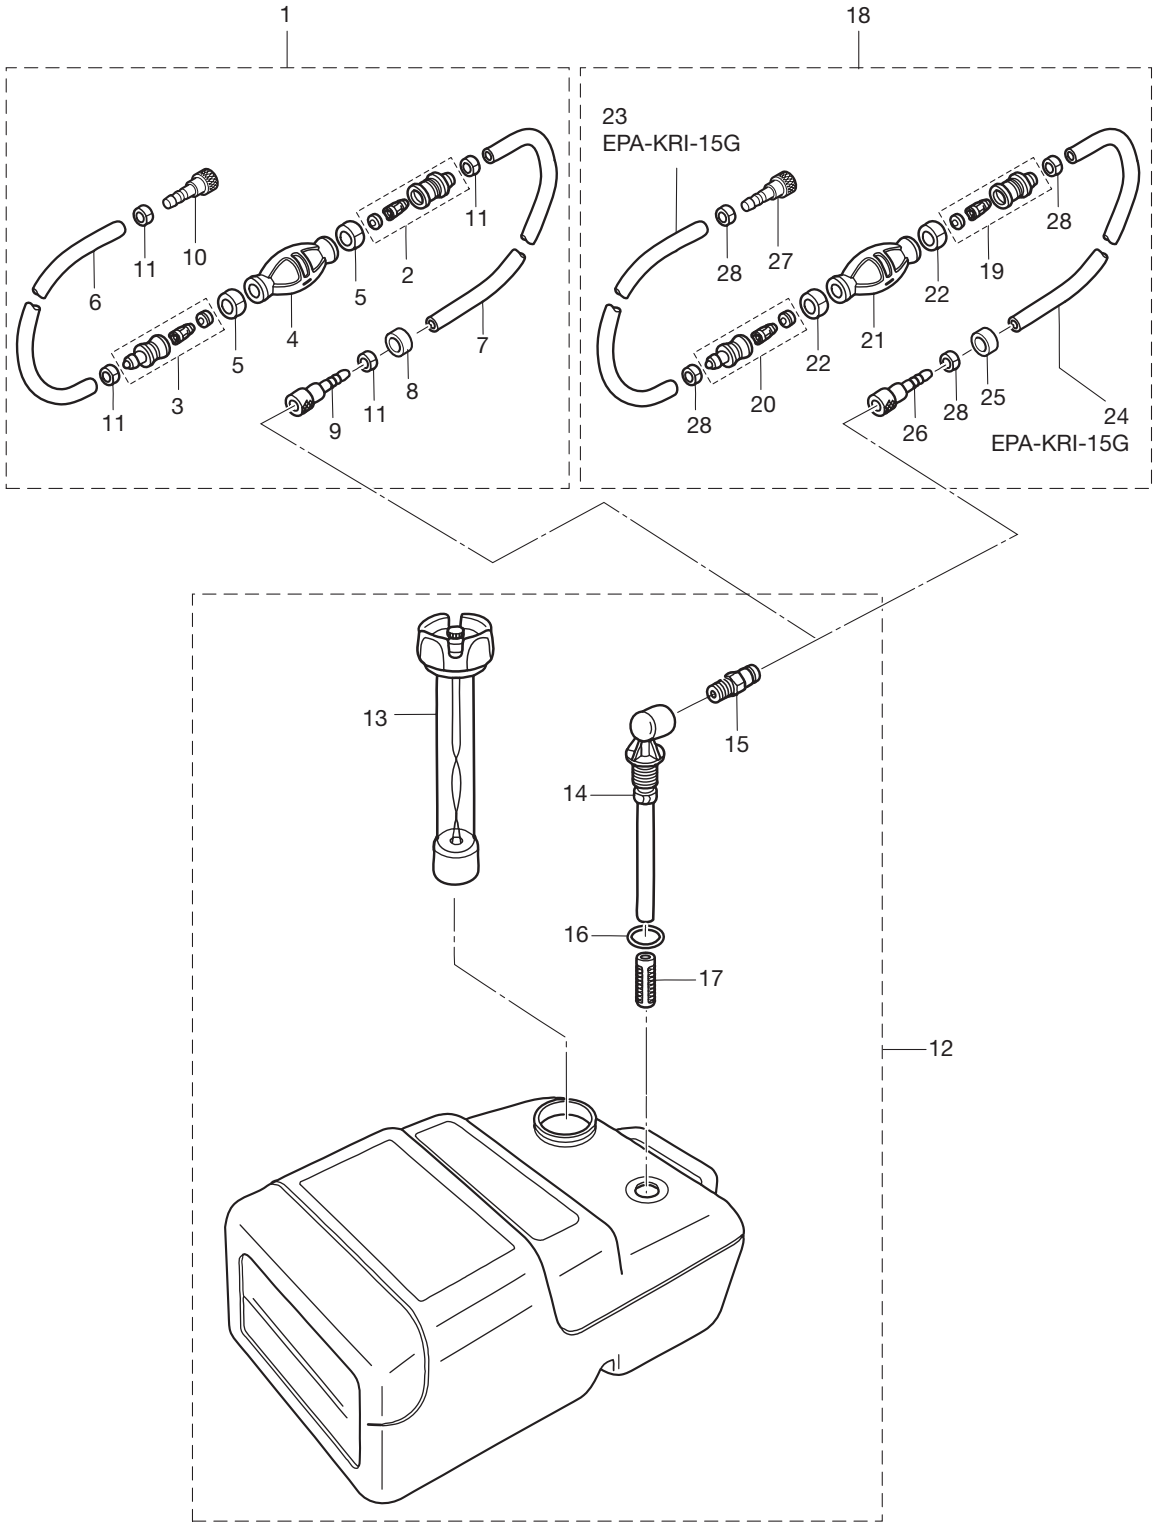

Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
27-1	3B7-70200-4	Primer Bulb Ass'y ﾌﾟﾗｲﾏﾊﾞﾙﾌﾞｱｯｼ	1	1	1	STD
27-2	3C7-70220-1	* Joint Ass'y (Inlet) * ｼﾞｮｲﾝﾄ ｱｯｼ (ｲﾝﾚｯﾄ)	1	1	1	
27-3	3C7-70224-1	* Joint Ass'y (Outlet) * ｼﾞｮｲﾝﾄ ｱｯｼ (ｱｳﾄﾚｯﾄ)	1	1	1	
27-4	3C7-70211-1	* Primer Bulb * ﾌﾟﾗｲﾏﾊﾞﾙﾌﾞ	1	1	1	STD
27-5	3C7-70217-0	* Clamp * ｸﾗﾝﾌﾟ	2	2	2	
27-6	98AB-70-700	* Hose * ﾎｰｽ	1	1	1	STD 98AB-701000
27-7	98AB-701600	* Hose * ﾎｰｽ	1	1	1	STD 98AB-701000×2
27-8	3B7-70280-1	* Fuel Connector Mark * ﾌｭｴﾙｺﾈｸﾀﾏｰｸ	1	1	1	
27-9	3GF-70281-0	* Fuel Connector * ﾌｭｴﾙｺﾈｸﾀ	1	1	1	
27-10	3GF-70250-0	* Fuel Connector * ﾌｭｴﾙｺﾈｸﾀ	1	1	1	
27-11	332-70201-0	* Clamp * ｸﾗﾝﾌﾟ	4	4	4	
27-12	3C7-70177-1	Fuel Tank Ass'y 25Liter (TOHATSU) ﾌｭｴﾙﾀﾝｸｱｯｼ 25L(ﾄｰﾊﾂ)	1	1	1	
27-13	3C7-70050-1	* Fuel Gauge Vent Cap Ass'y * ﾌｭｴﾙｹﾞｰｼﾞﾍﾞﾝﾄｷｬｯﾌﾟｱｯｼ	1	1	1	
27-14	3C7-70155-0	* Pick-Up Elbow Ass'y (25Liter) * ﾋﾟｯｸｱｯﾌﾟｴﾙﾎﾞｱｯｼ (25L)	1	1	1	
27-15	3E0-70270-0	* Quick-Connector (Male) * ｸｲｯｸｺﾈｸﾀ (ﾒｰﾙ)	1	1	1	
27-16	3C7-70199-0	* O-Ring * Oﾘﾝｸﾞ	1	1	1	
27-17	3C7-70113-0	* Filter * ﾌｨﾙﾀ	1	1	1	
27-18	3GF-70200-3	Primer Bulb Ass'y ﾌﾟﾗｲﾏﾊﾞﾙﾌﾞｱｯｼ		1	1	Low Permeation Parts (for USA model)
27-19	3C7-70220-1	* Joint Ass'y (Inlet) * ｼﾞｮｲﾝﾄ ｱｯｼ (ｲﾝﾚｯﾄ)		1	1	
27-20	3C7-70224-1	* Joint Ass'y (Outlet) * ｼﾞｮｲﾝﾄ ｱｯｼ (ｱｳﾄﾚｯﾄ)		1	1	
27-21	3GF-70211-0	* Primer Bulb * ﾌﾟﾗｲﾏﾊﾞﾙﾌﾞ		1	1	for USA model
27-22	3C7-70217-0	* Clamp * ｸﾗﾝﾌﾟ		2	2	
27-23	3GF-70241-0	* Hose * ﾎｰｽ		1	1	Low Permeation Parts (for USA model)
27-24	3GF-70240-0	* Hose * ﾎｰｽ		1	1	Low Permeation Parts (for USA model)
27-25	3B7-70280-1	* Fuel Connector Mark * ﾌｭｴﾙｺﾈｸﾀﾏｰｸ		1	1	
27-26	3GF-70281-0	* Fuel Connector * ﾌｭｴﾙｺﾈｸﾀ		1	1	
27-27	3GF-70250-0	* Fuel Connector * ﾌｭｴﾙｺﾈｸﾀ		1	1	
27-28	332-70201-0	* Clamp * ｸﾗﾝﾌﾟ		4	4	

COMPONENT PARTS OF REMOTE CONTROL BOX


Fig. 28　リモコンボックス構成部品

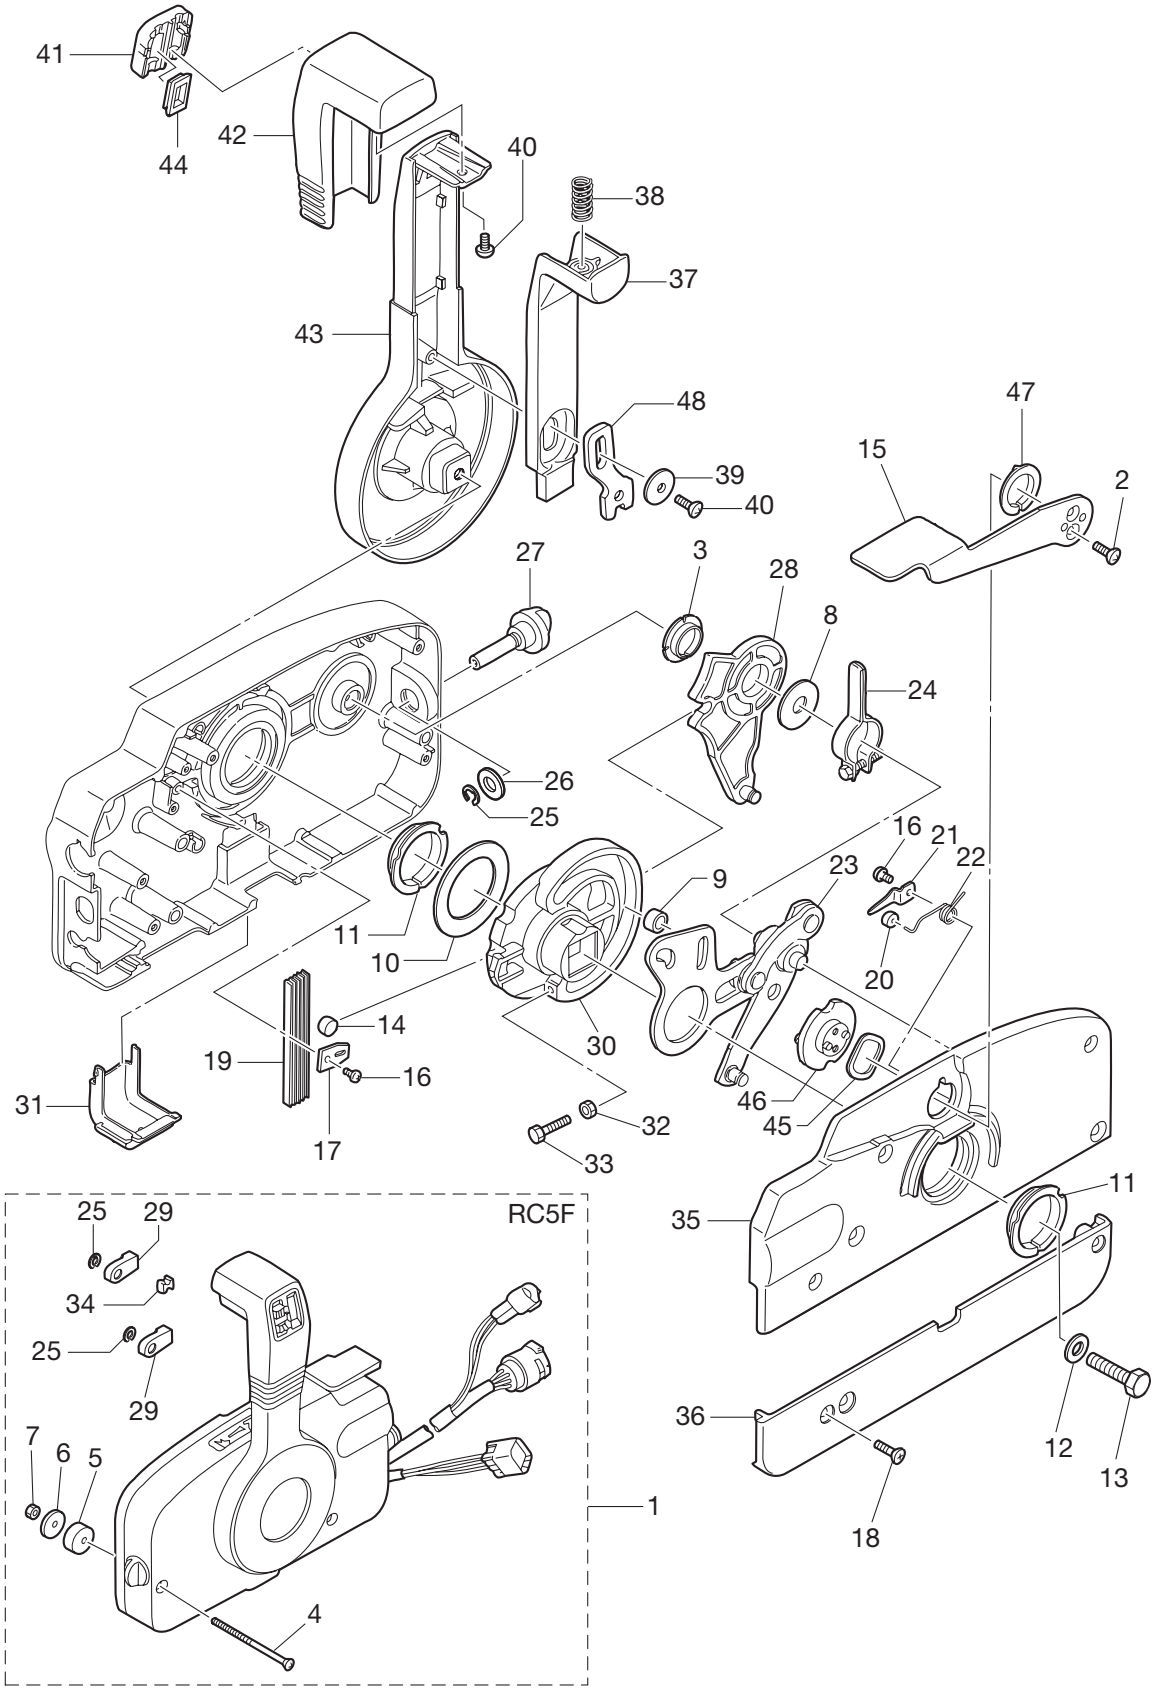

Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
28-1	3GFQ84500-0	Remote Control Head Ass'y (RC5F) ﾘﾓｰﾄｺﾝﾄﾛｰﾙﾍｯﾄﾞｱｯｼ (RC5F)	1	1	1	for "P" Type
28-2	921603-0512	* Screw * ｽｸﾘｭ	2	2	2	for "P" Type
28-3	3A3-84432-0	* Bushing B * ﾌﾞｯｼﾝｸﾞ B	1	1	1	for "P" Type
28-4	3A3-84375-0	* Screw * ｽｸﾘｭ	3	3	3	for "P" Type
28-5	3A3-84374-0	* Spacer * ｽﾍﾟｰｻ	3	3	3	for "P" Type
28-6	353-84371-0	* Washer Remote Control Box * ﾜｯｼｬ ﾘﾓｺﾝﾎﾞｯｸｽ	3	3	3	for "P" Type
28-7	930103-0600	* Nut * ﾅｯﾄ	3	3	3	for "P" Type
28-8	3A3-84383-0	* Washer * ﾜｯｼｬ	1	1	1	for "P" Type
28-9	3A3-84421-0	* Roller * ﾛｰﾗ	1	1	1	for "P" Type
28-10	3A3-84422-0	* Thrust Plate * ｽﾗｽﾄﾌﾟﾚｰﾄ	1	1	1	for "P" Type
28-11	3A3-84431-0	* Bushing A * ﾌﾞｯｼﾝｸﾞ A	2	2	2	for "P" Type
28-12	940103-0800	* Washer * ﾜｯｼｬ	1	1	1	for "P" Type
28-13	3A3-84442-0	* Bolt * ﾎﾞﾙﾄ	1	1	1	for "P" Type
28-14	353-84388-0	* Detent Roller * ﾃﾞﾃﾝﾄﾛｰﾗ	1	1	1	for "P" Type
28-15	3B7Q84312-0	* Free Throttle Lever * ﾌﾘｰｽﾛｯﾄﾙﾚﾊﾞｰ	1	1	1	for "P" Type
28-16	921503-0406	* Screw * ｽｸﾘｭ	2	2	2	for "P" Type
28-17	3A3-84423-0	* Detent Retainer * ﾃﾞﾃﾝﾄﾘﾃｰﾅ	1	1	1	for "P" Type
28-18	921603-0518	* Screw * ｽｸﾘｭ	5	5	5	for "P" Type
28-19	3A3-84307-0	* Detent Spring * ﾃﾞﾃﾝﾄｽﾌﾟﾘﾝｸﾞ	5	5	5	for "P" Type
28-20	3A3-84424-0	* Free Throttle Roller * ﾌﾘｰｽﾛｯﾄﾙﾛｰﾗ	1	1	1	for "P" Type
28-21	3A3-84426-0	* Roller Retainer * ﾛｰﾗﾘﾃｰﾅ	1	1	1	for "P" Type
28-22	3A3-84425-0	* Free Throttle Spring * ﾌﾘｰｽﾛｯﾄﾙｽﾌﾟﾘﾝｸﾞ	1	1	1	for "P" Type
28-23	3A3-84365-1	* Throttle Arm * ｽﾛｯﾄﾙｱｰﾑ	1	1	1	for "P" Type
28-24	3A3-84428-0	* Throttle Friction Arm * ｽﾛｯﾄﾙﾌﾘｸｼｮﾝｱｰﾑ	1	1	1	for "P" Type
28-25	945303-0600	* E-Ring d=6 * Eﾘﾝｸﾞ d=6	3	3	3	for "P" Type
28-26	353-84394-0	* Washer * ﾜｯｼｬ	1	1	1	for "P" Type
28-27	3A3-84427-0	* Adjust Screw Throttle Friction * ｱｼﾞｬｽﾄｽｸﾘｭ ｽﾛｯﾄﾙﾌﾘｸｼｮﾝ	1	1	1	for "P" Type
28-28	3A3-84381-0	* Shift Gear Ass'y * ｼﾌﾄｷﾞﾔｱｯｼ	1	1	1	for "P" Type
28-29	3A3-83314-2	* Cable Terminal * ｹｰﾌﾞﾙﾀｰﾐﾅﾙ	2	2	2	for "P" Type
28-30	3A3-84364-2	* Drive Gear * ﾄﾞﾗｲﾌﾞｷﾞﾔ	1	1	1	for "P" Type

COMPONENT PARTS OF REMOTE CONTROL BOX


Fig. 28　リモコンボックス構成部品

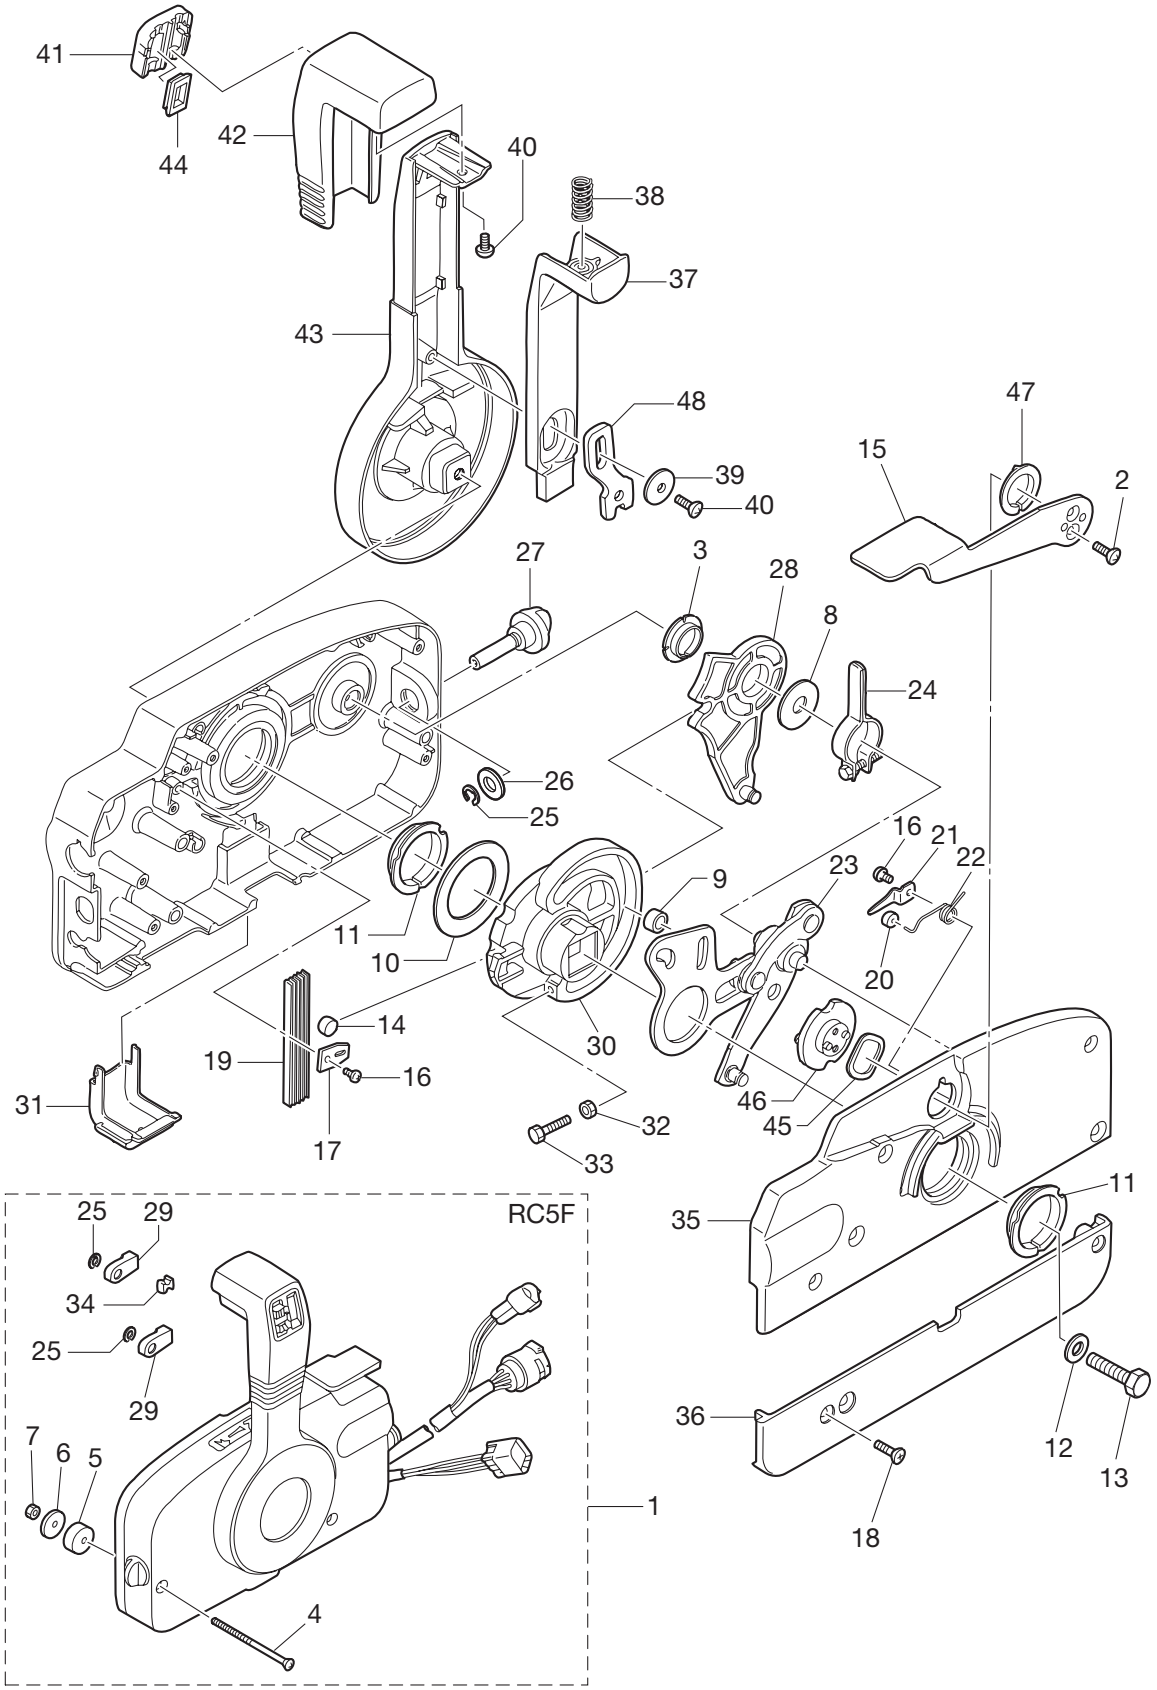

Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
28-31	3A3-84429-0	* Wire Cover * ﾜｲﾔｶﾊﾞｰ	1	1	1	for “P” Type
28-32	930103-0500	* Nut * ﾅｯﾄ	1	1	1	for “P” Type
28-33	910103-0525	* Bolt * ﾎﾞﾙﾄ	1	1	1	for “P” Type
28-34	3A3-84376-0	* Grommet * ｸﾞﾛﾒｯﾄ	1	1	1	for “P” Type
28-35	3B7Q84441-0	* Rear Housing * ﾘﾔﾊｳｼﾞﾝｸﾞ	1	1	1	for “P” Type
28-36	3B7Q84366-0	* Rear Panel * ﾘﾔﾊﾟﾈﾙ	1	1	1	for “P” Type
28-37	3A3-84401-0	* Neutral Lock Arm * ﾆｭｰﾄﾗﾙﾛｯｸｱｰﾑ	1	1	1	for “P” Type
28-38	3A3-84403-0	* Neutral Lock Spring * ﾆｭｰﾄﾗﾙﾛｯｸｽﾌﾟﾘﾝｸﾞ	1	1	1	for “P” Type
28-39	3A3-84407-0	* Washer Lock Arm * ﾜｯｼｬ ﾛｯｸｱｰﾑ	1	1	1	for “P” Type
28-40	921503-0510	* Screw * ｽｸﾘｭ	2	2	2	for “P” Type
28-41	3A3-84451-0	* Tilt Switch Cover * ﾁﾙﾄｽｲｯﾁｶﾊﾞｰ	1	1	1	for “P” Type
28-42	3A3-84404-0	* Grip * ｸﾞﾘｯﾌﾟ	1	1	1	for “P” Type
28-43	3B7Q84343-0	* Control Lever * ｺﾝﾄﾛｰﾙﾚﾊﾞｰ	1	1	1	for “P” Type
28-44	3A3-84452-0	* Tilt Switch Plug * ﾁﾙﾄｽｲｯﾁﾌﾟﾗｸﾞ	1	1	1	for “P” Type
28-45	3A3-84368-0	* Wave Washer * ｳｪｰﾌﾞﾜｯｼｬ	1	1	1	for “P” Type
28-46	3A3-84391-0	* Free Throttle Drum * ﾌﾘｰｽﾛｯﾄﾙﾄﾞﾗﾑ	1	1	1	for “P” Type
28-47	3A3-84435-0	* Bushing D * ﾌﾞｯｼﾝｸﾞ D	1	1	1	for “P” Type
28-48	3A3-84406-0	* Plate Lock Arm * ﾌﾟﾚｰﾄ ﾛｯｸｱｰﾑ	1	1	1	for “P” Type


COMPONENT PARTS OF REMOTE CONTROL BOX (ELECTRICAL PARTS)

Fig. 29　リモコンボックス構成部品（電装品関係）

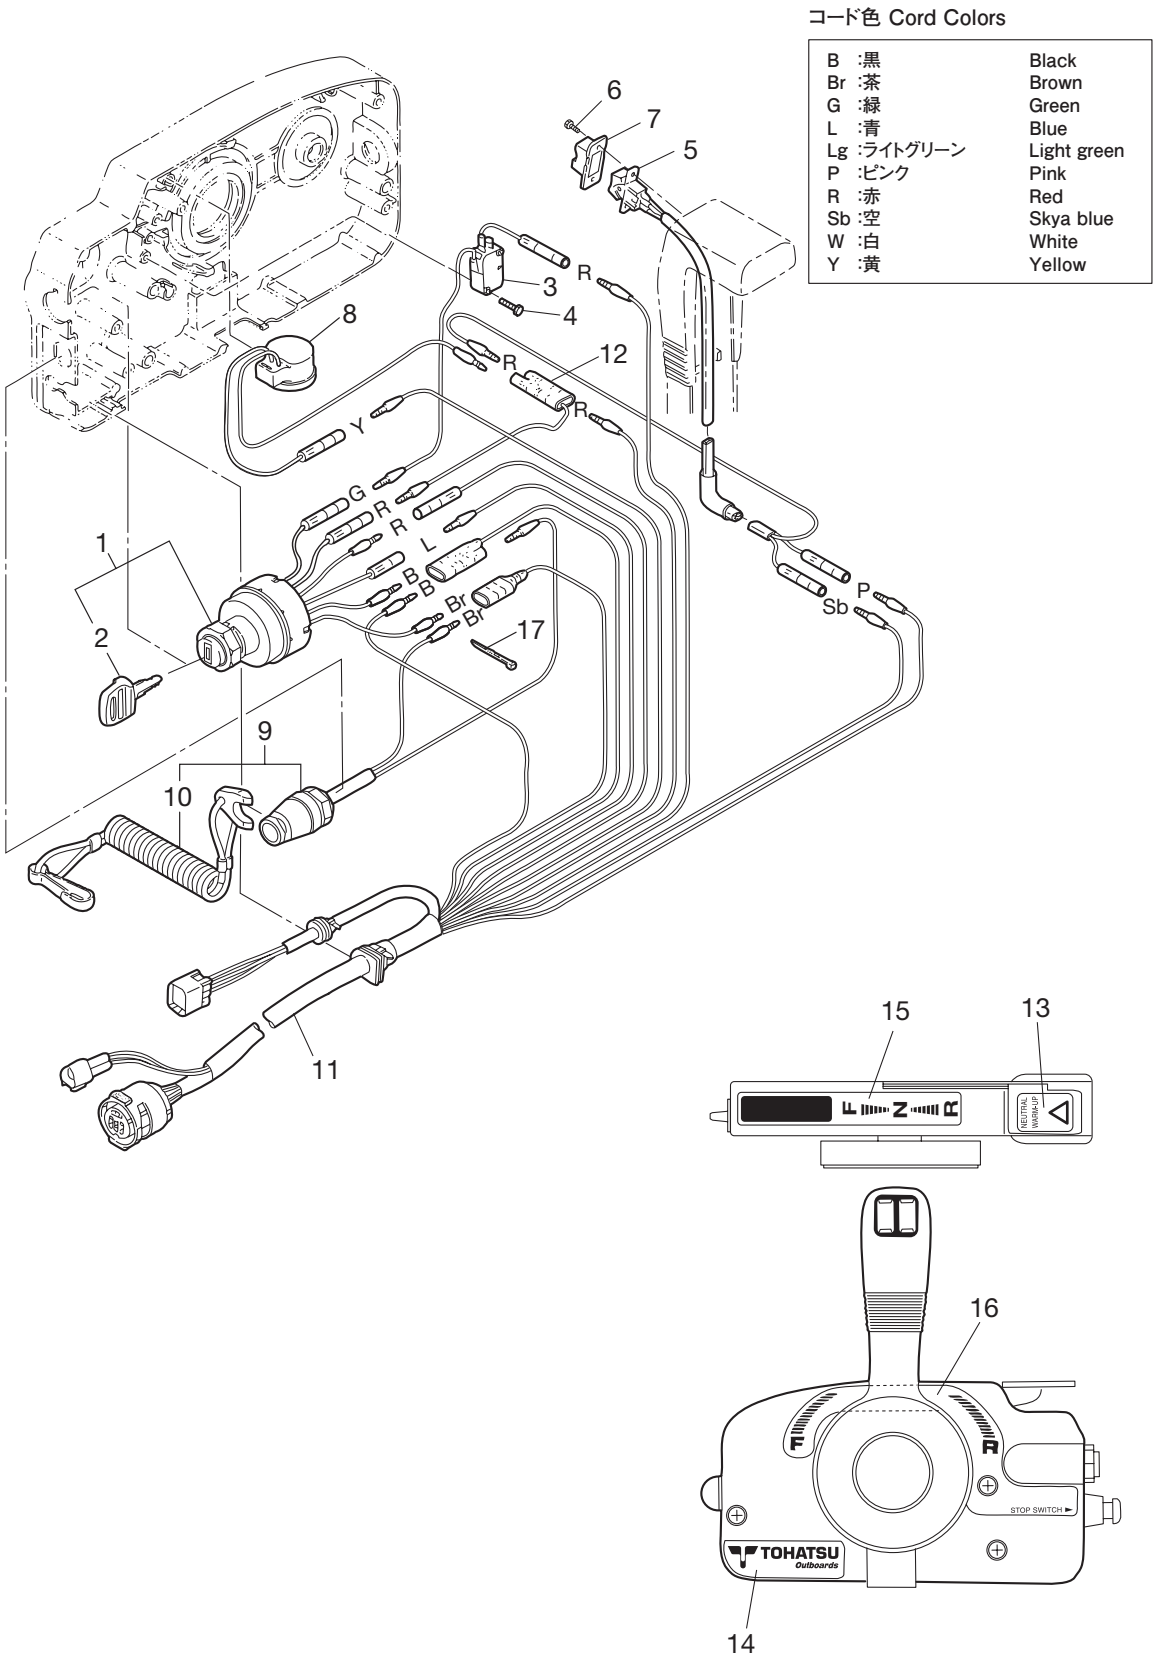


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
29-1		353-76020-3	Main Switch Ass'y ﾒｲﾝｽｲｯﾁｱｯｼ	1	1	1	for "P" Type
29-2	1	3F3-76217-0	* Main Switch Key (No.301) * ﾒｲﾝｽｲｯﾁｷｰ (No.301)	A	A	A	for "P" Type
29-2	2	3F3-76218-0	* Main Switch Key (No.302) * ﾒｲﾝｽｲｯﾁｷｰ (No.302)	A	A	A	for "P" Type
29-2	3	3F3-76219-0	* Main Switch Key (No.303) * ﾒｲﾝｽｲｯﾁｷｰ (No.303)	A	A	A	for "P" Type
29-3		3T5-76086-0	Neutral Switch (Remote Control) ﾆｭｰﾄﾗﾙｽｲｯﾁ (ﾘﾓｰﾄｺﾝﾄﾛｰﾙ)	1	1	1	for "P" Type
29-4		921503-0315	Screw ｽｸﾘｭ	2	2	2	for "P" Type
29-5		3A3-72560-0	PTT Switch Ass'y PTTｽｲｯﾁｱｯｼ	1	1	1	for "P" Type
29-6		921503-0206	Screw ｽｸﾘｭ	2	2	2	for "P" Type
29-7		3A3-72591-0	PTT Switch Cover PTTｽｲｯﾁｶﾊﾞｰ	1	1	1	for "P" Type
29-8		3C8-76171-0	Overheat Buzzer ｵｰﾊﾞｰﾋｰﾄﾌﾞｻﾞｰ	1	1	1	for "P" Type
29-9		3A3-06830-0	Stop Switch Ass'y (W/Curl) ｽﾄｯﾌﾟｽｲｯﾁｱｯｼ (W/ｶｰﾙ)	1	1	1	for "P" Type
29-10		353-06821-0	* Stop Switch Lanyard Ass'y (W/Curl) * ｽﾄｯﾌﾟｽｲｯﾁﾗﾝﾔｰﾄﾞｱｯｼ (W/ｶｰﾙ)	1	1	1	for "P" Type
29-11		3T5-76115-1	Cord Ass'y B L=6200 ｺｰﾄﾞｱｯｼ B L=6200	1	1	1	for "P" Type
29-12		353-72546-0	Assist Cord (Red) L=200 ｱｼｽﾄｺｰﾄﾞ (ﾚｯﾄﾞ) L=200	1	1	1	for "P" Type
29-13		3N5-84331-0	Decal (Lever) ﾃﾞｶｰﾙ (ﾚﾊﾞｰ)	1	1	1	for "P" Type
29-14		3N5-84333-0	Decal (TOHATSU) ﾃﾞｶｰﾙ (ﾄｰﾊﾂ)	1	1	1	for "P" Type
29-15		3N5-84336-0	Shift Position Decal ｼﾌﾄﾎﾟｼﾞｼｮﾝﾃﾞｶｰﾙ	1	1	1	for "P" Type
29-16		3N5-84465-0	Shift Position Side Decal ｼﾌﾄﾎﾟｼﾞｼｮﾝｻｲﾄﾞﾃﾞｶｰﾙ	1	1	1	for "P" Type
29-17		3A3-84398-0	Band Lead Wire ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ	2	2	2	for "P" Type

ACCESSORIES
Fig. 30　アクセサリ

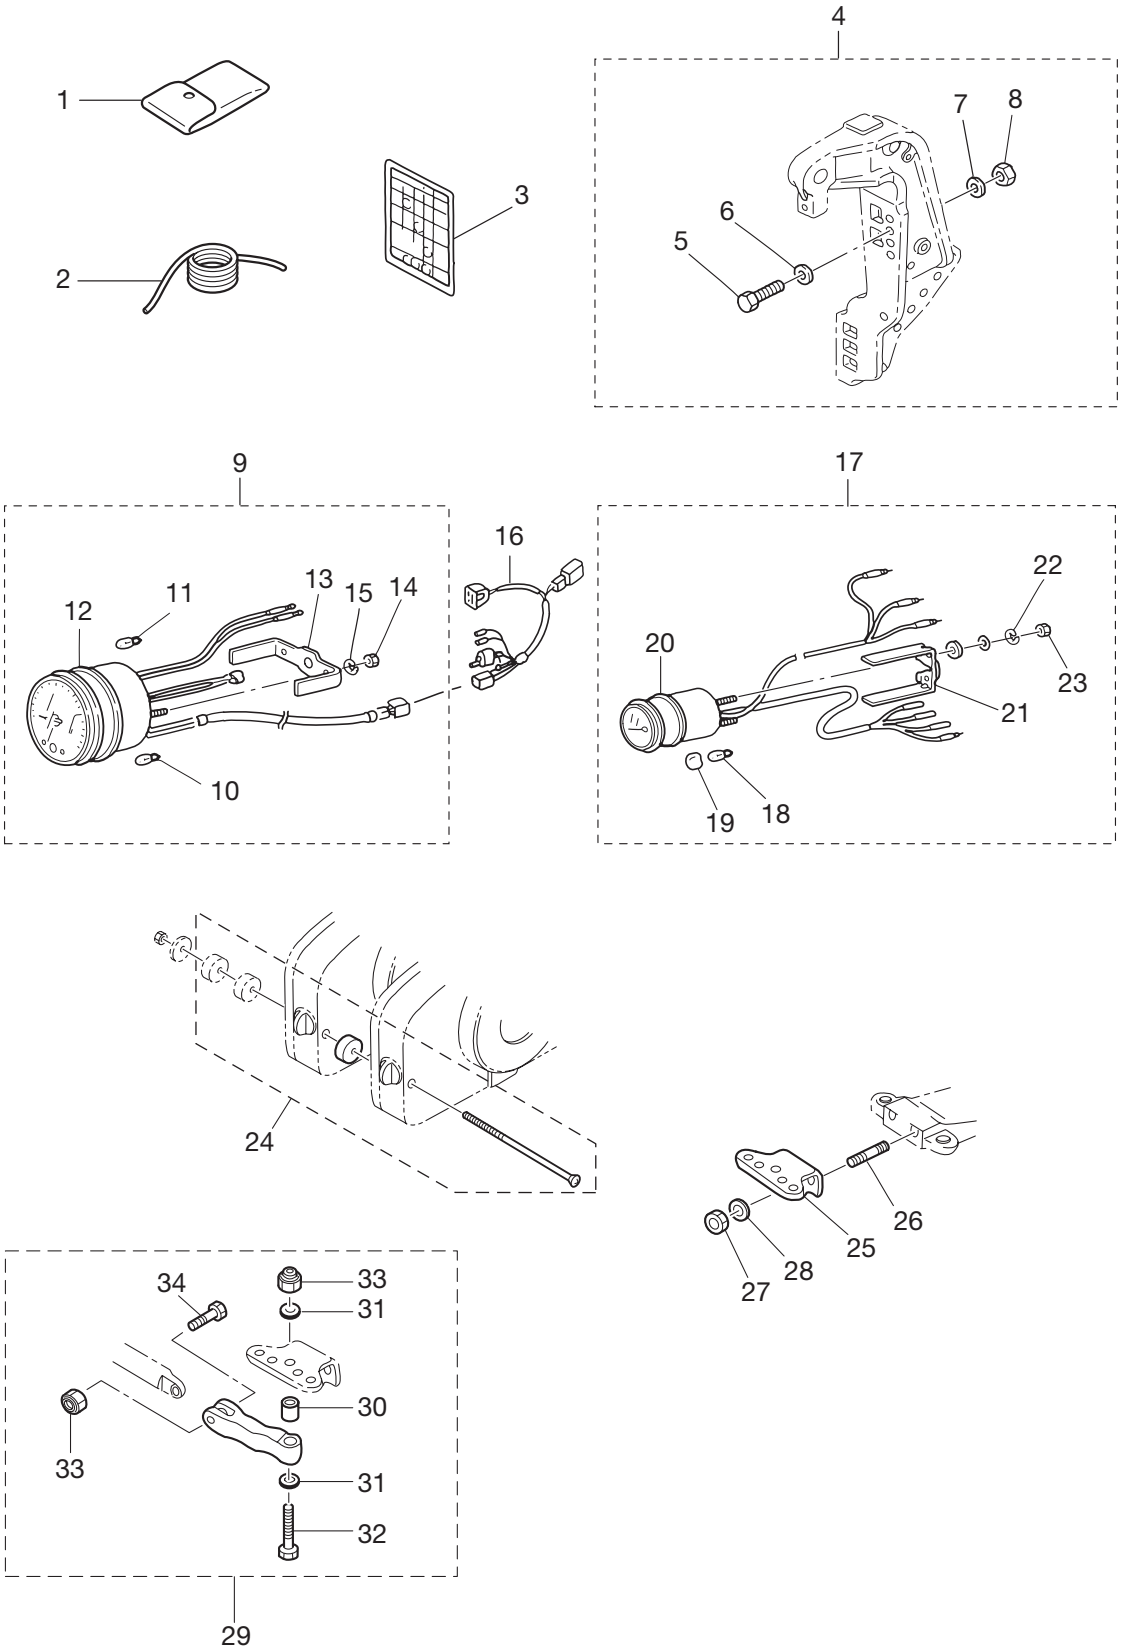


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
30-1	3H6-72100-0	Tool Kit ツールキット	1	1	1	
30-2	3B7-72201-0	Safety Rope 6-1600 セーフティロープ 6-1600	1	1	1	
30-3	3T5-72050-0	Buzzer Caution Decal ブザーコーションデカール	1	1	1	
30-4	3C8-72120-0	Rigging Bolt Set リギングボルトセット	1	1	1	
30-5	3C7-62133-2	* Bolt Stern Blacket L=105 * ボルト スターンブラケット L=105	4	4	4	
30-6	353-61334-0	* Washer 13-34-3 * ワッシャ 13-34-3	4	4	4	
30-7	940103-1200	* Washer * ワッシャ	4	4	4	
30-8	3C7-62139-1	* Nut P1.25 * ナット P1.25	4	4	4	
30-9	3Z5-72640-1	Tachometer Ass'y (W/Oil Lamp) タコメータアッシ (W/オイルランプ)	1	1	1	for "P" Type
30-10	3B7-72658-0	* Oil Bulb 12V-1.7W * オイルバルブ 12V-1.7W	3	3	3	for "P" Type
30-11	3B7-72659-0	* Meter Bulb 12V-1.8W * メータバルブ 12V-1.8W	1	1	1	for "P" Type
30-12	3B7-72656-0	* Meter Damper * メータダンパ	1	1	1	for "P" Type
30-13	3B7-72661-0	* Fitting Plate * フィッティングプレート	1	1	1	for "P" Type
30-14	930203-0500	* Nut * ナット	2	2	2	for "P" Type
30-15	941303-0500	* Spring Washer * スプリングワッシャ	2	2	2	for "P" Type
30-16	3T5-72537-1	Meter Lead Wire L=8000 メーターリードワイヤ L=8000	1	1	1	for "P" Type
30-17	3T1-72571-0	Trim Meter Ass'y トリムメーターアッシ	1	1	1	for "P" Type
30-18	3T1-72659-0	* Meter Bulb * メータバルブ	1	1	1	for "P" Type
30-19	3T1-72653-0	* Meter Bulb Cap * メータバルブキャップ	1	1	1	for "P" Type
30-20	3B7-72655-0	* Meter Damper * メータダンパ	1	1	1	for "P" Type
30-21	3T1-72665-0	* Fitting Plate * フィッテイングプレート	1	1	1	for "P" Type
30-22	941303-0400	* Spring Washer * スプリングワッシャ	2	2	2	for "P" Type
30-23	930203-0400	* Nut * ナット	2	2	2	for "P" Type
30-24	3A3-81301-0	Twin Remote Control Kit ツインリモートコントロールボックスキット	1	1	1	for "P" Type
30-25	3C8-84830-0	Steering Hook ステアリングフック	1	1	1	for "P" Type
30-26	915203-0816	Stud Bolt スタッドボルト	2	2	2	for "P" Type
30-27	930403-0800	Nylon Nut ナイロンナット	2	2	2	for "P" Type
30-28	940103-0600	Washer ワッシャ	2	2	2	for "P" Type
30-29	3C8Q84960-0	Clevis Ass'y クレビス アッシ	1	1	1	for "P" Type
30-30	3C8-84962-0	* Collar 9.6-13-20.5 * カラー 9.6-13-20.5	1	1	1	for "P" Type

ACCESSORIES
Fig. 30　アクセサリ

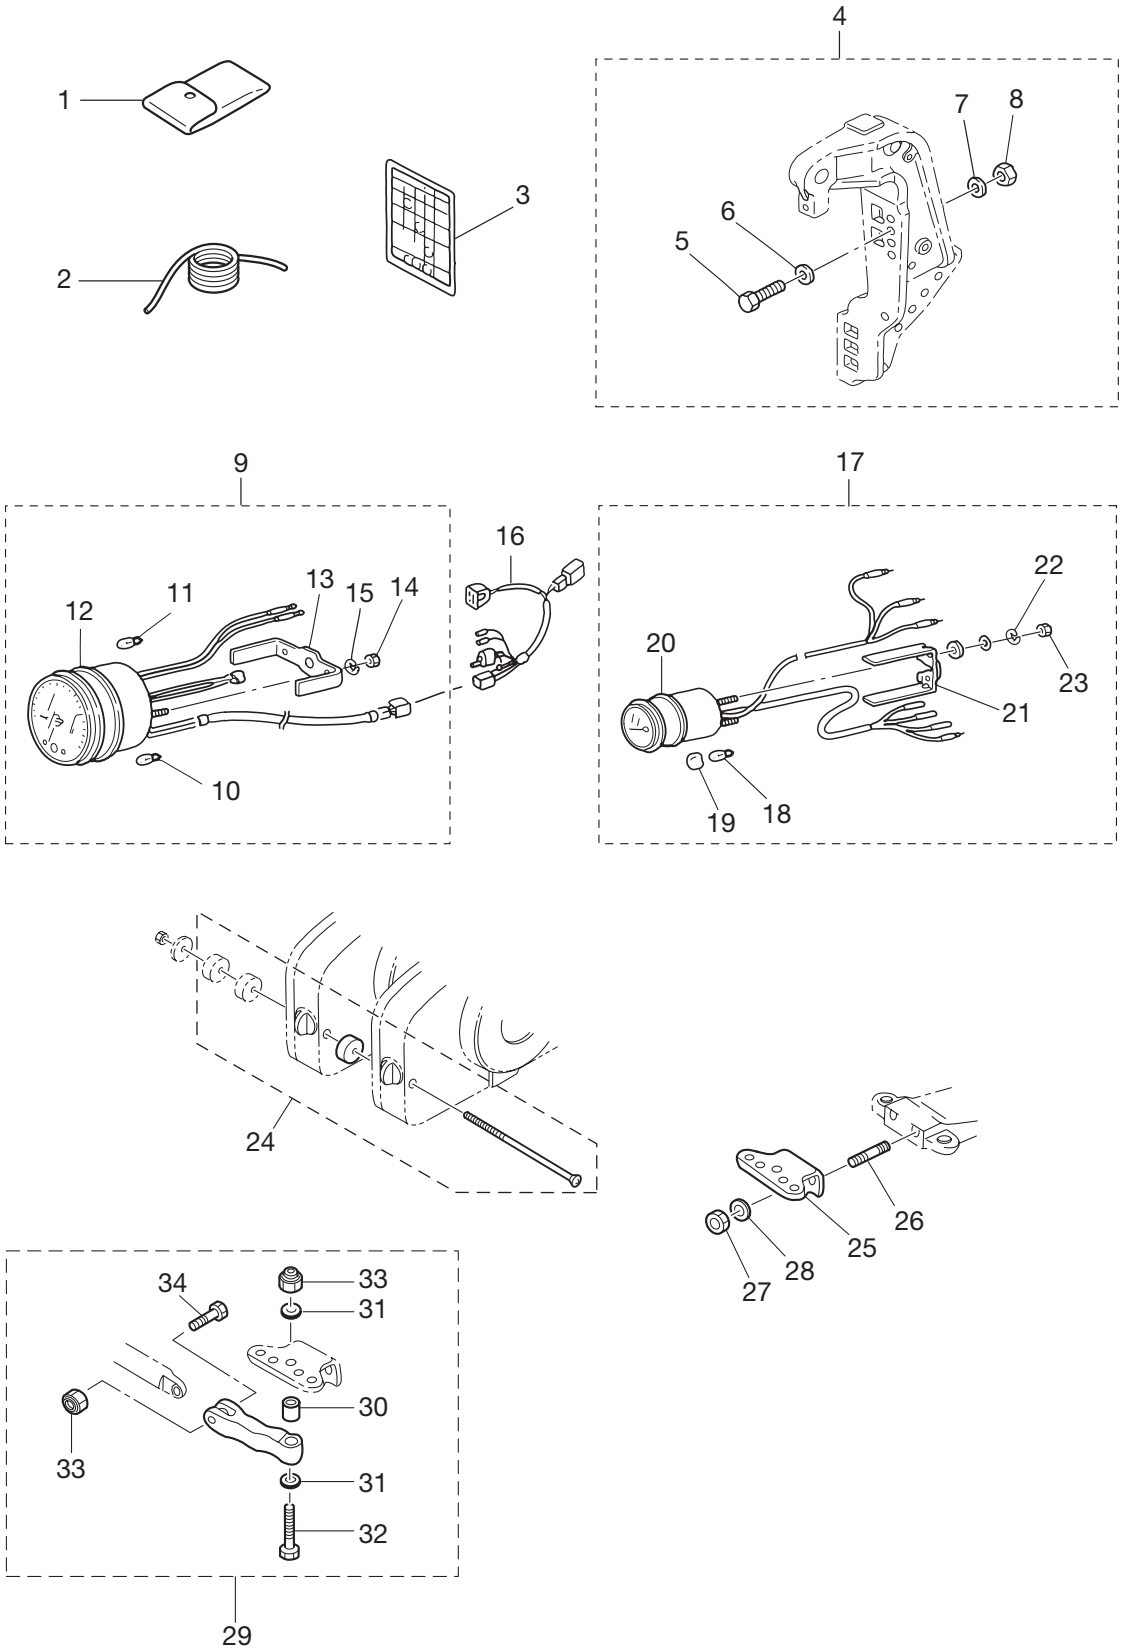


Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
30-31	353-84916-0	* Washer 9.6-18-2 * ワッシャ 9.6-18-2	2	2	2	for "P" Type
30-32	3C8-84963-0	* Bolt 3/8-43 * ボルト 3/8-43	1	1	1	for "P" Type
30-33	353-84918-0	* Nylon Nut 3/8 * ナイロンナット 3/8	2	2	2	for "P" Type
30-34	3C8-84964-0	* Bolt 3/8-35 * ボルト 3/8-35	1	1	1	for "P" Type

OPTIONAL PARTS (1)
Fig. 31　オプショナルパーツ（1）

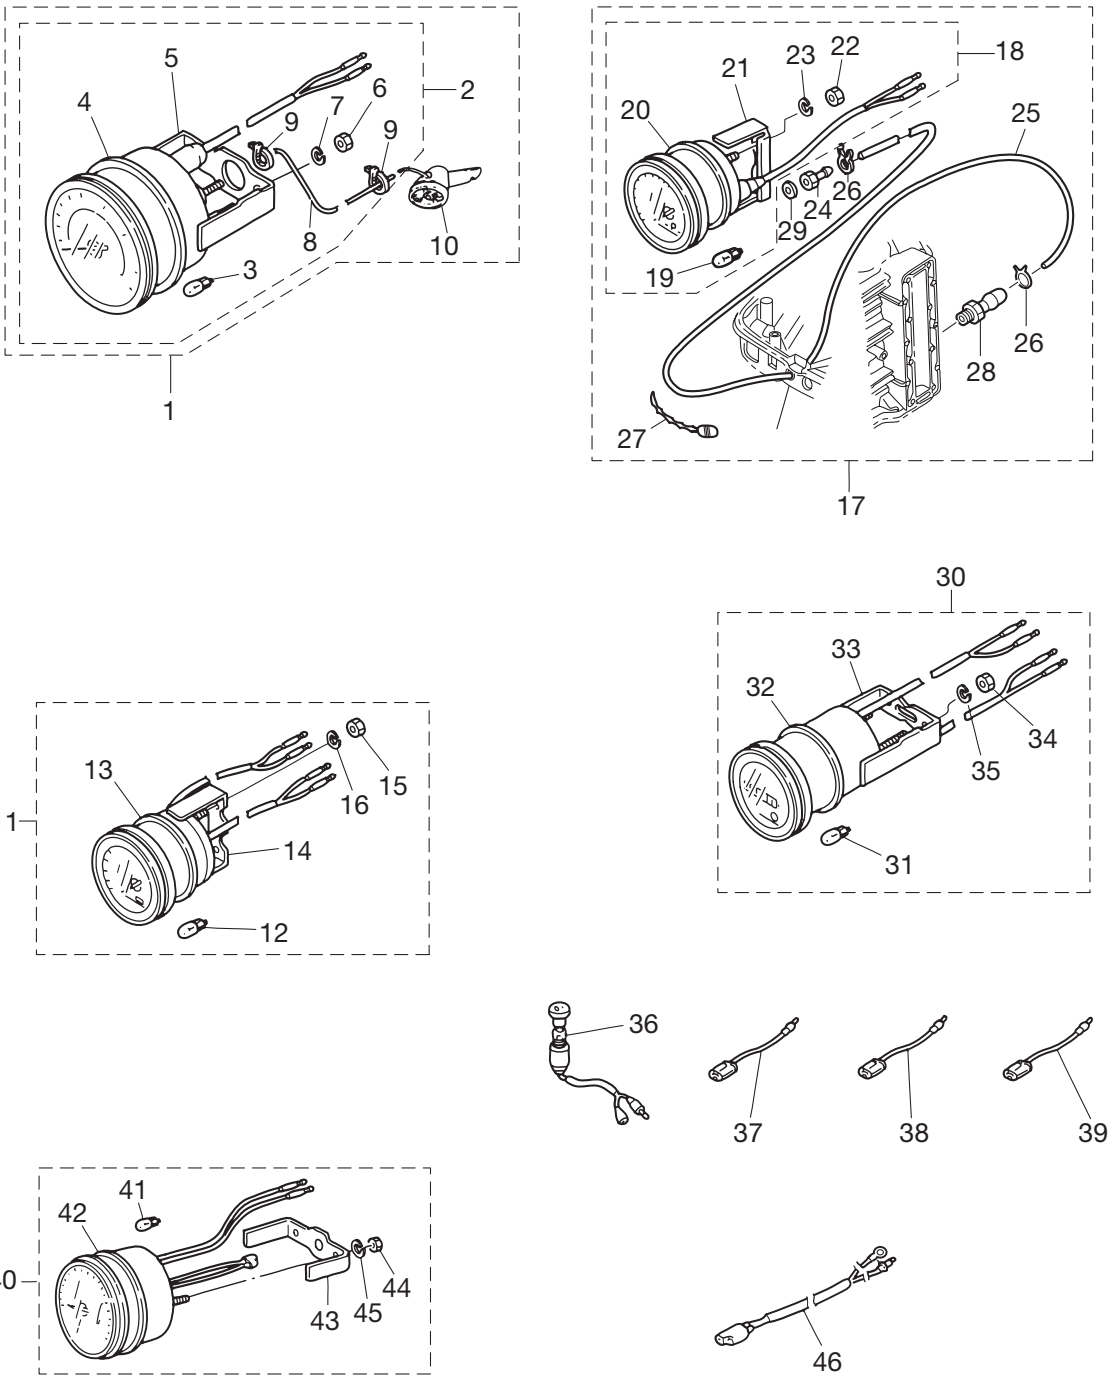


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
31-1	1	3E0-72522-0	Speedmeter Kit (50MPH) ｽﾋﾟｰﾄﾞﾒｰﾀｷｯﾄ (50MPH)	1	1	1	50MPH
31-1	2	3E0-72644-0	Speedmeter Kit (75MPH) ｽﾋﾟｰﾄﾞﾒｰﾀｷｯﾄ (75MPH)	1	1	1	75MPH
31-2	1	3E0-72648-0	* Speedmeter Ass'y (50MPH) * ｽﾋﾟｰﾄﾞﾒｰﾀｱｯｼ (50MPH)	1	1	1	50MPH
31-2	2	3E0-72649-0	* Speedmeter Ass'y (75MPH) * ｽﾋﾟｰﾄﾞﾒｰﾀｱｯｼ (75MPH)	1	1	1	75MPH
31-3	1	3B7-72659-0	** Meter Bulb 12V-1.8W ** ﾒｰﾀﾊﾞﾙﾌﾞ 12V-1.8W	1	1	1	50MPH
31-3	2	3B7-72659-0	** Meter Bulb 12V-1.8W ** ﾒｰﾀﾊﾞﾙﾌﾞ 12V-1.8W	1	1	1	75MPH
31-4	1	3B7-72656-0	** Meter Damper ** ﾒｰﾀﾀﾞﾝﾊﾟ	1	1	1	50MPH
31-4	2	3B7-72656-0	** Meter Damper ** ﾒｰﾀﾀﾞﾝﾊﾟ	1	1	1	75MPH
31-5	1	3B7-72661-0	** Fitting Plate ** ﾌｨｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ	1	1	1	50MPH
31-5	2	3B7-72661-0	** Fitting Plate ** ﾌｨｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ	1	1	1	75MPH
31-6	1	930203-0500	** Nut ** ﾅｯﾄ	2	2	2	50MPH
31-6	2	930203-0500	** Nut ** ﾅｯﾄ	2	2	2	75MPH
31-7	1	941303-0500	** Spring Washer ** ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	50MPH
31-7	2	941303-0500	** Spring Washer ** ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	75MPH
31-8	1	3B7-72650-0	** Speedmeter Tube L=6000 ** ｽﾋﾟｰﾄﾞﾒｰﾀﾁｭｰﾌﾞ L=6000	1	1	1	50MPH
31-8	2	3B7-72650-0	** Speedmeter Tube L=6000 ** ｽﾋﾟｰﾄﾞﾒｰﾀﾁｭｰﾌﾞ L=6000	1	1	1	75MPH
31-9	1	3B7-72651-0	** Speedmeter Band ** ｽﾋﾟｰﾄﾞﾒｰﾀﾊﾞﾝﾄﾞ	2	2	2	50MPH
31-9	2	3B7-72651-0	** Speedmeter Band ** ｽﾋﾟｰﾄﾞﾒｰﾀﾊﾞﾝﾄﾞ	2	2	2	75MPH
31-10	1	3B7-72643-0	* Speedmeter Sensor * ｽﾋﾟｰﾄﾞﾒｰﾀｾﾝｻ	1	1	1	50MPH
31-10	2	3B7-72643-0	* Speedmeter Sensor * ｽﾋﾟｰﾄﾞﾒｰﾀｾﾝｻ	1	1	1	75MPH
31-11		3E0-72529-0	Voltmeter Ass'y ﾎﾞﾙﾄﾒｰﾀｱｯｼ	1	1	1	
31-12		3B7-72657-0	* Meter Bulb 12V-1.7W * ﾒｰﾀﾊﾞﾙﾌﾞ 12V-1.7W	1	1	1	
31-13		3B7-72655-0	* Meter Damper * ﾒｰﾀﾀﾞﾝﾊﾟ	1	1	1	
31-14		3B7-72662-0	* Fitting Plate * ﾌｨｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ	1	1	1	
31-15		930203-0400	* Nut * ﾅｯﾄ	2	2	2	
31-16		941303-0400	* Spring Washer * ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
31-17		3E3-72527-0	Water Pressure Meter Kit ｳｫｰﾀﾌﾟﾚｯｼｬﾒｰﾀｷｯﾄ	1	1	1	
31-18		3E0-72598-0	* Water Pressure Meter Ass'y * ｳｫｰﾀﾌﾟﾚｯｼｬﾒｰﾀｱｯｼ	1	1	1	
31-19		3B7-72657-0	** Meter Bulb 12V-1.7W ** ﾒｰﾀﾊﾞﾙﾌﾞ 12V-1.7W	1	1	1	
31-20		3B7-72655-0	** Meter Damper ** ﾒｰﾀﾀﾞﾝﾊﾟ	1	1	1	

OPTIONAL PARTS (1)
Fig. 31　オプショナルパーツ（1）

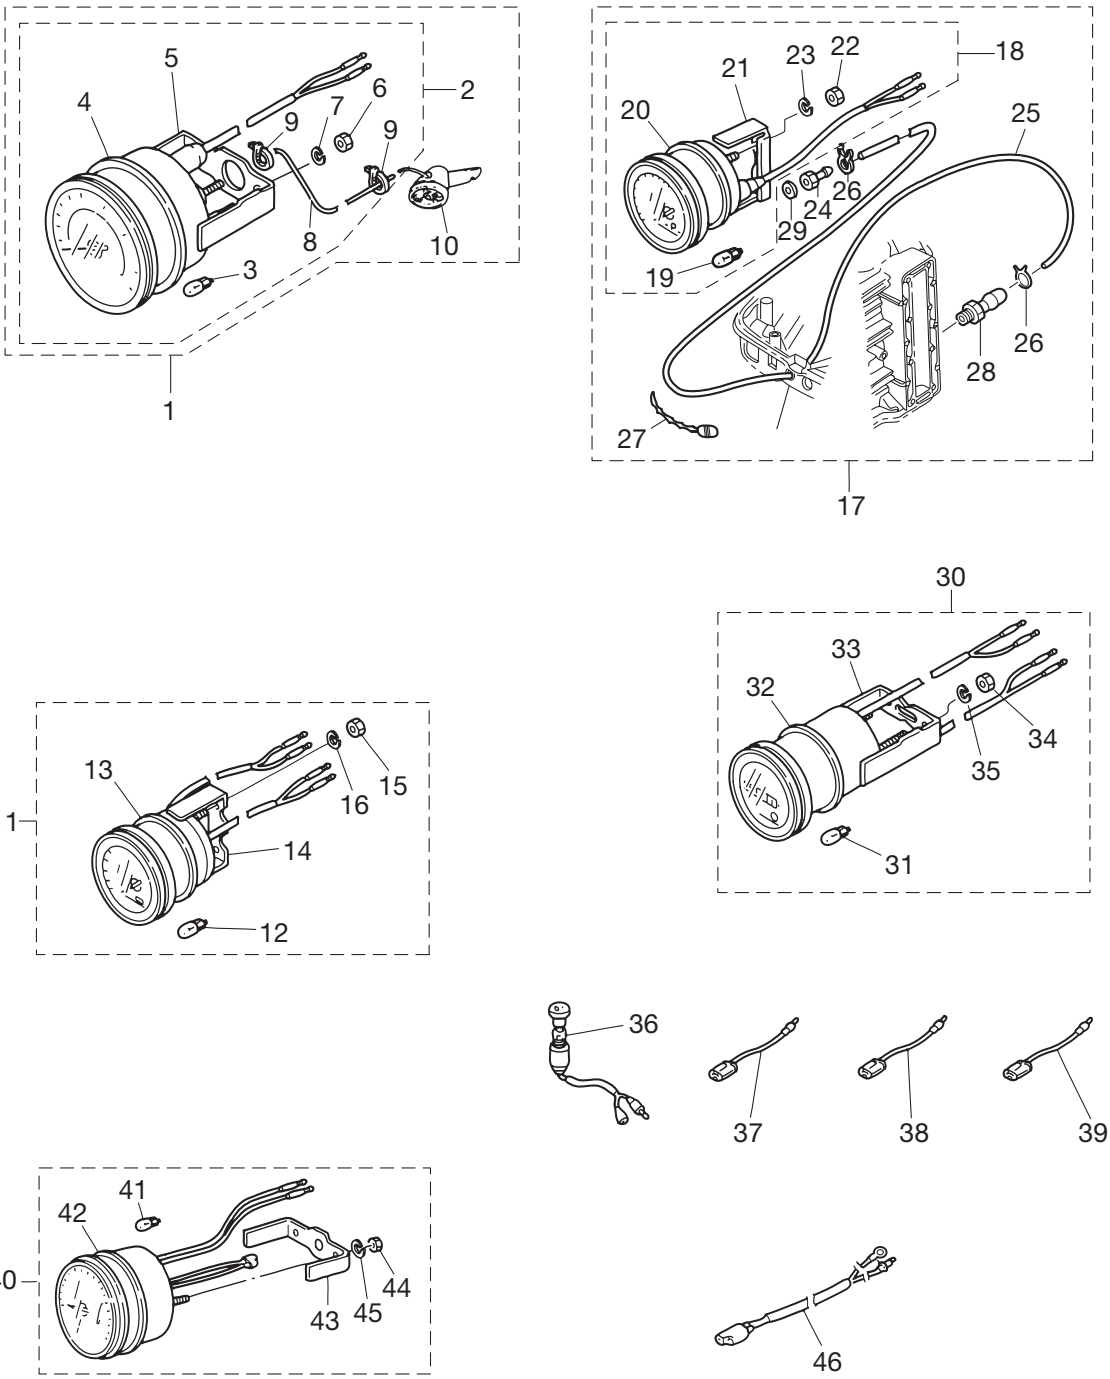

Ref. No. 見出番号	Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備 考
31-21	3B7-72663-0	** Fitting Plate ** ﾌｨｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ	1	1	1	
31-22	930203-0500	** Nut ** ﾅｯﾄ	2	2	2	
31-23	941303-0500	** Spring Washer ** ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
31-24	3B7-72641-0	* Water Pressure Meter Nipple * ｳｫｰﾀﾌﾟﾚｯｼｬﾒｰﾀﾆｯﾌﾟﾙ	1	1	1	
31-25	98AB-506000	* Hose * ﾎｰｽ	1	1	1	98AB-501000×6
31-26	338-02215-0	* Clip Fuel Pipe φ10 * ｸﾘｯﾌﾟ ﾌｭｴﾙﾊﾟｲﾌﾟ φ10	2	2	2	
31-27	336-76091-0	* Lead Wire Band * ﾘｰﾄﾞﾜｲﾔﾊﾞﾝﾄﾞ	2	2	2	
31-28	309-01136-0	* Nipple Pulse * ﾆｯﾌﾟﾙ ﾊﾟﾙｽ	1	1	1	
31-29	121-33159-0	* Gasket 2-8-1 * ｶﾞｽｹｯﾄ 2-8-1	1	1	1	
31-30	3E0-72524-0	Hour Meter Ass'y ｱﾜｰﾒｰﾀｱｯｼ	1	1	1	
31-31	3B7-72657-0	* Meter Bulb 12V-1.7W * ﾒｰﾀﾊﾞﾙﾌﾞ 12V-1.7W	1	1	1	
31-32	3B7-72655-0	* Meter Damper * ﾒｰﾀﾀﾞﾝﾊﾟ	1	1	1	
31-33	3B7-72664-0	* Fitting Plate * ﾌｨｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ	1	1	1	
31-34	930203-0400	* Nut * ﾅｯﾄ	2	2	2	
31-35	941303-0400	* Spring Washer * ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ	2	2	2	
31-36	353-72521-1	Meter Lamp Switch ﾒｰﾀｰﾗﾝﾌﾟｽｲｯﾁ	1	1	1	for “P” Type
31-37	353-72547-0	Assist Cord (Blue) L=200 ｱｼｽﾄｺｰﾄﾞ (ﾌﾞﾙｰ) L=200	1	1	1	for “P” Type
31-38	353-72548-0	Assist Cord (Black) L=200 ｱｼｽﾄｺｰﾄﾞ (ﾌﾞﾗｯｸ) L=200	1	1	1	for “P” Type
31-39	353-72546-0	Assist Cord (Red) L=200 ｱｼｽﾄｺｰﾄﾞ (ﾚｯﾄﾞ) L=200	1	1	1	for “P” Type
31-40	3B7-72530-2	Tachometer Ass'y ﾀｺﾒｰﾀｱｯｼ		1	1	for “F” Type
31-41	3B7-72659-0	* Meter Bulb 12V-1.8W * ﾒｰﾀﾊﾞﾙﾌﾞ 12V-1.8W		1	1	for “F” Type
31-42	3B7-72656-0	* Meter Damper * ﾒｰﾀﾀﾞﾝﾊﾟ		1	1	for “F” Type
31-43	3B7-72661-0	* Fitting Plate * ﾌｨｯﾃｨﾝｸﾞﾌﾟﾚｰﾄ		1	1	for “F” Type
31-44	930103-0500	* Nut * ﾅｯﾄ		2	2	for “F” Type
31-45	941303-0500	* Spring Washer * ｽﾌﾟﾘﾝｸﾞﾜｯｼｬ		2	2	for “F” Type
31-46	3T5-72539-0	Tachometer Lead Wire L=2000 ﾀｺﾒｰﾀﾘｰﾄﾞﾜｲﾔ L=2000		1	1	for “F” Type

OPTIONAL PARTS (2)
Fig. 32　オプショナルパーツ（2）

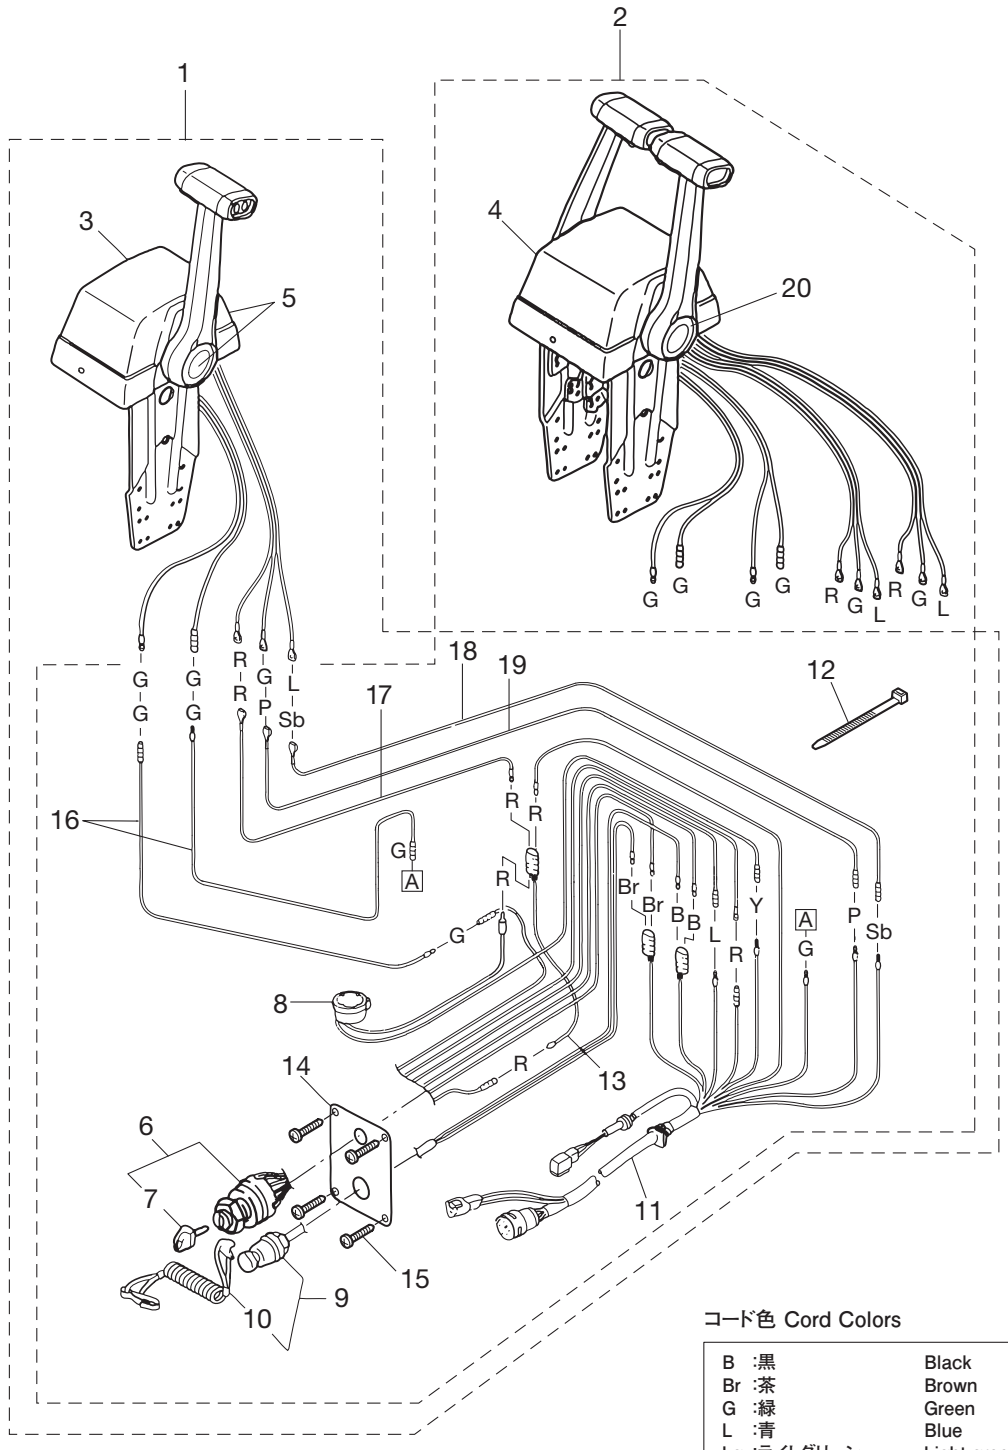


コード色 Cord Colors

B	:黒	Black
Br	:茶	Brown
G	:緑	Green
L	:青	Blue
Lg	:ライトグリーン	Light green
P	:ピンク	Pink
R	:赤	Red
Sb	:空	Skya blue
W	:白	White
Y	:黄	Yellow

Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
32-1		3T5-84490-2	Control Head Ass'y (Top-Single) ｺﾝﾄﾛｰﾙﾍｯﾄﾞｱｯｼ(ﾄｯﾌﾟｰｼﾝｸﾞﾙ)	1	1	1	for "P" Type Top Single RC6G
32-2		3T5-84540-2	Control Head Ass'y (Top-Twin) ｺﾝﾄﾛｰﾙﾍｯﾄﾞｱｯｼ(ﾄｯﾌﾟｰﾂｲﾝ)	1	1	1	for "P" Type Top Twin RC6GT
32-3		3T5-84480-1	* Remote Cont Head (Top-Single) * ﾘﾓｰﾄｺﾝﾄﾛｰﾙﾍｯﾄﾞ (ﾄｯﾌﾟｰｼﾝｸﾞﾙ)	1	1	1	for "P" Type Top Single RC6G
32-4		3T5-84520-1	* Remote Cont Head (Top-Twin) * ﾘﾓｰﾄｺﾝﾄﾛｰﾙﾍｯﾄﾞ (ﾄｯﾌﾟｰﾂｲﾝ)	1	1	1	for "P" Type Top Twin RC6GT
32-5		3Z5-84462-0	** Decal (TOHATSU) ** ﾃﾞｶｰﾙ (ﾄｰﾊﾂ)	1	1	1	for "P" Type
32-6	1	353-76020-3	* Main Switch Ass'y * ﾒｲﾝｽｲｯﾁｱｯｼ	1	1	1	for "P" Type Top Single
32-6	2	353-76020-3	* Main Switch Ass'y * ﾒｲﾝｽｲｯﾁｱｯｼ	1	1	1	for "P" Type Top Twin
32-7	1	3F3-76217-0	** Main Switch Key (No.301) ** ﾒｲﾝｽｲｯﾁｷｰ (No.301)	A	A	A	for "P" Type Top Single No.301
32-7	2	3F3-76218-0	** Main Switch Key (No.302) ** ﾒｲﾝｽｲｯﾁｷｰ (No.302)	A	A	A	for "P" Type Top Single No.302
32-7	3	3F3-76219-0	** Main Switch Key (No.303) ** ﾒｲﾝｽｲｯﾁｷｰ (No.303)	A	A	A	for "P" Type Top Single No.303
32-7	4	3F3-76217-0	** Main Switch Key (No.301) ** ﾒｲﾝｽｲｯﾁｷｰ (No.301)	A	A	A	for "P" Type Top Twin No.301
32-7	5	3F3-76218-0	** Main Switch Key (No.302) ** ﾒｲﾝｽｲｯﾁｷｰ (No.302)	A	A	A	for "P" Type Top Twin No.302
32-7	6	3F3-76219-0	** Main Switch Key (No.303) ** ﾒｲﾝｽｲｯﾁｷｰ (No.303)	A	A	A	for "P" Type Top Twin No.303
32-8	1	3C8-76171-0	* Overheat Buzzer * ｵｰﾊﾞﾋｰﾄﾌﾞｻﾞｰ	1	1	1	for "P" Type Top Single
32-8	2	3C8-76171-0	* Overheat Buzzer * ｵｰﾊﾞﾋｰﾄﾌﾞｻﾞｰ	2	2	2	for "P" Type Top Twin
32-9	1	3A3-06830-0	* Stop Switch Ass'y (W/Curl) * ｽﾄｯﾌﾟｽｲｯﾁｱｯｼ (W/ｶｰﾙ)	1	1	1	for "P" Type Top Single
32-9	2	3A3-06830-0	* Stop Switch Ass'y (W/Curl) * ｽﾄｯﾌﾟｽｲｯﾁｱｯｼ (W/ｶｰﾙ)	1	1	1	for "P" Type Top Twin
32-10	1	353-06821-0	** Stop Switch Lanyard Ass'y W/Curl ** ｽﾄｯﾌﾟｽｲｯﾁﾗﾝﾔｰﾄﾞｱｯｼ (W/ｶｰﾙ)	1	1	1	for "P" Type Top Single
32-10	2	353-06821-0	** Stop Switch Lanyard Ass'y W/Curl ** ｽﾄｯﾌﾟｽｲｯﾁﾗﾝﾔｰﾄﾞｱｯｼ (W/ｶｰﾙ)	1	1	1	for "P" Type Top Twin
32-11	1	3T5-76115-1	* Cord Ass'y B * ｺｰﾄﾞｱｯｼ B	1	1	1	for "P" Type
32-11	2	3T5-76115-1	* Cord Ass'y B * ｺｰﾄﾞｱｯｼ B	2	2	2	for "P" Type
32-12	1	178-34147-0	* Band Lead Wire 200 * ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 200	1	1	1	for "P" Type
32-12	2	178-34147-0	* Band Lead Wire 200 * ﾊﾞﾝﾄﾞﾘｰﾄﾞﾜｲﾔ 200	2	2	2	for "P" Type
32-13	1	353-72546-0	* Assist Cord (Red) L=200 * ｱｼｽﾄｺｰﾄﾞ (ﾚｯﾄﾞ) L=200	1	1	1	for "P" Type
32-13	2	353-72546-0	* Assist Cord (Red) L=200 * ｱｼｽﾄｺｰﾄﾞ (ﾚｯﾄﾞ) L＝200	2	2	2	for "P" Type
32-14	1	3T5-76201-0	* Main Switch Panel * ﾒｲﾝｽｲｯﾁﾊﾟﾈﾙ	1	1	1	for "P" Type Top Single
32-14	2	3T5-76201-0	* Main Switch Panel * ﾒｲﾝｽｲｯﾁﾊﾟﾈﾙ	2	2	2	for "P" Type Top Twin
32-15	1	921146-4516	* Screw * ｽｸﾘｭ	4	4	4	for "P" Type Top Single
32-15	2	921146-4516	* Screw * ｽｸﾘｭ	8	8	8	for "P" Type Top Twin
32-16	1	3C7-84471-1	* Neutral Switch Cord (Green) * ﾆｭｰﾄﾗﾙｽｲｯﾁｺｰﾄﾞ (ｸﾞﾘｰﾝ)	1	1	1	for "P" Type Top Single

OPTIONAL PARTS (2)
Fig. 32　オプショナルパーツ（2）

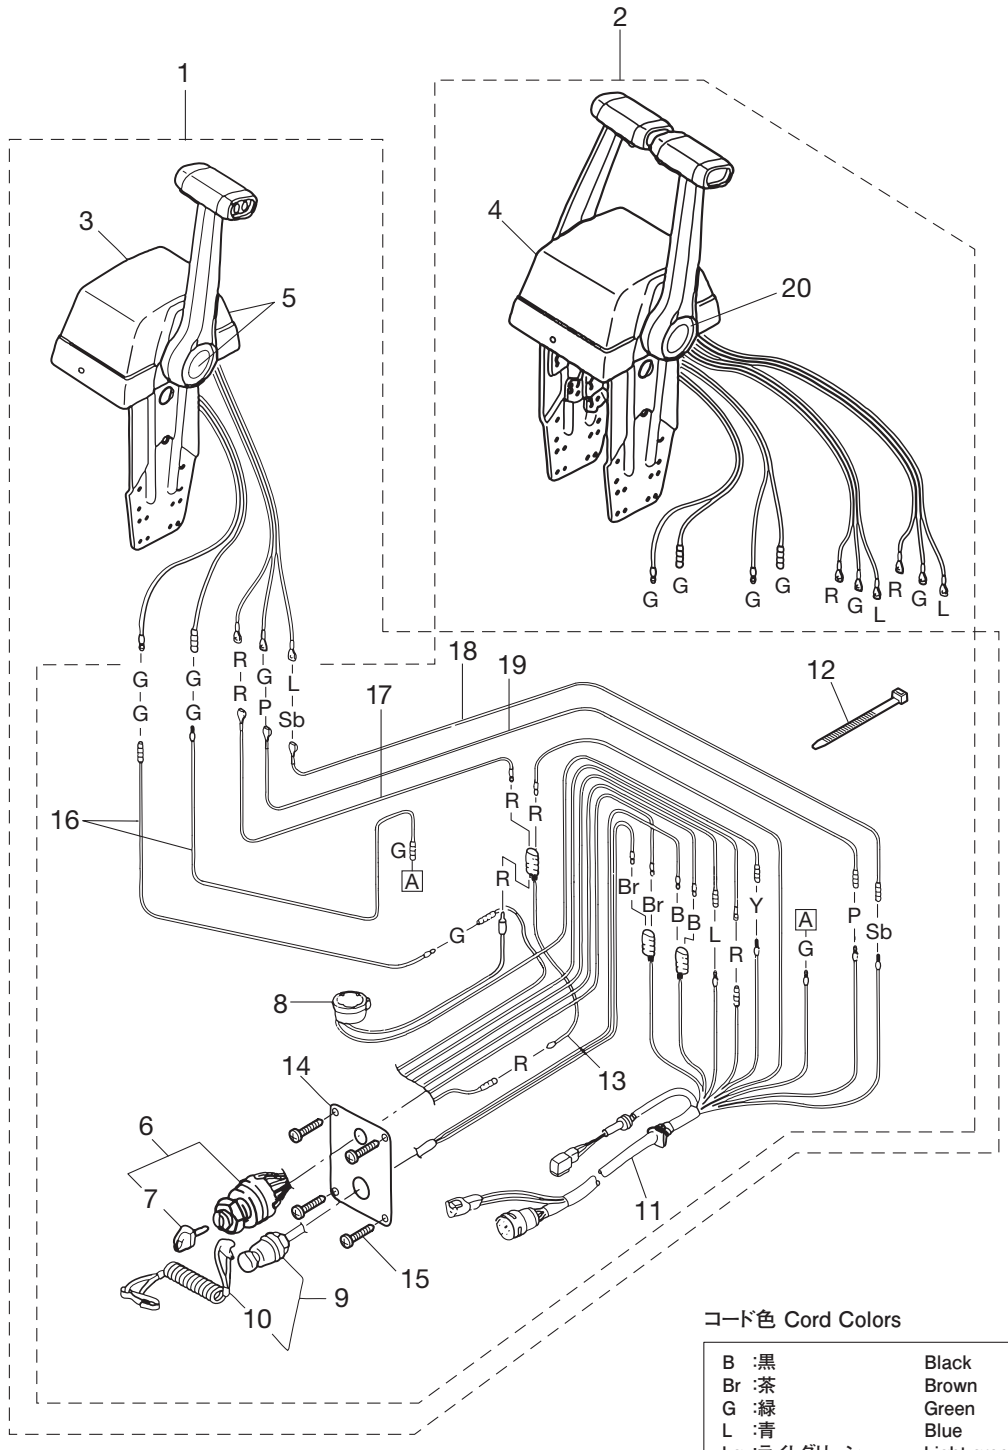


コード色 Cord Colors

B	:黒	Black
Br	:茶	Brown
G	:緑	Green
L	:青	Blue
Lg	:ライトグリーン	Light green
P	:ピンク	Pink
R	:赤	Red
Sb	:空	Skya blue
W	:白	White
Y	:黄	Yellow


Ref. No. 見出番号		Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備　考
32-16	2	3C7-84471-1	＊Neutral Switch Cord (Green) ＊ﾆｭｰﾄﾗﾙｽｲｯﾁｺｰﾄﾞ(ｸﾞﾘｰﾝ)	2	2	2	for "P" Type Top Twin
32-17	1	3C7-84475-0	＊PTT Switch Cord (Red) ＊PTTｽｲｯﾁｺｰﾄﾞ(ﾚｯﾄﾞ)	1	1	1	for "P" Type Top Single
32-17	2	3C7-84475-0	＊PTT Switch Cord (Red) ＊PTTｽｲｯﾁｺｰﾄﾞ(ﾚｯﾄﾞ)	2	2	2	for "P" Type Top Twin
32-18	1	3C7-84476-0	＊PTT Switch Cord (Skyblue) ＊PTTｽｲｯﾁｺｰﾄﾞ(ｽｶｲﾌﾞﾙｰ)	1	1	1	for "P" Type Top Single
32-18	2	3C7-84476-0	＊PTT Switch Cord (Skyblue) ＊PTTｽｲｯﾁｺｰﾄﾞ(ｽｶｲﾌﾞﾙｰ)	2	2	2	for "P" Type Top Twin
32-19	1	3C7-84477-0	＊PTT Switch Cord (Pink) ＊PTTｽｲｯﾁｺｰﾄﾞ(ﾋﾟﾝｸ)	1	1	1	for "P" Type Top Single
32-19	2	3C7-84477-0	＊PTT Switch Cord (Pink) ＊PTTｽｲｯﾁｺｰﾄﾞ(ﾋﾟﾝｸ)	2	2	2	for "P" Type Top Twin
32-20		3Z5-84462-0	Decal (TOHATSU) ﾃﾞｶｰﾙ(ﾄｰﾊﾂ)	2	2	2	for "P" Type

OPTIONAL PARTS (3)
Fig. 33　オプショナルパーツ（3）

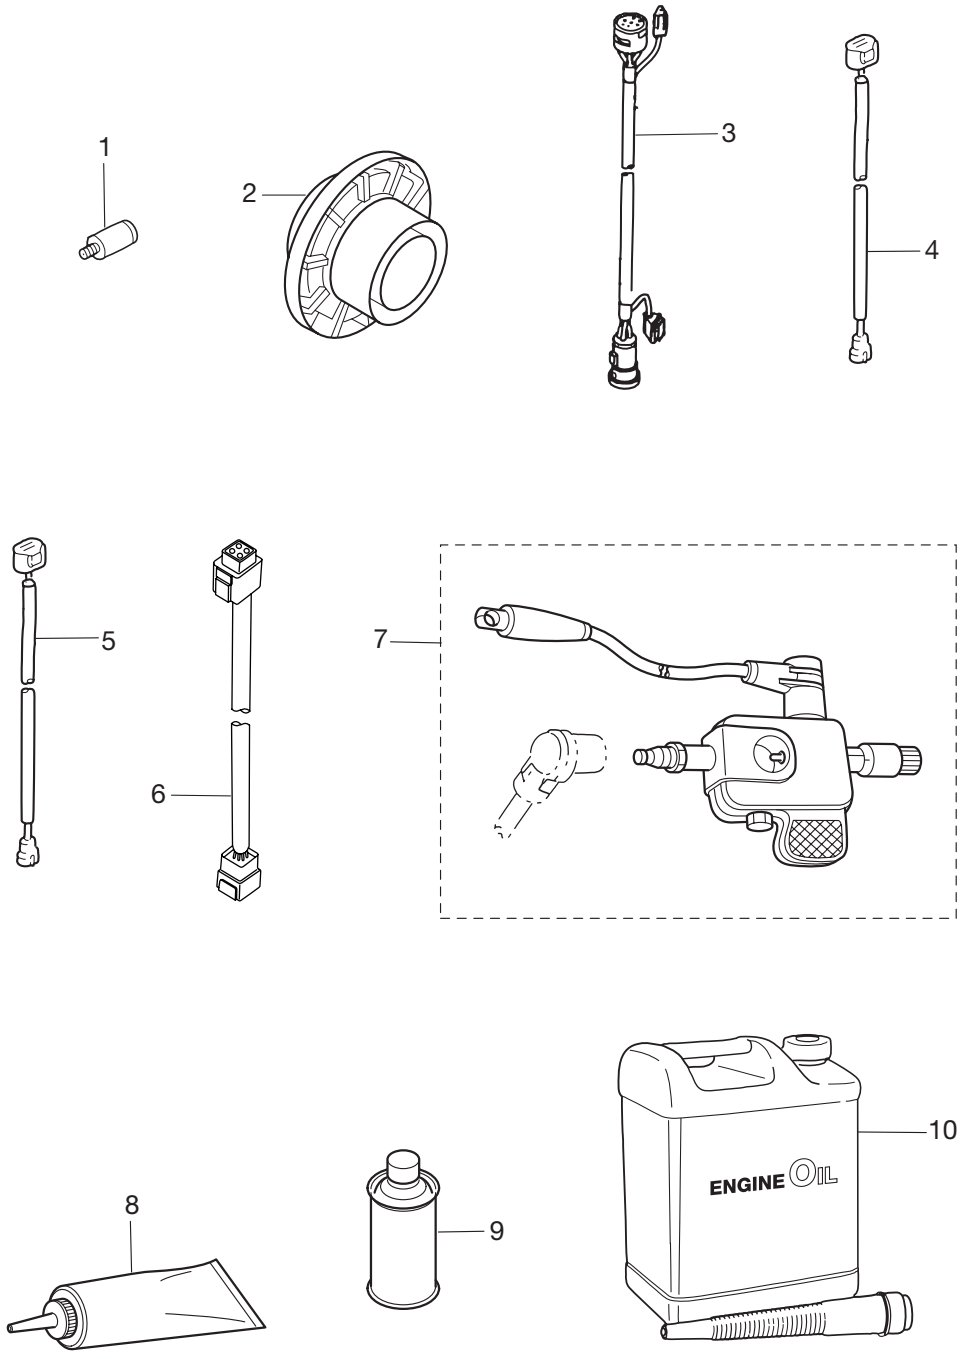


Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
33-1		3B7-60007-0	Flushing Plug ﾌﾗｯｼﾝｸﾞﾌﾟﾗｸﾞ	1	1	1	
33-2		3C8-64110-0	Test Propeller Ass'y ﾃｽﾄﾌﾟﾛﾍﾟﾗｱｯｼ	1	1	1	
33-3		3T5-76114-0	11P Extension Cord L=2000 11P ｴｸｽﾃﾝｼｮﾝｺｰﾄﾞ L=2000	1	1	1	for "P" Type Remorte Control Box
33-4		3T5-76112-0	2P Extension Cord L=2000 2P ｴｸｽﾃﾝｼｮﾝｺｰﾄﾞ L=2000	1	1	1	for "P" Type Meter Lead Wire
33-5	1	3T1-72573-0	Extension Cord (Trim Sensor) L=6000 ｴｸﾃﾝｼｮﾝｺｰﾄﾞ (ﾄﾘﾑｾﾝｻ) L=6000	1	1	1	for "P" Type (without for USA model)
33-5	2	3Z4-72573-0	Extension Cord (Trim Sensor) L=2000 ｴｸﾃﾝｼｮﾝｺｰﾄﾞ (ﾄﾘﾑｾﾝｻ) L=2000	1	1	1	for "P" Type
33-6		3T5-71042-0	Extension Cord (Pilot Lamp) ｴｸｽﾃﾝｼｮﾝｺｰﾄﾞ (ﾊﾟｲﾛｯﾄﾗﾝﾌﾟ)	1	1	1	
33-7		3F3-72540-0	Spark Tester (PET-4000) ｽﾊﾟｰｸﾃｽﾀ (PET-4000)	1	1	1	
33-8		332-72306-0	Gear Oil (500mL) ｷﾞﾔｵｲﾙ (500mL)	1	1	1	
33-9		3AC-72326-0	Touch-Up Paint (Aquamarine) ﾀｯﾁｱｯﾌﾟﾍﾟｲﾝﾄ (ｱｸｱﾏﾘﾝ)	1	1	1	
33-10		3Y9-72304-0	Md Engine Oil Platinum (4.0L) MDｴﾝｼﾞﾝｵｲﾙﾌﾟﾗﾁﾅ (4.0L)	1	1	1	

ASSEMBLY KIT
Fig. 34　アッセンブリキット

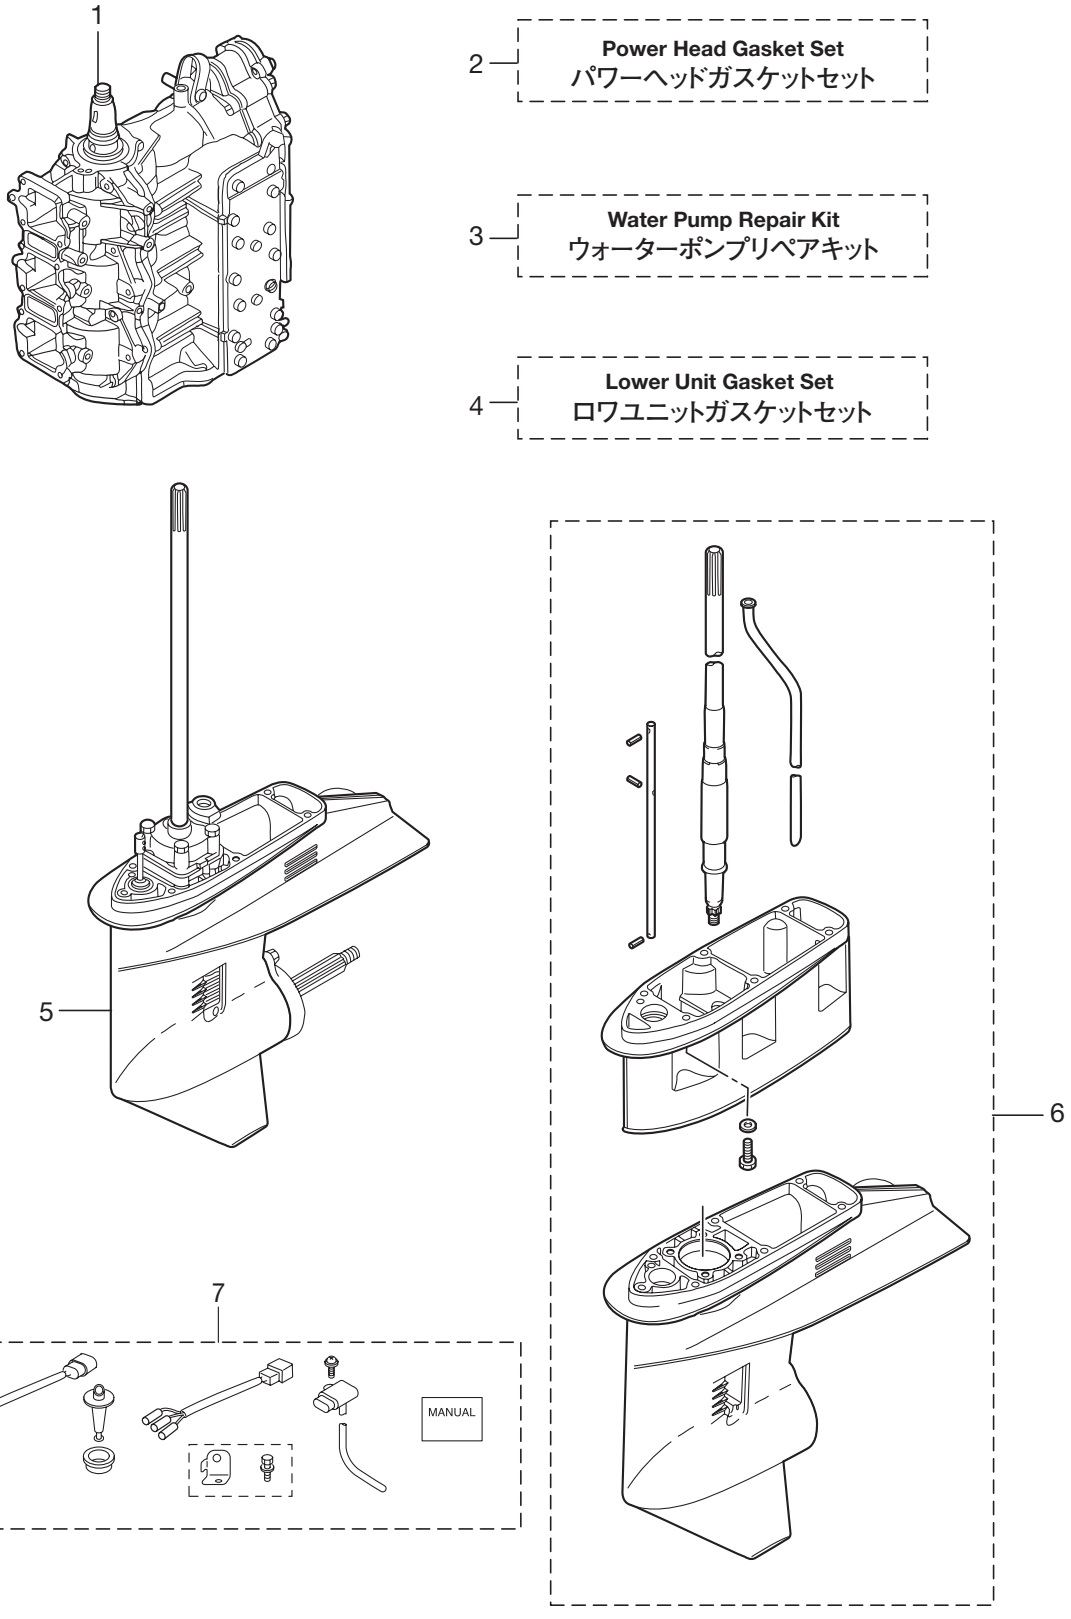

Ref. No. 見出番号		Part No. 部品番号	Description 部 品 名	Q'ty／個数 MD 30B2	MD 40B2	MD 50B2	Remarks 備 考
34-1	1	3GFB87090-3	Engine Short Block Kit ｴﾝｼﾞﾝｼｮｰﾄﾌﾞﾛｯｸｷｯﾄ	1	1	1	STD
34-1	2	3GLB87090-3	Engine Short Block Kit ｴﾝｼﾞﾝｼｮｰﾄﾌﾞﾛｯｸｷｯﾄ		1		for Italy 40ps
34-2		3T5-87121-6	Power Head Gasket Set ﾊﾟﾜｰﾍｯﾄﾞｶﾞｽｹｯﾄｾｯﾄ	1	1	1	
34-3		3T5-87322-3	Water Pump Repair Kit ｳｫｰﾀﾎﾟﾝﾌﾟﾘﾍﾟｱｷｯﾄ	1	1	1	
34-4		3T5-87321-2	Lower Unit Gasket Set ﾛﾜﾕﾆｯﾄｶﾞｽｹｯﾄｾｯﾄ	1	1	1	
34-5	1	3T5Q87301-3	Lower Unit Ass'y (S) ﾛﾜﾕﾆｯﾄｱｯｼ (S)		1	1	for Transom “S”
34-5	2	3T5Q87302-3	Lower Unit Ass'y (L) ﾛﾜﾕﾆｯﾄｱｯｼ (L)	1	1	1	for Transom “L”
34-5	3	3T5Q87304-3	Lower Unit Ass'y (UL) ﾛﾜﾕﾆｯﾄｱｯｼ (UL)		1	1	for Transom “UL”
34-5	4	3S7Q87302-5	Lower Unit Ass'y (L) ﾛﾜﾕﾆｯﾄｱｯｼ (L)			1	MW50 for Transom “L”
34-5	5	3Y5Q87304-4	Lower Unit Ass'y (UL) ﾛﾜﾕﾆｯﾄｱｯｼ (UL)			1	MW50 for Transom “UL”
34-6		3C8Q87314-1	Extension Housing Kit (UL) ｴｸｽﾃﾝｼｮﾝﾊｳｼﾞﾝｸﾞｷｯﾄ (UL)	1	1	1	for Transom “L”
34-7		3GF-10230-0	Altitude Adjustment Kit 高地補正ｷｯﾄ	1	1	1	for High Altitude

RIGGING・KIT
Fig. 35　リギングキット

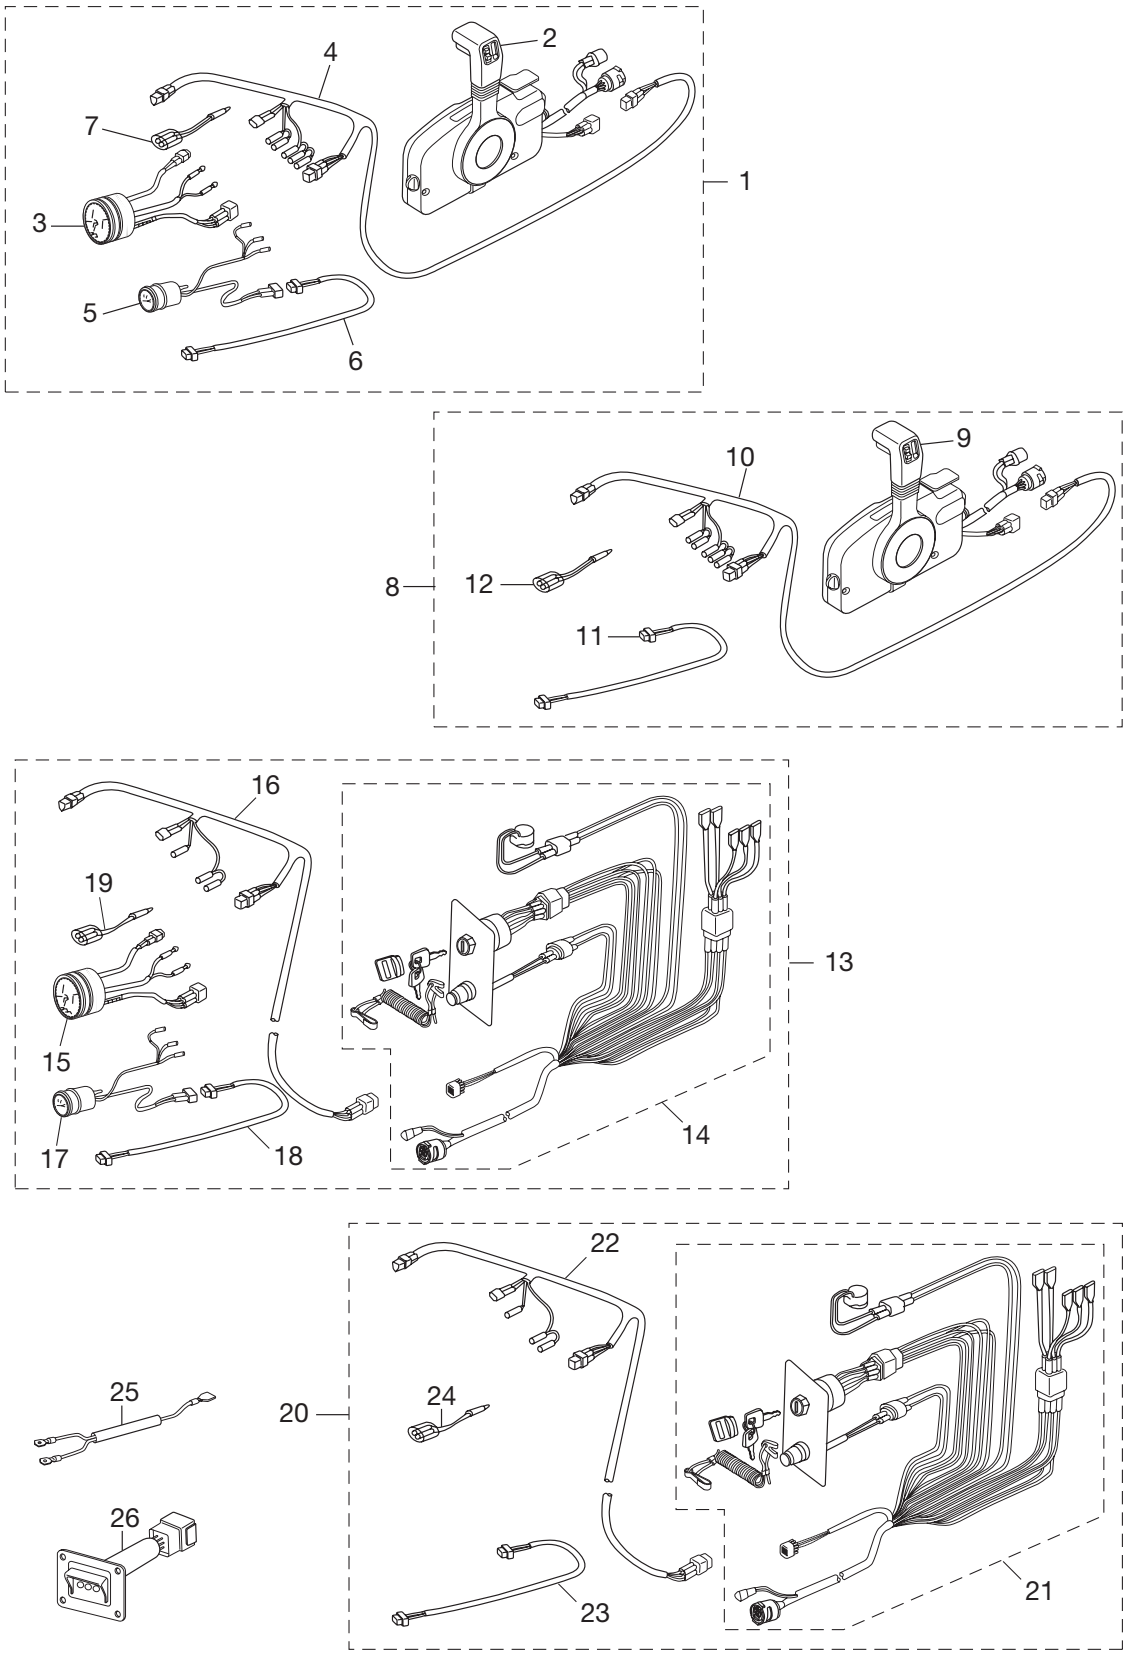

Ref. No. 見出番号	Part No. 部品番号	Description 部　品　名	Q'ty／個数 MD 30B2	 MD 40B2	 MD 50B2	Remarks 備　考
35-1	3Y7Q84550-6	Pre-Rigging Kit ﾌﾟﾚﾘｷﾞﾝｸﾞｷｯﾄ		1	1	for "P" Type with Meter
35-2	3GFQ84500-0	* Remote Control Head Ass'y (RC5F) * ﾘﾓｰﾄｺﾝﾄﾛｰﾙﾍｯﾄﾞｱｯｼ (RC5F)		1	1	for "P" Type
35-3	3Z5-72640-1	* Tachometer W/Oil Lamp * ﾀｺﾒｰﾀ (W/ｵｲﾙﾗﾝﾌﾟ)		1	1	for "P" Type
35-4	3T5-72537-1	* Meter Lead Wire L=8000 * ﾒｰﾀｰﾘｰﾄﾞﾜｲﾔ L=8000		1	1	for "P" Type
35-5	3T1-72571-0	* Trim Meter Ass'y * ﾄﾘﾑﾒｰﾀｰｱｯｼ		1	1	for "P" Type
35-6	3T1-72573-0	* Extension Cord (Trim Sensor) L=6000 * ｴｸﾃﾝｼｮﾝｺｰﾄﾞ (ﾄﾘﾑｾﾝｻ) L=6000		1	1	for "P" Type
35-7	353-72548-0	* Assist Cord (Black) L=200 * ｱｼｽﾄｺｰﾄﾞ (ﾌﾞﾗｯｸ) L=200		1	1	for "P" Type
35-8	3GLQ84550-1	Pre-Rigging Kit ﾌﾟﾚﾘｷﾞﾝｸﾞｷｯﾄ		1	1	for "P" Type (for USA model) without Meter
35-9	3GFQ84500-0	* Remote Control Head Ass'y (RC5F) * ﾘﾓｰﾄｺﾝﾄﾛｰﾙﾍｯﾄﾞｱｯｼ (RC5F)		1	1	for "P" Type (for USA model)
35-10	3T5-72537-1	* Meter Lead Wire L=8000 * ﾒｰﾀｰﾘｰﾄﾞﾜｲﾔ L=8000		1	1	for "P" Type (for USA model)
35-11	3T1-72573-0	* Extension Cord (Trim Sensor) L=6000 * ｴｸﾃﾝｼｮﾝｺｰﾄﾞ (ﾄﾘﾑｾﾝｻ) L=6000		1	1	for "P" Type (for USA model)
35-12	353-72548-0	* Assist Cord (Black) L=200 * ｱｼｽﾄｺｰﾄﾞ (ﾌﾞﾗｯｸ) L=200		1	1	for "P" Type (for USA model)
35-13	3Z5-84550-6	Pre-Rigging Kit ﾌﾟﾚﾘｷﾞﾝｸﾞｷｯﾄ		1	1	for "P" Type with Meter
35-14	3GF-84560-0	* Rigging Cord Kit * ﾘｷﾞﾝｸﾞｺｰﾄﾞｷｯﾄ		1	1	for "P" Type
35-15	3Z5-72640-1	* Tachometer W/Oil Lamp * ﾀｺﾒｰﾀ (W/ｵｲﾙﾗﾝﾌﾟ)		1	1	for "P" Type
35-16	3T5-72537-1	* Meter Lead Wire L=8000 * ﾒｰﾀｰﾘｰﾄﾞﾜｲﾔ L=8000		1	1	for "P" Type
35-17	3T1-72571-0	* Trim Meter Ass'y * ﾄﾘﾑﾒｰﾀｰｱｯｼ		1	1	for "P" Type
35-18	3T1-72573-0	* Extension Cord (Trim Sensor) L=6000 * ｴｸﾃﾝｼｮﾝｺｰﾄﾞ (ﾄﾘﾑｾﾝｻ) L=6000		1	1	for "P" Type
35-19	353-72548-0	* Assist Cord (Black) L=200 * ｱｼｽﾄｺｰﾄﾞ (ﾌﾞﾗｯｸ) L=200		1	1	for "P" Type
35-20	3GM-84550-1	Pre-Rigging Kit ﾌﾟﾚﾘｷﾞﾝｸﾞｷｯﾄ		1	1	for "P" Type (for USA model) without Meter
35-21	3GF-84560-0	* Rigging Cord Kit * ﾘｷﾞﾝｸﾞｺｰﾄﾞｷｯﾄ		1	1	for "P" Type (for USA model)
35-22	3T5-72537-1	* Meter Lead Wire L=8000 * ﾒｰﾀｰﾘｰﾄﾞﾜｲﾔ L=8000		1	1	for "P" Type (for USA model)
35-23	3T1-72573-0	* Extension Cord (Trim Sensor) L=6000 * ｴｸﾃﾝｼｮﾝｺｰﾄﾞ (ﾄﾘﾑｾﾝｻ) L=6000		1	1	for "P" Type (for USA model)
35-24	353-72548-0	* Assist Cord (Black) L=200 * ｱｼｽﾄｺｰﾄﾞ (ﾌﾞﾗｯｸ) L=200		1	1	for "P" Type (for USA model)
35-25	3Y9-76049-0	Lead Wire ﾘｰﾄﾞﾜｲﾔ		1	1	for Italy 40ps
35-26	3Y9-76251-0	Lamp Panel Ass'y ﾗﾝﾌﾟﾊﾟﾈﾙｱｯｼ		1	1	for Italy 40ps

索引

<1>
11P エクステンションコード L=2000 33-3
<2>
2P エクステンションコード L=2000.....33-4
<C>
Cリング 20-44-1
Cリング 21-22
Cリング d=18 20-44-2
Cリング d=25 2-4
Cリング d=25 18-26
Cリング d=28 20-21
<E>
ECUアッシ 10-1-1
ECUアッシ 10-1-2
ECUアッシ 10-1-3
Eリング d=6.....19-14
Eリング d=6.....28-25
<L>
L-ニップル 4-6
<M>
MDエンジンオイルプラチナ (4.0L) 33-10
<O>
Oリング.....8-9
Oリング.....8-11
Oリング.....11-16
Oリング.....27-16
Oリング 1.5-6.5.....21-15
Oリング 1.6-19.2 12-2
Oリング 1.7-59 1-47
Oリング　1.8-69.6.....21-8
Oリング 1.9-13 5-19
Oリング 1.9-6.8.....15-33
Oリング 2.0-10.0 10-45
Oリング 2.4-44.7 2-12
Oリング 2.4-5.8.....14-36
Oリング 2.4-9.5.....4-3
Oリング 2.5-20 4-25
Oリング 2.5-20 4-28
Oリング 2.5-5 4-26
Oリング 2.5-5 4-29
Oリング 2.8-20.2 4-22
Oリング 2-55.5 21-5
Oリング 3.2-47 14-24
Oリング 3.5-21.7 14-37
Oリング 3.5-25.7 18-25
Oリング 3.5-27.7 15-34
Oリング 3.53-69.44.....16-7
Oリング 3.5-735.....4-23
Oリング 3.5-74.6 17-8
Oリング 5-52.....4-2
Oリング 6.8-1.9.....4-9
Oリング 9.8-1.9.....4-34
Oリング 9.8-1.9.....4-36
Oリング ブラケットシャフト　3.5-29.7 20-20
OリングA 8-38
OリングA 12-37
OリングB 8-41
OリングB 12-39
<P>
PTT Oリングセット 21-24
PTTアッシ.....20-47
PTTスイッチ(B)アッシ 24-41
PTTスイッチアッシ.....23-11
PTTスイッチアッシ.....29-5
PTTスイッチアッシブラケット.....24-43
PTTスイッチカバ (B).....23-15
PTTスイッチカバー 23-12
PTTスイッチカバー 29-7
PTTスイッチコード (スカイブルー).....32-18-1
PTTスイッチコード (スカイブルー).....32-18-2
PTTスイッチコード (ピンク) 32-19-1
PTTスイッチコード (ピンク) 32-19-2
PTTスイッチコード (レッド) 32-17-1
PTTスイッチコード (レッド) 32-17-2
PTTスラストロッド.....20-11
PTTソレノイドスイッチ (A) 10-36
PTTソレノイドスイッチ (B) 10-37
<T>
TPSアッシ.....7-27
TPSデカール.....7-37
T-ニップル アッシ　(W//バルブ).....1-45
<ア>
アースワイヤ (グランド).....20-45
アースワイヤ (グランド) L=110 18-50
アースワイヤ (グランド) L=130 18-48
アースワイヤ (グランド) L=130 20-57
アースワイヤ (グランド) L=210 18-47
アースワイヤ(グランド) L=270.....24-28
アーマチュアアッシ 21-2
アシストコード (ブラック) L=200.....31-38
アシストコード (ブラック) L=200.....35-7
アシストコード (ブラック) L=200.....35-12
アシストコード (ブラック) L=200.....35-19
アシストコード (ブラック) L=200.....35-24
アシストコード (ブルー) L=200 31-37
アシストコード (レッド) L=200 29-12
アシストコード (レッド) L=200 31-39
アシストコード (レッド) L=200 32-13-1
アシストコード (レッド) L＝200 32-13-2
アジャストスクリュ スロットルフリクション 28-27
アジャストナット 22-12
アダプタ 5-8
アダプタ 6-5
アッパケースアッシ FFP 6-4
アドバンサアーム 7-1
アノード 1-30
アノード 18-38
アノード スターンブラケット.....20-7
アワーメータアッシ 31-30
<イ>
イグニッションコイル （W/レジスタンスキャプ） #1 10-8
イグニッションコイル （W/レジスタンスキャプ） #2,3 10-11
インテ-クマニホールドガスケット 3-3
<ウ>
ウェーブワッシャ 24-12
ウェーブワッシャ 25-18
ウェーブワッシャ 28-45
ウェーブワッシャ 30-45-1.2 22-19
ウェーブワッシャ d=12 DWG.....25-3
ウォータストレーナセット 14-7
ウォータストレーナセット 15-3
ウォータテンプセンサ (W/Oリング).....10-44
ウォータパイプ (L).....14-43-2
ウォータパイプ (S) 14-43-1
ウォータパイプ (UL).....14-43-3
ウォータパイプオウキシリアリマウント 13-20-1
ウォータパイプオウキシリアリマウント 13-20-2
ウォータパイプシール (アッパ) 14-44
ウォータパイプシール (ロワ).....14-20
ウォータパイプシール (ロワ).....15-17
ウォータプレッシャメータアッシ.....31-18
ウォータプレッシャメータキット.....31-17
ウォータプレッシャメータニップル.....31-24
ウォータポンプインペラ 14-16
ウォータポンプインペラ 15-13
ウォータポンプガイドプレート 14-26
ウォータポンプガイドプレート (クロムメッキ).....15-21
ウォータポンプリペアキット 34-3
<エ>
エアインジェクタコンプリート.....4-1
エアコンプレッサ アッシ 5-5
エアコンプレッサシリンダアッシ.....5-20
エアコンプレッサハウジングアッシ.....5-21
エアコンプレッサピストンリング.....5-15
エアチェンバカバーアッシ 3-6
エアチャンバアッシ 3-1
エアチャンバカバーガスケット 3-9
エアフィルタアッシ 5-33
エアベントボルト 12-3
エアホースアッシ 4-33
エアレールアッシ 4-5
エアレールデカール 4-54
エアレギュレータ 4-27
エキゾーストカバー (インナ) 1-24
エキゾーストカバーアッシ 1-23
エキゾーストカバーガスケット.....1-25
エキゾーストパイプ.....13-7
エキゾーストパイプガスケット 13-9

エキゾーストハウジング.....13-24
エキゾーストハウジングガスケット.....13-27
エキゾーストプラグ.....13-2
エクステンショパンパイプ.....15-40
エクステンションコード(パイロットランプ).....33-6
エクステンションハウジング.....13-14
エクステンションハウジングアッシ(UL).....13-16
エクステンションハウジングキット(UL).....34-6
エクテンションコード(トリムセンサ)L=2000.....33-5-2
エクテンションコード(トリムセンサ)L=6000.....33-5-1
エクテンションコード(トリムセンサ)L=6000.....35-6
エクテンションコード(トリムセンサ)L=6000.....35-11
エクテンションコード(トリムセンサ)L=6000.....35-18
エクテンションコード(トリムセンサ)L=6000.....35-23
エプロン.....13-28
エンジンショートブロックキット.....34-1-1
エンジンショートブロックキット.....34-1-2
エンジンベースメント.....13-1
エンジンベースメントガスケット.....13-3
エンジンベースメントシール.....13-4
<オ>
オイルコーションデカール.....26-15
オイルシール 16-28-7.....1-49
オイルシール 17-33-6.....14-23
オイルシール 22-36-10.....16-9
オイルシール 22-37-8.....15-20
オイルシール 25-38-10.....17-10
オイルシール 25-40-8.....1-48
オイルシール 25-45-8.....5-23
オイルシール 36-46-6.....2-11
オイルタンク.....12-23
オイルタンクチェックバルブ.....12-27
オイルバルブ 12V-1.7W.....30-10
オイルフィラキャップ.....12-24
オイルフィルタアッシ.....12-35
オイルポンプアッシ.....12-1
オイルポンプドライブギヤ.....2-3
オイルポンプドリブンギヤ.....12-7
オイルポンプボルト.....12-5
オイルポンプロッド φ4.5-190.....12-9
オイルレベルセンサ.....12-28
オーバヒートブザー.....23-18
オーバヒートブザー.....29-8
オーバヒートブザー.....32-8-1
オーバヒートブザー.....32-8-2
オルタネータアッシ.....9-2
<カ>
ガイドプレートガスケット.....14-27
ガイドプレートガスケット.....15-22
ガスケット 10.1-15-1.....14-6
ガスケット 10.2-16-0.5.....24-47
ガスケット 2-8-1.....31-29
ガスケット 36-52-2.....12-25
ガスケット 8.1-15-1.....14-4
ガスケット FFP.....6-7
ガスケット PTTスイッチ.....24-42
ガスケット コンプレッサハウジング.....5-22
ガスケット コンプレッサヘッド.....5-11
ガスケット スロットルボディ.....7-35
ガスケット バルブシート.....5-13
ガスケット フュエルポンプ.....8-31
ガスショックアブソーバ.....20-28
カップ.....8-37
カップ.....12-36
カップリング ポンプ.....21-7
カバー.....23-22
カバーフック.....24-13
カムロッドL.....14-33-2
カムロッドL.....15-29-1
カムロッドS.....14-33-1
カムロッドUL.....14-33-3
カムロッドUL.....15-29-2
カムロッドブッシング.....14-35
カムロッドブッシング.....15-32
カムロッドホルダ.....13-21
カラー.....11-2
カラー 10.2-12-12.....20-24
カラー 13.5-25-13.....5-18
カラー 18-20-4.5.....14-45
カラー 18-20-4.5.....15-42
カラー 4.2-6-10.5.....7-29
カラー 6.2-12-17.....7-7
カラー 6.2-9-10.7.....10-42
カラー 6.2-9-9.3.....1-4
カラー 6.2-9-9.3.....7-15
カラー 6.7-12.7-3.....4-43
カラー 9.6-13-20.5.....30-30
カラー 9.6-13-6.5.....25-33
カラー 9.6-19-6.....25-34
<キ>
キー(マグネト).....9-5
キー ドライブプーリ.....5-3
キー ポンプインペラ.....14-17
キー ポンプインペラ.....15-14
ギヤオイル(500mL).....33-8
ギヤケースアッシ.....14-1-1
ギヤケースアッシ(W/サブウォータパイプ).....14-1-2
ギヤケースアッシ(W/サブウォータパイプ).....15-1
キャップ バルブ.....4-46
キャップアッシ(W/Oリング).....21-19
キャップナット ブラケットボルト.....18-13
キャップフック タンク.....12-26
<ク>
クイックコネクタ(メール).....27-15
クラッチ.....16-17
クラッチ.....17-19
クラッチカム.....14-32
クラッチカム.....15-28
クラッチケーブルクリップブラケット.....24-34
クランクケースヘッド.....1-46
クランクシャフトアッシ(W/ギヤ).....2-1
グランド(アースワイヤ)L=110.....4-45
グランドケーブル.....10-38
クランプ.....24-35
クランプ.....27-5
クランプ.....27-11
クランプ.....27-22
クランプ.....27-28
クランプ 21/32.....4-41
クランプ 29/64.....4-13
クランプ 6.5-14.....4-50
クランプ 6.5-14.....20-50
クランプ 6.5-14.....22-39
クランプ 6.5-47.5P.....1-42
クランプ 6.5-47.5P.....4-32
クランプ 6.5-47.5P.....5-26
クランプ 6.5-47.5P.....6-18
クランプ 6.5-47.5P.....9-12
クランプ 6.5-47.5P.....10-7
クランプ 6.5-47.5P.....10-15
クランプ 6.5-47.5P.....22-28
クランプ 6.5-47.5P.....25-8
クランプ 6.5-67P.....7-16
クランプ 6.5-87P.....1-29
クランプ 6.5-87P.....10-16
クランプ 6.5-87P.....10-26
クランプ 6.5-87P.....12-34
クランプ 6-9.5L.....20-48
クランプ 6-9.5L.....20-55
クランプ 7-120P.....3-11
クランプ 8.5-70P.....4-16
クランプ 8.5-85P.....1-19
クランプスクリュ.....18-3
クランプスクリュ(PTT).....20-3
クランプスクリュキット.....18-2
クランプスクリュキット.....20-2
クランプスクリュパッド.....18-6
クランプスクリュパッド.....20-4
クランプスクリュハンドル.....18-4
クランプブラケット(L).....18-8
クランプブラケット(PTT-L).....20-6
クランプブラケット(PTT-R).....20-1-1
クランプブラケット(PTT-R).....20-1-2
クランプブラケット(R).....18-1
グリスフィッティング.....20-14
クリップ.....4-49
クリップ.....8-8
クリップ.....8-35
グリップ.....22-16
グリップ.....28-42
グリップ φ12.....8-22a
クリップ φ6.9.....12-21
クリップ φ7.....1-41
クリップ φ7.....7-34
クリップ φ9.4.....12-15
クリップ スロットルワイヤ.....22-23

クリップ フュエルパイプ φ10 1-36
クリップ フュエルパイプ φ10 4-52
クリップ フュエルパイプ φ10 8-18
クリップ フュエルパイプ φ10 8-34
クリップ フュエルパイプ φ10 8-47
クリップ フュエルパイプ φ10 24-52
クリップ フュエルパイプ φ10 31-26
クレビス アッシ 30-29
グロメット 3-7
グロメット 24-21
グロメット 28-34
グロメット 17-2.7 24-20
グロメット 17-2.7 24-23
グロメット 17-3 24-27
グロメット 18-2.5 24-22
グロメット FFP 6-8
グロメット FFP ロワ 6-9
グロメット PTTスイッチアッシ 23-14
グロメット エキゾーストハウジング 13-25
グロメット ケーブルターミナル 6-12
グロメット ケーブルターミナル アッパ 6-13
グロメット コード 24-19
グロメット スプラッシュパン 13-29
グロメット スロットルシャフト 24-25
グロメット スロットルホール 24-24-2
グロメット スロットルワイヤ 24-24-1
グロメット パイプ 6-19
グロメット バッテリコード 24-18
グロメット パワートリム・チルトスイッチ 24-2
グロメット リモコンケーブル 24-17
<ケ>
ケースアッシ FFP 6-3
ケーブルジョイント 7-8
ケーブルジョイント 25-25-1
ケーブルジョイント 25-25-2
ケーブルターミナル 28-29
ケーブルターミナル プラグ 10-21-1
ケーブルターミナル プラグ 10-21-2
ケーブルターミナル プラグ 10-21-3
ケーブルターミナル プラグ 10-22-1
ケーブルターミナル プラグ 10-22-2
ケーブルターミナル プラグ 10-22-3
ケーブルターミナル プラグ 23-24
ケーブルターミナル プラグ 23-25
ケーブルターミナル プラグ 23-26
ケーブルターミナルアッシ (-) 6-11
ケーブルターミナルアッシ (+) 6-10
ケ-ブルクリップブラケットアッシ 24-33
<コ>
コイルブラケット 9-10
高圧フュエルフィルタ 4-38
高地補正キット 34-7
コーションデカール (A) 26-14
コーションデカール B 11-4
コード FFP 6-14
コードアッシ 10-20
コードアッシ B 32-11-1
コードアッシ B 32-11-2
コードアッシ B L=6200 29-11
コードアッシ C L=1000 23-21
コードカバー FFP 6-15
コードホルダ 22-30
コントロールヘッドアッシ(トップ-シングル) 32-1
コントロールヘッドアッシ（トップ-ツイン） 32-2
コントロールレバー 28-43
コンプレッサクランクシャフトアッシ 5-16
コンプレッサヘッドアッシ 5-6
<サ>
サーモスタット 1-11
サーモスタットキャップアッシ 1-12
サーモスタットキャップガスケット 1-13
サブウォータインレットストレーナ 14-30
サブウォータインレットストレーナ 15-26
<シ>
シーリングキャップ 3-8
シール コンプレッション 4-19
シール ラバー スプラッシュパン 13-30
シール ラバー フィラリッド 26-12
シールリング 13.8-22-5 25-15
シールリング ドラックリンク 25-39
シールリング フックレバー 24-10
シールワッシャ 21-21
シフトアーム 25-1
シフトギヤアッシ 28-28
シフトデカール 25-40
シフトポジションサイドデカール 29-16
シフトポジションデカール 29-15
シフトレバー 25-14
シフトレバー (リモートコントロール) 25-19
シフトレバーシャフト 25-11
シフトレバーストッパ 25-6-1
シフトレバーストッパ 25-6-2
シフトレバーストッパ 25-7
シフトレバーロッド 25-24
シフトロッド 25-31
シフトロッドジョイント 14-38
シフトロッドジョイント 15-35
シフトロッドレバー 25-4
シフトロッドレバー 25-5
シム 32.9-26-0.5 14-22
シム 36.9-30-0.5 15-19
シム 36-44-0.1 16-15-3
シム 36-44-0.15 16-15-2
シム 36-44-0.3 16-15-1
シム 41-51.5-0.1 14-12-1
シム 41-51.5-0.15 14-12-2
シム 41-51.5-0.3 14-12-3
シム 41-51.5-0.5 14-12-4
シム 44-50.5-0.1 15-8-1
シム 44-50.5-0.15 15-8-2
シム 44-50.5-0.3 15-8-3
ジョイント アッシ (アウトレット) 27-3
ジョイント アッシ (アウトレット) 27-20
ジョイント アッシ (インレット) 27-2
ジョイント アッシ (インレット) 27-19
ジョイント メタル 21-23
ジョイントホース 15-41
ショルダーボルト 18-7
ショルダーボルト 20-5
ショルダボルト 6-8 19-19
シリンダ・クランクケースアッシ 1-1
シリンダピン (アッパ) 20-35-2
シリンダピン (アッパ) 20-35-1
シリンダピン (ロワ) 20-40-1
シリンダピン (ロワ) 20-40-2
シリンダヘッド 1-15
シリンダヘッドガスケット 1-16
シリンダヘッドカバー 1-7
シリンダヘッドカバーガスケット 1-8
<ス>
スイッチボックス 23-1
スイッチボックスカバー 23-2
スイベルブラケット 18-20
スイベルブラケットアッシ (PTT) 20-13
スイベルブラケットシャフトアッシ 18-9
スイベルブラケットシャフトアッシ 20-9
スクリュ 3-4
スクリュ 7-30
スクリュ 8-2
スクリュ 8-3
スクリュ 8-6
スクリュ 8-24
スクリュ 8-28
スクリュ 9-3
スクリュ 11-13
スクリュ 13-31
スクリュ 14-8
スクリュ 15-4
スクリュ 15-27
スクリュ 20-49
スクリュ 20-51
スクリュ 20-56
スクリュ 21-6
スクリュ 21-9
スクリュ 22-8
スクリュ 22-31
スクリュ 23-3
スクリュ 23-13
スクリュ 23-16
スクリュ 28-2
スクリュ 28-4
スクリュ 28-16
スクリュ 28-18
スクリュ 28-40
スクリュ 29-4
スクリュ 29-6

スクリュ 32-15-1
スクリュ 32-15-2
スクリュ 4-20 P0.5.....24-38
スタータケーブル L=270.....10-29
スタータソレノイド 10-27
スタータモータアッシ.....11-9
スタータモータバンド.....11-26
スタッドボルト.....13-17
スタッドボルト.....17-4
スタッドボルト.....22-33
スタッドボルト.....22-38
スタッドボルト.....30-26
ステアリングシャフトアッシ 18-21
ステアリングシャフトアッシ 20-16
ステアリングフック 30-25
ステアリングブラケット.....22-32
ステー ブザー 23-19
ストッパ A プロペラ.....17-25
ストッパ ドライブシャフトハウジング.....13-22
ストッパ ドライブシャフトハウジング.....14-40
ストッパ プロペラ.....16-27
ストッパ リバースロックレバーグリップ.....19-27
ストッパ リバースロックレバーグリップ.....20-31
ストップスイッチアッシ (W/カール) 29-9
ストップスイッチアッシ (W/カール) 32-9-1
ストップスイッチアッシ (W/カール) 32-9-2
ストップスイッチアッシ（W/カール） 23-8
ストップスイッチランヤードアッシ (W/カール) 23-9
ストップスイッチランヤードアッシ (W/カール) 29-10
ストップスイッチランヤードアッシ (W/カール) 32-10-1
ストップスイッチランヤードアッシ (W/カール) 32-10-2
スナップ クラッチピン 16-19
スナップ クラッチピン 17-18
スナップピン.....20-12
スナップピン d=8 7-10
スナップピン d=8 25-29-1
スナップピン d=8 25-29-2
スナップリテーナ d＝8 25-12
スパークテスタ (PET-4000) 33-7
スパークプラグ (IZFR6Q) 1-32
スパークプラグデカール.....11-7
スピードメータアッシ (50MPH).....31-2-1
スピードメータアッシ (75MPH).....31-2-2
スピードメータキット (50MPH).....31-1-1
スピードメータキット (75MPH).....31-1-2
スピードメータセンサ.....31-10-1
スピードメータセンサ.....31-10-2
スピードメータチューブ L=6000.....31-8-1
スピードメータチューブ L=6000.....31-8-2
スピードメータバンド 31-9-1
スピードメータバンド 31-9-2
スプリットピン.....19-16
スプリットピン.....25-27
スプリットピン.....25-35
スプリットピン 3-25.....16-30
スプリング.....22-13
スプリング B 19-25
スプリング クラッチ.....16-20
スプリング クラッチ.....17-21
スプリングピン.....20-25
スプリングピン.....22-6
スプリングピン 14-34
スプリングピン 14-39
スプリングピン 3.5-10.....15-31
スプリングピン 3.5-14.....15-30
スプリングリテーナ クラッチ.....16-21
スプリングリテーナ クラッチ.....17-20
スプリングワッシャ 9-4
スプリングワッシャ 11-18
スプリングワッシャ 11-21
スプリングワッシャ 12-6
スプリングワッシャ 24-16
スプリングワッシャ 24-39
スプリングワッシャ 25-22
スプリングワッシャ 26-7
スプリングワッシャ 30-15
スプリングワッシャ 30-22
スプリングワッシャ 31-7-1
スプリングワッシャ 31-7-2
スプリングワッシャ 31-16
スプリングワッシャ 31-23
スプリングワッシャ 31-35
スプリングワッシャ 31-45
スペーサ 28-5
スペーサ 6.2-9-15.7.....6-24
スペーサ 6.2-9-15.7.....8-16
スペーサ 6.2-9-15.7.....12-33
スペーサ 6.2-9-15.7.....24-4
スペーサ 6.2-9-16.6.....10-6
スペーサ スロットルシャフト A.....22-5
スラストプレート 28-10
スラストプレート (アッパ).....18-23
スラストプレート (アッパ).....20-19
スラストプレート (ロワ).....18-24
スラストプレート クランクシャフト 2-13
スラストホルダ A プロペラ 17-24
スラストホルダ プロペラ 16-26
スラストロッド.....18-18
スラストロッドスプリング 18-19
スロットルアーム 28-23
スロットルカム.....7-20
スロットルシャフト 22-3
スロットルシャフトサポート 22-9
スロットルシャフトダンパ A 22-4
スロットルデカール 22-15
スロットルフリクションアーム 28-24
スロットルボディアッシ.....7-19-1
スロットルボディアッシ.....7-19-2
スロットルボディアッシ.....7-19-3
スロットルリミッタアーム 7-11
スロットルリミッタロッド 3.5-56.....7-17
スロットルワイヤ 22-24
スロットルワイヤブラケット 22-25
<セ>
セーフティロープ 6-1600.....30-2
セッティングピース チルトストッパー.....19-6
セッティングプレート 19-3
<ソ>
ソレノイドスイッチブラケットアッシ 10-23
<タ>
ターミナルキャップ 11-31
ターミナルキャップ スタータ.....10-30
ターミナルキャップ スタータ.....10-43
ダイヤフラムガスケット B.....8-26
ダイヤフラムガスケットセット 8-30
ダウェルピン 4-10.....1-9
ダウェルピン 4-10.....5-25
ダウェルピン 4-10.....5-31
ダウェルピン 4-10.....9-13
ダウェルピン 4-10.....14-25
ダウェルピン 6-12.....1-2
ダウェルピン 6-12.....1-17
ダウェルピン 6-12.....13-6
タコメータ (W/オイルランプ).....35-3
タコメータ (W/オイルランプ).....35-15
タコメータアッシ 31-40
タコメータアッシ (W/オイルランプ) 30-9
タコメータリードワイヤ L=2000.....31-46
タッチアップペイント (アクアマリン).....33-9
タッピングスクリュ 6-16 10-25
ダンパ (アッパ).....18-42
ダンパ (ロワ).....18-30
ダンパ スタータモータ 11-25
ダンパラバー.....18-33
<チ>
チェックバルブ.....1-37
チェックバルブ.....8-27
チェックバルブコンプリート 12-12
チルトアシスタントシャフト 19-9
チルトアシスタントスプリング (L).....19-8
チルトアシスタントスプリング (R).....19-7
チルトスイッチカバー.....28-41
チルトスイッチプラグ.....28-44
チルトストッパアッシ.....19-1
チルトストッパアッシ.....20-23-1
チルトストッパアッシ.....20-23-2
チルトストッパグリップ 20-27
チルトストッパスプリング 20-26
チルトストッパレバー.....19-17
チルトハンドル.....26-9
<ツ>
ツインリモートコントロールボックスキット.....30-24
ツールキット.....30-1
<テ>
ディスクスプリング.....4-17
ディスタンスピース.....18-14

ティラハンドル.....22-2
ティラハンドルアッシ.....22-1
ティラハンドルホルダアッシ.....22-37
テーパードローラベアリング 32007.....16-1
テーパードローラベアリング 32007JR.....17-1
テーパードローラベアリング 6304.....14-14
デカール (トーハツ).....29-14
デカール (トーハツ).....32-5
デカール (トーハツ).....32-20
デカール (レバー).....29-13
デカールセット (MD30B2EU).....26-13-3
デカールセット (MD40B2).....26-13-2
デカールセット (MD40B2イタリア).....26-13-4
デカールセット (MD50B2).....26-13-1
テストプロペラアッシ.....33-2
デテントスプリング.....28-19
デテントリテーナ.....28-17
デテントローラ.....28-14
<ト>
トップカウルアッシ.....26-1
トップカウルシール.....26-2
ドライブギヤ.....28-30
ドライブシャフト (L).....14-13-2
ドライブシャフト (L).....15-9-1
ドライブシャフト (S).....14-13-1
ドライブシャフト (UL).....14-13-3
ドライブシャフト (UL).....15-9-2
ドライブシャフトスプリング.....14-15
ドライブシャフトスプリング.....15-11
ドライブシャフトスプリングガイド.....15-12
ドライブシャフトハウジング (L).....13-10-2
ドライブシャフトハウジング (S).....13-10-1
ドライブシャフトハウジングガスケット.....13-11
ドライブプーリ.....5-1
ドライブベルト.....5-32
ドラッグリンクアッシ E.....25-32
ドリブンプーリ.....5-27
トリムセンサ L=1700.....20-52
トリムタブ.....16-2
トリムタブ.....17-2
トリムタブガスケット.....17-3
トリムメーターアッシ.....30-17
トリムメーターアッシ.....35-5
トリムメーターアッシ.....35-17
ドレンスクリュ.....8-10
<ナ>
ナイロンナット.....18-34
ナイロンナット.....22-34
ナイロンナット.....25-23
ナイロンナット.....13-32
ナイロンナット.....14-9
ナイロンナット.....15-5
ナイロンナット.....17-5
ナイロンナット.....30-27
ナイロンナット 3/8.....25-37
ナイロンナット 3/8.....30-33
ナイロンナット 6P1.0.....26-10
ナイロンナット 7/8.....18-10
ナット.....7-25
ナット.....8-29
ナット.....8-42
ナット.....11-19
ナット.....12-11
ナット.....12-40
ナット.....13-18
ナット.....18-15
ナット.....20-34
ナット.....22-22
ナット.....22-41
ナット.....26-8
ナット.....28-7
ナット.....28-32
ナット.....30-14
ナット.....30-23
ナット.....31-6-1
ナット.....31-6-2
ナット.....31-15
ナット.....31-22
ナット.....31-34
ナット.....31-44
ナット (No.10-32VNF).....25-26
ナット 18P1.5.....9-6
ナット M10P1.25.....24-46
ナット P1.25.....30-8
ナット プーリ.....5-2
ナット ベベルギア B.....15-7
ナット ベベルギヤ B.....14-11
ナット(マグネット） 10-P1.25.....5-28
<ニ>
ニップル.....5-7
ニップル ウォータ.....24-50
ニップル パルス.....31-28
ニュートラルスイッチ.....24-30
ニュートラルスイッチ (リモートコントロール).....29-3
ニュートラルスイッチアクチエータ.....24-31
ニュートラルスイッチコード (グリーン).....32-16-1
ニュートラルスイッチコード (グリーン).....32-16-2
ニュートラルロックアーム.....28-37
ニュートラルロックスプリング.....28-38
</ハ>
パイプ.....12-13
パイプ.....12-14
パイプ.....12-16-1
パイプ.....12-16-2
パイプ.....12-16-3
パイプ.....12-17-1
パイプ.....12-17-2
パイプ.....12-18
パイプ.....12-19
パイプ.....12-20
パイロットランプアッシ.....23-10
バッテリケーブル L=3000.....11-29
バルブアッシ.....21-10
バルブアッシ (プレッシャーチェック）.....4-7
パワーヘッドガスケットセット.....34-2
ハンガ.....1-20
バンドリードワイヤ.....29-17
バンドリードワイヤ 104.....4-53
バンドリードワイヤ 104.....7-33
バンドリードワイヤ 104.....8-21
バンドリードワイヤ 104.....12-22
バンドリードワイヤ 158.....10-10
バンドリードワイヤ 158.....10-13
バンドリードワイヤ 200.....32-12-1
バンドリードワイヤ 200.....32-12-2
<ヒ>
ピストン (0.5O/S).....2-5-2
ピストン (STD).....2-5-1
ピストン・コネクティングロッドアッシ.....5-14
ピストンピン.....2-7
ピストンピンクリップ.....2-8
ピストンリング (0.5O/S).....2-6-2
ピストンリング (STD).....2-6-1
ピックアップエルボアッシ (25L).....27-14
ピックアップコイル.....9-8
ピニオンアッシ.....11-10
ヒューズ 15A.....10-35
ヒューズ 25A.....10-34
ヒューズ 30A.....10-33
ヒューズデカール.....11-5
ヒューズホルダブラケット.....10-24
ヒューズワイヤアッシ.....10-31
ヒューズワイヤアッシ.....10-32
ピン クラッチ.....16-18
ピン クラッチ.....17-17
<フ>
フィッティングプレート.....30-13
フィッティングプレート.....31-5-1
フィッティングプレート.....31-5-2
フィッティングプレート.....31-14
フィッティングプレート.....31-21
フィッティングプレート.....31-33
フィッティングプレート.....31-43
フィッテイングプレート.....30-21
フィラリッド.....26-3
フィラリッド スプリング.....26-5
フィラリッドヒンジ.....26-4
フィルタ.....8-39
フィルタ.....12-38
フィルタ.....21-16
フィルタ.....27-17
ブザーコーションデカール.....30-3
フックレバー.....24-8
プッシュロッド クラッチ.....16-22
プッシュロッド クラッチ.....17-22
ブッシング.....19-21

ブッシング 1 11-14
ブッシング 10.2-12-29.5 19-2
ブッシング 13-16-40 20-36-1
ブッシング 13-16-40 20-36-2
ブッシング 13-17-19.5 20-37-1
ブッシング 13-17-19.5 20-37-2
ブッシング 14-16.5-17.7 25-17
ブッシング 18-24-22 20-41-1
ブッシング 18-24-22 20-41-2
ブッシング 18-24-60 20-42-1
ブッシング 18-24-60 20-42-2
ブッシング 2 11-15
ブッシング 22-25-35.5 18-12
ブッシング 26-32 18-11
ブッシング 26-32 18-22
ブッシング 6-24-7 7-21
ブッシング 8.4-10-11 22-7
ブッシング 9-20-20.8 12-8
ブッシング A 28-11
ブッシング A ステアリングハンドル 22-17
ブッシング B 28-3
ブッシング B ステアリングハンドル 22-20
ブッシング D 28-47
ブッシング シフトレバーシャフト 25-2
ブッシング ブラケットシャフト 20-17
ブッシング ブラケットボルト 20-10
ブッシングフックレバー 24-11
フュエルインジェクタアダプタ 4-20
フュエルインジェクタアッシ 4-21
フュエルインジェクタインサート 4-18
フュエルゲージベントキャップアッシ 27-13
フュエルコネクタ 27-9
フュエルコネクタ 27-10
フュエルコネクタ 27-26
フュエルコネクタ 27-27
フュエルコネクタ (エンジン メール) 24-45
フュエルコネクタマーク 27-8
フュエルコネクタマーク 27-25
フュエルタンクアッシ 25L(トーハツ) 27-12
フュエルフィードポンプ 6-2
フュエルフィードポンプアッシ 6-1
フュエルフィルタアッシ 8-36
フュエルフィルタバンド 4-4
フュエルフィルタラバーマウント 4-39
フュエルホース (W/プロテクタ) 4-48
フュエルホース (W/プロテクタ) 8-19-2
フュエルホース (W/プロテクタ) 8-46-2
フュエルホース (W/プロテクタ) 24-49
フュエルホースアッシ 4-35
フュエルポンプアッシ 8-22
フュエルレギュレータアッシ 4-24
フライホイール (W/リングギヤ) 9-1
プライマバルブ 27-4
プライマバルブ 27-21
プライマバルブアッシ 27-1
プライマバルブアッシ 27-18
プラグ 14-3
プラグ 24-26
プラグ 10.5 4-8
プラグ ウォータ 14-5
プラグ チョークノブ 24-7
プラグキャップ (W/レジスタンス) 10-9
プラグキャップ (W/レジスタンス) 10-12
プラグストッパ 4-10
ブラケット ファンモータ 11-24
ブラシホルダアッシ 11-12
フラッシングプラグ 33-1
フリースロットルスプリング 28-22
フリースロットルドラム 28-46
フリースロットルレバー 28-15
フリースロットルローラ 28-20
フリクションスプリング 18-53
フリクションスプリング 19-5
フリクションピース 18-52
フリクションピース 22-11
プレート フィルタ 8-44
プレート フィルタ 12-42
プレート ロックアーム 28-48
ブレーカ 21-4
プレコートボルト 16-10
プレコートボルト 8-30 17-11
プレコート　ボルト 6-25 3-5
プレッシャデカール 11-6
プレリギングキット 35-1
プレリギングキット 35-8
プレリギングキット 35-13
プレリギングキット 35-20
フロート フュエルフィルタ 8-40
フロート ベーパセパレータ 8-4
フロートアームピン 8-5
フロートバルブアッシ (W/バルブピン) 8-7
プロテクタ 4-37
プロテクタ φ18-150 4-40
プロペラアッシ (11″) 16-24-2
プロペラアッシ (12″) 16-24-3
プロペラアッシ (13″) 16-24-1
プロペラアッシ (14″) 16-24-6
プロペラアッシ (15″) 16-24-7
プロペラアッシ (7″) 16-24-4
プロペラアッシ (9″) 16-24-5
プロペラアッシ 10″ 17-23-3
プロペラアッシ 11″ 17-23-4
プロペラアッシ 12″ 17-23-1
プロペラアッシ 13″ 17-23-5
プロペラアッシ 14″ 17-23-6
プロペラアッシ 15″ 17-23-7
プロペラアッシ 16.5″ 17-23-8
プロペラアッシ 17.5″ 17-23-9
プロペラアッシ 9″ 17-23-2
プロペラシャフト 16-16
プロペラシャフト 17-16
プロペラシャフトハウジング 16-5
プロペラシャフトハウジング 17-7
プロペラシャフトハウジングアッシ 16-4
プロペラシャフトハウジングアッシ 17-6
プロペラナット 16-28
プロペラハードウェアキット 16-25
<へ>
ベーパセパレータ 8-1
ベベルギヤ A アッシ 16-12
ベベルギヤ B 14-10
ベベルギヤ B 15-6
ベベルギヤ C 16-13
ベベルギヤ C 17-14
ベベルギヤアッシA 17-12
ベルトガイド 5-4
<ホ>
ホース 1-33
ホース 1-34
ホース 1-35
ホース 1-38
ホース 1-39
ホース 1-40
ホース 4-12
ホース 4-47
ホース 4-51
ホース 5-34
ホース 7-32
ホース 8-17-1
ホース 8-19-1
ホース 8-33-1
ホース 8-46-1
ホース 24-48
ホース 24-51
ホース 27-6
ホース 27-7
ホース 27-23
ホース 27-24
ホース 31-25
ボール スチール 3/8 16-23
ボールジョイント B 7-24
ボールジョイントコネクタ 12-10
ホールディングプレート 4-30
ホールディングプレート 4-31
ホールディングプレート 4-42
ボールベアリング 6007 16-6
ボールベアリング 6203 5-17
ボールベアリング 6205R 15-10
ボトムカウル 24-1
ボルト 1-3
ボルト 1-5
ボルト 1-10
ボルト 1-14
ボルト 1-21
ボルト 1-26
ボルト 1-31

ボルト 1-43
ボルト 1-50
ボルト 1-50a
ボルト 3-10
ボルト 4-11
ボルト 4-14
ボルト 4-44
ボルト 5-10
ボルト 5-24
ボルト 5-30
ボルト 6-16
ボルト 6-20
ボルト 6-21
ボルト 7-5
ボルト 7-12
ボルト 7-13
ボルト 7-22
ボルト 8-12
ボルト 8-32
ボルト 8-45
ボルト 9-9
ボルト 9-11
ボルト 10-2
ボルト 10-14
ボルト 10-17
ボルト 10-19
ボルト 10-28
ボルト 10-39
ボルト 11-8
ボルト 11-20
ボルト 11-23
ボルト 11-27
ボルト 11-28
ボルト 11-30
ボルト 12-29
ボルト 12-43
ボルト 13-5
ボルト 13-8
ボルト 13-12
ボルト 13-15
ボルト 13-23
ボルト 13-26
ボルト 14-29
ボルト 14-41
ボルト 14-42
ボルト 15-24
ボルト 16-3
ボルト 18-37
ボルト 18-39
ボルト 18-41
ボルト 18-46
ボルト 18-49
ボルト 18-51
ボルト 18-54
ボルト 19-4
ボルト 20-8
ボルト 20-15-1
ボルト 20-15-2
ボルト 20-18
ボルト 20-32
ボルト 20-46
ボルト 20-53
ボルト 20-58
ボルト 21-13
ボルト 21-14
ボルト 21-18
ボルト 22-10
ボルト 22-14
ボルト 22-26
ボルト 22-29
ボルト 22-40
ボルト 23-20
ボルト 24-5
ボルト 24-14
ボルト 24-29
ボルト 24-36
ボルト 24-37
ボルト 24-44
ボルト 25-9
ボルト 25-21
ボルト 26-6
ボルト 28-13
ボルト 28-33
ボルト 1-44
ボルト 14-31
ボルト 20-38-1
ボルト 20-38-2
ボルト 10-40 15-38
ボルト 3/8-19 25-36
ボルト 3/8-35 30-34
ボルト 3/8-43 30-32
ボルト 5-16 24-40
ボルト 6-25プレコート 7-36
ボルト 8-170 18-17
ボルト 8-35 15-36
ボルト スターンブラケット L=105 30-5
ボルト ロワマウントラバー 18-31
ボルトメータアッシ 31-11
ポンプ 21-12
ポンプカバー 8-23
ポンプケース (アッパ) 14-18
ポンプケース (ロワ) 14-21
ポンプケース (ロワ) 15-18
ポンプケースガスケット 14-28
ポンプケースガスケット 15-23
ポンプケースサブアッシ (アッパ) 15-15
ポンプケースライナ 14-19
ポンプケースライナ クロムメッキ 15-16
ポンプダイヤフラム 8-25
<マ>
マウント モータカバーロア 8-14
マウント モータカバーロア 10-4
マウント モータカバーロア 12-31
マウント モータカバーロア 24-3
マウントブラケット 18-29
マウントブラケット 20-22
マウントホールディングプレート (アッパ) 18-45
マウントホールディングプレート (ロワ) 18-36
マニュアルバルブ (W/Oリング×2) 21-20
<メ>
メインスイッチアッシ 23-4
メインスイッチアッシ 29-1
メインスイッチアッシ 32-6-1
メインスイッチアッシ 32-6-2
メインスイッチキー (F-301) 23-5-1
メインスイッチキー (F-302) 23-5-2
メインスイッチキー (F-303) 23-5-3
メインスイッチキー (No.301) 29-2-1
メインスイッチキー (No.301) 32-7-1
メインスイッチキー (No.301) 32-7-4
メインスイッチキー (No.302) 29-2-2
メインスイッチキー (No.302) 32-7-2
メインスイッチキー (No.302) 32-7-5
メインスイッチキー (No.303) 29-2-3
メインスイッチキー (No.303) 32-7-3
メインスイッチキー (No.303) 32-7-6
メインスイッチキーカバリングキャップ 23-6
メインスイッチキャップ (ウォータープルーフ) 23-7
メインスイッチデカール 22-36
メインスイッチパネル 32-14-1
メインスイッチパネル 32-14-2
メインベアリング 6305 2-2
メインベアリング アッパ 2-10
メーターランプスイッチ 31-36
メーターリードワイヤ L=8000 30-16
メーターリードワイヤ L=8000 35-4
メーターリードワイヤ L=8000 35-10
メーターリードワイヤ L=8000 35-16
メーターリードワイヤ L=8000 35-22
メータダンパ 30-12
メータダンパ 30-20
メータダンパ 31-4-1
メータダンパ 31-4-2
メータダンパ 31-13
メータダンパ 31-20
メータダンパ 31-32
メータダンパ 31-42
メータバルブ 30-18
メータバルブ 12V-1.7W 31-12
メータバルブ 12V-1.7W 31-19
メータバルブ 12V-1.7W 31-31
メータバルブ 12V-1.8W 30-11
メータバルブ 12V-1.8W 31-3-1
メータバルブ 12V-1.8W 31-3-2
メータバルブ 12V-1.8W 31-41
メータバルブキャップ 30-19

<モ>
モーターアッシ.....21-1
モータブラケットアッシ.....21-3
<ラ>
ラバーマウント.....6-25
ラバーマウント.....7-28
ラバーマウント (アッパ).....18-40
ラバーマウント (ロワ).....18-28
ラバーマウント 8.5-12-2.....6-23
ラバーマウント 8.5-12-2.....10-41
ラバーマウント 8.5-14-2.5.....8-15
ラバーマウント 8.5-14-2.5.....10-5
ラバーマウント 8.5-14-2.5.....12-32
ラバーマウント 9-16-4.3.....11-3
ランプパネルアッシ.....35-26
<リ>
リードバルブアッシ.....3-2
リードバルブアッシ.....5-12
リードワイヤ.....35-25
リードワイヤバンド.....31-27
リギングコードキット.....35-14
リギングコードキット.....35-21
リギングボルトセット.....30-4
リザーブタンク.....21-17
リバースロック (L).....19-10
リバースロック (R).....19-11
リバースロックアーム.....19-12
リバースロックシャフト.....19-13
リバースロックスプリング (L).....19-18-1
リバースロックスプリング (S).....19-18-2
リバースロックレバー.....20-29
リバースロックレバーグリップ.....19-26
リバースロックレバーグリップ.....20-30
リバースロックロッド.....19-15
リベット 3-22.....18-5
リモートコントロールヘッド (トップ-シングル).....32-3
リモートコントロールヘッド (トップ-ツイン).....32-4
リモートコントロールヘッドアッシ (RC5F).....28-1
リモートコントロールヘッドアッシ (RC5F).....35-2
リモートコントロールヘッドアッシ (RC5F).....35-9
リヤハウジング.....28-35
リヤパネル.....28-36
リリーフバルブアッシ.....21-11
リンク B.....19-24
リングギヤカバー.....11-1
リンクロッドアッシ (TPS).....7-4
リンクロッドアッシ (スロットル).....7-3
<レ>
レクチファイヤコンプリート.....10-18
<ロ>
ローラ.....28-9
ローラベアリング 17-21-27.....2-9
ローラベアリング 202720.....17-13
ローラベアリング 22-30-30.....14-2
ローラベアリング 22-30-30.....16-8
ローラベアリング プロペラシャフト.....15-2
ローラベアリング プロペラシャフト.....17-9
ローラリテーナ.....28-21
ロックプレート アッパ.....18-44
ロッドスナップ 5-3.....7-2
ロッドスナップ B 3.5-4.....7-18
ロー/-ミェーションホース.....8-17-2
ロー/-ミェーションホース.....8-33-2
ロワユニットアッシ (L).....34-5-2
ロワユニットアッシ (L).....34-5-4
ロワユニットアッシ (S).....34-5-1
ロワユニットアッシ (UL).....34-5-3
ロワユニットアッシ (UL).....34-5-5
ロワユニットガスケットセット.....34-4
<ワ>
ワーニングランプデカール.....23-23
ワイヤカバー.....28-31
ワッシャ.....1-6
ワッシャ.....1-22
ワッシャ.....1-27
ワッシャ.....1-28
ワッシャ.....4-15
ワッシャ.....6-17
ワッシャ.....7-14
ワッシャ.....7-26
ワッシャ.....8-43
ワッシャ.....11-11
ワッシャ.....11-17
ワッシャ.....11-22
ワッシャ.....12-4
ワッシャ.....12-41
ワッシャ.....13-13
ワッシャ.....13-19
ワッシャ.....15-25
ワッシャ.....15-37
ワッシャ.....15-39
ワッシャ.....16-11
ワッシャ.....18-16
ワッシャ.....18-27
ワッシャ.....18-35
ワッシャ.....18-43
ワッシャ.....19-23
ワッシャ.....20-33-1
ワッシャ.....20-33-2
ワッシャ.....22-21
ワッシャ.....22-27
ワッシャ.....22-35
ワッシャ.....23-17
ワッシャ.....25-10
ワッシャ.....25-30
ワッシャ.....28-8
ワッシャ.....28-12
ワッシャ.....28-26
ワッシャ.....30-7
ワッシャ.....30-28
ワッシャ 10.5-20-3.2.....5-29
ワッシャ 12.5-24-1.....24-32
ワッシャ 13-34-3.....18-32
ワッシャ 13-34-3.....30-6
ワッシャ 14-22-1.....24-9
ワッシャ 14-22-1.....25-16
ワッシャ 17-32-3.....16-29
ワッシャ 18.2-34-1.....20-43-1
ワッシャ 18.2-34-1.....20-43-2
ワッシャ 19-34-3.....9-7
ワッシャ 22.1-28-2.5.....17-15-3
ワッシャ 22.1-28-2.75.....17-15-2
ワッシャ 22.1-28-3.....16-14
ワッシャ 30-45-1.....22-18
ワッシャ 4.2-12.5-0.8.....7-31
ワッシャ 6.5-21-1.....7-6
ワッシャ 6.5-21-1.....7-23
ワッシャ 6.5-21-1.....8-13
ワッシャ 6.5-21-1.....10-3
ワッシャ 6.5-21-1.....12-30
ワッシャ 6.5-21-1.....24-6
ワッシャ 6.5-23-1.5.....20-39-1
ワッシャ 6.5-23-1.5.....20-39-2
ワッシャ 6-16-1.5.....6-22
ワッシャ 6-16-1.5.....10-40
ワッシャ 6-16-1.5.....19-20
ワッシャ 6-16-1.5.....20-54
ワッシャ 6-16-1.5.....24-15
ワッシャ 6-16-1.5.....25-20
ワッシャ 6-16-1.5.....26-11
ワッシャ 8.5-18-1.6.....7-9
ワッシャ 8.5-18-1.6.....19-22
ワッシャ 8.5-18-1.6.....25-13
ワッシャ 8.5-18-1.6.....25-28-1
ワッシャ 8.5-18-1.6.....25-28-2
ワッシャ 8.5-19.5-3.2.....1-18
ワッシャ 9.6-18-2.....25-38
ワッシャ 9.6-18-2.....30-31
ワッシャ ベベルギア C 22.1-28-3.0.....17-15-1
ワッシャ メタル 10.2-17-2.....5-9
ワッシャ メタル 10.2-17-2.....6-6
ワッシャ リモコンボックス.....28-6
ワッシャ ロックアーム.....28-39

INDEX

<1>
11P Extension Cord L=2000 33-3
<2>
2P Extension Cord L=2000 33-4
<A>
Adapter 5-8
Adapter 6-5
Adjust Screw Throttle Friction 28-27
Adjusting Nut 22-12
Advancer Arm 7-1
Air Chamber Ass'y 3-1
Air Chamber Cover Ass'y 3-6
Air Chamber Cover Gasket 3-9
Air Compressor Ass'y 5-5
Air Compressor Cylinder Ass'y 5-20
Air Compressor Housing Ass'y 5-21
Air Compressor Piston Ring 5-15
Air Filter Ass'y 5-33
Air Hose Ass'y 4-33
Air Injector Complete 4-1
Air Rail Ass'y 4-5
Air Rail Decal 4-54
Air Regulator Ass'y 4-27
Air Vent Bolt 12-3
Alternator Ass'y 9-2
Altitude Adjustment Kit 34-7
Anode 1-30
Anode 18-38
Anode Stern Bracket 20-7
Apron 13-28
Armature Ass'y 21-2
Assist Cord (Black) L=200 31-38
Assist Cord (Black) L=200 35-7
Assist Cord (Black) L=200 35-12
Assist Cord (Black) L=200 35-19
Assist Cord (Black) L=200 35-24
Assist Cord (Blue) L=200 31-37
Assist Cord (Red) L=200 29-12
Assist Cord (Red) L=200 31-39
Assist Cord (Red) L=200 32-13-1
Assist Cord (Red) L=200 32-13-2
<B>
Ball Bearing 6007 16-6
Ball Bearing 6203 5-17
Ball Bearing 6205R 15-10
Ball Joint B 7-24
Ball Joint Connector 12-10
Ball Steel 3/8 16-23
Band Lead Wire 29-17
Band Lead Wire 104 4-53
Band Lead Wire 104 7-33
Band Lead Wire 104 8-21
Band Lead Wire 104 12-22
Band Lead Wire 158 10-10
Band Lead Wire 158 10-13
Band Lead Wire 200 32-12-1
Band Lead Wire 200 32-12-2
Battery Cable L=3000 11-29
Belt Guide 5-4
Bevel Gear Ass'y (A) 16-12
Bevel Gear Ass'y (A) 17-12
Bevel Gear B 14-10
Bevel Gear B 15-6
Bevel Gear C 16-13
Bevel Gear C 17-14
Bolt 1-3
Bolt 1-5
Bolt 1-10
Bolt 1-14
Bolt 1-21
Bolt 1-26
Bolt 1-31
Bolt 1-43
Bolt 1-44
Bolt 1-50
Bolt 1-50a
Bolt 3-10
Bolt 4-11
Bolt 4-14
Bolt 4-44
Bolt 5-10
Bolt 5-24
Bolt 5-30
Bolt 6-16
Bolt 6-20
Bolt 6-21
Bolt 7-5
Bolt 7-12
Bolt 7-13
Bolt 7-22
Bolt 8-12
Bolt 8-32
Bolt 8-45
Bolt 9-9
Bolt 9-11
Bolt 10-2
Bolt 10-14
Bolt 10-17
Bolt 10-19
Bolt 10-28
Bolt 10-39
Bolt 11-8
Bolt 11-20
Bolt 11-23
Bolt 11-27
Bolt 11-28
Bolt 11-30
Bolt 12-29
Bolt 12-43
Bolt 13-5
Bolt 13-8
Bolt 13-12
Bolt 13-15
Bolt 13-23
Bolt 13-26
Bolt 14-29
Bolt 14-31
Bolt 14-41
Bolt 14-42
Bolt 15-24
Bolt 16-3
Bolt 18-37
Bolt 18-39
Bolt 18-41
Bolt 18-46
Bolt 18-49
Bolt 18-51
Bolt 18-54
Bolt 19-4
Bolt 20-8
Bolt 20-15-1
Bolt 20-15-2
Bolt 20-18
Bolt 20-32
Bolt 20-38-1
Bolt 20-38-2
Bolt 20-46
Bolt 20-53
Bolt 20-58
Bolt 21-13
Bolt 21-14
Bolt 21-18
Bolt 22-10
Bolt 22-14
Bolt 22-26
Bolt 22-29
Bolt 22-40
Bolt 23-20
Bolt 24-5
Bolt 24-14
Bolt 24-29
Bolt 24-37
Bolt 24-40
Bolt 24-44
Bolt 25-9
Bolt 25-21
Bolt 26-6
Bolt 28-13
Bolt 28-33
Bolt 24-36
Bolt 10-40 15-38
Bolt 3/8-19 25-36
Bolt 3/8-35 30-34
Bolt 3/8-43 30-32
Bolt 6-25 Precoated 7-36
Bolt 8-170 18-17
Bolt 8-35 15-36
Bolt Lower Mount Rubber 18-31
Bolt Stern Blacket L=105 30-5
Bottom Cowl 24-1
Bracket Fan Motor 11-24
Breaker 21-4
Brush Holder Ass'y 11-12
Bushing 19-21
Bushing 1 11-14
Bushing 10.2-12-29.5 19-2
Bushing 13-16-40 20-36-1
Bushing 13-16-40 20-36-2
Bushing 13-17-19.5 20-37-1
Bushing 13-17-19.5 20-37-2
Bushing 14-16.5-17.7 25-17
Bushing 18-24-22 20-41-1
Bushing 18-24-22 20-41-2
Bushing 18-24-60 20-42-1
Bushing 18-24-60 20-42-2
Bushing 2 11-15
Bushing 22-25-35.5 18-12
Bushing 26-32 18-11
Bushing 26-32 18-22
Bushing 6-24-7 7-21
Bushing 8.4-10-11 22-7
Bushing 9-20-20.8 12-8
Bushing A 28-11
Bushing A Steering Handle 22-17
Bushing B 28-3
Bushing B Steering Handle 22-20
Bushing Bracket Bolt 20-10
Bushing Bracket Shaft 20-17
Bushing D 28-47
Bushing Shift Lever Shaft 25-2
Buzzer Caution Decal 30-3
<C>
Cable Clip Bracket Ass'y 24-33
Cable Joint 7-8
Cable Joint 25-25-1
Cable Joint 25-25-2
Cable Terminal 28-29
Cable Terminal Ass'y (Negative) 6-11
Cable Terminal Ass'y (Positive) 6-10
Cable Terminal Plug 10-21-1
Cable Terminal Plug 10-21-2
Cable Terminal Plug 10-21-3
Cable Terminal Plug 10-22-1
Cable Terminal Plug 10-22-2
Cable Terminal Plug 10-22-3
Cable Terminal Plug 23-24
Cable Terminal Plug 23-25
Cable Terminal Plug 23-26
Cam Rod (L) 14-33-2
Cam Rod (L) 15-29-1
Cam Rod (S) 14-33-1
Cam Rod (UL) 14-33-3
Cam Rod (UL) 15-29-2
Cam Rod Bushing 14-35
Cam Rod Bushing 15-32
Cam Rod Holder 13-21
Cap Ass'y W/O-Ring 21-19
Cap Hook Tank 12-26
Cap Nut Bracket Bolt 18-13
Cap Valve 4-46
Case Ass'y FFP 6-3
Caution Decal (A) 26-14
Caution Decal (B) 11-4
Check Valve 1-37
Check Valve 8-27
Check Valve Complete 12-12
Clamp 24-35

Clamp 27-5
Clamp 27-11
Clamp 27-22
Clamp 27-28
Clamp 21/32 4-41
Clamp 29/64 4-13
Clamp 6.5-14 4-50
Clamp 6.5-14 20-50
Clamp 6.5-14 22-39
Clamp 6.5-47.5P 1-42
Clamp 6.5-47.5P 4-32
Clamp 6.5-47.5P 5-26
Clamp 6.5-47.5P 6-18
Clamp 6.5-47.5P 9-12
Clamp 6.5-47.5P 10-7
Clamp 6.5-47.5P 10-15
Clamp 6.5-47.5P 22-28
Clamp 6.5-47.5P 25-8
Clamp 6.5-67P 7-16
Clamp 6.5-87P 1-29
Clamp 6.5-87P 10-16
Clamp 6.5-87P 10-26
Clamp 6.5-87P 12-34
Clamp 6-9.5L 20-48
Clamp 6-9.5L 20-55
Clamp 7-120P 3-11
Clamp 8.5-70P 4-16
Clamp 8.5-85P 1-19
Clamp Bracket (L) 18-8
Clamp Bracket (PTT-L) 20-6
Clamp Bracket (PTT-R) 20-1-1
Clamp Bracket (PTT-R) 20-1-2
Clamp Bracket (R) 18-1
Clamp Screw 18-3
Clamp Screw (PTT) 20-3
Clamp Screw Handle 18-4
Clamp Screw Kit 18-2
Clamp Screw Kit 20-2
Clamp Screw Pad 18-6
Clamp Screw Pad 20-4
Clevis Ass'y 30-29
Clip 4-49
Clip 8-8
Clip 8-35
Clip Fuel Pipe φ10 1-36
Clip Fuel Pipe φ10 4-52
Clip Fuel Pipe φ10 8-18
Clip Fuel Pipe φ10 8-34
Clip Fuel Pipe φ10 8-47
Clip Fuel Pipe φ10 24-52
Clip Fuel Pipe φ10 31-26
Clip Throttle Wire 22-23
Clip φ12 ..... 8-22a
Clip φ6.9 12-21
Clip φ7 1-41
Clip φ7 7-34
Clip φ9.4 12-15
Clutch 16-17
Clutch 17-19
Clutch Cable Clip Bracket 24-34
Clutch Cam 14-32
Clutch Cam 15-28
Coil Bracket 9-10
Collar 11-2
Collar 10.2-12-12 20-24
Collar 13.5-25-13 5-18
Collar 18-20-4.5 14-45
Collar 18-20-4.5 15-42
Collar 4.2-6-10.5 7-29
Collar 6.2-12-17 7-7
Collar 6.2-9-10.7 10-42
Collar 6.2-9-9.3 1-4
Collar 6.2-9-9.3 7-15
Collar 6.7-12.7-3 4-43
Collar 9.6-13-20.5 30-30
Collar 9.6-13-6.5 25-33
Collar 9.6-19-6 25-34
Compressor Crankshaft Ass'y 5-16
Compressor Head Ass'y 5-6
Control Head Ass'y (Top-Single) 32-1
Control Head Ass'y (Top-Twin) 32-2
Control Lever 28-43
Cord Ass'y 10-20
Cord Ass'y B 32-11-1
Cord Ass'y B 32-11-2
Cord Ass'y B L=6200 29-11
Cord Ass'y C L=1000 23-21
Cord Cover FFP 6-15
Cord FFP 6-14
Cord Holder 22-30
Coupling Pump 21-7
Cover 23-22
Cover Hook 24-13
Crankcase Head 1-46
Crankshaft Ass'y W/Gear 2-1
C-Ring 21-22
C-Ring 20-44-1
C-Ring 20-44-2
C-Ring d=25 2-4
C-Ring d=25 18-26
C-Ring d=28 20-21
Cup 8-37
Cup 12-36
Cyl Block・Crankcase Ass'y 1-1
Cylinder Head 1-15
Cylinder Head Cover 1-7
Cylinder Head Cover Gasket 1-8
Cylinder Head Gasket 1-16
Cylinder Pin (Lower) 20-40-1
Cylinder Pin (Lower) 20-40-2
Cylinder Pin (Upper) 20-35-1
Cylinder Pin (Upper) 20-35-2
<D>
Damper (Lower) 18-30
Damper (Upper) 18-42
Damper Rubber 18-33
Damper Starter Motor 11-25
Decal (Lever) 29-13
Decal (TOHATSU) 29-14
Decal (TOHATSU) 32-5
Decal (TOHATSU) 32-20
Decal Set (MD30B2EU) 26-13-3
Decal Set (MD40B2 Italy) 26-13-4
Decal Set (MD40B2) 26-13-2
Decal Set (MD50B2) 26-13-1
Detent Retainer 28-17
Detent Roller 28-14
Detent Spring 28-19
Diaphragm Gasket B 8-26
Diaphragm Gasket Set 8-30
Disc Spring 4-17
Distance Piece 18-14
Dowel Pin 4-10 1-9
Dowel Pin 4-10 5-25
Dowel Pin 4-10 5-31
Dowel Pin 4-10 9-13
Dowel Pin 4-10 14-25
Dowel Pin 6-12 1-2
Dowel Pin 6-12 1-17
Dowel Pin 6-12 13-6
Drag Link Ass'y E 25-32
Drain Screw 8-10
Drive Belt 5-32
Drive Gear 28-30
Drive Pulley 5-1
Drive Shaft (L) 14-13-2
Drive Shaft (L) 15-9-1
Drive Shaft (S) 14-13-1
Drive Shaft (UL) 14-13-3
Drive Shaft (UL) 15-9-2
Drive Shaft Housing (L) 13-10-2
Drive Shaft Housing (S) 13-10-1
Drive Shaft Housing Gasket 13-11
Drive Shaft Spring 14-15
Drive Shaft Spring 15-11
Drive Shaft Spring Guide 15-12
Driven Pulley 5-27
<E>
Earth Wire (Ground) 20-45
Earth Wire (Ground) L=110 18-50
Earth Wire (Ground) L=130 18-48
Earth Wire (Ground) L=210 18-47
Earth Wire (Ground) L=270 24-28
ECU Ass'y 10-1-1
ECU Ass'y 10-1-2
ECU Ass'y 10-1-3
Engine Basement 13-1
Engine Basement Gasket 13-3
Engine Basement Seal 13-4
Engine Short Block Kit 34-1-1
Engine Short Block Kit 34-1-2
E-Ring d=6 19-14
E-Ring d=6 28-25
Exhaust Cover (Inner) 1-24
Exhaust Cover Ass'y 1-23
Exhaust Cover Gasket 1-25
Exhaust Housing 13-24
Exhaust Housing Gasket 13-27
Exhaust Pipe 13-7
Exhaust Pipe Gasket 13-9
Exhaust Plug 13-2
Extension Cord (Pilot Lamp) 33-6
Extension Cord (Trim Sensor) L=2000 . 33-5-2
Extension Cord (Trim Sensor) L=6000 . 33-5-1
Extension Cord (Trim Sensor) L=6000 . 35-6
Extension Cord (Trim Sensor) L=6000 . 35-11
Extension Cord (Trim Sensor) L=6000 . 35-18
Extension Cord (Trim Sensor) L=6000 . 35-23
Extension Housing 13-14
Extension Housing Ass'y (UL) 13-16
Extension Housing Kit (UL) 34-6
Extension Pipe 15-40
<F>
Filler Lid 26-3
Filler Lid Hinge 26-4
Filler Lid Spring 26-5
Filter 8-39
Filter 12-38
Filter 21-16
Filter 27-17
Fitting Plate 30-13
Fitting Plate 30-21
Fitting Plate 31-5-1
Fitting Plate 31-5-2
Fitting Plate 31-14
Fitting Plate 31-21
Fitting Plate 31-33
Fitting Plate 31-43
Float Arm Pin 8-5
Float Fuel Filter 8-40
Float Valve Ass'y W/Valve Pin 8-7
Float Vapor Separator 8-4
Flushing Plug 33-1
Flywheel W/Ring Gear 9-1
Free Throttle Drum 28-46
Free Throttle Lever 28-15
Free Throttle Roller 28-20
Free Throttle Spring 28-22
Friction Piece 18-52
Friction Piece 22-11
Friction Spring 18-53
Friction Spring 19-5
Fuel Connector 27-9
Fuel Connector 27-10
Fuel Connector 27-26
Fuel Connector 27-27
Fuel Connector (Engine Male) 24-45
Fuel Connector Mark 27-8
Fuel Connector Mark 27-25
Fuel Feed Pump 6-2
Fuel Feed Pump Ass'y 6-1
Fuel Filter Ass'y 8-36
Fuel Filter Band 4-4
Fuel Filter Rubber Mount 4-39
Fuel Gauge Vent Cap Ass'y 27-13
Fuel Hose Ass'y 4-35
Fuel Hose W/Protector 4-48
Fuel Hose W/Protector 8-19-2
Fuel Hose W/Protector 8-46-2
Fuel Hose W/Protector 24-49
Fuel Injector Adapter 4-20
Fuel Injector Ass'y 4-21
Fuel Injector Insert 4-18
Fuel Pump Ass'y 8-22
Fuel Regulator Ass'y 4-24
Fuel Tank Ass'y 25Liter (TOHATSU) 27-12
Fuse 15A 10-35
Fuse 25A 10-34
Fuse 30A 10-33

Fuse Decal 11-5
Fuse Holder Bracket 10-24
Fuse Wire Ass'y 10-31
Fuse Wire Ass'y 10-32
<G>
Gas Shock Absorber 20-28
Gasket 10.1-15-1 14-6
Gasket 10.2-16-0.5 24-47
Gasket 2-8-1 31-29
Gasket 36-52-2 12-25
Gasket 8.1-15-1 14-4
Gasket Compressor Head 5-11
Gasket Compressor Housing 5-22
Gasket FFP 6-7
Gasket Fuel Pump 8-31
Gasket PTT Switch 24-42
Gasket Throttle Body 7-35
Gasket Valve Seat 5-13
Gear Case Ass'y 14-1-1
Gear Case Ass'y W/Subwater Pipe 14-1-2
Gear Case Ass'y W/Subwater Pipe 15-1
Gear Oil (500mL) 33-8
Grease Fitting 20-14
Grip 22-16
Grip 28-42
Grommet 3-7
Grommet 24-21
Grommet 28-34
Grommet 17-2.7 24-20
Grommet 17-2.7 24-23
Grommet 17-3 24-27
Grommet 18-2.5 24-22
Grommet Battery Cord 24-18
Grommet Cable Terminal 6-12
Grommet Cable Terminal Upper 6-13
Grommet Cord 24-19
Grommet Exhaust Housing 13-25
Grommet FFP 6-8
Grommet FFP Lower 6-9
Grommet Pipe 6-19
Grommet Power Trim ・ Tilt Switch . 24-2
Grommet PTT Switch Ass'y 23-14
Grommet Remote Control Cable 24-17
Grommet Splash Pan 13-29
Grommet Throttle Hole 24-24-2
Grommet Throttle Shaft 24-25
Grommet Throttle Wire 24-24-1
Ground (Earth Wire) L=110 4-45
Ground (Earth Wire) L=130 20-57
Ground Cable 10-38
Guide Plate Gasket 14-27
Guide Plate Gasket 15-22
<H>
Hanger 1-20
High Pressure Fuel Filter 4-38
Holding Plate 4-30
Holding Plate 4-31
Holding Plate 4-42
Hook Lever 24-8
Hook Lever Bushing 24-11
Hose 1-33
Hose 1-34
Hose 1-35
Hose 1-38
Hose 1-39
Hose 1-40
Hose 4-12
Hose 4-47
Hose 4-51
Hose 5-34
Hose 7-32
Hose 8-17-1
Hose 8-19-1
Hose 8-33-1
Hose 8-46-1
Hose 24-48
Hose 24-51
Hose 27-6
Hose 27-7
Hose 27-23
Hose 27-24
Hose 31-25
Hour Meter Ass'y 31-30
<I>
Ignition Coil W/Resistance Cap #1 ... 10-8
Ignition Coil W/Resistance Cap #2,3 . 10-11
Intake Manifold Gasket 3-3
<J>
Joint Ass'y (Inlet) 2-2
Joint Ass'y (Inlet) 27-19
Joint Ass'y (Outlet) 27-3
Joint Ass'y (Outlet) 27-20
Joint Hose 15-41
Joint Metal 21-23
<K>
Key (Magneto) 9-5
Key Drive Pulley 5-3
Key Pump Impeller 14-17
Key Pump Impeller 15-14
<L>
Lamp Panel Ass'y 35-26
Lead Wire 35-25
Lead Wire Band 31-27
Link B 19-24
Link Rod Ass'y (Throttle) 7-3
Link Rod Ass'y (TPS) 7-4
L-Nipple 4-6
Lock Plate Upper 18-44
Low Permeation Hose 8-17-2
Low Permeation Hose 8-33-2
Lower Unit Ass'y (L) 34-5-2
Lower Unit Ass'y (L) 34-5-4
Lower Unit Ass'y (S) 34-5-1
Lower Unit Ass'y (UL) 34-5-3
Lower Unit Ass'y (UL) 34-5-5
Lower Unit Gasket Set 34-4
<M>
Main Bearing 6305 2-2
Main Bearing Upper 2-10
Main Switch Ass'y 23-4
Main Switch Ass'y 29-1
Main Switch Ass'y 32-6-1
Main Switch Ass'y 32-6-2
Main Switch Cap (Waterproof) 23-7
Main Switch Decal 22-36
Main Switch Key (F-301) 23-5-1
Main Switch Key (F-302) 23-5-2
Main Switch Key (F-303) 23-5-3
Main Switch Key (No.301) 29-2-1
Main Switch Key (No.301) 32-7-1
Main Switch Key (No.301) 32-7-4
Main Switch Key (No.302) 29-2-2
Main Switch Key (No.302) 32-7-2
Main Switch Key (No.302) 32-7-5
Main Switch Key (No.303) 29-2-3
Main Switch Key (No.303) 32-7-3
Main Switch Key (No.303) 32-7-6
Main Switch Key Covering Cap 23-6
Main Switch Panel 32-14-1
Main Switch Panel 32-14-2
Manual Valve Ass'y W/O-Ring×2 21-20
Md Engine Oil Platinum (4.0L) 33-10
Metal Washer 10.2-17-2 5-9
Meter Bulb 30-18
Meter Bulb 12V-1.7W 31-12
Meter Bulb 12V-1.7W 31-19
Meter Bulb 12V-1.7W 31-31
Meter Bulb 12V-1.8W 30-11
Meter Bulb 12V-1.8W 31-3-1
Meter Bulb 12V-1.8W 31-3-2
Meter Bulb 12V-1.8W 31-41
Meter Bulb Cap 30-19
Meter Damper 30-12
Meter Damper 30-20
Meter Damper 31-4-1
Meter Damper 31-4-2
Meter Damper 31-13
Meter Damper 31-20
Meter Damper 31-32
Meter Damper 31-42
Meter Lamp Switch 31-36
Meter Lead Wire L=8000 30-16
Meter Lead Wire L=8000 35-4
Meter Lead Wire L=8000 35-10
Meter Lead Wire L=8000 35-16
Meter Lead Wire L=8000 35-22
Motor Ass'y 21-1
Motor Bracket Ass'y 21-3
Mount Bracket 18-29
Mount Bracket 20-22
Mount Holding Plate (Lower) 18-36
Mount Holding Plate (Upper) 18-45
Mount Moter Cover Lower 8-14
Mount Moter Cover Lower 10-4
Mount Moter Cover Lower 12-31
Mount Moter Cover Lower 24-3
<N>
Neutral Lock Arm 28-37
Neutral Lock Spring 28-38
Neutral Switch 24-30
Neutral Switch (Remote Control) 29-3
Neutral Switch Actuator 24-31
Neutral Switch Cord (Green) 32-16-1
Neutral Switch Cord (Green) 32-16-2
Nipple 5-7
Nipple Pulse 31-28
Nipple Water 24-50
Nut 7-25
Nut 8-29
Nut 8-42
Nut 11-19
Nut 12-11
Nut 12-40
Nut 13-18
Nut 18-15
Nut 20-34
Nut 22-22
Nut 22-41
Nut 26-8
Nut 28-7
Nut 28-32
Nut 30-14
Nut 30-23
Nut 31-6-1
Nut 31-6-2
Nut 31-15
Nut 31-22
Nut 31-34
Nut 31-44
Nut (Magneto) 10-P1.25 5-28
Nut (No.10-32VNF) 25-26
Nut 18P1.5 9-6
Nut Bevel Gear B 14-11
Nut Bevel Gear B 15-7
Nut M10P1.25 24-46
Nut P1.25 30-8
Nut Pulley 5-2
Nylon Nut 13-32
Nylon Nut 14-9
Nylon Nut 30-27
Nylon Nut 15-5
Nylon Nut 17-5
Nylon Nut 18-34
Nylon Nut 22-34
Nylon Nut 25-23
Nylon Nut 3/8 25-37
Nylon Nut 3/8 30-33
Nylon Nut 6P1.0 26-10
Nylon Nut 7/8 18-10
<O>
Oil Bulb 12V-1.7W 30-10
Oil Caution Decal 26-15
Oil Filler Cap 12-24
Oil Filter Ass'y 12-35
Oil Level Sensor 12-28
Oil Pump Ass'y 12-1
Oil Pump Bolt 12-5
Oil Pump Drive Gear 2-3
Oil Pump Driven Gear 12-7
Oil Pump Rod φ4.5-190 12-9
Oil Seal 16-28-7 1-49
Oil Seal 17-33-6 14-23
Oil Seal 22-36-10 16-9
Oil Seal 22-37-8 15-20
Oil Seal 25-38-10 17-10
Oil Seal 25-40-8 1-48
Oil Seal 25-45-8 5-23
Oil Seal 36-46-6 2-11
Oil Tank 12-23

Oil Tank Cap Check Valve 12-27
O-Ring 8-9
O-Ring 8-11
O-Ring 11-16
O-Ring 27-16
O-Ring 1.5-6.5 21-15
O-Ring 1.6-19.2 12-2
O-Ring 1.7-59. 1-47
O-Ring 1.8-69.6 21-8
O-Ring 1.9-13. 5-19
O-Ring 1.9-6.8 15-33
O-Ring 2.0-10.0 10-45
O-Ring 2.4-44.7 2-12
O-Ring 2.4-5.8 14-36
O-Ring 2.4-9.5 4-3
O-Ring 2.5-20. 4-25
O-Ring 2.5-20. 4-28
O-Ring 2.5-5. 4-26
O-Ring 2.5-5 4-29
O-Ring 2.8-20.2 4-22
O-Ring 2-55.5. 21-5
O-Ring 3.2-47. 14-24
O-Ring 3.5-21.7 14-37
O-Ring 3.5-25.7 18-25
O-Ring 3.5-27.7 15-34
O-Ring 3.53-69.44 16-7
O-Ring 3.5-735 4-23
O-Ring 3.5-74.6 17-8
O-Ring 5-52 4-2
O-Ring 6.8-1.9 4-9
O-Ring 9.8-1.9 4-34
O-Ring 9.8-1.9 4-36
O-Ring A 8-38
O-Ring A 12-37
O-Ring B 8-41
O-Ring B 12-39
O-Ring Bracket Shaft 3.5-29.7. 20-20
Overheat Buzzer 23-18
Overheat Buzzer 29-8
Overheat Buzzer 32-8-1
Overheat Buzzer 32-8-2
<P>
Pick-Up Coil 9-8
Pick-Up Elbow Ass'y (25Liter). 27-14
Pilot Lamp Ass'y 23-10
Pin Clutch 16-18
Pin Clutch 17-17
Pinion Ass'y 11-10
Pipe. 12-13
Pipe. 12-14
Pipe. 12-16-1
Pipe. 12-16-2
Pipe. 12-16-3
Pipe. 12-17-1
Pipe. 12-17-2
Pipe. 12-18
Pipe. 12-19
Pipe. 12-20
Piston (0.5 O/S) 2-5-2
Piston (STD) 2-5-1
Piston Pin 2-7
Piston Pin Clip. 2-8
Piston Ring (0.5 O/S) 2-6-2
Piston Ring (STD) 2-6-1
Piston・Connecting Rod Ass'y 5-14
Plate Filter. 8-44
Plate Filter. 12-42
Plate Lock Arm 28-48
Plug. 14-3
Plug. 24-26
Plug 10.5 4-8
Plug Cap W/Resistance 10-9
Plug Cap W/Resistance 10-12
Plug Choke Knob 24-7
Plug Stopper 4-10
Plug Water 14-5
Power Head Gasket Set 34-2
Pre Coated Bolt 6-25 3-5
Pre-Coated Bolt 16-10
Pre-Coated Bolt 8-30. 17-11
Pre-Rigging Kit 35-1
Pre-Rigging Kit 35-8
Pre-Rigging Kit 35-13
Pre-Rigging Kit 35-20
Pressure Decal. 11-6
Primer Bulb 27-4
Primer Bulb 27-21
Primer Bulb Ass'y 27-1
Primer Bulb Ass'y 27-18
Propeller Ass'y (11") 16-24-2
Propeller Ass'y (12") 16-24-3
Propeller Ass'y (13") 16-24-1
Propeller Ass'y (14") 16-24-6
Propeller Ass'y (15") 16-24-7
Propeller Ass'y (7"). 16-24-4
Propeller Ass'y (9"). 16-24-5
Propeller Ass'y 10" 17-23-3
Propeller Ass'y 11" 17-23-4
Propeller Ass'y 12" 17-23-1
Propeller Ass'y 13" 17-23-5
Propeller Ass'y 14" 17-23-6
Propeller Ass'y 15" 17-23-7
Propeller Ass'y 16.5" 17-23-8
Propeller Ass'y 17.5" 17-23-9
Propeller Ass'y 9" 17-23-2
Propeller Hardware Kit. 16-25
Propeller Nut 16-28
Propeller Shaft 16-16
Propeller Shaft 17-16
Propeller Shaft Housing. 16-5
Propeller Shaft Housing. 17-7
Propeller Shaft Housing Ass'y 16-4
Propeller Shaft Housing Ass'y 17-6
Protector 4-37
Protector φ18-150 4-40
PTT Ass'y 20-47
PTT O-Ring Set 21-24
PTT Solenoid Switch (A). 10-36
PTT Solenoid Switch (B). 10-37
PTT Switch (B) Ass'y. 24-41
PTT Switch Ass'y. 23-11
PTT Switch Ass'y. 29-5
PTT Switch Ass'y Bracket 24-43
PTT Switch Cord (Pink). 32-19-1
PTT Switch Cord (Pink). 32-19-2
PTT Switch Cord (Red) 32-17-1
PTT Switch Cord (Red) 32-17-2
PTT Switch Cord (Skyblue) 32-18-1
PTT Switch Cord (Skyblue) 32-18-2
PTT Switch Cover 23-12
PTT Switch Cover 29-7
PTT Switch Cover (B). 23-15
PTT Thrust Rod 20-11
Pump 21-12
Pump Case (Lower) 14-21
Pump Case (Lower) 15-18
Pump Case (Upper) 14-18
Pump Case Gasket. 14-28
Pump Case Gasket. 15-23
Pump Case Liner 14-19
Pump Case Liner (Chrome Plated). 15-16
Pump Case Sub-Ass'y (Upper). 15-15
Pump Cover. 8-23
Pump Diaphragm 8-25
Push Rod Clutch. 16-22
Push Rod Clutch. 17-22
<Q>
Quick-Connector (Male) 27-15
<R>
Rear Housing. 28-35
Rear Panel. 28-36
Rectifier Complete. 10-18
Reed Valve Ass'y. 3-2
Reed Valve Ass'y. 5-12
Relief Valve Ass'y 21-11
Remote Cont Head (Top-Single). 32-3
Remote Cont Head (Top-Twin) 32-4
Remote Control Head Ass'y (RC5F) 28-1
Remote Control Head Ass'y (RC5F) 35-2
Remote Control Head Ass'y (RC5F) 35-9
Reserve Tank 21-17
Reverse Lock (L) 19-10
Reverse Lock (R) 19-11
Reverse Lock Arm 19-12
Reverse Lock Lever 20-29
Reverse Lock Lever Grip. 19-26
Reverse Lock Lever Grip. 20-30
Reverse Lock Rod. 19-15
Reverse Lock Shaft. 19-13
Reverse Lock Spring (L) 19-18-1
Reverse Lock Spring (S) 19-18-2
Rigging Bolt Set 30-4
Rigging Cord Kit 35-14
Rigging Cord Kit 35-21
Ring Gear Cover 11-1
Rivet 3-22 18-5
Rod Snap 5-3 7-2
Rod Snap B 3.5-4 7-18
Roller 28-9
Roller Bearing 17-21-27 2-9
Roller Bearing 202720 17-13
Roller Bearing 22-30-30 14-2
Roller Bearing 22-30-30 16-8
Roller Bearing Propeller Shaft 15-2
Roller Bearing Propeller Shaft 17-9
Roller Retainer. 28-21
Rubber Mount. 6-25
Rubber Mount. 7-28
Rubber Mount (Lower). 18-28
Rubber Mount (Upper). 18-40
Rubber Mount 8.5-12-2 6-23
Rubber Mount 8.5-12-2 10-41
Rubber Mount 8.5-14-2.5 8-15
Rubber Mount 8.5-14-2.5 10-5
Rubber Mount 8.5-14-2.5 12-32
Rubber Mount 9-16-4.3 11-3
<S>
Safety Rope 6-1600 30-2
Screw 3-4
Screw 7-30
Screw 8-2
Screw 8-3
Screw 8-6
Screw 8-24
Screw 8-28
Screw 9-3
Screw 11-13
Screw 13-31
Screw 14-8
Screw 15-4
Screw 15-27
Screw 20-49
Screw 20-51
Screw 20-56
Screw 21-6
Screw 21-9
Screw 22-8
Screw 22-31
Screw 23-3
Screw 23-13
Screw 23-16
Screw 28-2
Screw 28-4
Screw 28-16
Screw 28-18
Screw 28-40
Screw 29-4
Screw 29-6
Screw 32-15-1
Screw 32-15-2
Screw 4-20 P0.5 24-38
Seal Compression 4-19
Seal Ring 13.8-22-5 25-15
Seal Ring Drag Link 25-39
Seal Ring Hook Lever 24-10
Seal Rubber Filler Lid 26-12
Seal Rubber Splash Pan 13-30
Seal Washer 21-21
Sealing Cap 3-8
Setting Piece Tilt Stopper 19-6
Setting Plate 19-3
Shift Arm. 25-1
Shift Decal 25-40
Shift Gear Ass'y 28-28
Shift Lever. 25-14
Shift Lever (Remote Control) 25-19
Shift Lever Rod 25-24
Shift Lever Shaft 25-11
Shift Lever Stopper 25-6-1

Shift Lever Stopper 25-6-2
Shift Lever Stopper 25-7
Shift Position Decal 29-15
Shift Position Side Decal 29-16
Shift Rod 25-31
Shift Rod Joint 14-38
Shift Rod Joint 15-35
Shift Rod Lever 25-4
Shift Rod Lever 25-5
Shim 32.9-26-0.5 14-22
Shim 36.5-30-0.5 15-19
Shim 36-44-0.1 16-15-3
Shim 36-44-0.15 16-15-2
Shim 36-44-0.3 16-15-1
Shim 41-51.5-0.1 14-12-1
Shim 41-51.5-0.15 14-12-2
Shim 41-51.5-0.3 14-12-3
Shim 41-51.5-0.5 14-12-4
Shim 44-50.5-0.1 15-8-1
Shim 44-50.5-0.15 15-8-2
Shim 44-50.5-0.3 15-8-3
Shoulder Bolt 18-7
Shoulder Bolt 20-5
Shoulder Bolt 6-8 19-19
Snap Pin 20-12
Snap Pin Clutch 16-19
Snap Pin Clutch 17-18
Snap Pin d=8 7-10
Snap Pin D=8 25-29-1
Snap Pin D=8 25-29-2
Snap Retainer d=8 25-12
Solenoid Switch Bracket Ass'y 10-23
Spacer 28-5
Spacer 6.2-9-15.7 6-24
Spacer 6.2-9-15.7 8-16
Spacer 6.2-9-15.7 12-33
Spacer 6.2-9-15.7 24-4
Spacer 6.2-9-16.6 10-6
Spacer Throttle Shaft A 22-5
Spark Plug (IZFR6Q) 1-32
Spark Plug Decal 11-7
Spark Tester (PET-4000) 33-7
Speedmeter Ass'y (50MPH) 31-2-1
Speedmeter Ass'y (75MPH) 31-2-2
Speedmeter Band 31-9-1
Speedmeter Band 31-9-2
Speedmeter Kit (50MPH) 31-1-1
Speedmeter Kit (75MPH) 31-1-2
Speedmeter Sensor 31-10-1
Speedmeter Sensor 31-10-2
Speedmeter Tube L=6000 31-8-1
Speedmeter Tube L=6000 31-8-2
Split Pin 25-27
Split Pin 25-35
Split Pin 19-16
Split Pin 3-25 16-30
Spring 22-13
Spring B 19-25
Spring Clutch 16-20
Spring Clutch 17-21
Spring Pin 14-34
Spring Pin 14-39
Spring Pin 20-25
Spring Pin 22-6
Spring Pin 3.5-10 15-31
Spring Pin 3.5-14 15-30
Spring Retainer Clutch 16-21
Spring Retainer Clutch 17-20
Spring Washer 9-4
Spring Washer 11-18
Spring Washer 11-21
Spring Washer 12-6
Spring Washer 24-16
Spring Washer 24-39
Spring Washer 25-22
Spring Washer 26-7
Spring Washer 30-15
Spring Washer 30-22
Spring Washer 31-7-1
Spring Washer 31-7-2
Spring Washer 31-16
Spring Washer 31-23
Spring Washer 31-35
Spring Washer 31-45
Starter Cable L=270 10-29
Starter Motor Ass'y 11-9
Starter Motor Band 11-26
Starter Solenoid 10-27
Stay Buzzer 23-19
Steering Bracket 22-32
Steering Hook 30-25
Steering Shaft Ass'y 18-21
Steering Shaft Ass'y 20-16
Stop Switch Ass'y (W/Curl) 29-9
Stop Switch Ass'y (W/Curl) 32-9-1
Stop Switch Ass'y (W/Curl) 32-9-2
Stop Switch Ass'y W/Curl 23-8
Stop Switch Lanyard Ass'y (W/Curl) 29-10
Stop Switch Lanyard Ass'y W/Curl 23-9
Stop Switch Lanyard Ass'y W/Curl 32-10-1
Stop Switch Lanyard Ass'y W/Curl 32-10-2
Stopper A Propeller 17-25
Stopper Drive Shaft Housing 13-22
Stopper Drive Shaft Housing 14-40
Stopper Propeller 16-27
Stopper Reverse Lock Lever Grip 19-27
Stopper Reverse Lock Lever Grip 20-31
Stud Bolt 13-17
Stud Bolt 17-4
Stud Bolt 22-33
Stud Bolt 22-38
Stud Bolt 30-26
Sub-Water Inlet Strainer 14-30
Sub-Water Inlet Strainer 15-26
Switch Box 23-1
Switch Box Cover 23-2
Swivel Bracket 18-20
Swivel Bracket Ass'y (PTT) 20-13
Swivel Bracket Shaft Ass'y 18-9
Swivel Bracket Shaft Ass'y 20-9
<T>
Tachometer Ass'y 31-40
Tachometer Ass'y (W/Oil Lamp) 30-9
Tachometer Lead Wire L=2000 31-46
Tachometer W/Oil Lamp 35-3
Tachometer W/Oil Lamp 35-15
Tapered Roller Bearing 32007 16-1
Tapered Roller Bearing 32007JR 17-1
Tapered Roller Bearing 6304 14-14
Tapping Screw 6-16 10-25
Terminal Cap 11-31
Terminal Cap Starter 10-30
Terminal Cap Starter 10-43
Test Propeller Ass'y 33-2
Thermostat 1-11
Thermostat Cap Ass'y 1-12
Thermostat Cap Gasket 1-13
Throttle Arm 28-23
Throttle Body Ass'y 7-19-1
Throttle Body Ass'y 7-19-2
Throttle Body Ass'y 7-19-3
Throttle Cam 7-20
Throttle Decal 22-15
Throttle Friction Arm 28-24
Throttle Limiter Arm 7-11
Throttle Limiter Rod 3.5-56 7-17
Throttle Shaft 22-3
Throttle Shaft Damper A 22-4
Throttle Shaft Support 22-9
Throttle Wire 22-24
Throttle Wire Bracket 22-25
Thrust Holder A Propeller 17-24
Thrust Holder Propeller 16-26
Thrust Plate 28-10
Thrust Plate (Lower) 18-24
Thrust Plate (Upper) 18-23
Thrust Plate (Upper) 20-19
Thrust Plate Crankshaft 2-13
Thrust Rod 18-18
Thrust Rod Spring 18-19
Tiller Handle 22-2
Tiller Handle Ass'y 22-1
Tiller Handle Holder Ass'y 22-37
Tilt Assistant Shaft 19-9
Tilt Assistant Spring (L) 19-8
Tilt Assistant Spring (R) 19-7
Tilt Handle 26-9
Tilt Stopper Ass'y 19-1
Tilt Stopper Ass'y 20-23-1
Tilt Stopper Ass'y 20-23-2
Tilt Stopper Grip 20-27
Tilt Stopper Lever 19-17
Tilt Stopper Spring 20-26
Tilt Switch Cover 28-41
Tilt Switch Plug 28-44
T-Nipple Ass'y W/Valve 1-45
Tool Kit 30-1
Top Cowl Ass'y 26-1
Top Cowl Seal 26-2
Touch-Up Paint (Aquamarine) 33-9
TPS Ass'y 7-27
TPS Decal 7-37
Trim Meter Ass'y 30-17
Trim Meter Ass'y 35-5
Trim Meter Ass'y 35-17
Trim Sensor L=1700 20-52
Trim Tab 16-2
Trim Tab 17-2
Trim Tab Gasket 17-3
Twin Remote Control Kit 30-24
<U>
Upper Case Ass'y FFP 6-4
<V>
Valve Ass'y 21-10
Valve Ass'y (Pressure Check) 4-7
Vapor Separator Ass'y 8-1
Voltmeter Ass'y 31-11
<W>
Warning Lamp Decal 23-23
Washer 1-6
Washer 1-22
Washer 1-27
Washer 1-28
Washer 4-15
Washer 6-17
Washer 7-14
Washer 7-26
Washer 8-43
Washer 11-11
Washer 11-17
Washer 11-22
Washer 12-4
Washer 12-41
Washer 13-13
Washer 13-19
Washer 15-25
Washer 15-37
Washer 15-39
Washer 16-11
Washer 18-16
Washer 18-27
Washer 18-35
Washer 18-43
Washer 19-23
Washer 20-33-1
Washer 20-33-2
Washer 22-21
Washer 22-27
Washer 22-35
Washer 23-17
Washer 25-10
Washer 25-30
Washer 28-8
Washer 28-12
Washer 28-26
Washer 30-7
Washer 30-28
Washer 10.5-20-3.2 5-29
Washer 12.5-24-1 24-32
Washer 13-34-3 18-32
Washer 13-34-3 30-6
Washer 14-22-1 24-9
Washer 14-22-1 25-16
Washer 17-32-3 16-29
Washer 18.2-34-1 20-43-1
Washer 18.2-34-1 20-43-2
Washer 19-34-3 9-7
Washer 22.1-28-2.5 17-15-3
Washer 22.1-28-2.75 17-15-2

Washer 22.1-28-3 16-14
Washer 30-45-1 22-18
Washer 4.2-12.5-0.8 7-31
Washer 6.5-21-1 7-6
Washer 6.5-21-1 7-23
Washer 6.5-21-1 8-13
Washer 6.5-21-1 10-3
Washer 6.5-21-1 12-30
Washer 6.5-21-1 24-6
Washer 6.5-23-1.5 20-39-1
Washer 6.5-23-1.5 20-39-2
Washer 6-16-1.5 6-22
Washer 6-16-1.5 10-40
Washer 6-16-1.5 19-20
Washer 6-16-1.5 20-54
Washer 6-16-1.5 24-15
Washer 6-16-1.5 25-20
Washer 6-16-1.5 26-11
Washer 8.5-18-1.6 7-9
Washer 8.5-18-1.6 19-22
Washer 8.5-18-1.6 25-13
Washer 8.5-18-1.6 25-28-1
Washer 8.5-18-1.6 25-28-2
Washer 8.5-19.5-3.2 1-18
Washer 9.6-18-2 25-38
Washer 9.6-18-2 30-31
Washer Bevel Gear C 22.1-28-3.0 17-15-1
Washer Lock Arm 28-39
Washer Metal 10.2-17-2 6-6
Washer Remote Control Box 28-6
Water Pipe (L) 14-43-2
Water Pipe (S) 14-43-1
Water Pipe (UL) 14-43-3
Water Pipe Auxiliary Mount 13-20-1
Water Pipe Auxiliary Mount 13-20-2
Water Pipe Seal (Lower) 14-20
Water Pipe Seal (Lower) 15-17
Water Pipe Seal (Upper) 14-44
Water Pressure Meter Ass'y 31-18
Water Pressure Meter Kit 31-17
Water Pressure Meter Nipple 31-24
Water Pump Guide Plate 14-26
Water Pump Guide Plate (Chrome Plated) ... 15-21
Water Pump Impeller 14-16
Water Pump Impeller 15-13
Water Pump Repair Kit 34-3
Water Strainer Set 14-7
Water Strainer Set 15-3
Water Temperature Sensor W/O-Ring ... 10-44
Wave Washer 25-18
Wave Washer 28-45
Wave Washer 24-12
Wave Washer 30-45-1.2 22-19
Wave Washer d=12 DWG 25-3
Wire Cover 28-31

INDEX (Parts Number)

121-33159-0.....31-29
178-34147-0.....32-12-1
178-34147-0.....32-12-2
309-00132-0.....5-28
309-01136-0.....31-28
309-06972-0.....1-42
309-06972-0.....4-32
309-06972-0.....5-26
309-06972-0.....6-18
309-06972-0.....9-12
309-06972-0.....10-7
309-06972-0.....10-15
309-06972-0.....22-28
309-06972-0.....25-8
332-60005-2.....14-3
332-60006-0.....14-4
332-62101-1.....18-6
332-62101-1.....20-4
332-65022-0.....14-17
332-66021-0.....14-36
332-70201-0.....27-11
332-70201-0.....27-28
332-70261-0.....24-46
332-72306-0.....33-8
332Q62102-1.....18-4
334-00024-1.....2-8
334-00131-0.....9-5
334-04004-0.....8-23
334-04005-0.....8-25
334-04007-0.....8-26
334-60223-0.....16-9
334-65012-0.....1-9
334-65012-0.....5-25
334-65012-0.....5-31
334-65012-0.....9-13
334-65012-0.....14-25
336-03293-0.....8-11
336-06973-0.....20-48
336-06973-0.....20-55
336-70112-0.....24-47
336-76091-0.....31-27
338-01133-0.....1-41
338-01133-0.....7-34
338-02215-0.....1-36
338-02215-0.....4-52
338-02215-0.....8-18
338-02215-0.....8-34
338-02215-0.....8-47
338-02215-0.....24-52
338-02215-0.....31-26
338-60218-2.....1-30
338-67147-0.....24-10
338-67163-0.....24-22
344-03244-0.....8-8
344-67177-1.....20-14
345-00042-0.....2-9
345-01015-0.....1-18
345-01030-0.....1-11
345-01111-0.....1-2
345-01111-0.....1-17
345-01111-0.....13-6
345-03292-0.....8-10
345-05122-1.....20-39-1
345-05122-1.....20-39-2
345-06915-0.....4-50
345-06915-0.....20-50
345-06915-0.....22-39
345-60103-0.....16-7
345-60211-0.....14-2
345-60211-0.....16-8
345-60215-0.....16-1
345-62122-2.....18-19
345-62415-0.....18-25
345-62417-0.....18-22
345-62441-0.....18-52
345-63048-0.....22-4
345-64011-0.....17-13
345-64032-0.....16-14
345-64081-0.....14-12-1
345-64082-0.....14-12-2
345-64083-0.....14-12-3
345-64084-0.....14-12-4
345-64124-0.....16-29
345-65015-0.....14-24
345-65205-0.....14-45
345-65205-0.....15-42
345-65206-0.....14-44
345-66021-0.....15-33
345-66226-0.....24-27
345-67117-0.....24-20
345-67117-0.....24-23
345-76092-0.....3-7
345-76092-0.....24-21
346-00115-0.....2-13
346-01216-0.....1-47
346-04901-1.....8-31
346-05228-1.....7-24
346-62124-1.....18-10
346-62127-0.....18-13
346-62421-1.....18-53
346-62424-1.....18-24
346-62437-0.....19-2
346-62438-0.....19-6
346-62439-1.....19-3
346-64221-0.....17-21
346-65204-0.....13-20-1
346-65204-0.....13-20-2
346-66037-0.....13-21
346-66333-0.....19-26
346-66334-0.....19-27
346-66334-0.....20-31
346-67113-0.....8-14
346-67113-0.....10-4
346-67113-0.....12-31
346-67113-0.....24-3
346-67114-1.....6-24
346-67114-1.....8-16
346-67114-1.....12-33
346-67114-1.....24-4
346-67115-0.....7-6
346-67115-0.....7-23
346-67115-0.....8-13
346-67115-0.....10-3
346-67115-0.....12-30
346-67115-0.....24-6
348-64232-0.....16-27
348B64108-0.....16-24-4
349-62126-0.....18-11
350-63046-0.....22-7
350-67101-0.....25-2
350-67105-0.....25-17
353-00108-0.....2-12
353-00132-0.....9-6
353-00133-0.....9-7
353-06821-0.....23-9
353-06821-0.....29-10
353-06821-0.....32-10-1
353-06821-0.....32-10-2
353-60103-0.....17-8
353-60111-0.....17-10
353-60211-0.....15-2
353-60211-0.....17-9
353-61307-1.....18-41
353-61334-0.....18-32
353-61334-0.....30-6
353-61335-0.....18-43
353-62415-0.....20-20
353-62417-0.....20-17
353-62423-1.....20-19
353-63207-0.....20-24
353-64027-0.....15-7
353-64032-0.....17-15-1
353-64034-0.....17-15-2
353-64035-0.....17-15-3
353-64036-0.....16-15-1
353-64037-0.....16-15-2
353-64038-0.....16-15-3
353-64081-0.....15-8-1
353-64082-0.....15-8-2
353-64083-0.....15-8-3
353-64121-0.....16-28
353-64218-1.....17-17
353-64219-2.....17-18
353-64223-1.....17-22
353-64231-0.....17-24
353-64233-0.....17-25
353-64327-0.....15-11
353-66024-0.....13-22
353-66024-0.....14-40
353-72521-1.....31-36
353-72546-0.....29-12
353-72546-0.....31-39
353-72546-0.....32-13-1
353-72546-0.....32-13-2
353-72547-0.....31-37
353-72548-0.....31-38
353-72548-0.....35-7
353-72548-0.....35-12
353-72548-0.....35-19
353-72548-0.....35-24
353-72591-0.....23-12
353-76020-3.....29-1
353-76020-3.....32-6-1
353-76020-3.....32-6-2
353-76037-0.....10-21-2
353-76037-0.....10-21-3
353-76037-0.....10-22-1
353-76037-0.....23-26
353-76079-0.....1-4
353-76079-0.....7-15
353-76203-1.....23-5-1
353-76203-2.....23-5-2
353-76203-3.....23-5-3
353-84371-0.....28-6
353-84388-0.....28-14
353-84394-0.....28-26
353-84916-0.....25-38
353-84916-0.....30-31
353-84918-0.....25-37
353-84918-0.....30-33
353B64101-0.....17-23-2
353B64102-0.....17-23-3
353B64103-0.....17-23-4
353B64104-0.....17-23-1
353B64105-0.....17-23-5
353B64106-0.....17-23-6
353B64107-0.....17-23-7
353B64108-0.....17-23-8
353B64109-0.....17-23-9
356-04000-1.....8-22
356-04030-0.....8-30
356-04044-0.....8-27
369-62433-1.....20-27
369-67105-0.....24-11
369-84398-0.....10-10
369-84398-0.....10-13
385-76020-1.....23-4
385-76205-2.....23-6
393-01160-0.....1-37
398-06972-0.....7-16
398-62396-1.....18-48
398-62396-1.....20-57
398-63012-0.....22-16
398-63053-0.....22-5
398-76080-0.....24-30
398-76083-0.....24-31
3A0-62423-2.....18-23
3A3-06830-0.....29-9
3A3-06830-0.....32-9-1
3A3-06830-0.....32-9-2
3A3-62396-1.....4-45
3A3-62396-1.....18-50
3A3-64211-0.....17-16
3A3-64222-0.....17-20
3A3-64328-0.....15-12
3A3-72560-0.....29-5
3A3-72591-0.....29-7
3A3-76037-0.....10-21-1
3A3-76037-0.....10-22-2
3A3-76037-0.....10-22-3
3A3-76037-0.....23-25
3A3-76145-0.....10-30
3A3-76145-0.....10-43
3A3-81301-0.....30-24
3A3-83314-2.....28-29
3A3-84307-0.....28-19
3A3-84364-2.....28-30
3A3-84365-1.....28-23
3A3-84368-0.....28-45
3A3-84374-0.....28-5
3A3-84375-0.....28-4
3A3-84376-0.....28-34
3A3-84381-0.....28-28
3A3-84383-0.....28-8
3A3-84391-0.....28-46
3A3-84398-0.....29-17
3A3-84401-0.....28-37
3A3-84403-0.....28-38
3A3-84404-0.....28-42
3A3-84406-0.....28-48
3A3-84407-0.....28-39
3A3-84421-0.....28-9
3A3-84422-0.....28-10
3A3-84423-0.....28-17
3A3-84424-0.....28-20
3A3-84425-0.....28-22
3A3-84426-0.....28-21
3A3-84427-0.....28-27
3A3-84428-0.....28-24
3A3-84429-0.....28-31
3A3-84431-0.....28-11
3A3-84432-0.....28-3
3A3-84435-0.....28-47
3A3-84442-0.....28-13
3A3-84451-0.....28-41
3A3-84452-0.....28-44
3A3Q60100-0.....17-6
3A3Q60101-0.....17-7
3AA-83719-0.....7-9
3AA-83719-0.....19-22
3AA-83719-0.....25-13
3AA-83719-0.....25-28-1
3AA-83719-0.....25-28-2
3AB-35143-0.....4-49
3AB-35143-0.....8-35
3AB-35143-0.....12-15
3AC-62191-0.....18-9
3AC-72326-0.....33-9
3AD-62191-0.....20-9
3AL-05212-0.....19-21
3AL-05254-0.....19-19
3AL-66333-0.....20-30
3B2-63108-0.....22-18
3B2-63109-0.....22-19
3B2-67187-0.....24-25
3B2-70260-1.....24-45
3B2-83865-0.....25-26
3B7-01046-0.....24-26
3B7-01116-0.....5-29
3B7-02234-0.....8-39
3B7-02235-0.....8-38
3B7-02235-0.....12-37
3B7-02236-0.....8-41
3B7-02236-0.....12-39
3B7-02237-0.....8-37
3B7-02237-0.....12-36
3B7-05243-0.....12-10
3B7-06305-0.....11-3
3B7-06920-0.....8-15
3B7-06920-0.....10-5
3B7-06920-0.....12-32
3B7-09002-0.....12-2
3B7-09004-0.....12-3
3B7-09006-0.....12-4
3B7-09052-0.....12-21
3B7-09075-1.....12-12

3B7-60001-5 15-38
3B7-60007-0 33-1
3B7-60015-1 14-5
3B7-60016-1 14-6
3B7-60205-0 15-3
3B7-60217-1 17-2
3B7-60218-1 18-38
3B7-60219-0 17-3
3B7-63731-0 24-32
3B7-65014-0 15-17
3B7-65016-0 15-15
3B7-65018-0 15-23
3B7-65021-2 15-13
3B7-65022-0 15-14
3B7-65029-0 15-22
3B7-65238-0 15-16
3B7-66023-0 15-34
3B7-66031-1 15-32
3B7-67211-0 26-4
3B7-70200-4 27-1
3B7-70280-1 27-8
3B7-70280-1 27-25
3B7-72201-0 30-2
3B7-72530-2 31-40
3B7-72641-0 31-24
3B7-72643-0 31-10-1
3B7-72643-0 31-10-2
3B7-72650-0 31-8-1
3B7-72650-0 31-8-2
3B7-72651-0 31-9-1
3B7-72651-0 31-9-2
3B7-72655-0 30-20
3B7-72655-0 31-13
3B7-72655-0 31-20
3B7-72655-0 31-32
3B7-72656-0 30-12
3B7-72656-0 31-4-1
3B7-72656-0 31-4-2
3B7-72656-0 31-42
3B7-72657-0 31-12
3B7-72657-0 31-19
3B7-72657-0 31-31
3B7-72658-0 30-10
3B7-72659-0 30-11
3B7-72659-0 31-3-1
3B7-72659-0 31-3-2
3B7-72659-0 31-41
3B7-72661-0 30-13
3B7-72661-0 31-5-1
3B7-72661-0 31-5-2
3B7-72661-0 31-43
3B7-72662-0 31-14
3B7-72663-0 31-21
3B7-72664-0 31-33
3B7-76035-0 23-22
3B7-76120-2 11-29
3B7-76145-0 11-31
3B7-77167-0 21-8
3B7-77430-0 21-12
3B7-77431-1 21-14
3B7-77432-1 21-13
3B7-77433-0 21-15
3B7-77434-1 21-16
3B7-83715-1 7-8
3B7-83715-1 25-25-1
3B7-83715-1 25-25-2
3B7Q84312-0.....28-15
3B7Q84343-0.....28-43
3B7Q84366-0.....28-36
3B7Q84441-0.....28-35
3C7-02215-0 .....8-22a
3C7-60108-2 17-11
3C7-60218-2 20-7
3C7-61338-0 18-33
3C7-62133-2 30-5
3C7-62139-1 30-8
3C7-70050-1 27-13
3C7-70113-0 27-17
3C7-70155-0 27-14
3C7-70177-1 27-12
3C7-70199-0 27-16
3C7-70211-1 27-4
3C7-70217-0 27-5
3C7-70217-0 27-22
3C7-70220-1 27-2
3C7-70220-1 27-19
3C7-70224-1 27-3
3C7-70224-1 27-20
3C7-71030-0 12-35
3C7-71033-0 12-38
3C7-72180-3 26-14
3C7-84471-1 32-16-1
3C7-84471-1 32-16-2
3C7-84475-0 32-17-1
3C7-84475-0 32-17-2
3C7-84476-0 32-18-1
3C7-84476-0 32-18-2
3C7-84477-0 32-19-1
3C7-84477-0 32-19-2
3C8-00021-1 2-7
3C8-01215-0 1-49
3C8-01291-0 1-46
3C8-01303-4 13-3
3C8-01513-1 1-20
3C8-02302-0 1-24
3C8-02305-2 1-25
3C8-02312-2 13-9
3C8-02319-0 13-8
3C8-05213-0 7-11
3C8-05221-0 7-17
3C8-05223-0 7-18
3C8-09050-1 12-5
3C8-09053-1 12-9
3C8-09060-0 2-3
3C8-09065-0 12-7
3C8-09069-0 12-8
3C8-60108-1 16-10
3C8-60204-0 14-30
3C8-60205-1 14-7
3C8-60213-0 14-14
3C8-60217-1 16-2
3C8-60223-0 14-23
3C8-61012-2 13-11
3C8-61180-0 13-24
3C8-61181-2 13-27
3C8-61182-0 13-25
3C8-61184-0 13-26
3C8-61212-0 13-29
3C8-61213-0 13-30
3C8-61302-0 18-28
3C8-61321-1 18-31
3C8-61336-0 18-30
3C8-61341-0 18-45
3C8-62104-2 18-5
3C8-62107-0 18-7
3C8-62107-0 20-5
3C8-62117-1 18-14
3C8-62120-1 18-17
3C8-62121-1 18-18
3C8-62132-0 18-12
3C8-62143-0 19-9
3C8-62396-1 18-47
3 C 8-62396-1 20-45
3C8-62421-1 19-5
3C8-63041-1 22-3
3C8-63063-0 22-9
3C8-63101-0 22-17
3C8-63102-1 22-20
3C8-63508-1 22-25
3C8-63600-1 22-24
3C8-63607-0 22-23
3C8-63621-0 24-24-1
3C8-63624-0 24-24-2
3C8-63711-1 7-1
3C8-63732-0 7-7
3C8-63733-0 7-2
3C8-64010-1 16-12
3C8-64020-2 14-10
3C8-64027-0 14-11
3C8-64030-0 16-13
3C8-64084-0 14-22
3C8-64110-0 33-2
3C8-64211-0 16-16
3C8-64215-2 16-17
3C8-64217-0 16-18
3C8-64219-1 16-19
3C8-64221-0 16-20
3C8-64222-0 16-21
3C8-64223-1 16-22
3C8-64231-0 16-26
3C8-64301-0 14-13-1
3C8-64302-0 14-13-2
3C8-64303-0 14-13-3
3C8-64327-0 14-15
3C8-65014-0 14-20
3C8-65017-1 14-21
3C8-65021-2 14-16
3C8-65025-0 14-26
3C8-65029-2 14-27
3C8-65100-0 14-43-1
3C8-65110-0 14-43-2
3C8-65120-0 14-43-3
3C8-66011-0 14-32
3C8-66012-0 14-33-1
3C8-66013-0 14-33-2
3C8-66014-0 14-33-3
3C8-66031-1 14-35
3C8-66032-0 14-37
3C8-66112-0 25-6-1
3C8-66112-0 25-6-2
3C8-66116-0 25-7
3C8-66122-1 25-1
3C8-66135-0 25-11
3C8-66211-0 25-31
3C8-66225-0 25-4
3C8-66241-0 14-38
3C8-66308-0 6-22
3C8-66308-0 10-40
3C8-66308-0 20-54
3C8-66308-0 24-15
3C8-66308-0 25-20
3C8-66308-0 26-11
3C8-66313-4 19-12
3C8-66318-1 19-24
3C8-66319-1 19-13
3C8-66321-0 19-15
3C8-66331-2 19-18-2
3C8-66332-2 19-18-1
3C8-66336-0 19-25
3C8-66351-2 19-11
3C8-66352-2 19-10
3C8-67116-0 13-4
3C8-67142-1 24-13
3C8-67146-0 24-9
3C8-67146-0 25-16
3C8-67212-1 26-5
3C8-67501-0 26-2
3C8-71015-0 12-24
3C8-71016-0 12-25
3C8-71017-0 12-26
3C8-71018-0 12-27
3C8-72120-0 30-4
3C8-72580-0 10-36
3C8-72581-0 10-37
3C8-75014-0 11-12
3C8-75015-0 11-11
3C8-75016-0 11-14
3C8-75017-0 11-15
3C8-75018-0 11-16
3C8-75019-0 11-20
3C8-76007-0 11-25
3C8-76009-0 11-26
3C8-76010-1 11-9
3C8-76015-0 11-10
3C8-76116-1 24-19
3C8-76171-0 23-18
3C8-76171-0 29-8
3C8-76171-0 32-8-1
3C8-76171-0 32-8-2
3C8-77076-1 20-41-1
3C8-77076-1 20-41-2
3C8-77213-0 20-10
3C8-77216-0 20-3
3C8-77217-0 20-2
3C8-83732-0 24-17
3C8-83821-0 24-38
3C8-84830-0 30-25
3C8-84910-2 25-32
3C8-84914-1 25-33
3C8-84916-0 25-34
3C8-84917-0 25-36
3C8-84962-0 30-30
3C8-84963-0 30-32
3C8-84964-0 30-34
3C8Q60000-0.....14-1-1
3C8Q60090-0.....14-1-2
3C8Q60100-0.....16-4
3C8Q60101-0.....16-5
3C8Q61110-0.....13-14
3C8Q61191-2.....13-10-1
3C8Q61192-2.....13-10-2
3C8Q61210-0.....13-28
3C8Q61342-0.....18-36
3C8Q61411-3.....18-29
3C8Q62001-2.....22-32
3C8Q62010-3.....18-21
3C8Q62112-0.....18-1
3C8Q62113-0.....18-8
3C8Q62310-3.....18-20
3C8Q62431-0.....19-1
3C8Q63011-2.....22-2
3C8Q63027-0.....22-37
3C8Q67100-1.....24-1
3C8Q67141-0.....24-8
3C8Q76118-0.....24-35
3C8Q83737-0.....24-33
3C8Q84960-0.....30-29
3C8Q87314-1.....34-6
3E0-70270-0.....27-15
3E0-72522-0.....31-1-1
3E0-72524-0.....31-30
3E0-72529-0.....31-11
3E0-72598-0.....31-18
3E0-72644-0.....31-1-2
3E0-72648-0.....31-2-1
3E0-72649-0.....31-2-2
3E3-02311-0.....13-7
3E3-61301-1.....18-40
3E3-61333-0.....18-42
3E3-61335-0.....18-44
3E3-62106-0.....18-3
3E3-62141-0.....19-7
3E3-62142-0.....19-8
3E3-62436-1.....19-17
3E3-67213-0.....26-12
3E3-72527-0.....31-17
3E3Q62105-0.....18-2
3E3Q67210-1.....26-3
3E3Q67521-1.....26-9
3F3-03232-0.....8-5
3F3-06920-0.....6-23
3F3-06920-0.....10-41
3F3-60204-0.....15-26
3F3-60215-0.....17-1
3F3-60223-0.....15-20
3F3-64010-3.....17-12
3F3-64020-0.....15-6
3F3-64030-0.....17-14
3F3-64084-0.....15-19
3F3-64215-0.....17-19
3F3-65017-1.....15-18
3F3-65239-1.....15-21
3F3-72540-0.....33-7
3F3-72616-1.....24-42
3F3-72618-0.....24-2
3F3-76217-0.....29-2-1
3F3-76217-0.....32-7-1
3F3-76217-0.....32-7-4
3F3-76218-0.....29-2-2
3F3-76218-0.....32-7-2
3F3-76218-0.....32-7-5
3F3-76219-0.....29-2-3
3F3-76219-0.....32-7-3
3F3-76219-0.....32-7-6
3F3-84908-0.....25-39
3FW-72026-0.....11-7
3G9-66136-0 10-45
3GF-00001-1 2-5-1
3GF-00004-1 2-5-2
3GF-01139-0 3-8
3GF-02135-0 8-17-2
3GF-02165-0 8-46-2

3GF-02165-0 24-49
3GF-02170-0 8-19-2
3GF-02239-0 8-44
3GF-06304-0 11-2
3GF-06401-0 10-1-1
3GF-10089-0 4-35
3GF-10090-0 4-27
3GF-10100-0 7-19-1
3GF-10130-0 5-33
3GF-10230-0 34-7
3GF-10310-0 4-1
3GF-70200-3 27-18
3GF-70211-0 27-21
3GF-70240-0 27-24
3GF-70241-0 27-23
3GF-70250-0 27-10
3GF-70250-0 27-27
3GF-70281-0 27-9
3GF-70281-0 27-26
3GF-72615-0 24-41
3GF-72617-0 24-43
3GF-76110-0 10-20
3GF-76119-0 23-21
3GF-84560-0 35-14
3GF-84560-0 35-21
3GF-87330-0 5-14
3GF-87331-0 5-16
3GF-87802-1 26-13-1
3GFB01091-0.....1-15
3GFB02246-0.....3-6
3GFB10000-0.....5-5
3GFB10009-0.....5-6
3GFB10048-0.....5-20
3GFB87090-3.....34-1-1
3GFQ67645-1 26-1
3GFQ77211-0 20-1-1
3GFQ77212-0 20-6
3GFQ84500-0 28-1
3GFQ84500-0 35-2
3GFQ84500-0 35-9
3GG-02135-0.....8-33-2
3GG-06401-0.....10-1-2
3GG-10100-0.....7-19-2
3GG-87802-1.....26-13-2
3GGQ77211-0 20-1-2
3GJ-02165-0.....4-48
3GL-87802-1 26-13-4
3GLB87090-3.....34-1-2
3GLQ84550-1 35-8
3GM-06401-0.....10-1-3
3GM-10100-0.....7-19-3
3GM-84550-1.....35-20
3GM-87802-1.....26-13-3
3H6-06999-0 10-9
3H6-06999-0 10-12
3H6-07257-0 13-2
3H6-72100-0 30-1
3H8-76040-0 10-27
3J2-00114-0.....2-2
3N4-76142-1 24-28
3N5-84331-0 29-13
3N5-84333-0 29-14
3N5-84336-0 29-15
3N5-84465-0 29-16
3R0-62473-0 20-26
3R0-66308-0 19-20
3R0-66311-0 20-29
3R0-72181-0 11-4
3R0-77071-1 20-35-1
3R0-77071-1 20-35-2
3R0-77075-0 20-36-1
3R0-77075-0 20-36-2
3R0-77076-0 20-37-1
3R0-77076-0 20-37-2
3R0-77101-1 20-40-1
3R0-77101-1 20-40-2
3R0-77112-0 20-43-1
3R0-77112-0 20-43-2
3R0-77118-0 20-11
3R0-77173-0 21-21
3R0Q62470-0.....20-23-1
3R3-03239-0 8-7
3R3-76141-0 10-29
3S7-60213-0.....15-10
3S7-60251-0.....15-41
3S7-60252-0.....15-40
3S7-64302-0.....15-9-1
3S7-64303-0.....15-9-2
3S7-66011-0.....15-28
3S7-66013-0.....15-29-1
3S7-66014-0.....15-29-2
3S7-66225-0.....25-5
3S7-66241-0.....15-35
3S7Q60090-1.....15-1
3S7Q61110-0.....13-16
3S7Q87302-5.....34-5-4
3T1-01138-0.....24-50
3T1-02093-1.....5-7
3T1-10042-0.....5-18
3T1-60001-1.....15-36
3T1-72043-0.....26-15
3T1-72571-0.....30-17
3T1-72571-0.....35-5
3T1-72571-0.....35-17
3T1-72573-0.....33-5-1
3T1-72573-0.....35-6
3T1-72573-0.....35-11
3T1-72573-0.....35-18
3T1-72573-0.....35-23
3T1-72653-0.....30-19
3T1-72659-0.....30-18
3T1-72665-0.....30-21
3T4-06972-1.....1-29
3T4-06972-1.....10-16
3T4-06972-1.....10-26
3T4-06972-1.....12-34
3T5-00011-0.....2-6-1
3T5-00014-0.....2-6-2
3T5-00050-1.....2-1
3T5-00113-0.....2-10
3T5-00121-0.....2-11
3T5-00122-0.....1-48
3T5-01005-0.....1-16
3T5-01024-0.....1-8
3T5-01032-0.....1-13
3T5-02100-1.....3-2
3T5-02104-1.....3-3
3T5-02229-0.....8-40
3T5-02230-0.....8-36
3T5-02239-0.....12-42
3T5-02241-0.....3-5
3T5-02241-0.....7-36
3T5-02245-0.....3-9
3T5-03230-0.....8-4
3T5-03235-0.....8-9
3T5-04116-0.....6-7
3T5-04236-0.....6-10
3T5-04237-0.....6-11
3T5-04238-0.....6-14
3T5-04239-0.....6-15
3T5-04302-0.....6-2
3T5-04308-0.....5-8
3T5-04308-0.....6-5
3T5-04309-0.....5-9
3T5-04309-0.....6-6
3T5-04310-0.....6-1
3T5-04311-0.....6-3
3T5-04312-0.....6-4
3T5-04313-0.....6-8
3T5-04314-0.....6-9
3T5-04317-0.....6-12
3T5-04318-0.....6-13
3T5-04319-0.....6-19
3T5-06008-1.....9-10
3T5-06145-0.....9-8
3T5-06191-0.....9-1
3T5-06301-0.....11-1
3T5-06437-0.....10-25
3T5-06830-0.....23-8
3T5-06920-0.....6-25
3T5-06971-1.....1-19
3T5-06972-1.....4-16
3T5-09000-0.....12-1
3T5-10010-0.....5-12
3T5-10012-1.....5-11
3T5-10019-0.....5-13
3T5-10025-0.....5-15
3T5-10041-0.....5-23
3T5-10046-0.....5-19
3T5-10054-0.....5-22
3T5-10060-0.....5-1
3T5-10061-0.....5-32
3T5-10062-0.....5-27
3T5-10063-0.....5-4
3T5-10068-2.....5-2
3T5-10080-1.....4-5
3T5-10086-0.....4-41
3T5-10088-0.....4-33
3T5-10091-0.....4-13
3T5-10094-0.....4-26
3T5-10094-0.....4-29
3T5-10095-0.....4-25
3T5-10095-0.....4-28
3T5-10098-0.....4-7
3T5-10099-0.....4-46
3T5-10104-0.....7-35
3T5-10107-0.....7-28
3T5-10109-1.....7-4
3T5-10110-0.....7-27
3T5-10128-0.....7-29
3T5-10129-0.....7-31
3T5-10131-0.....5-3
3T5-10145-0.....4-39
3T5-10148-0.....4-24
3T5-10150-1.....8-1
3T5-10153-0.....4-43
3T5-10162-0.....4-34
3T5-10162-0.....4-36
3T5-10164-1.....4-9
3T5-10165-0.....4-10
3T5-10166-0.....4-6
3T5-10167-0.....4-8
3T5-10169-0.....4-42
3T5-10300-0.....4-21
3T5-10302-0.....4-30
3T5-10303-0.....4-23
3T5-10304-0.....4-22
3T5-10314-0.....4-18
3T5-10315-0.....4-20
3T5-10316-0.....4-19
3T5-10317-0.....4-2
3T5-62004-0.....22-30
3T5-63702-1.....7-3
3T5-63718-0.....7-20
3T5-63721-0.....7-21
3T5-65011-0.....14-19
3T5-65016-0.....14-18
3T5-65018-2.....14-28
3T5-66110-0.....25-14
3T5-66129-0.....25-19
3T5-66134-0.....25-24
3T5-67114-0.....10-6
3T5-67147-0.....25-15
3T5-67150-0.....24-7
3T5-67162-0.....24-18
3T5-67578-0.....25-40
3T5-71010-0.....12-23
3T5-71020-0.....12-28
3T5-71040-0.....23-10
3T5-71042-0.....33-6
3T5-72019-0.....22-15
3T5-72050-0.....30-3
3T5-72186-0.....11-6
3T5-72195-0.....7-37
3T5-72196-0.....4-54
3T5-72198-0.....23-23
3T5-72537-1.....30-16
3T5-72537-1.....35-4
3T5-72537-1.....35-10
3T5-72537-1.....35-16
3T5-72537-1.....35-22
3T5-72539-0.....31-46
3T5-72570-0.....23-11
3T5-72585-0.....10-23
3T5-72611-0.....23-15
3T5-72618-0.....23-14
3T5-76022-0.....23-7
3T5-76037-0.....23-24
3T5-76079-0.....10-42
3T5-76086-0.....29-3
3T5-76112-0.....33-4
3T5-76114-0.....33-3
3T5-76115-1.....29-11
3T5-76115-1.....32-11-1
3T5-76115-1.....32-11-2
3T5-76142-1.....10-38
3T5-76174-0.....23-19
3T5-76201-0.....32-14-1
3T5-76201-0.....32-14-2
3T5-76230-0.....23-2
3T5-76246-0.....10-35
3T5-76249-0.....10-33
3T5-84335-0.....22-36
3T5-84398-0.....4-53
3T5-84398-0.....7-33
3T5-84398-0.....8-21
3T5-84398-0.....12-22
3T5-84480-1.....32-3
3T5-84490-2.....32-1
3T5-84520-1.....32-4
3T5-84540-2.....32-2
3T5-87121-6.....34-2
3T5-87321-2.....34-4
3T5-87322-3.....34-3
3T5-87326-0.....16-25
3T5B01021-0.....1-7
3T5B01031-1 1-12
3T5B01100-0 1-1
3T5B02240-0 3-1
3T5B05101-0 11-24
3T5B10051-0 5-21
3T5B10143-0 4-38
3T5B64518-0 16-24-5
3T5B64523-0 16-24-2
3T5B64525-0 16-24-3
3T5B64527-0 16-24-1
3T5B64529-0 16-24-6
3T5B64532-0 16-24-7
3T5Q01301-0.....13-1
3T5Q63003-1.....22-1
3T5Q76032-0.....23-1
3T5Q87301-3.....34-5-1
3T5Q87302-3.....34-5-2
3T5Q87304-3.....34-5-3
3T7-01175-0.....1-45
3T9-76064-0.....10-24
3U1-06157-0 4-40
3V1-63035-1 22-11
3V1-63036-0 22-13
3V1-63077-0 22-12
3V2-60001-0 20-32
3Y5Q87304-4.....34-5-5
3Y7Q84550-6.....35-1
3Y9-06123-0 9-2
3Y9-10302-0 4-31
3Y9-10311-1 4-3
3Y9-10312-0 4-17
3Y9-72194-0 11-5
3Y9-72304-0 33-10
3Y9-72514-0 10-44
3Y9-76049-0 35-25
3Y9-76062-1 10-31
3Y9-76248-0 10-34
3Y9-76251-0 35-26
3Z4-06157-0 4-37
3Z4-72573-0 33-5-2
3Z4-72574-0 20-52
3Z5-06469-0 10-8
3Z5-06470-0 10-11
3Z5-06972-1 3-11
3Z5-10144-0 4-4
3Z5-62470-1 20-23-2
3Z5-72640-1 30-9
3Z5-72640-1 35-3
3Z5-72640-1 35-15
3Z5-76060-2 10-18
3Z5-76066-0 10-32
3Z5-77103-0 20-42-1
3Z5-77103-0 20-42-2
3Z5-77150-1 20-47
3Z5-77159-0 21-18
3Z5-77165-0 21-17

3Z5-77166-0 21-7
3Z5-77171-0 21-22
3Z5-77175-0 21-20
3Z5-77180-0 21-1
3Z5-77182-0 21-5
3Z5-77190-0 21-2
3Z5-77191-0 21-4
3Z5-77192-0 21-3
3Z5-77194-0 21-9
3Z5-77221-0 21-19
3Z5-77225-0 21-24
3Z5-77367-0 21-23
3Z5-77450-0 21-11
3Z5-77460-0 21-10
3Z5-77601-0 20-28
3Z5-83738-0 24-34
3Z5-84462-0 32-5
3Z5-84462-0 32-20
3Z5-84550-6 35-13
3Z5B02300-1.....1-23
3Z5Q61411-1.....20-22
3Z5Q62010-0.....20-16
3Z7Q77208-1.....20-13
910103-0525 28-33
910103-0610 1-43
910103-0610 7-13
910103-0612 20-38-1
910103-0614 22-26
910103-0614 26-6
910103-0618 1-3
910103-0620 20-53
910103-0625 11-8
910103-0635 7-5
910103-0670 25-21
910103-0865 4-14
910103-5512 6-16
910103-5608 20-46
910103-5610 1-44
910103-5610 10-28
910103-5612 22-40
910103-5612 24-36
910103-5616 14-31
910103-5616 24-40
910103-5620 1-31
910103-5620 1-50
910103-5620 10-19
910103-5620 16-3
910103-5625 3-10
910103-5625 5-24
910103-5625 13-5
910103-5625 24-37
910103-5635 18-39
910103-6512 9-9
910103-6518 6-20
910103-6612 4-11
910103-6612 13-23
910103-6612 14-41
910103-6612 23-20
910103-6612 24-29
910103-6614 8-45
910103-6614 10-17
910103-6614 12-43
910103-6614 24-44
910103-6616 4-44
910103-6616 11-30
910103-6618 7-22
910103-6625 10-39
910103-6625 22-29
910103-6630 6-21
910103-6630 8-12
910103-6630 10-2
910103-6630 12-29
910103-6630 20-8
910103-6640 8-32
910103-6820 11-28
910103-6825 11-23
910103-6825 11-27
910103-7625 9-11
910103-7635 10-14
910103-7835 5-30
910121-5620 1-10
910124-7630 5-10
9101E3-0612 20-38-2
9101E3-0625 22-14
9101E3-0630 24-5
9101E3-0830 18-54
9101E3-0830 20-18
9101E3-5612 18-49
9101E3-5612 18-51
9101E3-5612 20-15-1
9101E3-5612 20-15-2
9101E3-5612 20-58
9101E3-5612 22-10
9101E3-5620 18-37
9101E3-5625 1-14
9101E3-5820 19-4
9101E3-5835 13-15
9101E3-5835 14-42
9101E3-5835 18-46
9101E3-5855 14-29
9101F4-0612 24-14
9101F4-0614 25-9
9101F4-0625 7-12
9101F4-0835 1-21
915203-0816 30-26
9152E3-0845 22-33
915303-0825 17-4
9153E3-0825 13-17
9153E3-1022 22-38
916124-0845 1-5
916189-0865 .....1-50a
9161E3-0880 15-24
9161F4-0880 13-12
9161F9-0630 1-26
921146-4516 32-15-1
921146-4516 32-15-2
921503-0206 29-6
921503-0315 29-4
921503-0406 28-16
921503-0408 8-6
921503-0438 14-8
921503-0438 15-4
921503-0510 28-40
921503-0512 23-16
921503-0520 21-6
921503-0608 15-27
921503-0635 9-3
921503-5206 23-13
921503-5510 23-3
921503-5612 20-49
921503-5612 20-51
921503-5612 20-56
921503-6420 7-30
921503-6430 8-3
921521-6408 11-13
921521-6516 3-4
9215E3-5540 13-31
921603-0512 28-2
921603-0518 28-18
921722-0306 8-28
921803-0525 22-8
921903-0625 22-31
922531-6414 8-2
9225F2-6528 8-24
930103-0500 12-11
930103-0500 28-32
930103-0500 31-44
930103-0600 22-41
930103-0600 26-8
930103-0600 28-7
930103-0800 8-42
930103-0800 12-40
930103-0800 13-18
930103-0800 18-15
930103-1000 22-22
9301E3-0600 20-34
930203-0400 30-23
930203-0400 31-15
930203-0400 31-34
930203-0500 30-14
930203-0500 31-6-1
930203-0500 31-6-2
930203-0500 31-22
930203-0600 7-25
930203-0600 11-19
930222-0300 8-29
930403-0400 14-9
930403-0400 15-5
930403-0500 13-32
930403-0600 25-23
930403-0600 26-10
930403-0800 17-5
930403-0800 22-34
930403-0800 30-27
930403-1200 18-34
940103-0500 6-17
940103-0500 23-17
940103-0500 25-30
940103-0600 1-27
940103-0600 7-14
940103-0600 7-26
940103-0600 11-17
940103-0600 18-27
940103-0600 20-33-2
940103-0600 22-27
940103-0600 25-10
940103-0600 30-28
940103-0800 4-15
940103-0800 8-43
940103-0800 12-41
940103-0800 15-25
940103-0800 19-23
940103-0800 28-12
940103-1200 30-7
940121-0600 1-28
940121-0800 1-6
940121-0800 1-22
9401E3-0600 16-11
9401E3-0600 20-33-1
9401E3-0800 13-13
9401E3-0800 18-16
9401E3-0800 22-35
9401E3-1000 22-21
940221-0500 11-22
9402E3-0800 13-19
9402E3-0800 15-37
9402E3-1000 15-39
9402E3-1200 18-35
941303-0400 24-39
941303-0400 30-22
941303-0400 31-16
941303-0400 31-35
941303-0500 30-15
941303-0500 31-7-1
941303-0500 31-7-2
941303-0500 31-23
941303-0500 31-45
941303-0600 9-4
941303-0600 11-18
941303-0600 12-6
941303-0600 24-16
941303-0600 25-22
941303-0600 26-7
941321-0500 11-21
941403-1200 25-3
941403-1400 24-12
941403-1400 25-18
945103-1800 20-44-1
945103-1800 20-44-2
945103-2500 18-26
945103-2800 20-21
945107-2500 2-4
945303-0600 19-14
945303-0600 28-25
951403-0310 22-6
951403-0312 14-39
951403-3510 15-31
951403-3514 15-30
951403-3516 20-25
951407-0312 14-34
951503-0212 19-16
951503-0212 25-27
951503-0215 25-35
951503-0325 16-30
951603-0800 7-10
951603-0800 25-29-1
951603-0800 25-29-2
951603-1000 20-12
951703-0800 25-12
9601-0-6007.....16-6
9601-0-6203.....5-17
965002-0803 16-23
9701-1-1111.....1-32
98AB-30-310 7-32
98AB-50-075 1-34
98AB-50-075 8-17-1
98AB-50-115 1-35
98AB-50-190 8-33-1
98AB-50-250 1-33
98AB-50-250 24-51
98AB-50-260 8-46-1
98AB-50-260 24-48
98AB-50-280 4-51
98AB-50-530 4-47
98AB-506000.....31-25
98AB-701600.....27-7
98AB-70-180 8-19-1
98AB-70-700 27-6
98AL-40-205 1-39
98AL-40-335 1-40
98AL-40-355 1-38
98AT130-060.....5-34
98AY-45-105 4-12
99AA-2-0100.....12-20
99AA-2-0120.....12-18
99AA-2-0140.....12-17-1
99AA-2-0140.....12-17-2
99AA-2-0160.....12-19
99AA-2-0200.....12-16-1
99AA-2-0200.....12-16-2
99AA-2-0200.....12-16-3
99AA-6-0175.....12-14
99AA-6-0570.....12-13

Note

Copyright © 2011 Tohatsu Corporation. All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means without the express written permission of Tohatsu Corporation.

TOHATSU

TOHATSU CORPORATION
Address : 5-4,3-chome,Azusawa,Itabashi-ku,
TOKYO,174-0051 JAPAN
Phone : TOKYO (03)3966-3117
FAX : TOKYO (03)3966-0090
Website : www.tohatsu.co.jp

トーハツ船外機
パーツ カタログ

PARTS CATALOG

MD 30B$_2$
40B$_2$
50B$_2$

Serial Number 000001AA~

本　　社 〒174-0051 東京都板橋区小豆沢3-5-4 03(3966)3116
マリン九州 〒812-0892 福岡市博多区東那珂2-10-55 092(411)8770
マリン関西 〒530-0043 大阪市北区天満1-8-27 06(6358)2971
マリン関東 〒174-0051 東京都板橋区小豆沢3-5-4 03(3966)2222

002-21048-3
1104