
2013 PARTS CATALOG

TOHATSU

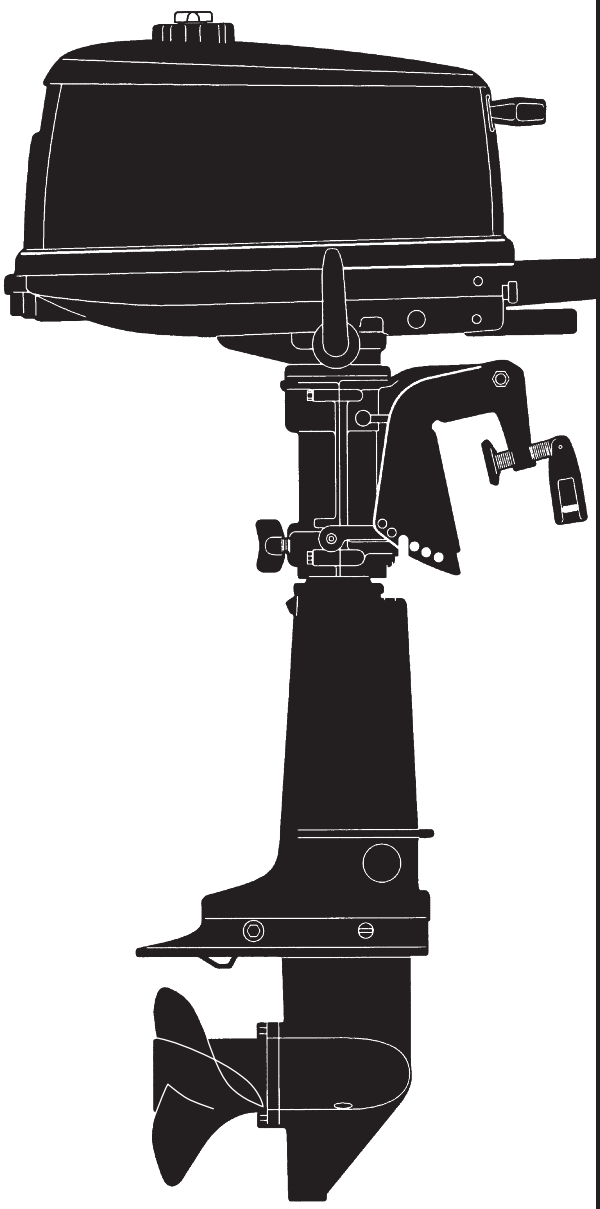

M 4C
5B

Serial Number 000001AC~

OB NO.002-21005-A
1301


HOW TO USE THIS PARTS CATALOG

1. This Parts Catalog provides information available as of the end of January, 2013.

2. Please keep the Parts Catalog updated each time when receiving the Service Bulletin describing the addition, abolition and/or change of parts.

3. Actual shapes of parts may be different from the illustrations shown in this Parts Catalog because they are described only as a guide for searching parts.

4. One illustration is given more than one article number. Please confirm the sub-number, applicable model and remarks before ordering parts.

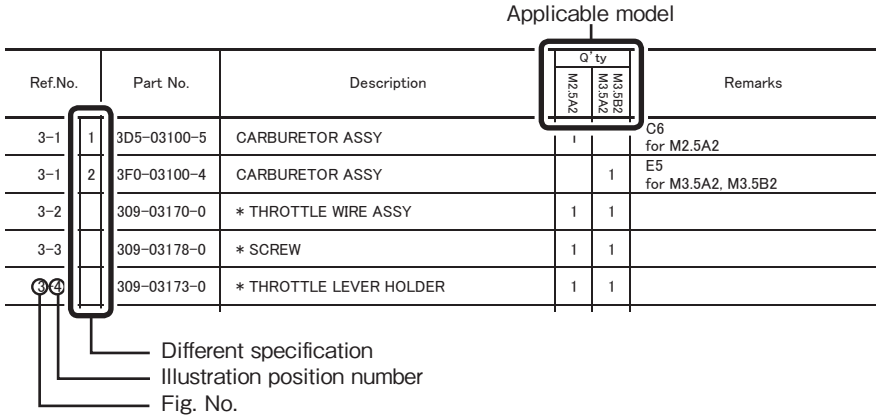

5. Given mark in (*) to part number shows assembly or kit part.

6. Marks in this Parts Catalog show.

STD	: Standard	OPT	: Optional Parts
O/S	: Over size	ASSY	: Assembly
DO	: Domestic Model	EX	: Export Model
A	: As required	EU	: European Union

7. Attention to order
   Please order painted parts in accordance with following.
   The parts that fourth figure of the parts number is (B), (Q) have painted.
   Present coloring of power head is black （B), lower unit is aqua marine blue (Q) and propeller is black (B).
   [Example]

ENGINE SHORT BLOCK KIT	LOWER UNIT ASSY (L)
369B87090-4	369Q87302-4
B: Black	Q: Aquamarine Blue

8. About dimensional identification of bolts, nuts and washers.
   BOLT 916124 - 0653
   0653: Length below neck, Diameter
   NUTS & WASHERS 940124 - 0800
   0800: Diameter

9. Hose, that is a standard part, is replaced with long hose.

HOSE 98AB - 50 - 150

Length
Diameter

HOSE/PIPE

Fig No	Part No.	Description	Bulk part No.	Bulk part	
				Inner Diameter (mm)	Length (m)
9-43	98AB-50-200	HOSE	98AB-501000	5	1
9-44	98AB-50-110	HOSE	98AB-501000	5	1
12-6	98AB-70-700	HOSE	98AB-701000	7	1
12-7	98AB-701600	HOSE	98AB-701000 x2	7	1
12-18	98AB-50-150	HOSE	98AB-501000	5	1
12-23	98AB-50-035	HOSE	98AB-501000	5	1

CONTENTS

Fig. 1 CYLINDER・CRANK CASE ····· 1
Fig. 2 PISTON・CRANK SHAFT ····· 3
Fig. 3 CARBURETOR ····· 5
Fig. 4 RECOIL STARTER・STARTER LOCK ····· 9
Fig. 5 MAGNETO ····· 13
Fig. 6 DRIVE SHAFT HOUSING・SHIFT ····· 15
Fig. 7 GEAR CASE ····· 19
Fig. 8 BRACKET・REVERSE LOCK ARM ····· 25
Fig. 9 BOTTOM COWL・TILLER HANDLE ····· 29
Fig. 10 TOP COWL ····· 33
Fig. 11 INTEGRAL FUEL TANK（M5B-D・M5B・M4C） ····· 35
Fig. 12 SEPARATE FUEL TANK・DUAL FUEL （M5B-D・M5B-S） ····· 37
Fig. 13 OPTIONAL PARTS (1) ACCESSORIES (REMOTE CONTROL) ····· 39
Fig. 14 OPTIONAL PARTS (2) REMOTE CONTROL BOX ····· 43
Fig. 15 OPTIONAL PARTS (3) ACCESSORIES ····· 47
Fig. 16 ASSEMBLY・KIT PARTS ····· 49
INDEX ····· 55
INDEX (Parts Number) ····· 58

Fig. 1 CYLINDER • CRANK CASE


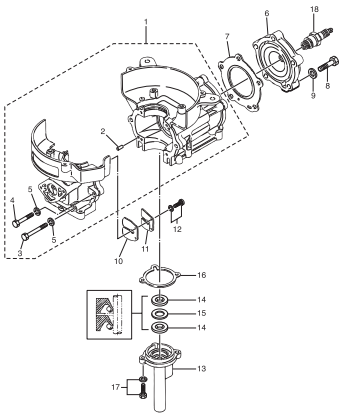


Fig. 2 PISTON • CRANK SHAFT

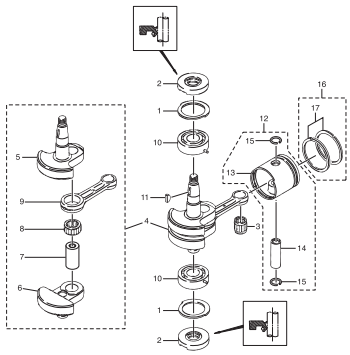

(REMARKS) CRANK SHAFT ASSY ..... Very difficult to assemble. The component parts to be purchased as an assy basically.

Fig. 3 CARBURETOR

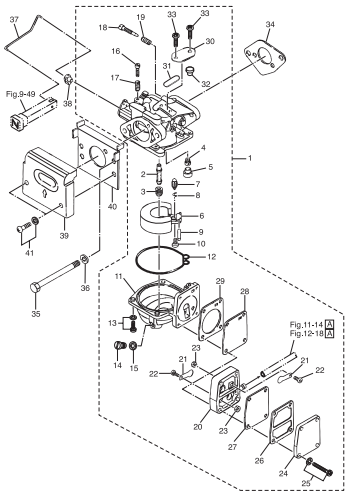


Fig. 4 RECOIL STARTER • STARTER LOCK

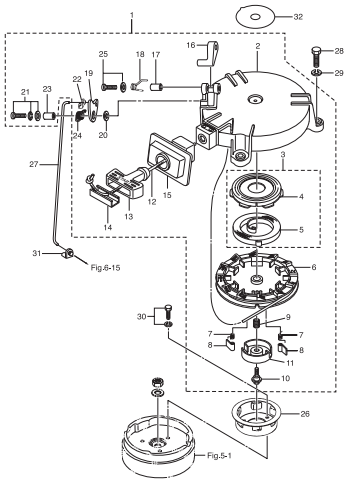


Fig. 5 MAGNETO

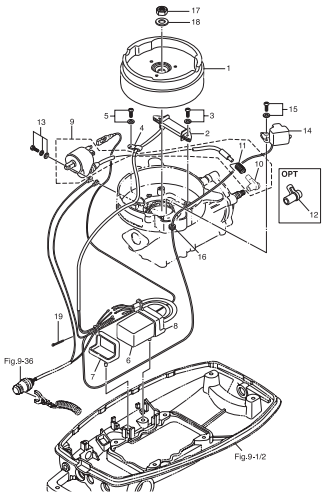


Fig. 6 DRIVE SHAFT HOUSING • SHIFT

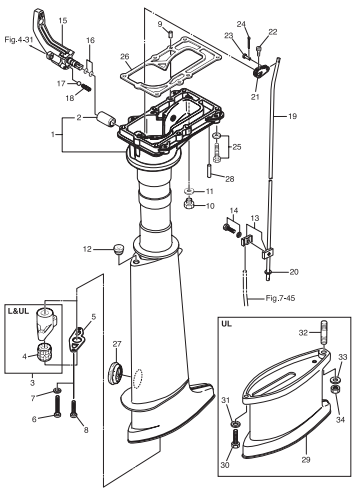


Fig. 7 GEAR CASE

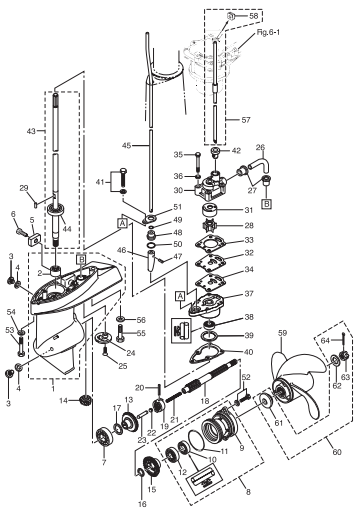


Fig. 8 BRACKET • REVERSE LOCK ARM

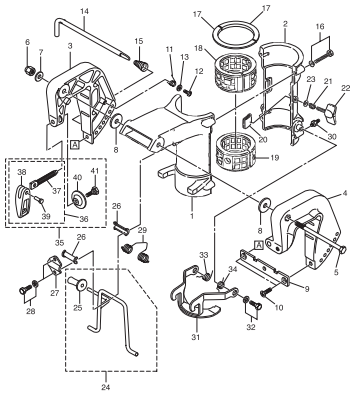


Fig. 9 BOTTOM COWL • TILLER HANDLE

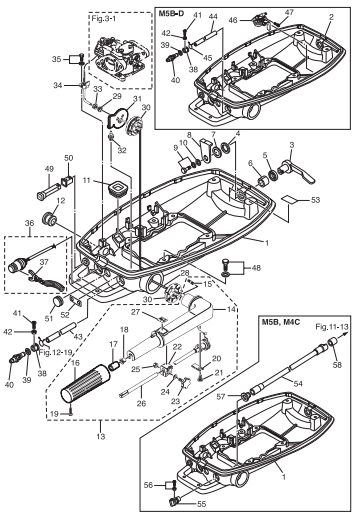


Fig. 10 TOP COWL

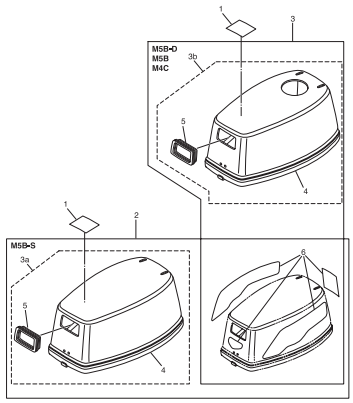


Fig. 11 INTEGRAL FUEL TANK (M5B-D・M5B・M4C)

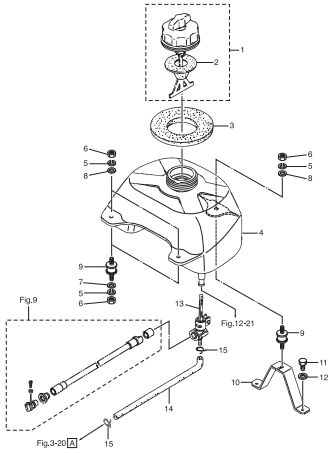


Fig. 12 SEPARATE FUEL TANK・DUAL FUEL (M5B-D・M5B-S)

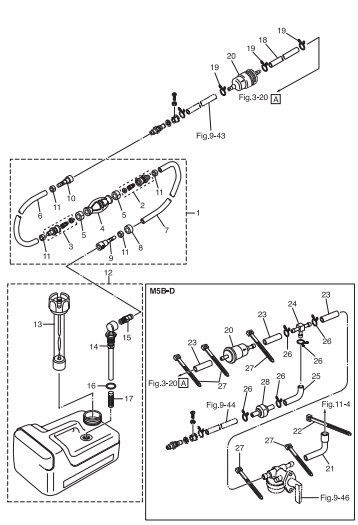


Fig. 13 OPTIONAL PARTS (1) ACCESSORIES (REMOTE CONTROL)

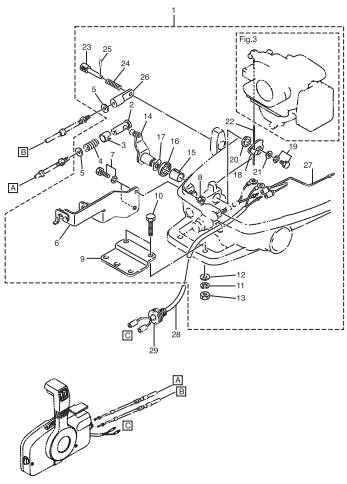


Fig. 14 OPTIONAL PARTS (2) REMOTE CONTROL BOX

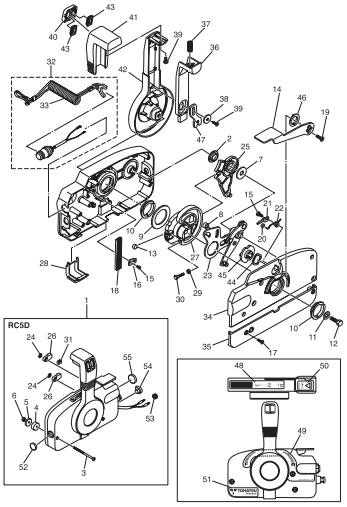


Fig. 15 OPTIONAL PARTS (3) ACCESSORIES


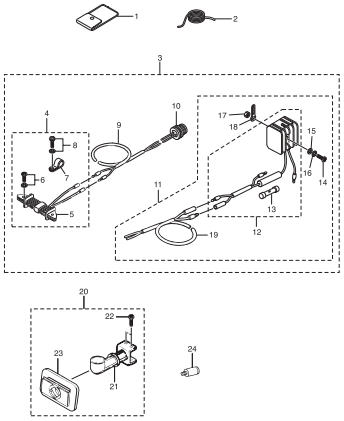


Fig. 16 ASSEMBLY・KIT PARTS

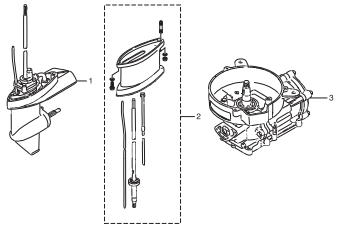

CABURETOR REPAIR KIT — 4


POWER HEAD GASKET SET — 5

WATER PUMP REPAIR KIT — 6

WATER PUMP KIT (CHROME PLATED) — 7


LOWER UNIT GASKET SET — 8

Fig. 1 CYLINDER • CRANK CASE

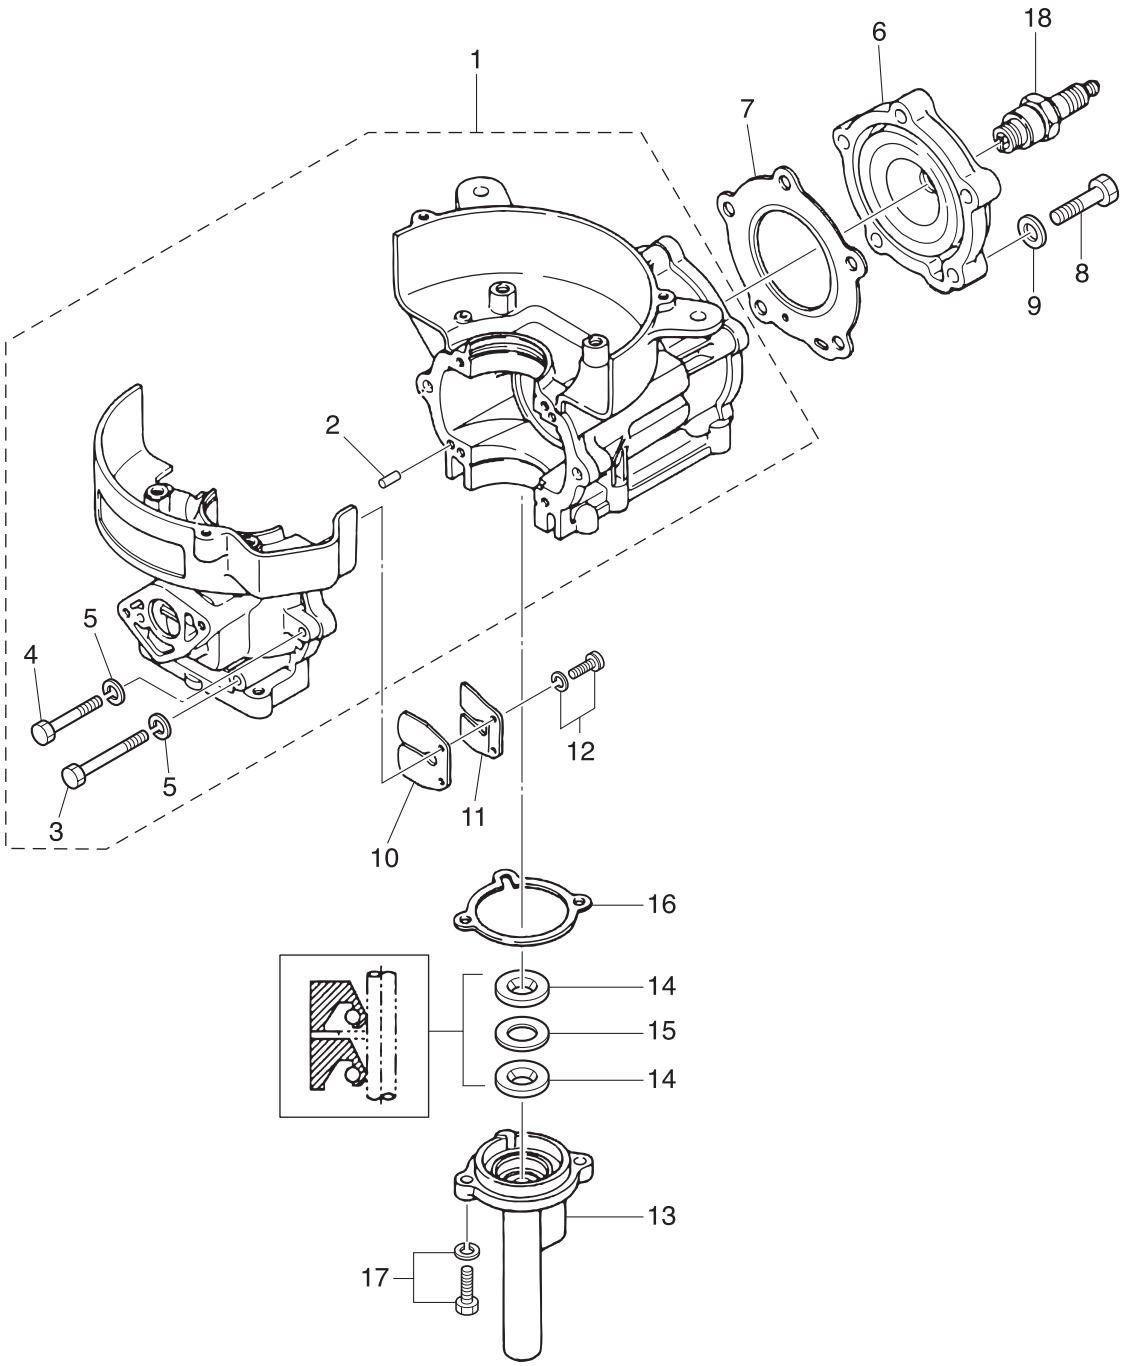

Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
1-1		369B01100-2	CYL BLOCK & CRANKCASE ASSY	1	1	
1-2		345-01111-0	* DOWEL PIN 6-12	2	2	
1-3		916124-0653	* BOLT	4	4	
1-4		916124-0630	* BOLT	2	2	
1-5		941322-0600	* SPRING WASHER	6	6	
1-6		369B01001-1	CYLINDER HEAD	1	1	
1-7		369-01005-2	CYLINDER HEAD GASKET	1	1	
1-8		9161F4-0835	BOLT	5	5	
1-9		940124-0800	WASHER	5	5	
1-10		369-02111-0	REED VALVE	1	1	
1-11	1	369-02113-0	REED VALVE STOPPER		1	for M5B
1-11	2	393-02113-0	REED VALVE STOPPER	1		for M4C
1-12		921521-6410	SCREW	2	2	
1-13		369-01210-4	CRANKCASE HEAD	1	1	
1-14		369-01215-0	OIL SEAL 10.1-25-7	2	2	
1-15		369-01217-0	SPACER 19-24.8-1	1	1	
1-16		369-01214-0	CRANKCASE HEAD GASKET	1	1	
1-17		910103-6620	BOLT	2	2	
1-18		9701-1-1014	SPARK PLUG (BPR7HS10)	1	1	NGK


Fig. 2 PISTON・CRANK SHAFT

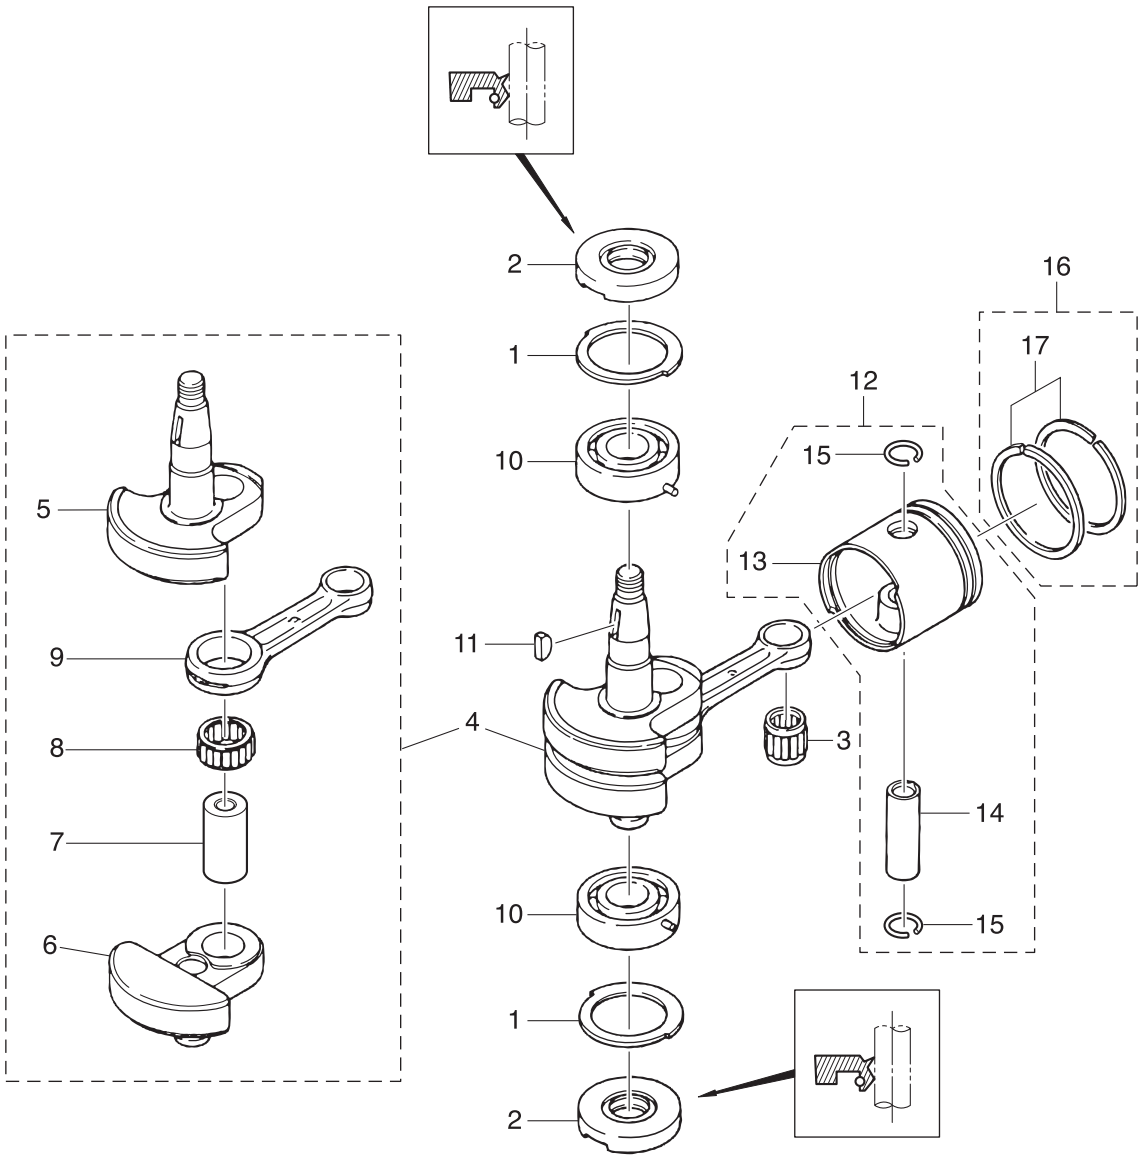

(REMARKS) CRANK SHAFT ASSY ..... Very difficult to assemble. The component parts to be purchased as an assy basically.


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
2-1		369-00115-0	THRUST PLATE	2	2	
2-2		369-00122-0	OIL SEAL 20-47-8	2	2	
2-3		350-00042-0	ROLLER BEARING 14-18-20	1	1	
2-4		369-00069-0	CRANKSHAFT SUB-ASSY	1	1	
2-5		369-00031-0	* CRANKSHAFT A	1	1	
2-6		369-00034-0	* CRANKSHAFT D	1	1	
2-7		369-00061-1	* CRANK PIN	1	1	
2-8		369-00043-0	* ROLLER BEARING 20-26-12	1	1	
2-9		369-00040-0	* CONNECTING ROD	1	1	
2-10		9603-3-6204	BALL BEARING 6204	2	2	
2-11		338-00131-0	KEY	1	1	Magneto
2-12	1	369-87130-0	PISTON REPAIR KIT	1	1	STD
2-12	2	369-87131-0	PISTON REPAIR KIT (0.5 O/S)	1	1	OPT
2-13	1	369-00001-1	* PISTON	1	1	STD
2-13	2	369-00004-1	* PISTON (0.5 O/S)	1	1	OPT
2-14		369-00021-1	* PISTON PIN	1	1	
2-15		350-00024-1	* PISTON PIN CLIP	2	2	
2-16	1	369-87123-0	PISTON RING SET	1	1	STD
2-16	2	369-87124-0	PISTON RING SET (0.5 O/S)	1	1	OPT
2-17	1	351-00011-0	* PISTON RING	2	2	STD
2-17	2	351-00014-0	* PISTON RING (0.5 O/S)	2	2	OPT

Fig. 3 CARBURETOR

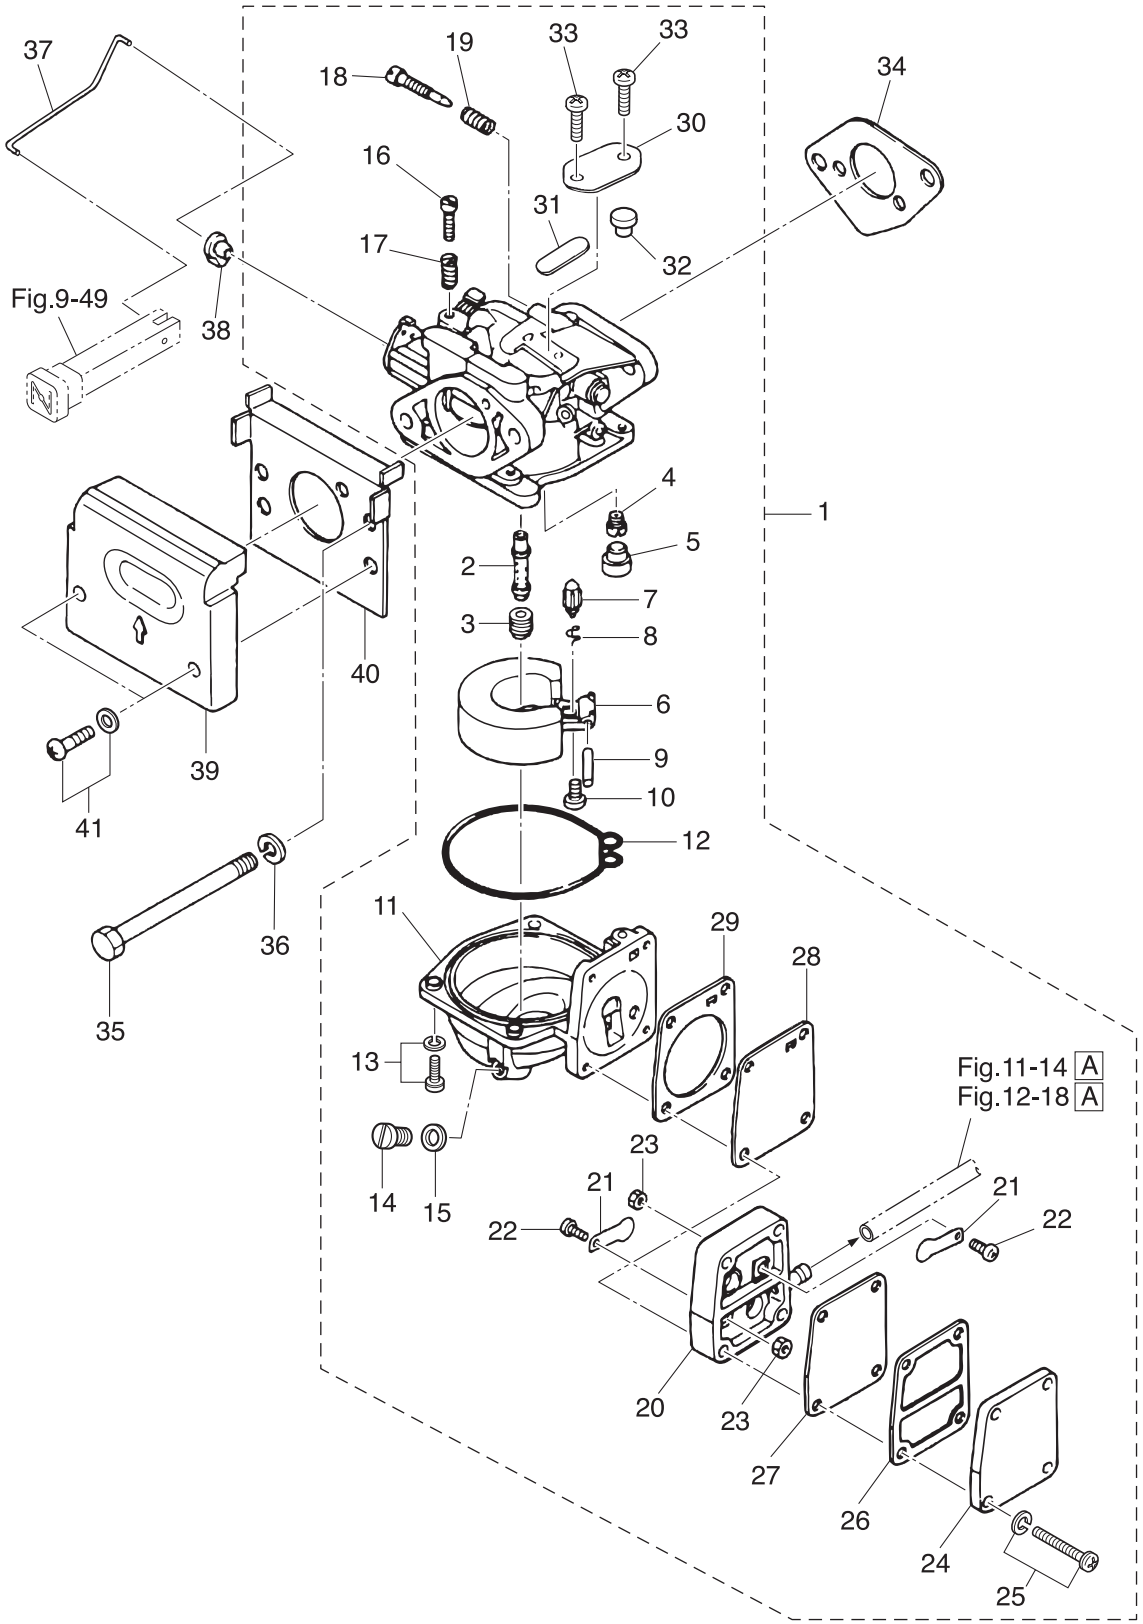


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
3-1	1	369-03200-2	CARBURETOR ASSY		1	78BC for M5B
3-1	2	393-03200-2	CARBURETOR ASSY	1		F52C for M4C
3-2		369-03252-1	* MAIN NOZZLE	1	1	
3-3		369-03251-0	* MAIN JET (#78)	1	1	
3-4	1	393-03254-0	* SLOW JET (#52)	1		M4C
3-4	2	369-03254-0	* SLOW JET (#55)		1	M5B
3-5		346-03256-0	* RUBBER CAP	1	1	
3-6		369-03231-0	* FLOAT	1	1	
3-7		369-03240-0	* FLOAT VALVE	1	1	
3-8		344-03244-0	* CLIP	1	1	
3-9		346-03232-0	* FLOAT ARM PIN	1	1	
3-10		921521-0408	* SCREW	1	1	
3-11		369-03221-0	* FLOAT CHAMBER	1	1	
3-12		369-03222-0	* FLOAT CHAMBER O-RING	1	1	
3-13		922503-6412	* SCREW	4	4	
3-14		369-03292-0	* DRAIN SCREW	1	1	
3-15		369-03293-1	* GASKET	1	1	
3-16		346-03265-0	* STOP SCREW	1	1	
3-17		346-03267-0	* SPRING	1	1	
3-18	1	3B2-03266-0	* PILOT SCREW		1	M5B
3-18	2	356-03266-0	* PILOT SCREW	1		M4C
3-19		356-03268-0	* SPRING	1	1	
3-20		369-03304-0	* PUMP BODY	1	1	
3-21		369-03305-0	* CHECK VALVE	2	2	
3-22		921821-0306	* SCREW	2	2	
3-23		930121-0300	* NUT	2	2	
3-24		369-03301-0	* PUMP COVER	1	1	
3-25		922553-6423	* SCREW	4	4	
3-26		369-03302-0	* PUMP COVER GASKET	1	1	

Fig. 3 CARBURETOR

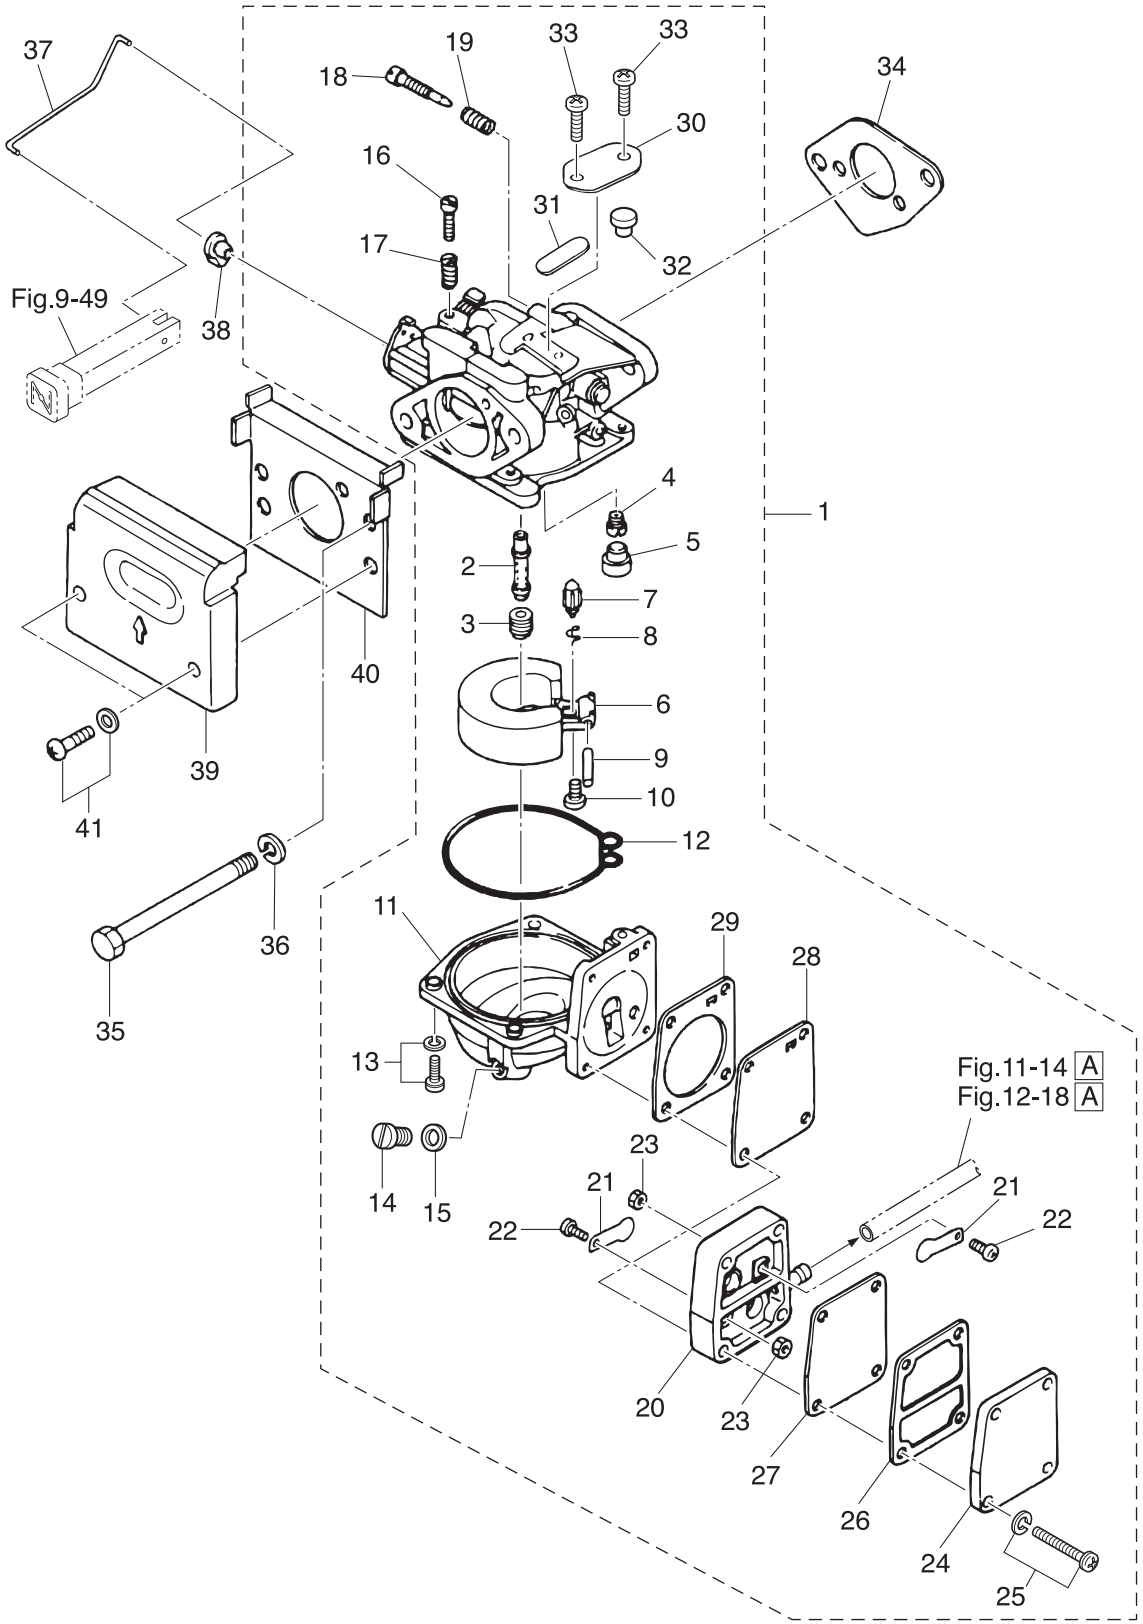


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
3-27	369-03303-0	* DIAPHRAGM A	1	1	
3-28	369-03306-0	* DIAPHRAGM B	1	1	
3-29	369-03307-0	* PUMP BODY GASKET	1	1	
3-30	369-03181-0	* CARBURETOR COVER	1	1	
3-31	369-03182-0	* CARBURETOR COVER GASKET	1	1	
3-32	369-03183-0	* CARBURETOR COVER GASKET	1	1	
3-33	369-03186-0	* SCREW	2	2	
3-34	369-02011-0	CARBURETOR GASKET	1	1	
3-35	9161F1-0685	BOLT	2	2	
3-36	941322-0600	SPRING WASHER	2	2	
3-37	393-67192-0	CHOKE ROD	1	1	
3-38	346-67196-1	ROD SNAP 3-B	1	1	
3-39	369-02501-2	PLATE	1	1	
3-40	369-02503-1	HOLDER	1	1	
3-41	921503-5418	SCREW	2	2	

Fig. 4 RECOIL STARTER • STARTER LOCK

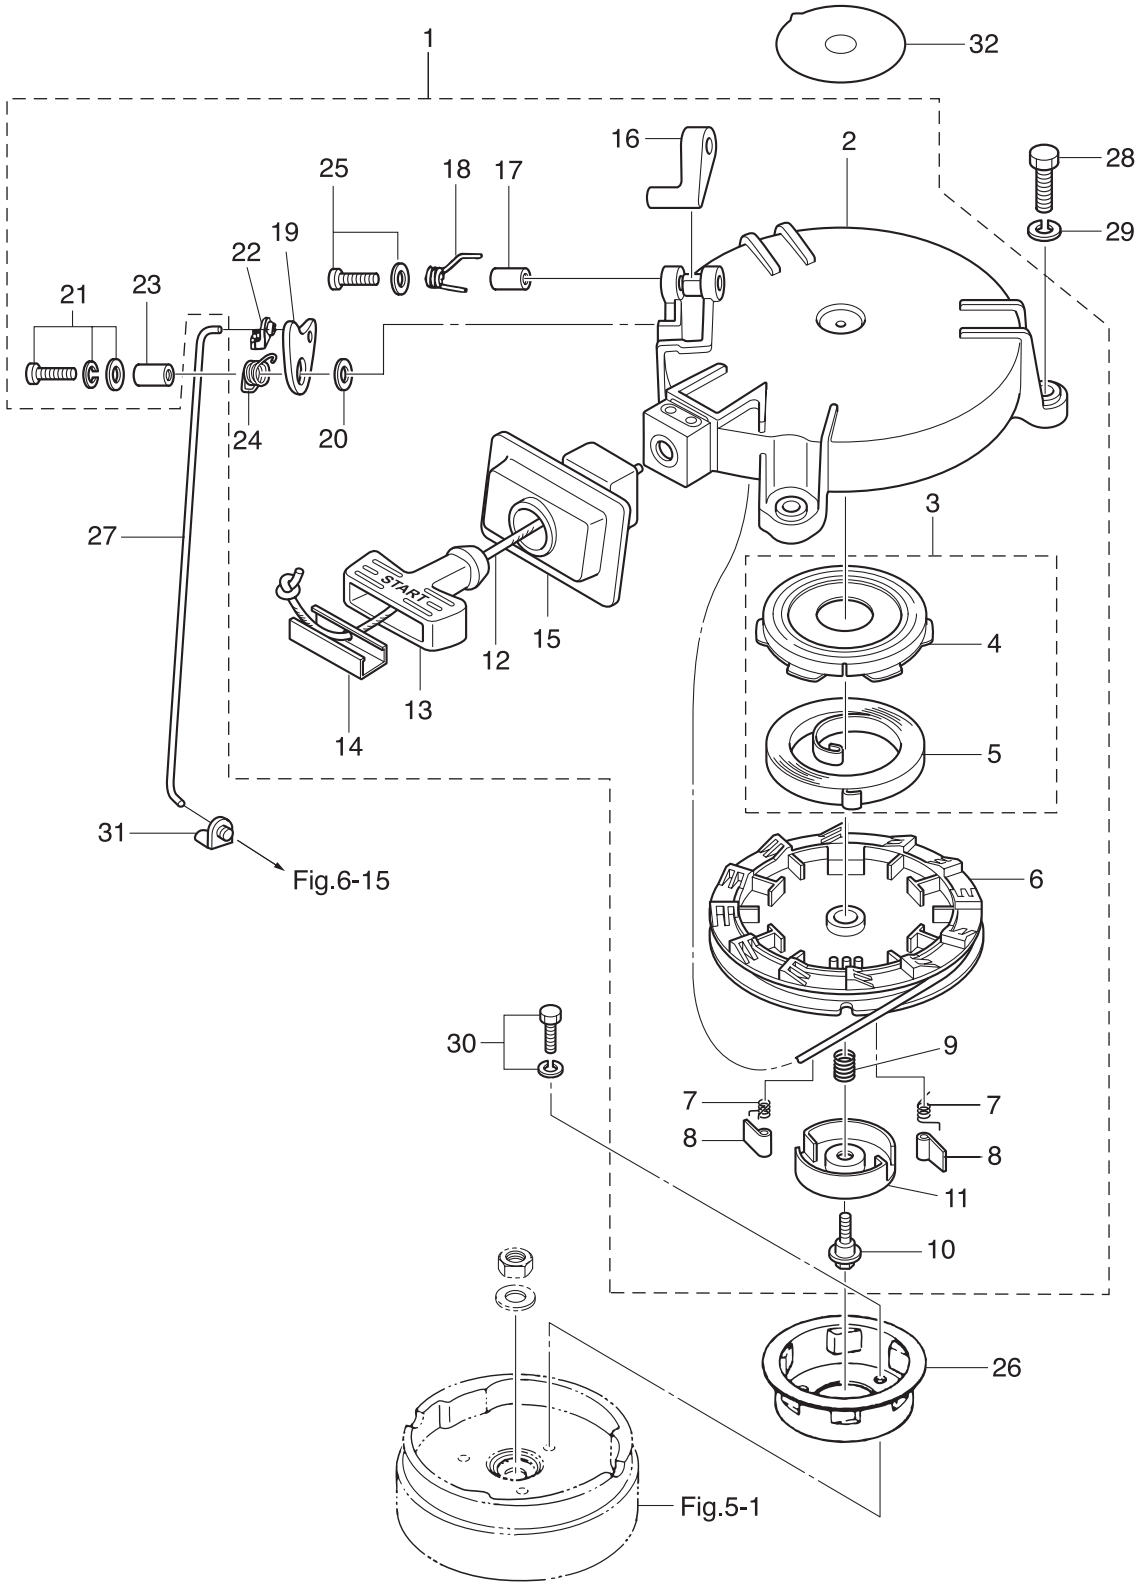


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
4-1	3AS-05090-1	RECOIL STARTER ASSY	1	1	
4-2	3R1-05105-0	* STARTER CASE	1	1	
4-3	3R1-05010-0	* STARTER SPRING SET	1	1	
4-4	3R1-05125-0	** STARTER SPRING CASE	1	1	
4-5	3R1-05004-0	** STARTER SPRING	1	1	
4-6	3R1-05104-0	* REEL	1	1	
4-7	3R1-05012-0	* RETURN SPRING	2	2	
4-8	3R1-05003-2	* RATCHET	2	2	
4-9	3R1-05007-0	* FRICTION SPRING	1	1	
4-10	3R1-05138-1	* BOLT	1	1	
4-11	3R1-05006-2	* FRICTION PLATE	1	1	
4-12	3R1-05013-0	* STARTER ROPE ϕ4.5-1620	1	1	
4-13	3R1-05019-0	* STARTER HANDLE	1	1	
4-14	3R1-05131-1	* ROPE ANCHOR	1	1	
4-15	3R1-05116-0	* SEALING PLATE	1	1	
4-16	3R1-05252-0	* STARTER LOCK	1	1	
4-17	3R1-05255-0	* COLLAR 4-6-21	1	1	
4-18	3R1-05216-0	* STARTER LOCK SPRING	1	1	
4-19	3R1-05253-0	* STARTER LOCK CAM	1	1	
4-20	940103-0600	* WASHER	1	1	
4-21	921503-7616	* SCREW	1	1	
4-22	3R1-05223-0	* ROD SNAP 3.5-2	1	1	
4-23	3R1-05215-0	* COLLAR 6.1-8-6.5	1	1	
4-24	3R1-05258-0	* STARTER LOCK CAM SPRING	1	1	
4-25	921503-5430	* SCREW	1	1	
4-26	3R1-05901-0	STARTER PULLEY	1	1	
4-27	369-05217-1	STARTER LOCK ROD	1	1	
4-28	9101F4-0623	BOLT	3	3	
4-29	941303-0600	SPRING WASHER	3	3	

Fig. 4 RECOIL STARTER • STARTER LOCK

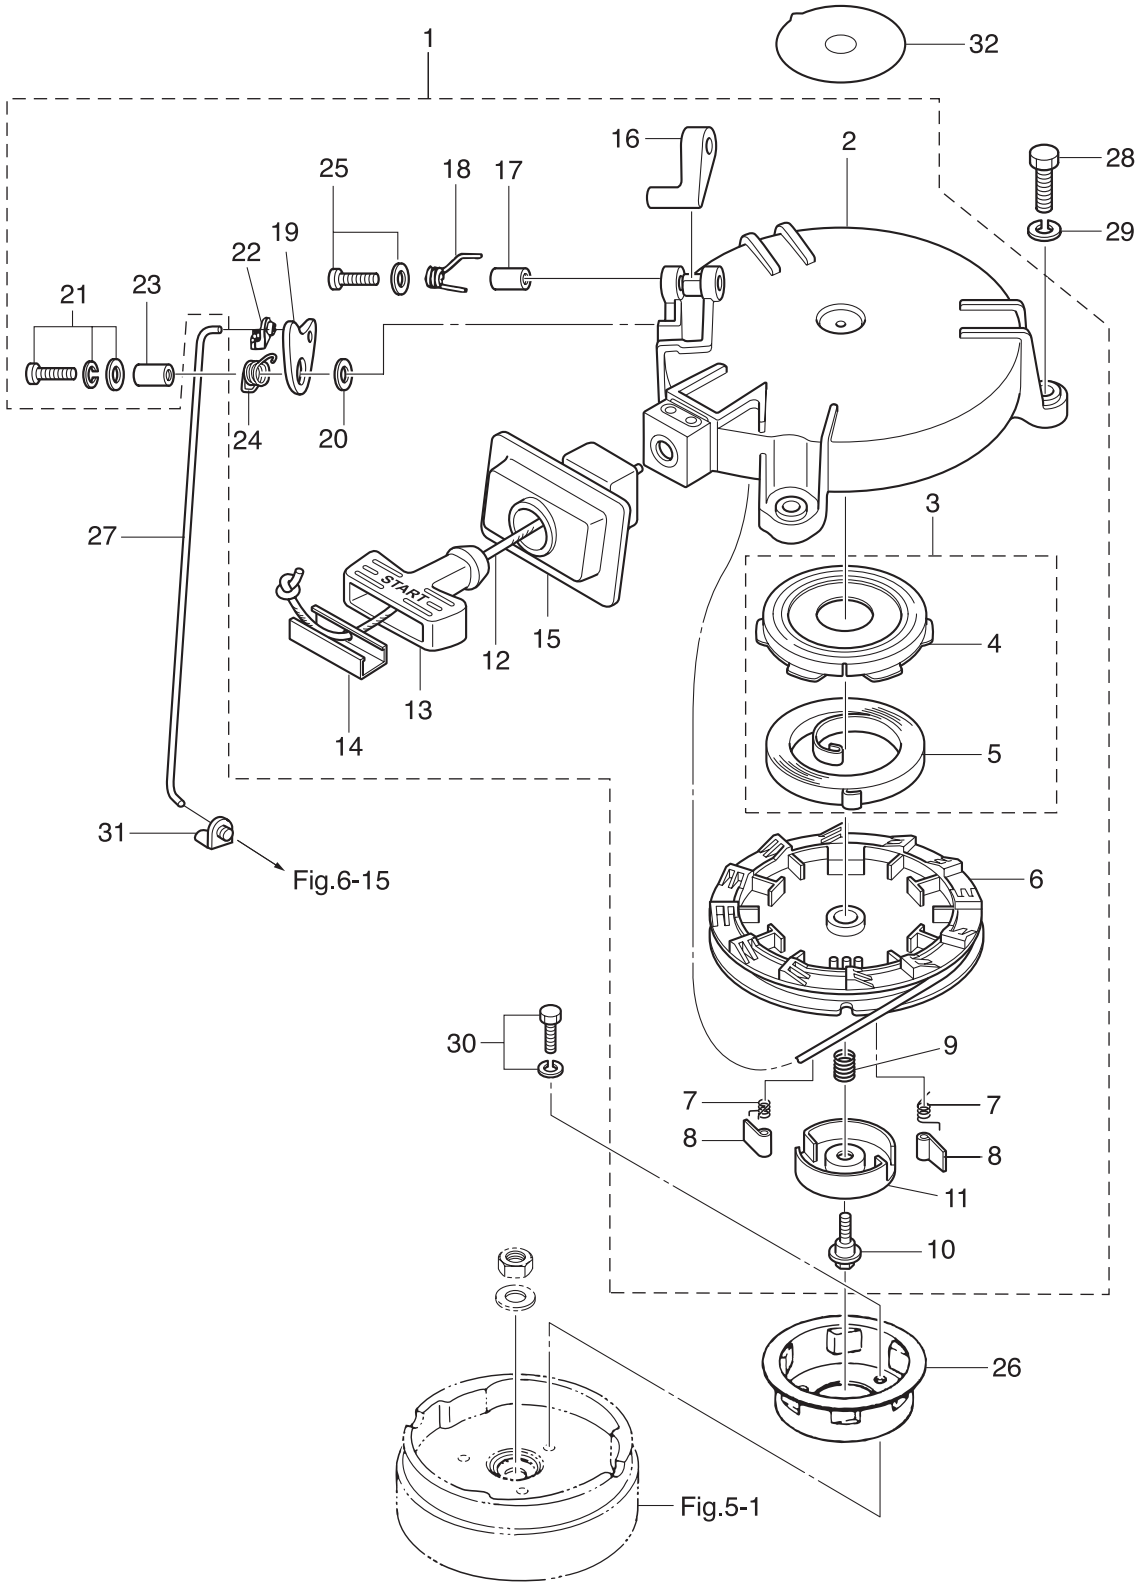


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
4-30		910121-6612	BOLT	3	3	
4-31		345-05223-1	ROD SNAP 3.5-2	1	1	
4-32		3R0-72181-0	CAUTION DECAL (B)	1	1	

Fig. 5 MAGNETO

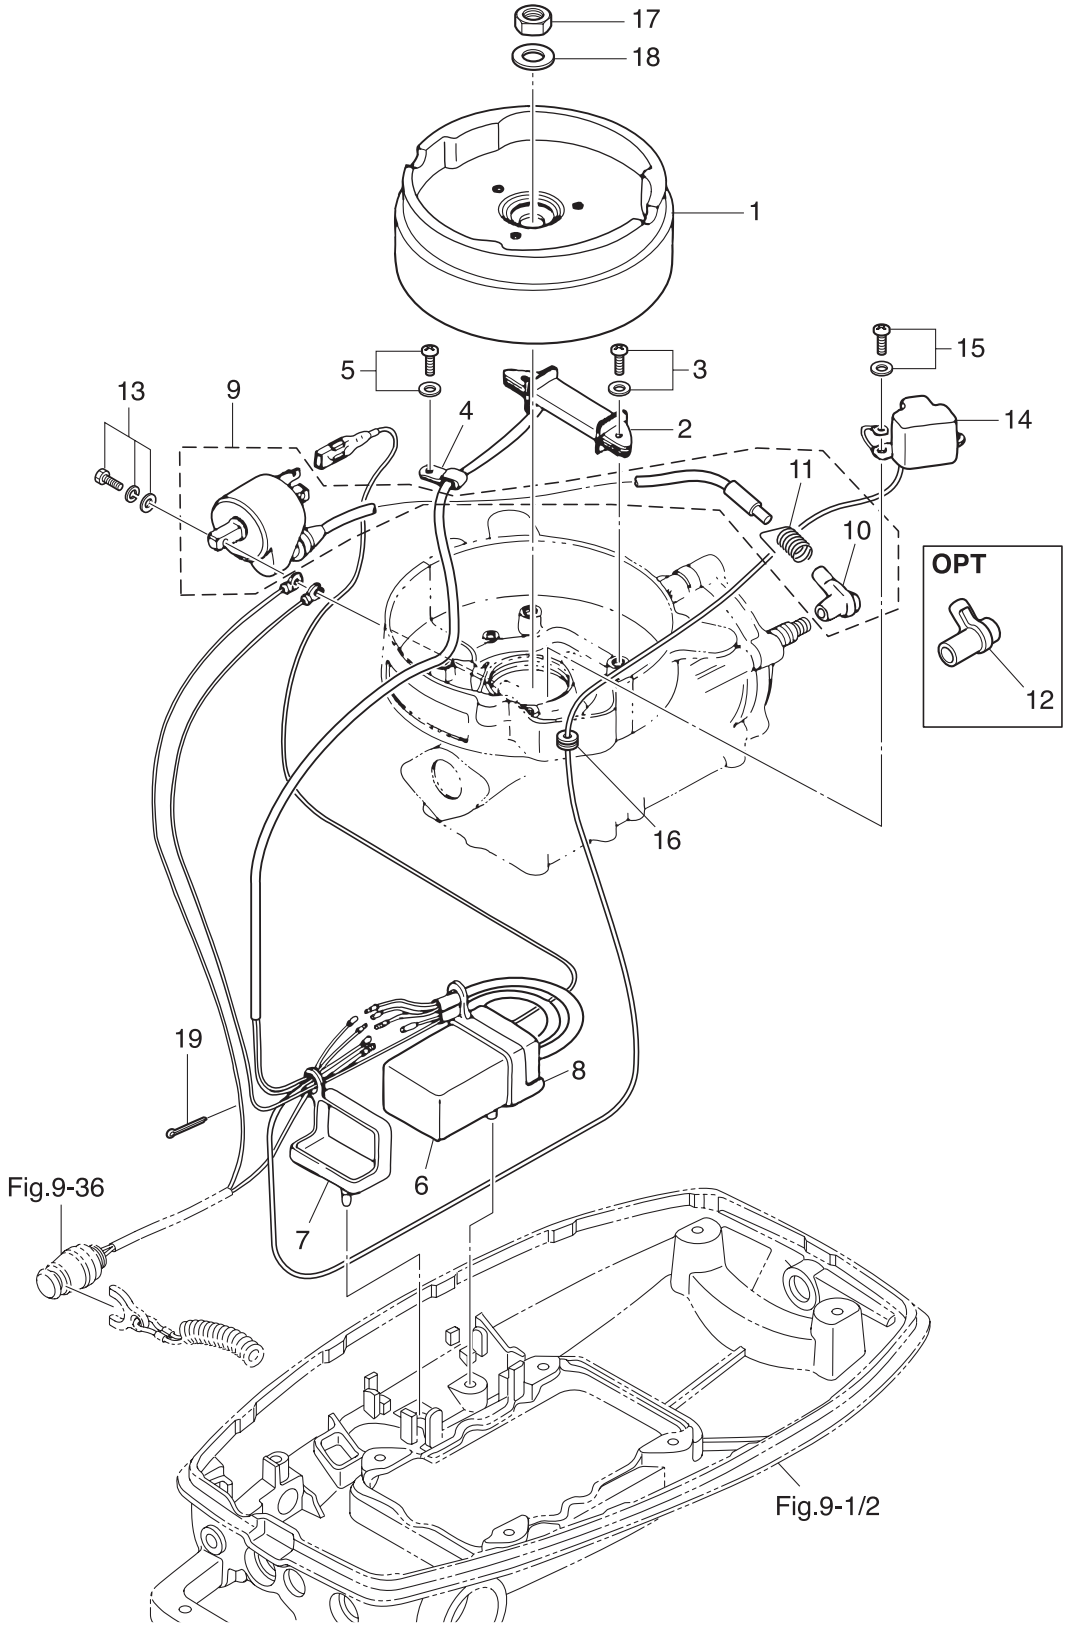


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
5-1	369-06001-1	FLYWHEEL	1	1	
5-2	369-06021-0	EXCITER COIL	1	1	
5-3	921521-6520	SCREW	2	2	
5-4	369-06915-0	CLAMP 4.2-3-8	1	1	
5-5	921521-6408	SCREW	1	1	
5-6	369-06060-1	CD UNIT	1	1	
5-7	3H6-06907-0	RUBBER DAMPER	1	1	
5-8	3H6-06906-0	RUBBER DAMPER	1	1	
5-9	3F9-06050-0	IGNITION COIL W/CAP	1	1	
5-10	3M2-06921-0	* PLUG CAP	1	1	STD
5-11	3M2-06926-0	* PLUG CAP TERMINAL	1	1	STD
5-12	3C7-06921-0	PLUG CAP W/RESISTANCE	1	1	OPT
5-13	910121-7622	BOLT	2	2	
5-14	369-06071-0	PULSAR COIL	1	1	
5-15	921521-6412	SCREW	2	2	
5-16	369-06908-0	GROMMET ϕ11	1	1	
5-17	369-00132-0	NUT 12-P1.25	1	1	
5-18	940121-1200	WASHER	1	1	
5-19	951503-0318	SPLIT PIN 3-18	1	1	

Fig. 6 DRIVE SHAFT HOUSING • SHIFT

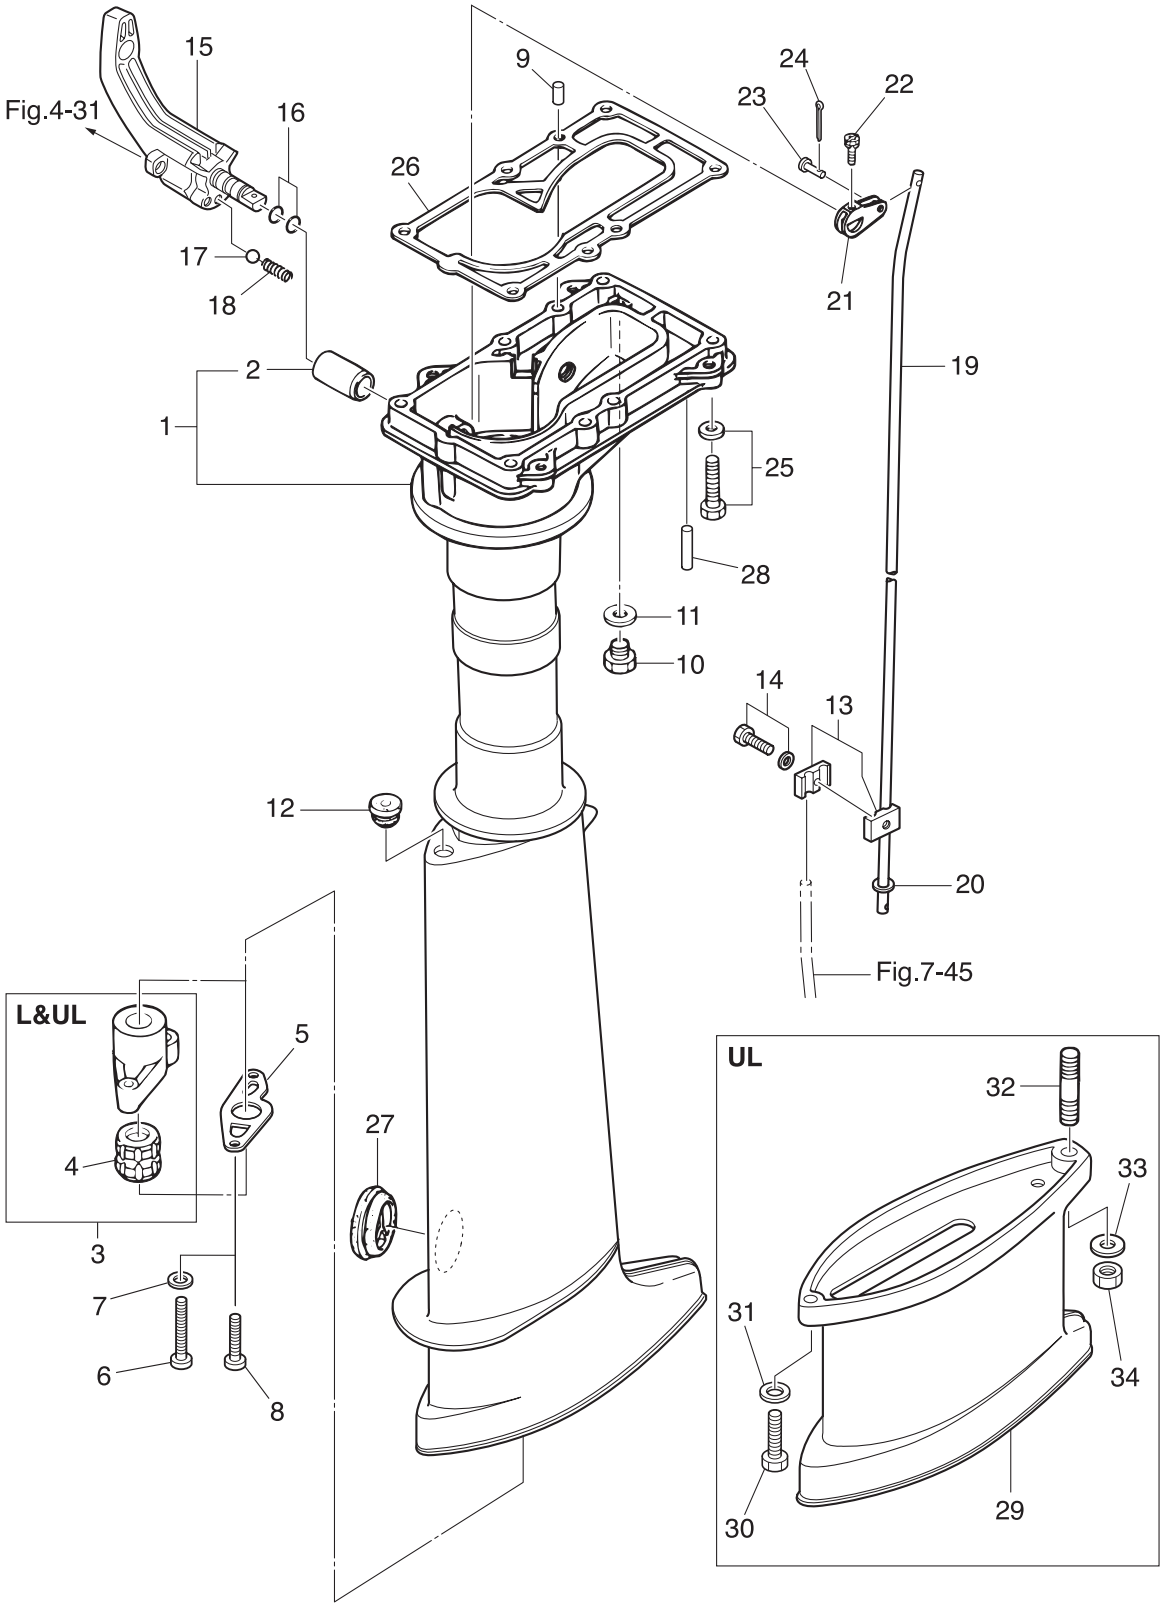


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
6-1	1	369Q61020-3	DRIVE SHAFT HOUSING ASSY (S)	1	1	for Transom "S"
6-1	2	369Q61030-5	DRIVE SHAFT HOUSING ASSY (L)	1	1	for Transom "L"&"UL"
6-2		301-61021-0	* BUSHING	1	1	
6-3		369-64331-2	DRIVE SHAFT BUSHING ASSY	1	1	for Transom "L"&"UL"
6-4		369-60003-0	* DRIVE SHAFT BUSHING	1	1	for Transom "L"&"UL"
6-5		369-64332-1	STOPPER	1	1	
6-6		3H6-64333-1	PRE-COATED SCREW 5-25	2	2	for Transom "L"&"UL"
6-7		9401E3-0500	WASHER	2	2	for Transom "L"&"UL"
6-8		921553-0510	SCREW	2	2	for Transom "S"
6-9		345-01111-0	DOWEL PIN 6-12	2	2	
6-10		9106E3-0808	BOLT	1	1	
6-11		332-60006-0	GASKET 8.1-15-1	1	1	
6-12		369-66043-1	GROMMET	1	1	
6-13		369-66241-0	SHIFT ROD JOINT ASSY	1	1	
6-14		910103-5616	BOLT	1	1	
6-15		369-66110-4	SHIFT LEVER	1	1	
6-16		301-66136-0	O-RING 1.9-8.8	2	2	
6-17		369-66116-0	CERAMIC BALL 7.7	1	1	
6-18		369-66112-1	SPRING	1	1	
6-19	1	369-66214-0	SHIFT ROD (S)	1	1	for Transom "S"
6-19	2	369-66215-0	SHIFT ROD (L)	1	1	for Transom "L"&"UL"
6-20		9401E3-0600	WASHER	1	1	
6-21		369-66225-0	SHIFT ROD LEVER	1	1	
6-22		910903-6416	BOLT	1	1	
6-23		369-66223-0	PIN	1	1	
6-24		951503-1210	SPLIT PIN	1	1	
6-25		9101E3-5630	BOLT	6	6	
6-26		369-61012-2	DRIVE SHAFT HOUSING GASKET	1	1	
6-27		369-61016-0	GROMMET 29-3	1	1	

Fig. 6 DRIVE SHAFT HOUSING • SHIFT

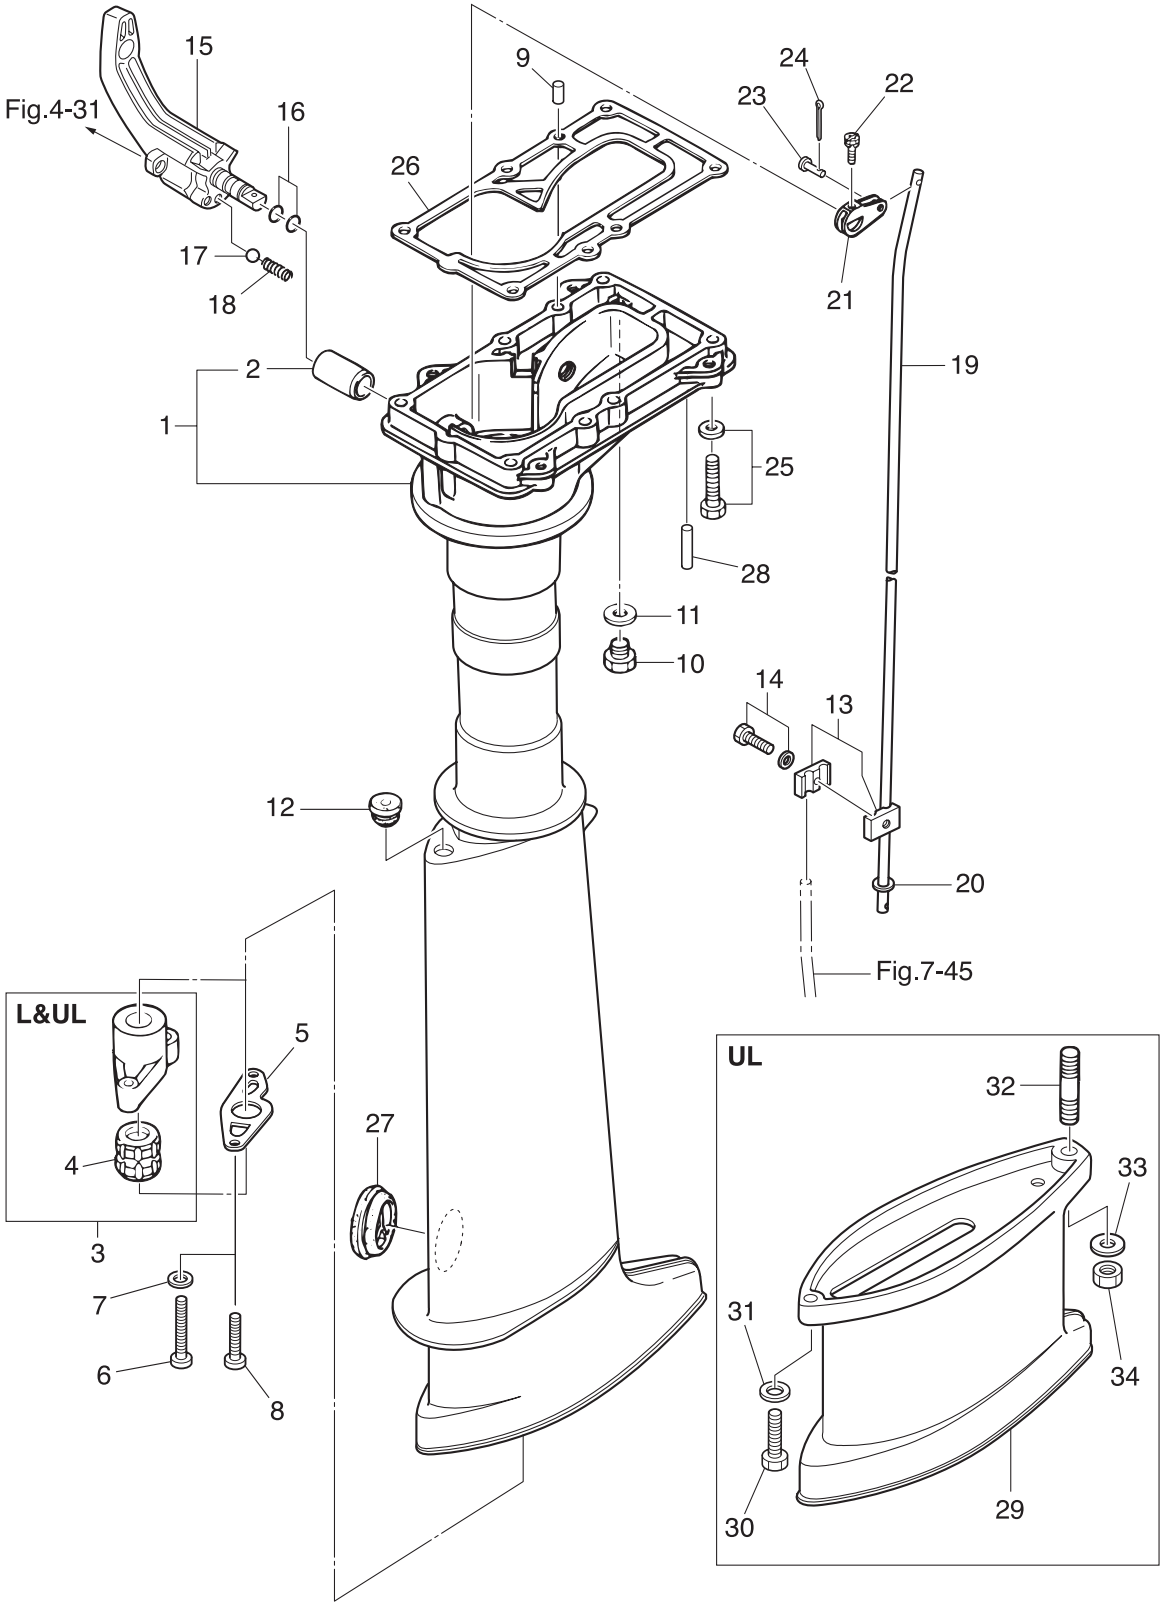


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
6-28		369-61097-0	WATER OUTLET HOSE	1	1	
6-29		369Q61110-2	EXTENSION HOUSING		1	for Transom "UL"
6-30		9161E3-0625	BOLT		1	for Transom "UL"
6-31		9401E3-0600	WASHER		1	for Transom "UL"
6-32		9152E3-0825	STUD		1	for Transom "UL"
6-33		9401E3-0800	WASHER		1	for Transom "UL"
6-34		930103-0800	NUT		1	for Transom "UL"

Fig. 7 GEAR CASE

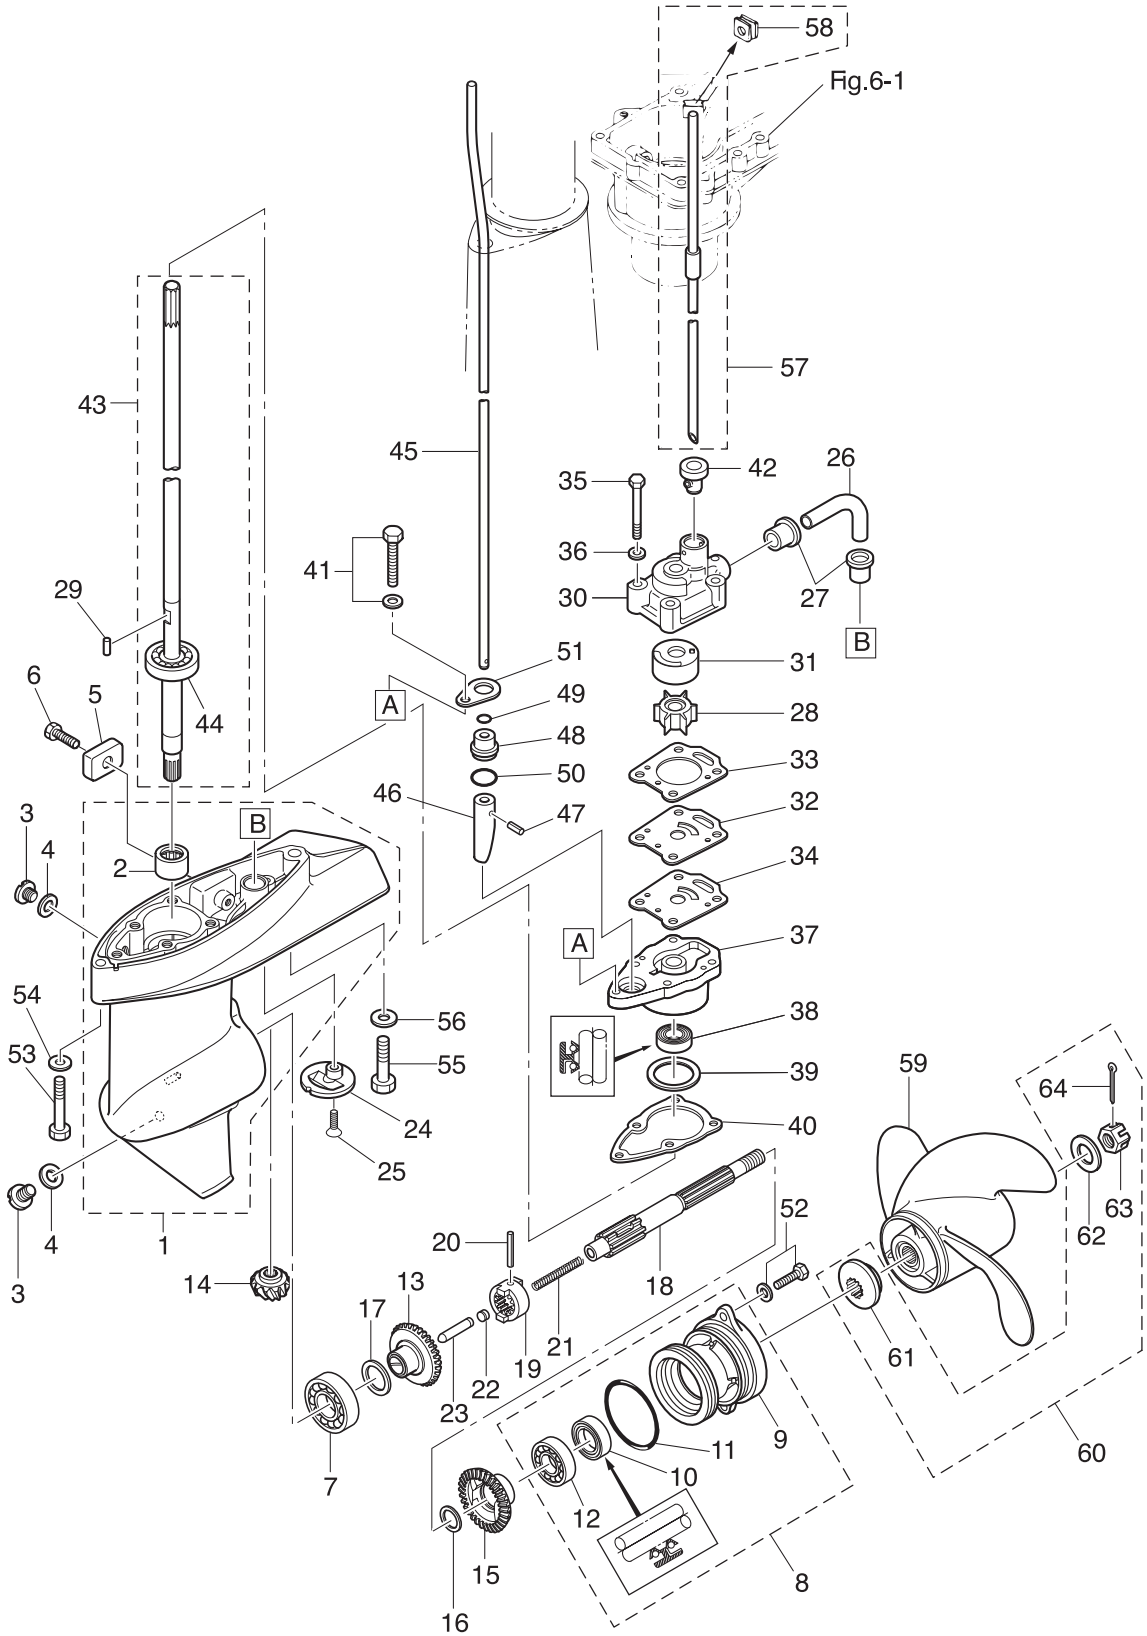


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
7-1		369Q60000-3	GEAR CASE ASSY	1	1	
7-2		369-60211-0	* ROLLER BEARING 14-20-12	1	1	
7-3		332-60005-2	PLUG 8-8	2	2	
7-4		332-60006-0	GASKET 8.1-15-1	2	2	
7-5		3H6-60218-0	ANODE	1	1	
7-6		910103-0616	BOLT	1	1	
7-7		9601-0-6004	BALL BEARING 6004	1	1	
7-8		369Q87323-1	PROPELLER SHAFT HOUSING ASSY	1	1	
7-9		369Q60101-1	* PROPELLER SHAFT HOUSING	1	1	
7-10		369-60111-0	* OIL SEAL 15-28-10	1	1	
7-11		345-65015-0	* O-RING 3.2-47	1	1	
7-12		9601-0-6002	* BALL BEARING 6002	1	1	
7-13		369-64010-2	BEVEL GEAR ASSY (A)	1	1	
7-14		369-64020-2	BEVEL GEAR B	1	1	
7-15		369-64030-2	BEVEL GEAR ASSY (C)	1	1	
7-16		369-64032-0	WASHER 15.2-19-1.9	1	1	
7-17	1	369-64014-0	SHIM 21-28-0.1	A	A	
7-17	2	369-64015-0	SHIM 21-28-0.15	A	A	
7-18		369-64211-1	PROPELLER SHAFT	1	1	
7-19		301-64215-1	CLUTCH	1	1	
7-20		301-64217-0	PIN 3.5-28	1	1	
7-21		393-64221-0	SPRING	1	1	
7-22		369-64222-0	SPRING RETAINER	1	1	
7-23		369-64223-0	PUSH ROD	1	1	
7-24		369-60206-0	WATER STRAINER	1	1	
7-25		921803-0620	SCREW	1	1	
7-26		369-65035-0	WATER PIPE (LOWER)	1	1	
7-27		369-65036-0	SEAL	2	2	
7-28		369-65021-1	WATER PUMP IMPELLER	1	1	

Fig. 7 GEAR CASE

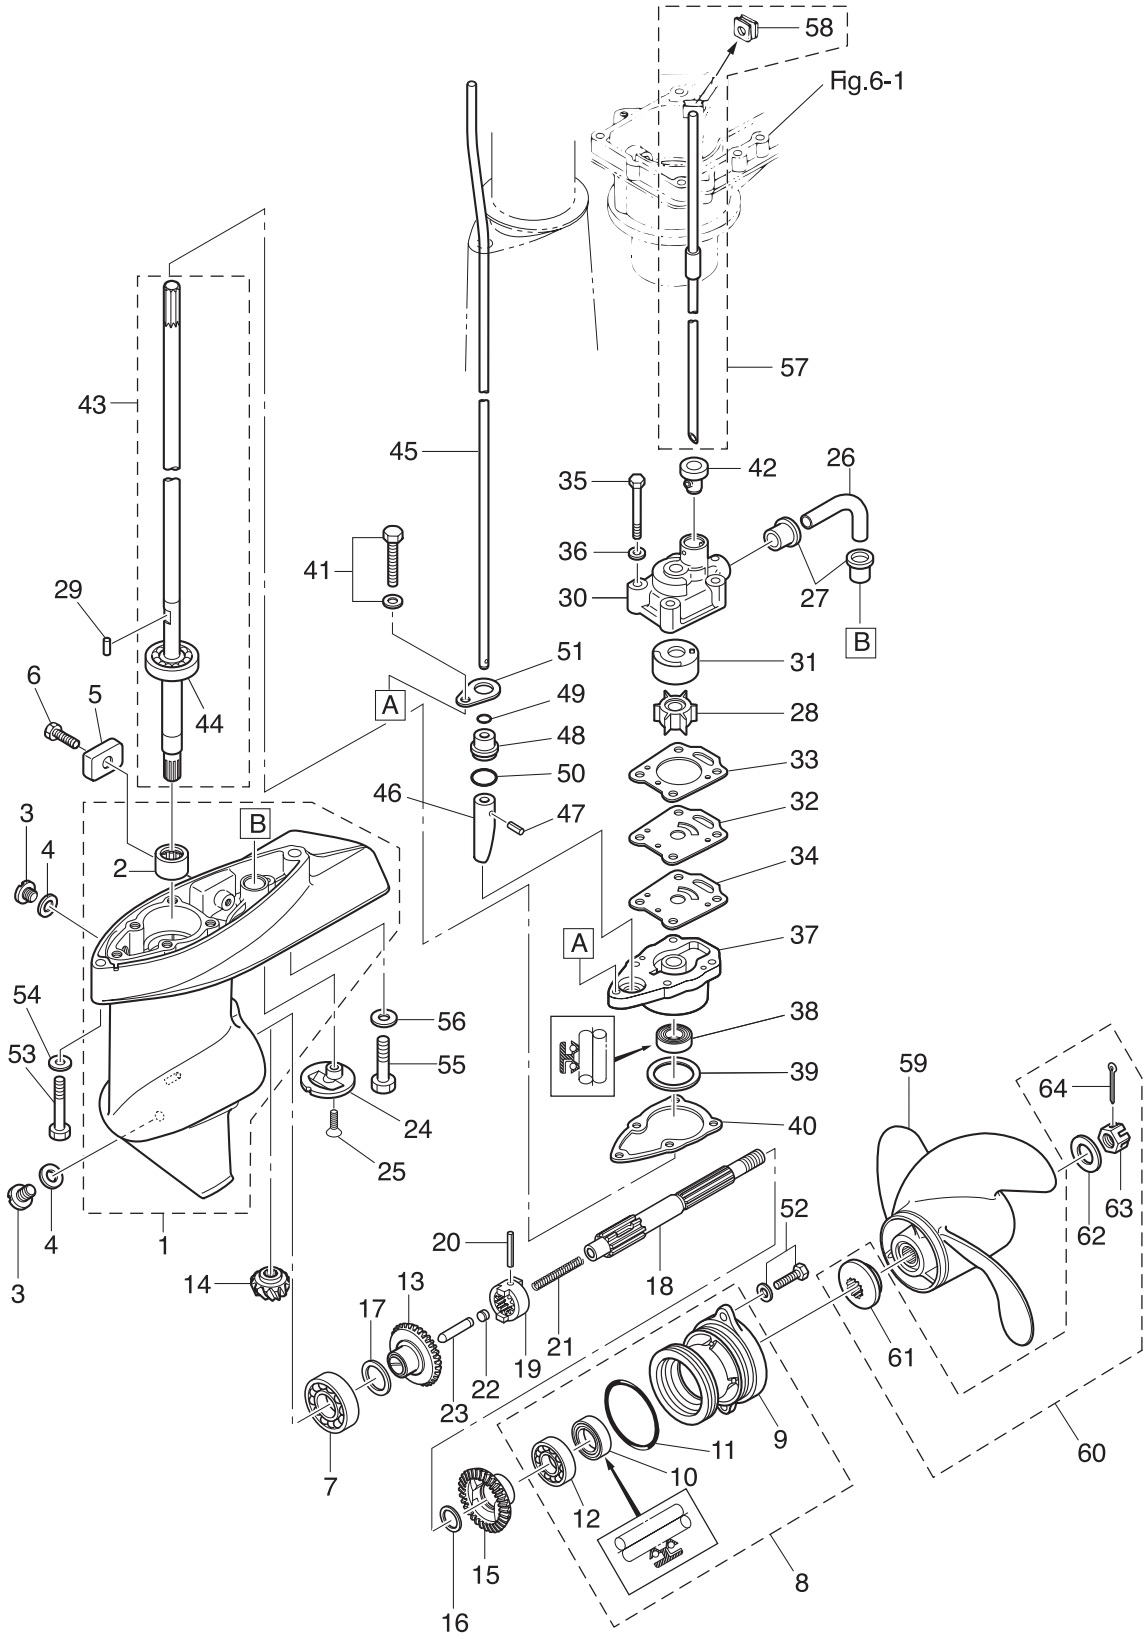


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
7-29		369-65022-0	KEY φ2-11	1	1	
7-30		369-65016-0	PUMP CASE (UPPER)	1	1	
7-31		369-65011-0	PUMP CASE LINER	1	1	
7-32		369-65025-0	WATER PUMP GUIDE PLATE	1	1	
7-33		369-65018-0	PUMP CASE GASKET	1	1	
7-34		369-65029-0	GUIDE PLATE GASKET	1	1	
7-35		9161E3-0645	BOLT	4	4	
7-36		940103-0600	WASHER	4	4	
7-37		369-65017-1	PUMP CASE (LOWER)	1	1	
7-38		369-60223-0	OIL SEAL 10-24-8	1	1	
7-39	1	369-64081-1	SHIM 26.5-34.8-0.1	A	A	
7-39	2	369-64082-1	SHIM 26.5-34.8-0.15	A	A	
7-40		369-65020-0	PUMP CASE GASKET (LOWER)	1	1	
7-41		910103-5625	BOLT	1	1	
7-42		369-65014-0	WATER PIPE SEAL (LOWER)	1	1	
7-43	1	369-64301-0	DRIVE SHAFT ASSY (S)	1	1	for Transom "S"
7-43	2	369-64302-0	DRIVE SHAFT ASSY (L)	1	1	for Transom "L"
7-43	3	369-64303-0	DRIVE SHAFT ASSY (UL)		1	for Transom "UL"
7-44		9601-0-6300	* BALL BEARING 6300	1	1	
7-45	1	369-66012-1	CAM ROD (S)	1	1	for Transom "S"
7-45	2	369-66013-1	CAM ROD (L)	1	1	for Transom "L"
7-45	3	369-66014-2	CAM ROD (UL)		1	for Transom "UL"
7-46		369-66011-0	CLUTCH CAM	1	1	
7-47		951407-0310	SPRING PIN 3-10	1	1	
7-48		369-66031-0	CAM ROD BUSHING	1	1	
7-49		369-66021-1	O-RING 2.5-4.9	1	1	
7-50		332-66032-0	O-RING 2.4-15.4	1	1	
7-51		369-66033-0	STOPPER	1	1	
7-52		9101E3-5616	BOLT	2	2	

Fig. 7 GEAR CASE

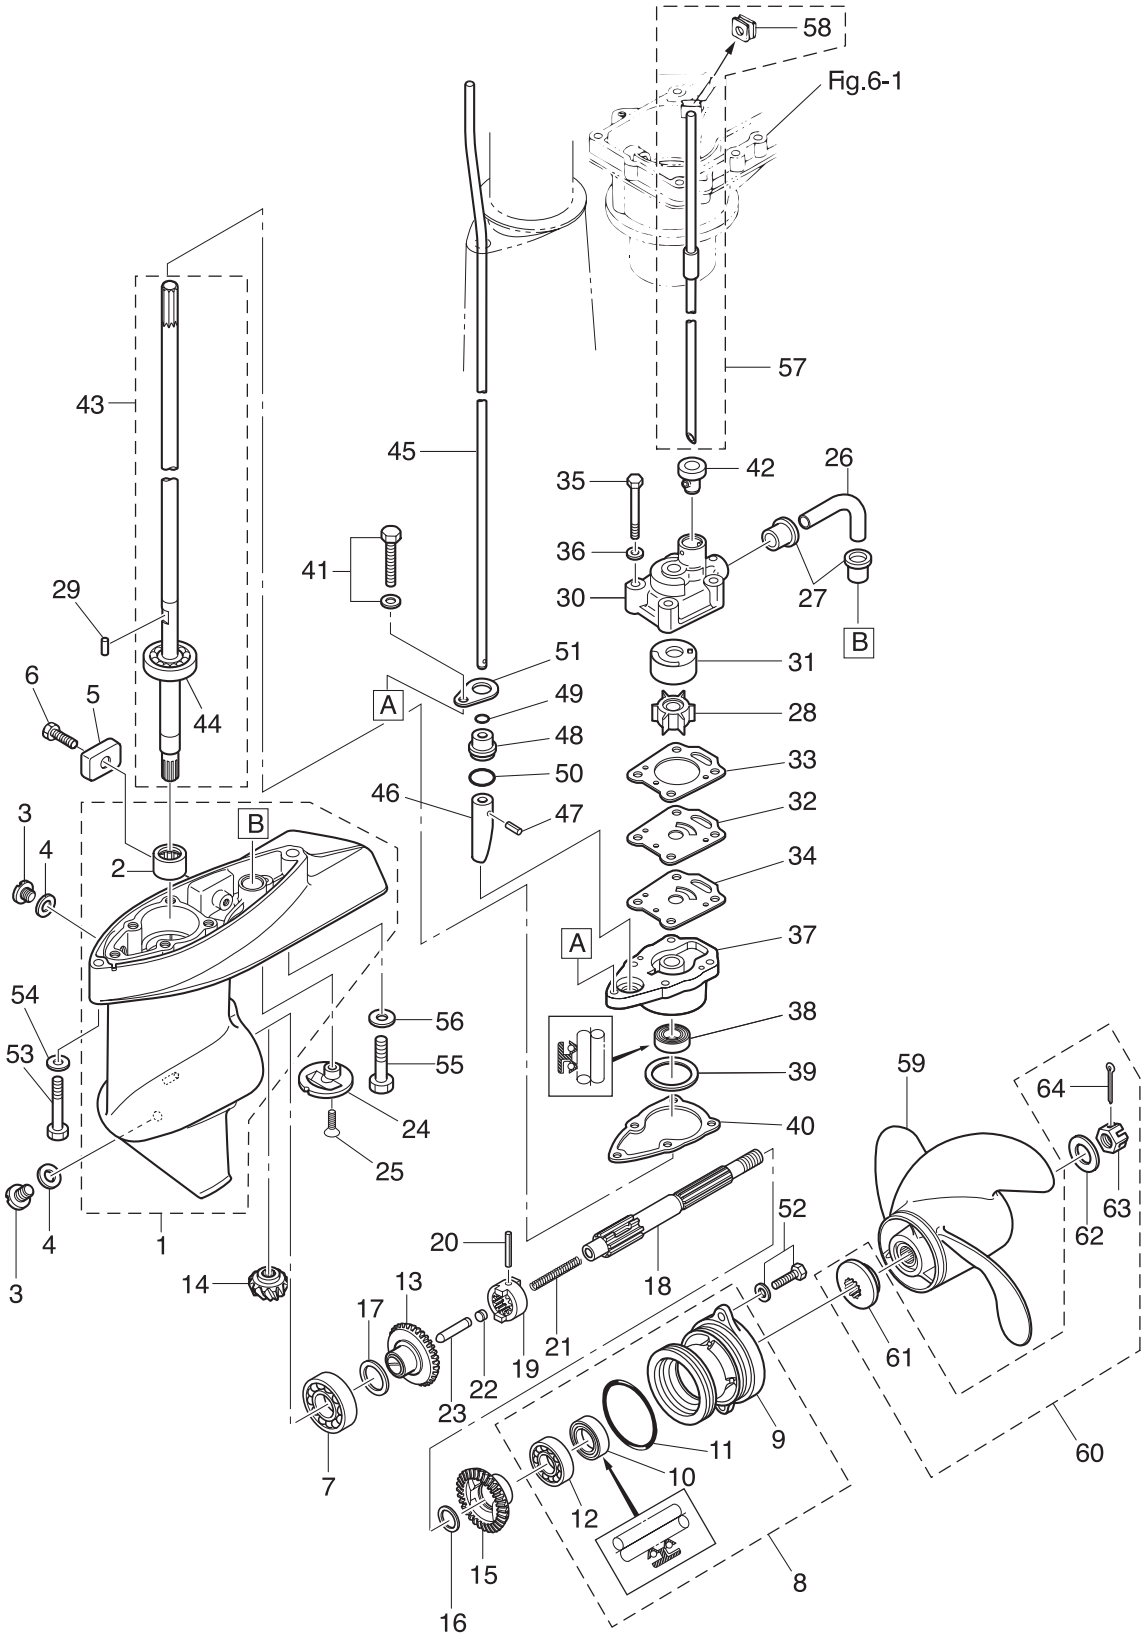


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
7-53		9161E3-0645	BOLT	1	1	
7-54		9401E3-0600	WASHER	1	1	
7-55		9161E3-0835	BOLT	1	1	
7-56		9401E3-0800	WASHER	1	1	
7-57	1	369-65100-0	WATER PIPE ASSY (S)	1	1	for Transom "S"
7-57	2	369-65110-0	WATER PIPE ASSY (L)	1	1	for Transom "L"
7-57	3	369-65120-0	WATER PIPE ASSY (UL)		1	for Transom "UL"
7-58		369-65195-0	* GROMMET	1	1	
7-59	1	393B64512-1	PROPELLER ASSY (6")	1	1	OPT 3 x 200 x 152
7-59	2	3R1B64514-1	PROPELLER ASSY (7")	1	1	OPT 3 x 198 x 178
7-59	3	3R1B64516-1	PROPELLER ASSY (8")	1	1	STD 3 x 198 x 203
7-59	4	369B64518-1	PROPELLER ASSY (9")	1	1	OPT 3 x 200 x 229
7-60		3H6-87326-0	PROPELLER HARDWARE KIT	1	1	
7-61		3AS-64230-0	* THRUST HOLDER ASSY	1	1	
7-62		369-64124-0	* WASHER 10.5-28-2	1	1	
7-63		369-64121-0	* PROPELLER NUT	1	1	
7-64		951503-0318	* SPLIT PIN 3-18	1	1	

Fig. 8 BRACKET • REVERSE LOCK ARM

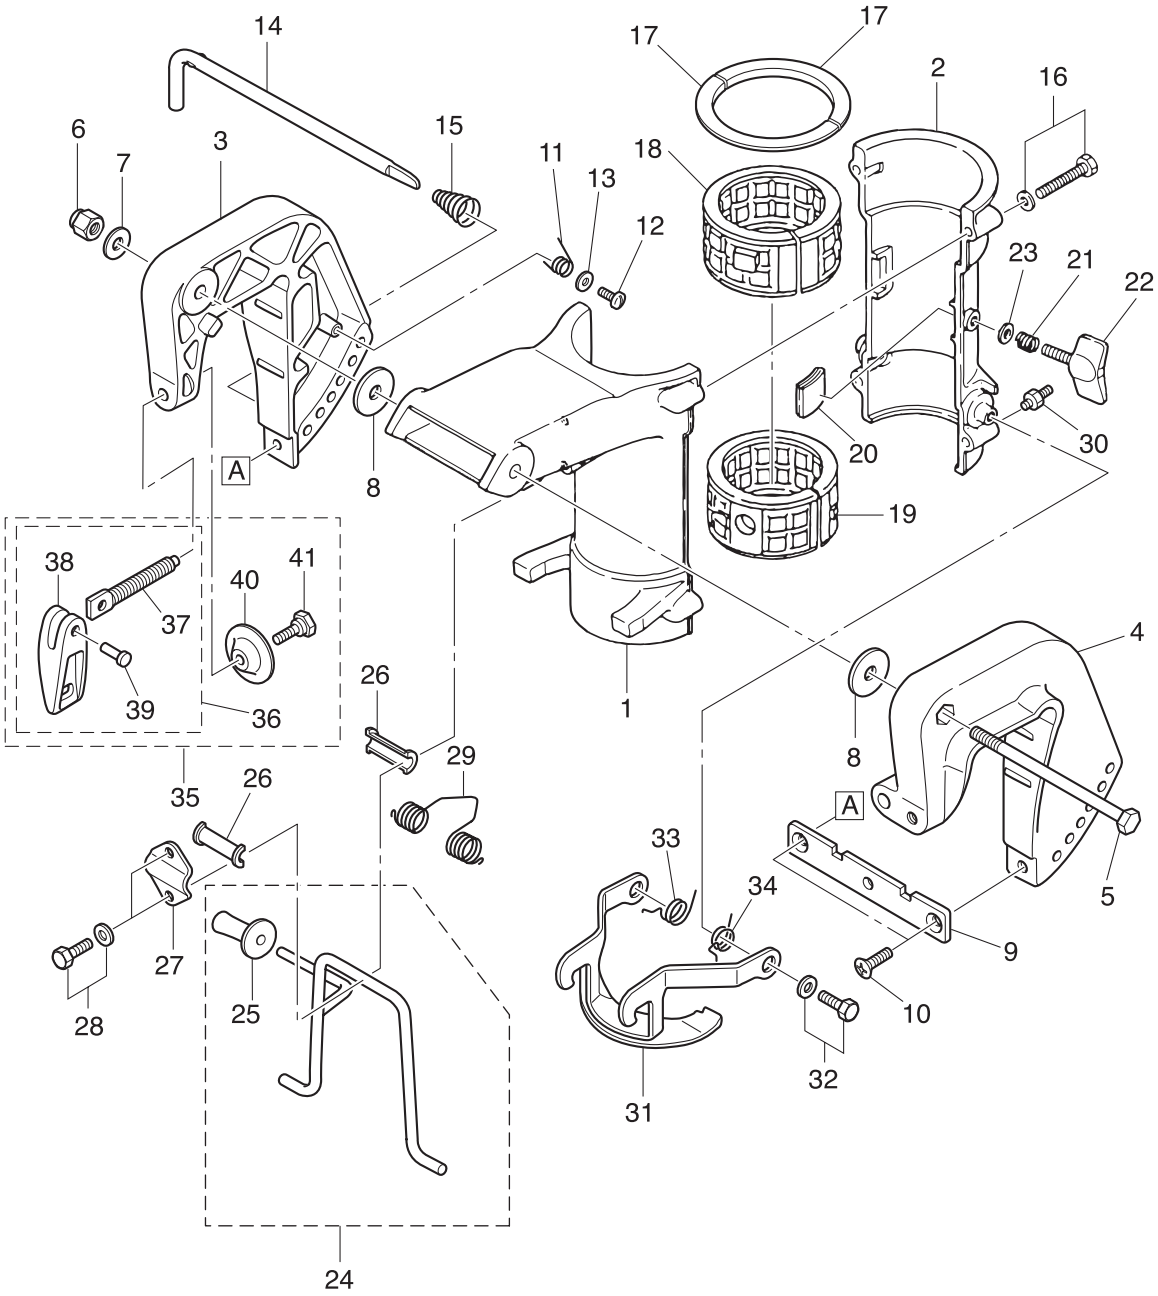


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
8-1	369Q62391-2	SWIVEL BRACKET	1	1	
8-2	393Q62392-1	SWIVEL BRACKET	1	1	
8-3	369Q62112-3	CLAMP BRACKET (R)	1	1	Starboard Side
8-4	369Q62113-2	CLAMP BRACKET (L)	1	1	Port Side
8-5	309-62115-2	BOLT 8-122	1	1	
8-6	930403-0800	NYLON NUT 8-P1.25	1	1	
8-7	9401E3-0800	WASHER	1	1	
8-8	307-62116-1	WASHER 8.5-28-1	2	2	
8-9	369-62118-0	DISTANCE PLATE	1	1	
8-10	9216E3-0612	SCREW	2	2	
8-11	369-62146-1	STERN BRACKET SPRING	1	1	
8-12	921703-0406	SCREW	1	1	
8-13	369-62147-0	WASHER 4.3-16-1.5	1	1	
8-14	350-62121-2	THRUST ROD	1	1	
8-15	369-62122-2	THRUST ROD SPRING	1	1	
8-16	9101E3-5635	BOLT	4	4	
8-17	369-62422-0	THRUST PLATE (UPPER)	2	2	
8-18	393-62416-1	BUSHING	1	1	
8-19	393-62417-1	BUSHING	1	1	
8-20	369-62441-1	FRICTION PIECE	2	2	
8-21	309-62446-1	SPRING	1	1	
8-22	309Q62442-2	FRICTION KNOB	1	1	
8-23	9401E3-0600	WASHER	1	1	
8-24	3AS-62431-0	TILT STOPPER ASSY	1	1	
8-25	3AS-62433-0	* TILT STOPPER GRIP	1	1	
8-26	393-62437-1	BUSHING	2	2	
8-27	369-62439-1	SETTING PLATE	1	1	
8-28	9101E3-5612	BOLT	2	2	
8-29	369-62434-0	SPRING	1	1	

Fig. 8 BRACKET • REVERSE LOCK ARM

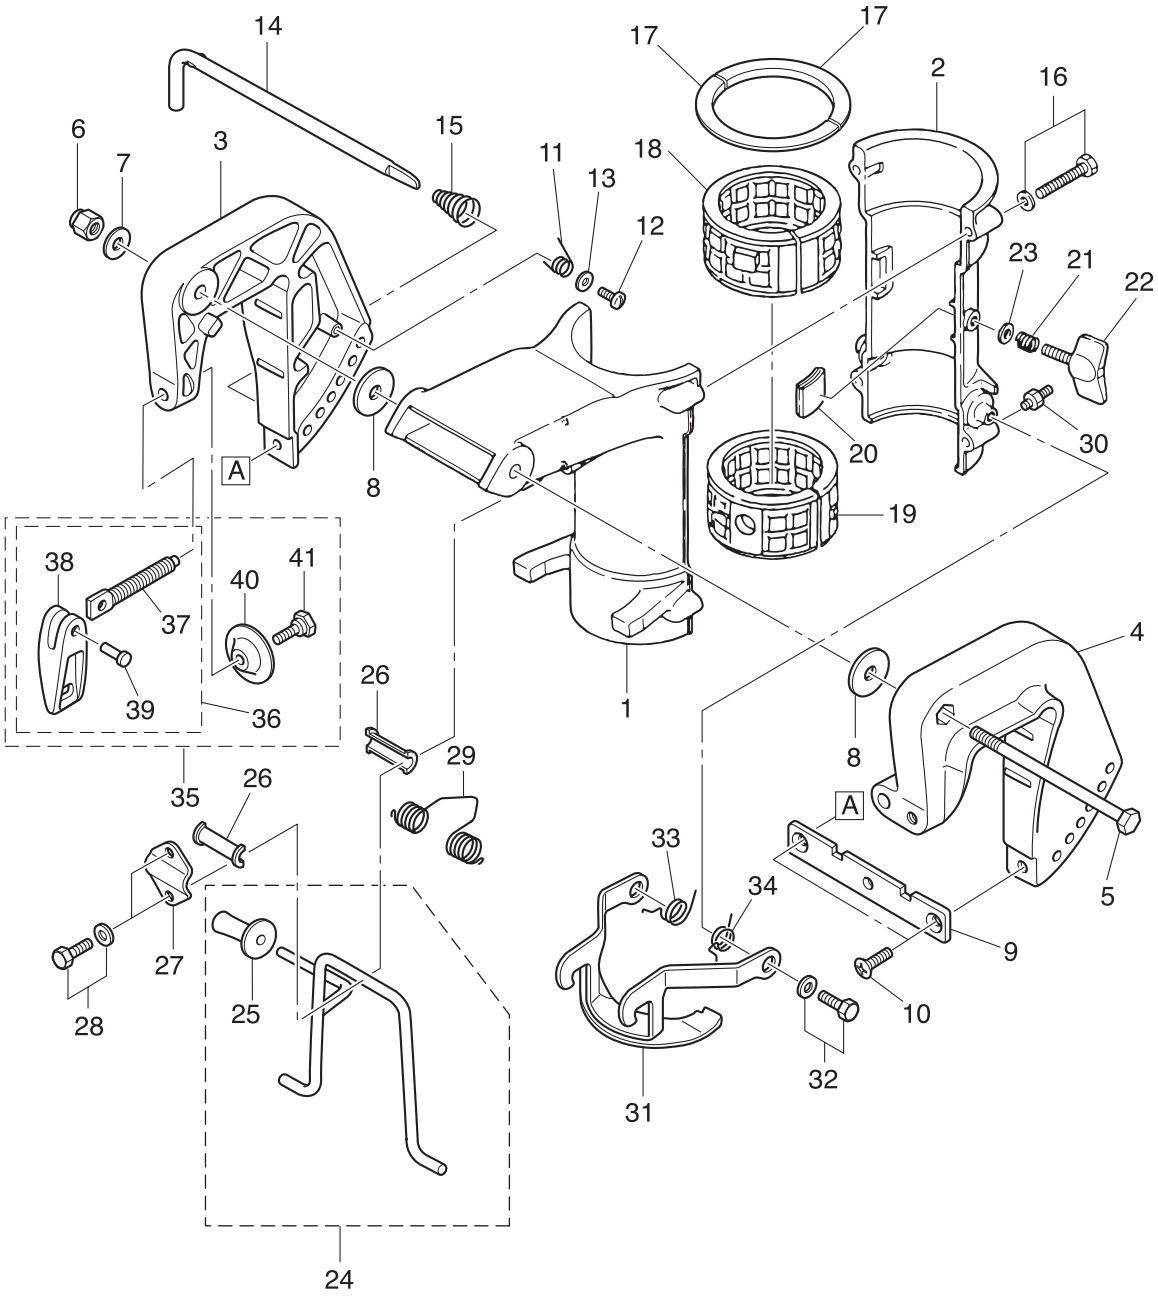


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
8-30		344-67177-1	GREASE FITTING	2	2	
8-31		369-66313-0	REVERSE LOCK ARM	1	1	
8-32		9101E3-5614	BOLT	2	2	
8-33		369-66338-0	REVERSE LOCK SPRING (R)	1	1	
8-34		369-66339-0	REVERSE LOCK SPRING (L)	1	1	
8-35		3GTQ62105-1	CLAMP SCREW KIT	2	2	
8-36		3GTQ62108-1	* CLAMP SCREW ASSY	1	1	
8-37		369-62106-1	** CLAMP SCREW	1	1	
8-38		3ABQ62102-0	** CLAMP SCREW HANDLE	1	1	
8-39		3C8-62104-2	** RIVET 3-22	1	1	
8-40		332-62101-1	* CLAMP SCREW PAD	1	1	
8-41		3C8-62107-0	* SHOULDER BOLT	1	1	

Fig. 9 BOTTOM COWL • TILLER HANDLE

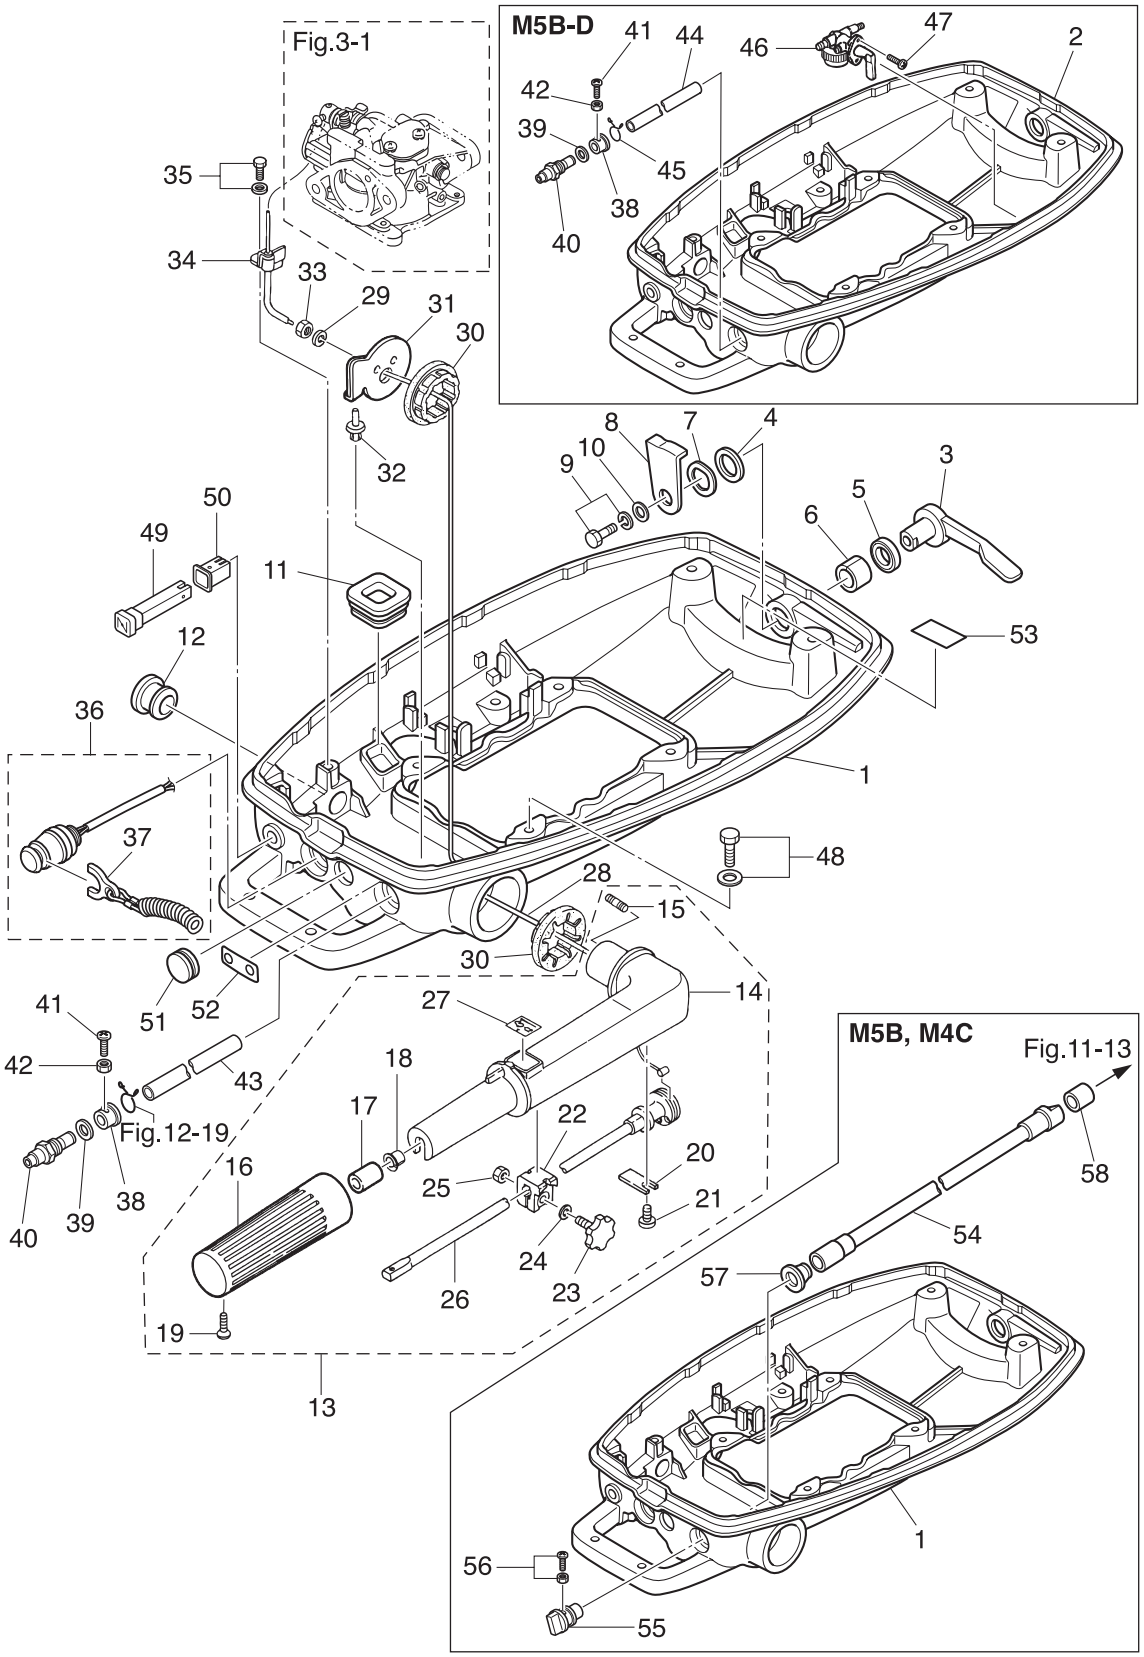


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
9-1	369Q67100-3	BOTTOM COWL	1	1	for M5B-S, M5B, M4C
9-2	393Q67100-3	BOTTOM COWL		1	Fuel Valve for M5B-D
9-3	369Q67141-1	HOOK LEVER	1	1	
9-4	3C8-67146-0	WASHER 14-22-1	1	1	
9-5	338-67147-0	SEAL RING 13.8-22-3.7	1	1	
9-6	369-67105-0	HOOK LEVER BUSHING	1	1	
9-7	941403-1400	WAVE WASHER d=14	1	1	
9-8	369-67142-0	COVER HOOK	1	1	
9-9	910103-6612	BOLT	1	1	
9-10	3C8-66308-0	WASHER 6-16-1.5	1	1	
9-11	369-67188-0	GROMMET	1	1	
9-12	369-67187-0	GROMMET	1	1	
9-13	369Q63010-1	TILLER HANDLE ASSY	1	1	
9-14	3B2Q63011-1	* TILLER HANDLE	1	1	
9-15	3B2-63104-1	* STUD	2	2	
9-16	369-63012-1	* GRIP	1	1	
9-17	345-63048-0	* THROTTLE SHAFT DAMPER	1	1	
9-18	350-63046-0	* BUSHING 8.4-10-11	1	1	
9-19	920803-0518	* SCREW	1	1	
9-20	3B2-63063-0	* THROTTLE SHAFT SUPPORT	1	1	
9-21	9215E3-0612	* SCREW	1	1	
9-22	3B2-63035-1	* FRICTION PIECE	1	1	
9-23	3B2-63034-0	* ADJUSTING SCREW	1	1	
9-24	940103-0600	* WASHER	1	1	
9-25	930103-0600	* NUT	1	1	
9-26	3B2-63041-0	* THROTTLE SHAFT	1	1	
9-27	369-72019-1	* THROTTLE DECAL	1	1	
9-28	369-63600-1	THROTTLE WIRE	1	1	
9-29	941303-0600	SPRING WASHER	2	2	

Fig. 9 BOTTOM COWL • TILLER HANDLE

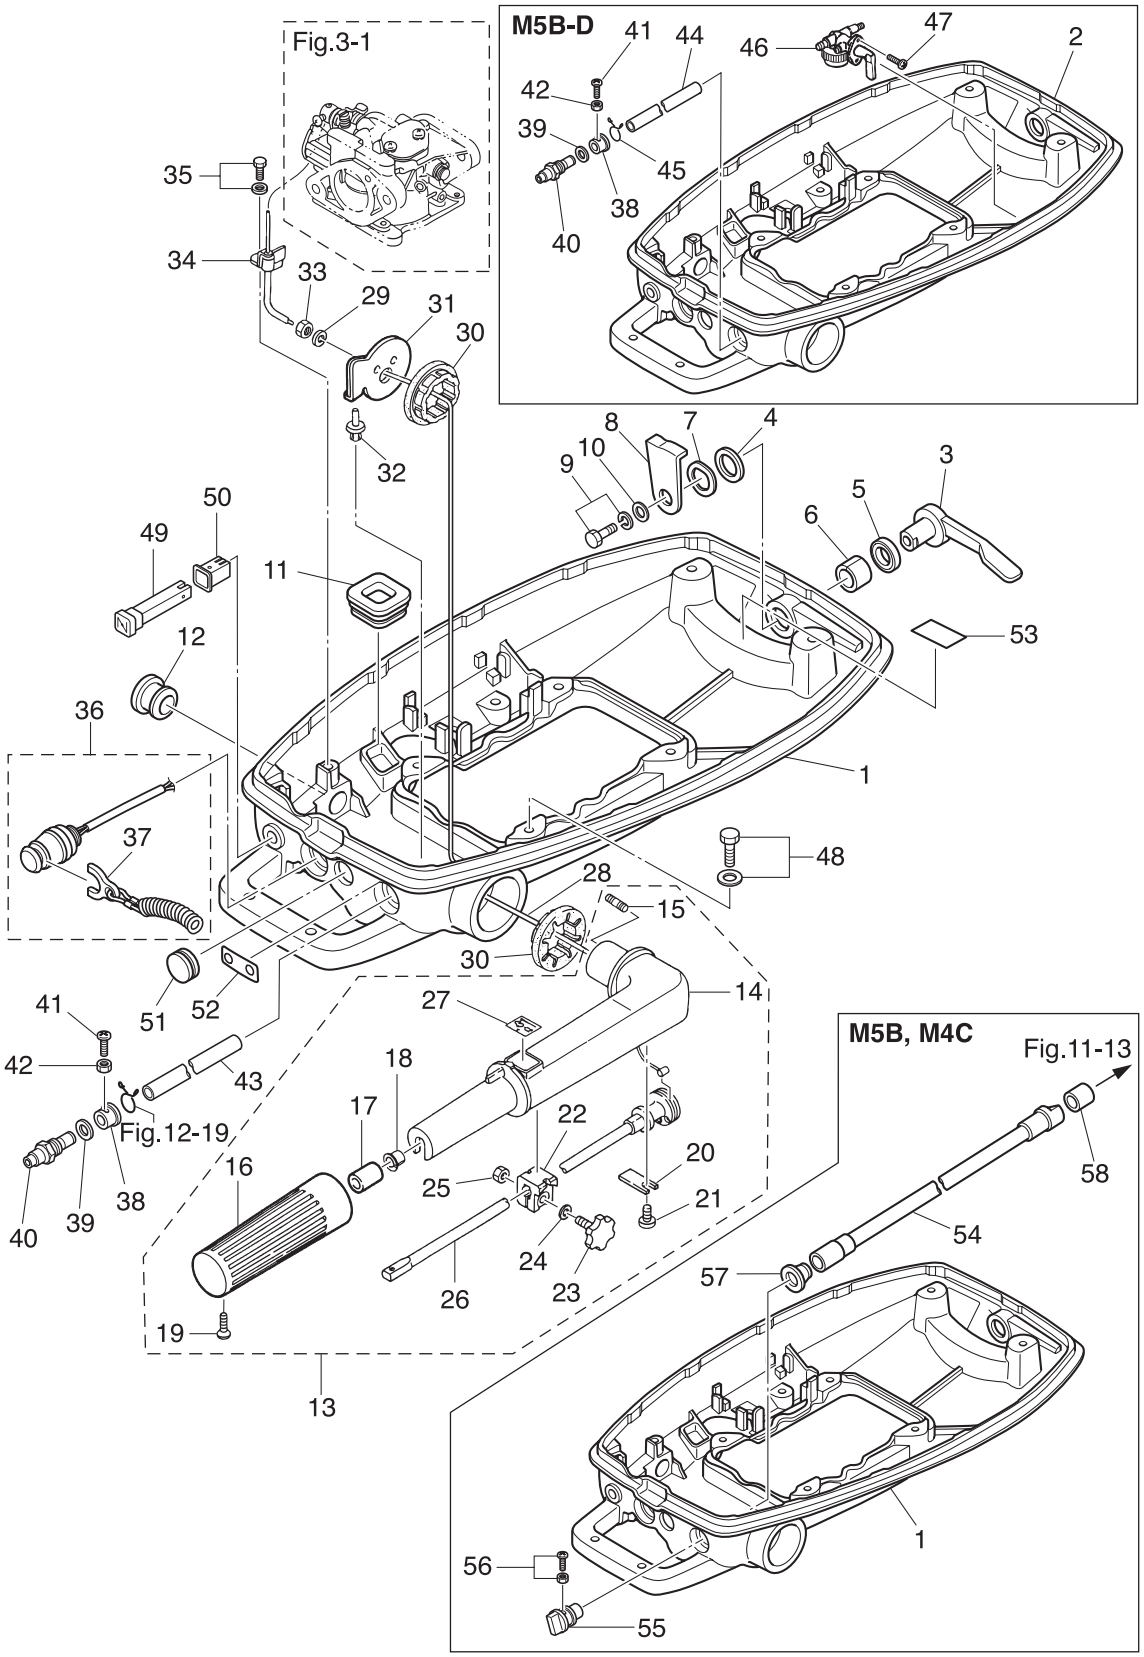


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
9-30	369-63102-0	BUSHING	2	2	
9-31	369-63103-1	STEERING HANDLE STOPPER	1	1	
9-32	350-67154-0	PLASTIC RIVET 6.5	1	1	
9-33	930103-0600	NUT	2	2	
9-34	369-63508-0	THROTTLE WIRE BRACKET	1	1	
9-35	910121-6612	BOLT	1	1	
9-36	3D5-06870-0	STOP SWITCH ASSY	1	1	
9-37	353-06821-0	* STOP SWITCH LANYARD ASSY	1	1	
9-38	369-70263-0	BUSHING		1	for M5B-D, M5B-S
9-39	941303-1000	SPRING WASHER		1	for M5B-D, M5B-S
9-40	3B2-70260-1	FUEL CONNECTOR (MALE)		1	for M5B-D, M5B-S
9-41	921503-0414	SCREW		1	for M5B-D, M5B-S
9-42	930103-0400	NUT		1	for M5B-D, M5B-S
9-43	98AB-50-200	HOSE		1	for M5B-S, Connector -F/Filter 98AB-501000
9-44	98AB-50-110	HOSE		1	for M5B-D, Connector -N-R/Valve 98AB-501000
9-45	338-02215-0	CLIP ϕ10		1	for M5B-D
9-46	394-70311-0	FUEL COCK ASSY		1	Fuel Valve for M5B-D
9-47	921803-0410	SCREW		2	for M5B-D
9-48	9101E3-5616	BOLT	4	4	
9-49	369-67151-2	CHOKE ROD	1	1	
9-50	393-67104-0	CHOKE ROD BUSHING	1	1	
9-51	345-67117-0	GROMMET 17-2.7	1	1	
9-52	369-72016-0	FUEL LEVEL DECAL	1	1	for M5B, M4C
9-53	369-72026-0	SPARK PLUG DECAL (BPR7HS10)	1	1	
9-54	369-70061-0	FUEL COCK ROD	1	1	Fuel Valve for M5B, M4C
9-55	369-70062-0	FUEL COCK KNOB	1	1	Fuel Valve for M5B, M4C
9-56	921503-6410	SCREW	1	1	for M5B, M4C
9-57	369-70063-0	SEAL RING	1	1	for M5B, M4C
9-58	353-72544-1	FUEL COCK ROD HOSE	1	1	Fuel Valve for M5B, M4C

Fig. 10 TOP COWL

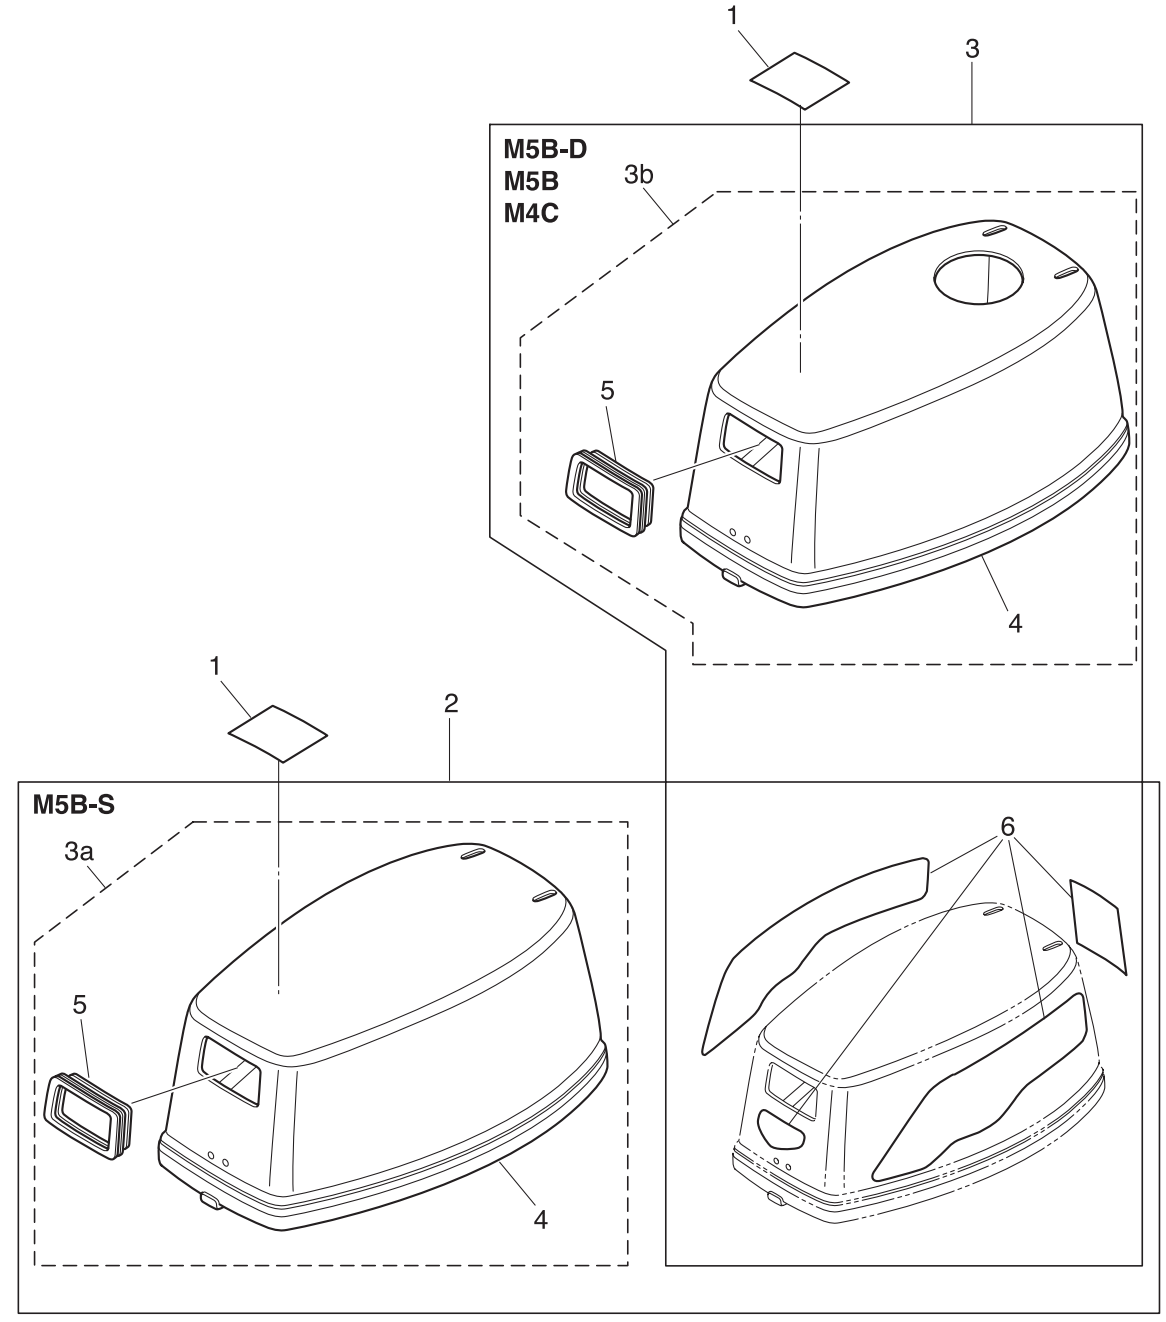


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
10-1		3C7-72180-3	CAUTION DECAL (A)	1	1	
10-2		369Q67560-5	TOP COWL ASSY		1	for M5B-S
10-3		369Q67645-1	TOP COWL ASSY	1	1	for M5B-D, M5B, M4C
10-3a		3X3Q67640-0	* TOP COWL SUB-ASSY		1	for M5B-S
10-3b		369Q67640-1	* TOP COWL SUB-ASSY	1	1	for M5B-D, M5B, M4C
10-4		394-67501-0	** TOP COWL SEAL	1	1	
10-5		3B2-67503-0	** STARTER SEAL	1	1	
10-6	1	3F9-87801-2	* DECAL SET (M4C)	1		4ps
10-6	2	369-87801-3	* DECAL SET (M5B)		1	5ps

Fig. 11 INTEGRAL FUEL TANK（M5B-D・M5B・M4C）

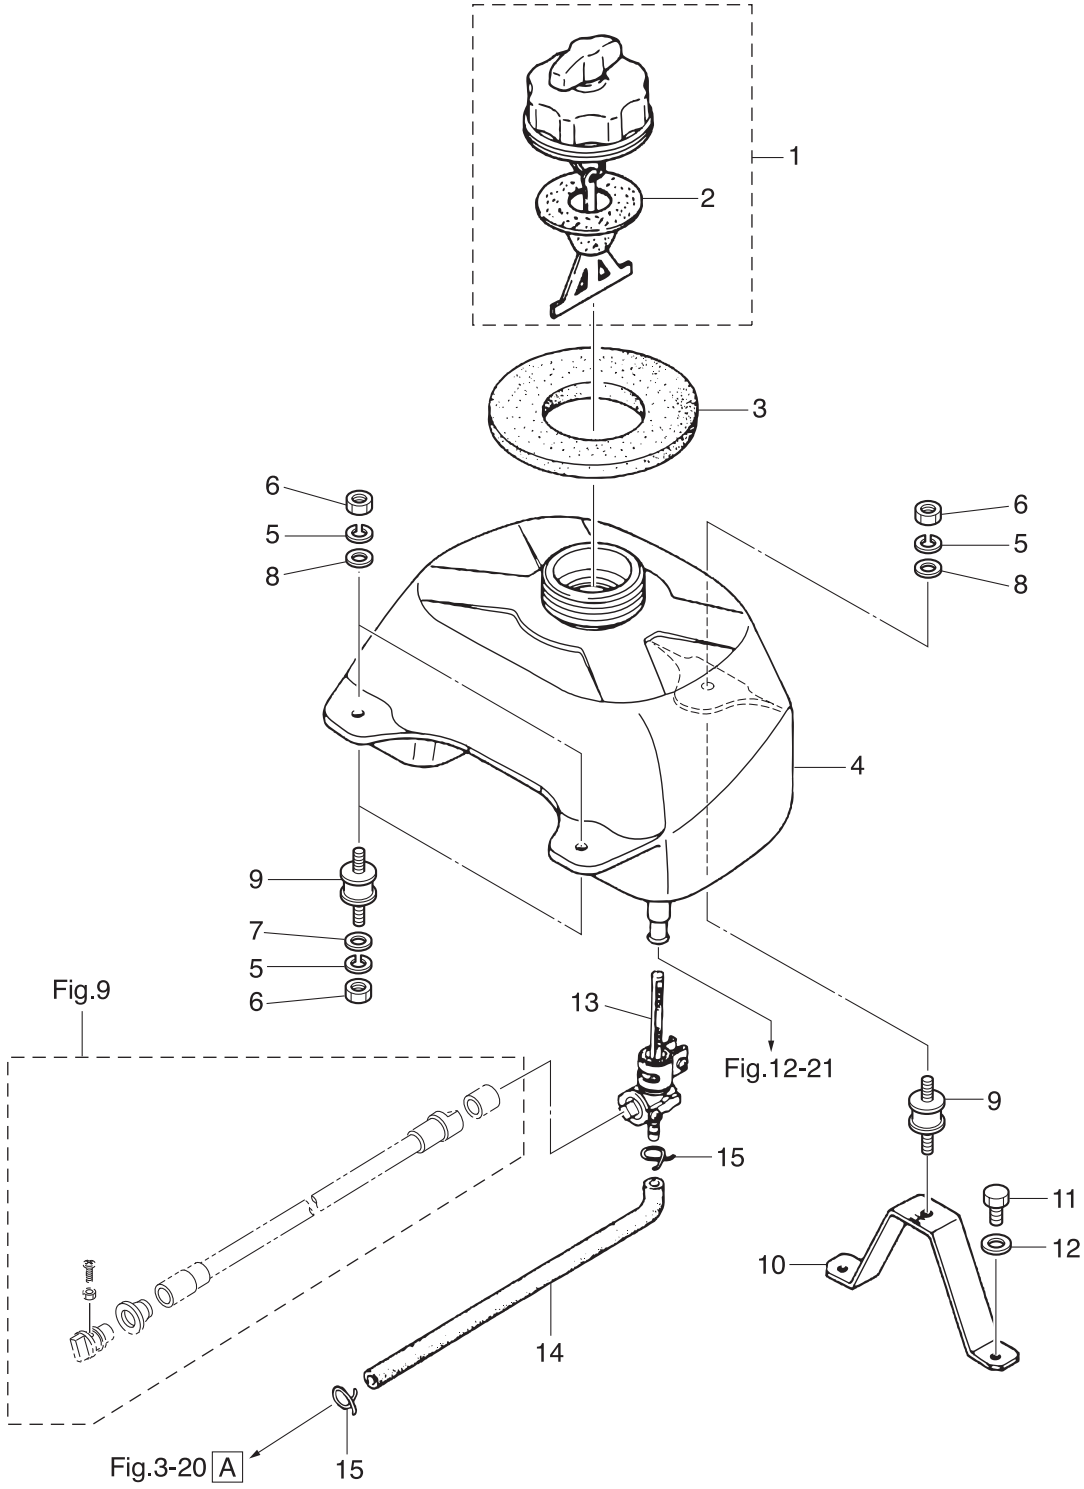


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
11-1		393-70020-6	FUEL TANK CAP ASSY	1	1	
11-2		3D6-70021-0	* TANK FILLER CAP GASKET	1	1	
11-3		369-70036-2	FUEL TANK SEAL	1	1	
11-4		369-70316-4	FUEL TANK	1	1	
11-5		941303-0600	SPRING WASHER	5	5	
11-6		930103-0600	NUT	5	5	
11-7		3C8-66308-0	WASHER 6-16-1.5	2	2	
11-8		345-05122-1	WASHER 6.5-23-1.5	3	3	
11-9	1	369-70057-0	FUEL TANK MOUNT	3	3	STD
11-9	2	3F9-70057-0	FUEL TANK MOUNT	3	3	OPT Large Size
11-10		369-70312-1	FUEL TANK STAY	1	1	
11-11		9101F4-0616	BOLT	2	2	
11-12		940103-0600	WASHER	2	2	
11-13		369-70311-0	FUEL COCK ASSY	1	1	Fuel Valve for M5B, M4C
11-14		369-70315-0	FUEL HOSE	1	1	Fuel Valve-F/Pump for M5B, M4C
11-15		338-02215-0	CLIP ϕ10	2	2	for M5B, M4C


Fig. 12 SEPARATE FUEL TANK・DUAL FUEL（M5B-D・M5B-S）

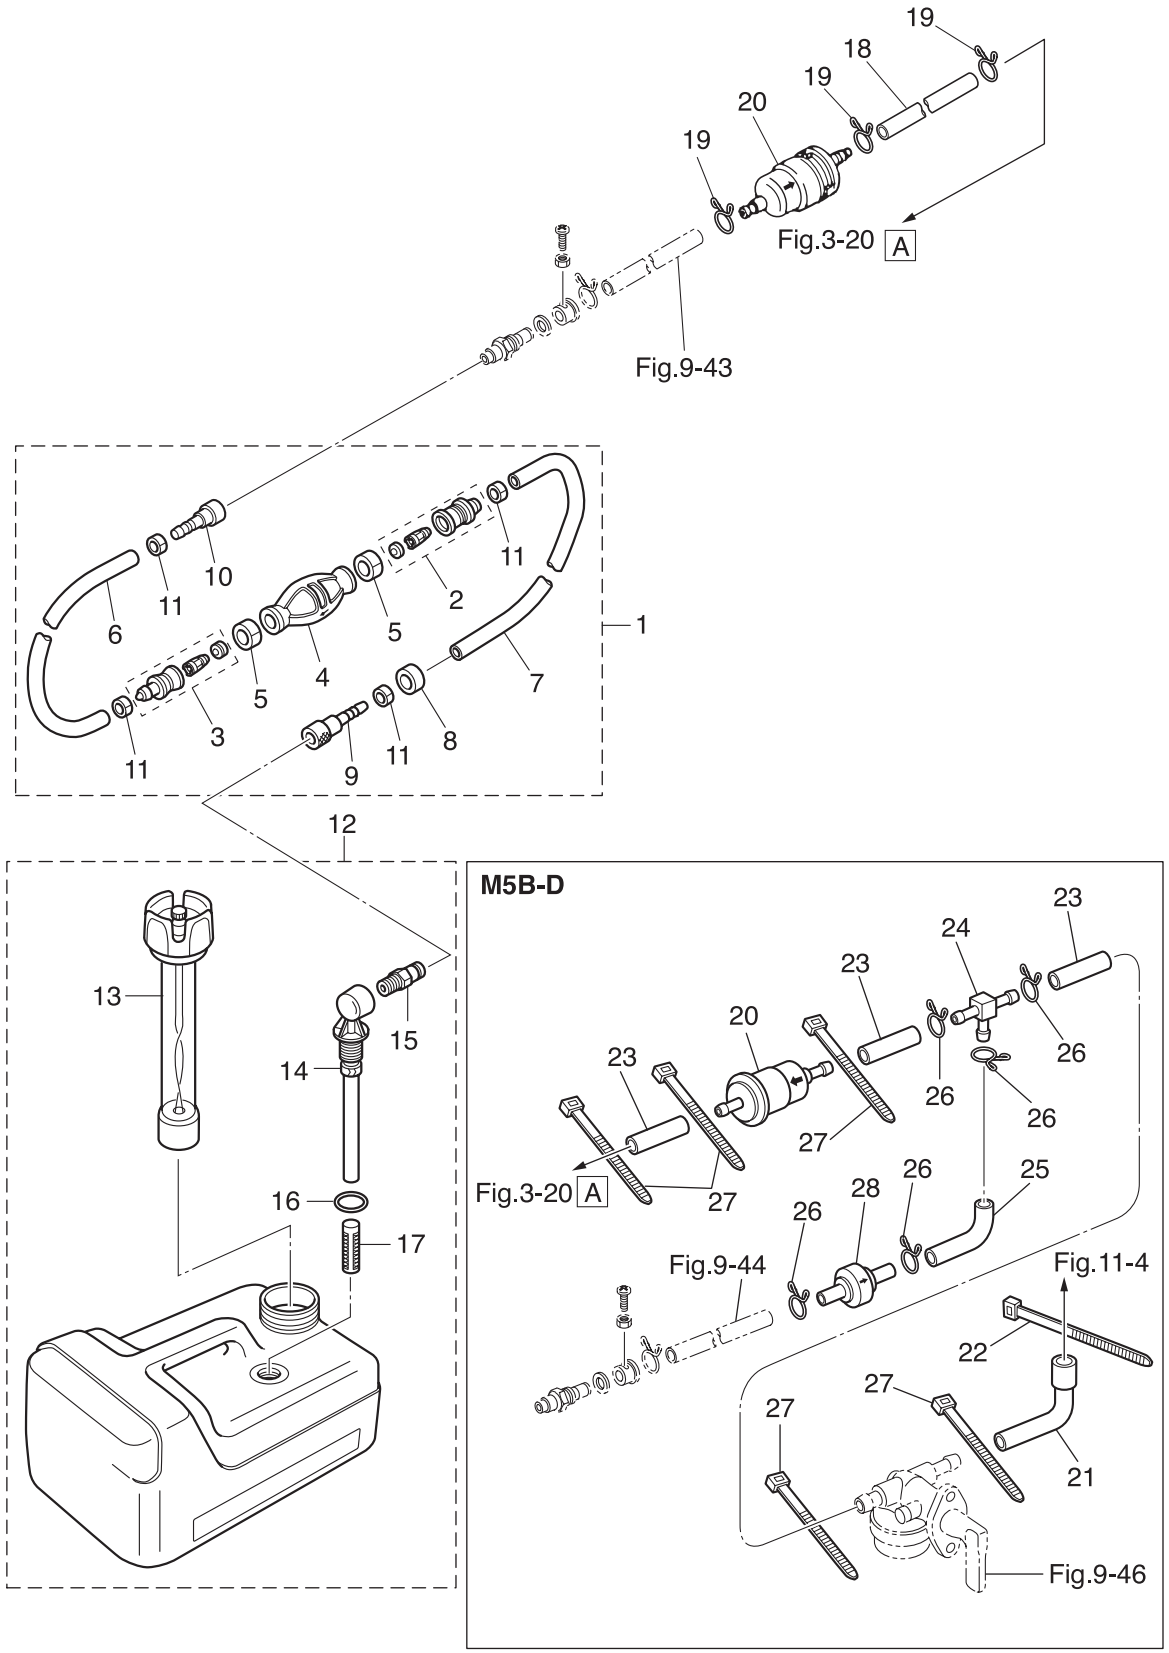

Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
12-1	3B7-70200-4	PRIMER BULB ASSY		1	for M5B-D, M5B-S
12-2	3C7-70220-1	* JOINT ASSY (INLET)		1	
12-3	3C7-70224-1	* JOINT ASSY (OUTLET)		1	
12-4	3C7-70211-1	* PRIMER BULB		1	
12-5	3C7-70217-0	* CLAMP		2	
12-6	98AB-70-700	* HOSE		1	98AB-701000
12-7	98AB-701600	* HOSE		1	98AB-701000 x2
12-8	3B7-70280-1	* FUEL CONNECTOR MARK		1	
12-9	3GF-70281-0	* FUEL CONNECTOR		1	
12-10	3GF-70250-0	* FUEL CONNECTOR		1	
12-11	332-70201-0	* CLAMP		4	
12-12	3B2-70167-1	FUEL TANK ASSY 12L		1	
12-13	3B2-70050-1	* FUEL GAUGE VENT CAP ASSY (12L)		1	
12-14	3B2-70155-0	* PICK-UP ELBOW ASSY (12L)		1	
12-15	3E0-70270-0	* QUICK-CONNECTOR (MALE)		1	
12-16	3C7-70199-0	* O-RING		1	
12-17	3C7-70113-0	* FILTER		1	
12-18	98AB-50-150	HOSE		1	for M5B-S, F/Filter -F/Pump 98AB-501000
12-19	338-02215-0	CLIP ϕ10		3	for M5B-S
12-20	369-02230-0	FUEL FILTER ASSY		1	
12-21	394-70315-0	FUEL HOSE		1	Fuel Tank-Fuel Valve for M5B-D
12-22	3F9-84398-0	BAND 205		1	for M5B-D
12-23	98AB-50-035	HOSE		3	for M5B-D 98AB-501000
12-24	394-70013-0	PIPE JOINT 4-4		1	for M5B-D
12-25	394-70325-0	FUEL HOSE		1	N-R/Valve-Pipe Joint for M5B-D
12-26	338-02215-0	CLIP ϕ10		5	for M5B-D
12-27	3F9-84398-0	BAND 205		5	for M5B-D
12-28	394-70327-0	NON-RETURN VALVE		1	for M5B-D


Fig. 13 OPTIONAL PARTS (1) ACCESSORIES (REMOTE CONTROL)

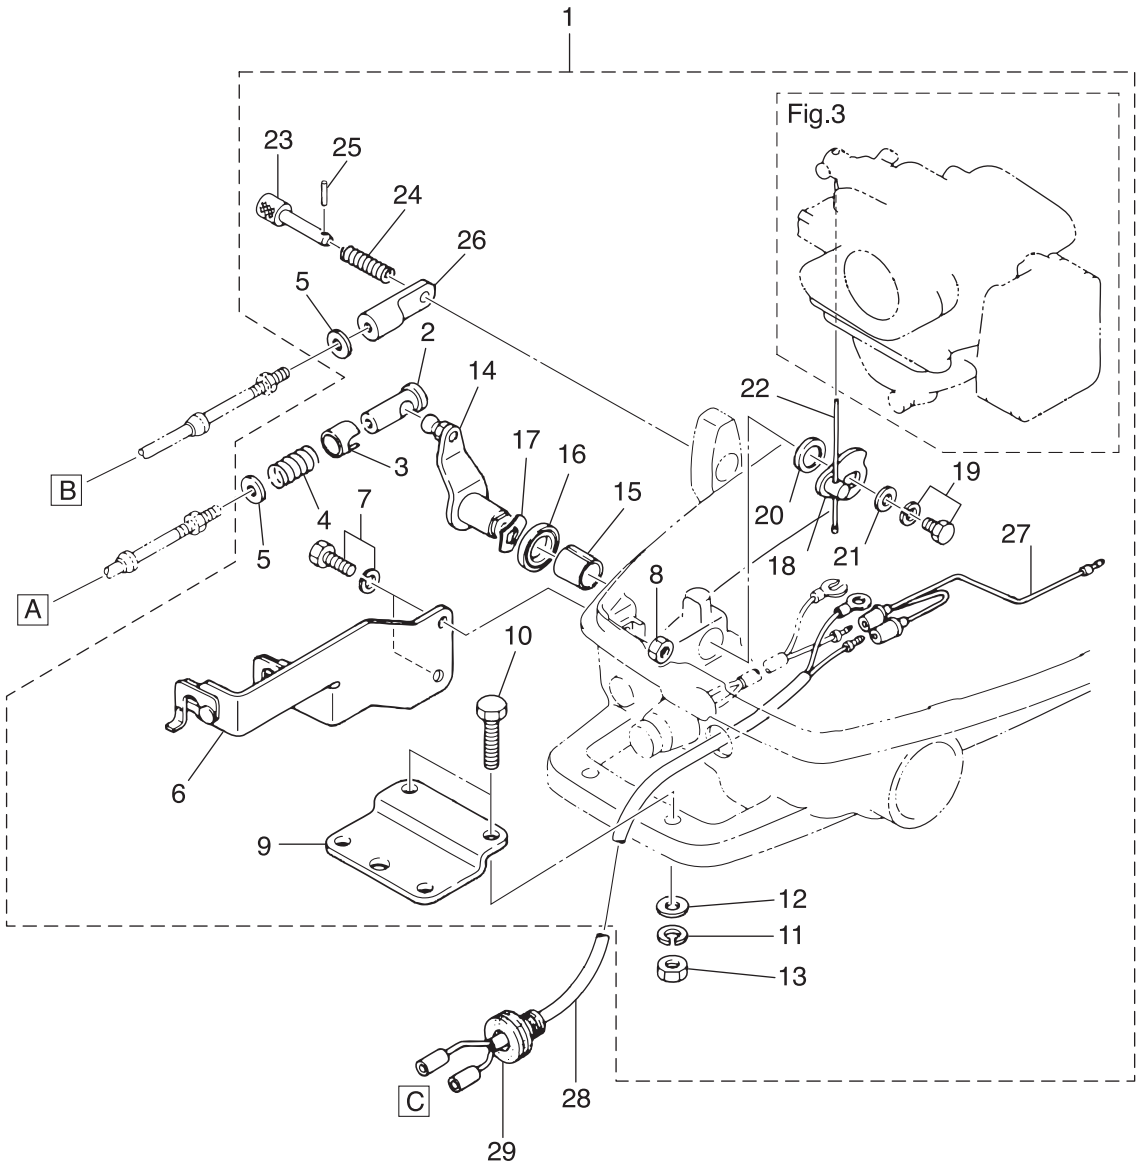


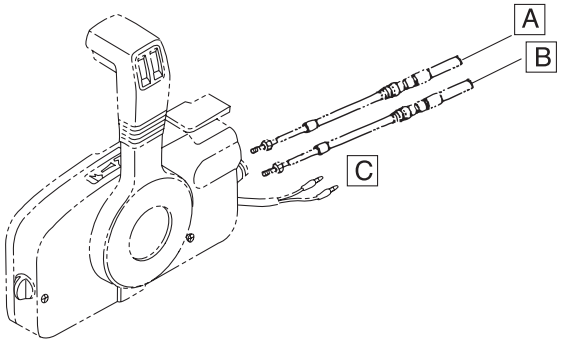

Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
13-1		369-83880-2	REMOTE CONTROL FITTING ASSY	1	1	
13-2		3A1-83722-0	* BALL JOINT HOLDER	1	1	
13-3		332-83723-0	* HOLDER CAP	1	1	
13-4		332-83724-0	* SPRING	1	1	
13-5		332-83725-0	* WASHER 5.5-14-1.2	1	1	
13-6		369-83820-0	* CABLE CLIP ASSY	2	2	
13-7		910103-6616	* BOLT	2	2	
13-8		930103-0600	* NUT	2	2	
13-9		369-83830-2	* STEERING HOOK PLATE	1	1	
13-10		910103-0830	* BOLT	2	2	
13-11		941303-0800	* SPRING WASHER	2	2	
13-12		940103-0800	* WASHER	2	2	
13-13		930103-0800	* NUT	2	2	
13-14		369-83726-0	* THROTTLE LEVER	1	1	
13-15		369-67105-0	* HOOK LEVER BUSHING	1	1	
13-16		338-67147-0	* SEAL RING 13.8-22-3.7	1	1	
13-17		941403-1400	* WAVE WASHER d=14	1	1	
13-18		369-83887-0	* THROTTLE LEVER	1	1	
13-19		910103-6612	* BOLT	1	1	
13-20		369-83888-0	* COLLAR 13.5-18-2.5	1	1	
13-21		3C8-66308-0	* WASHER 6-16-1.5	1	1	
13-22		369-83863-0	* THROTTLE WIRE (REMOTE CONTROL)	1	1	
13-23		332-83728-0	* PIN	1	1	
13-24		332-83729-0	* SPRING	1	1	
13-25		951403-0212	* SPRING PIN 2-12	1	1	
13-26		369-83715-1	* CABLE JOINT	1	1	
13-27		369-83883-0	* SEPARATE CORD	1	1	Brown
13-28	1	369-83846-0	REMOTE CONTROL STOP CORD L=2000	1	1	
13-28	2	369-83848-0	REMOTE CONTROL STOP CORD L=3200	1	1	


Fig. 13 OPTIONAL PARTS (1) ACCESSORIES (REMOTE CONTROL)

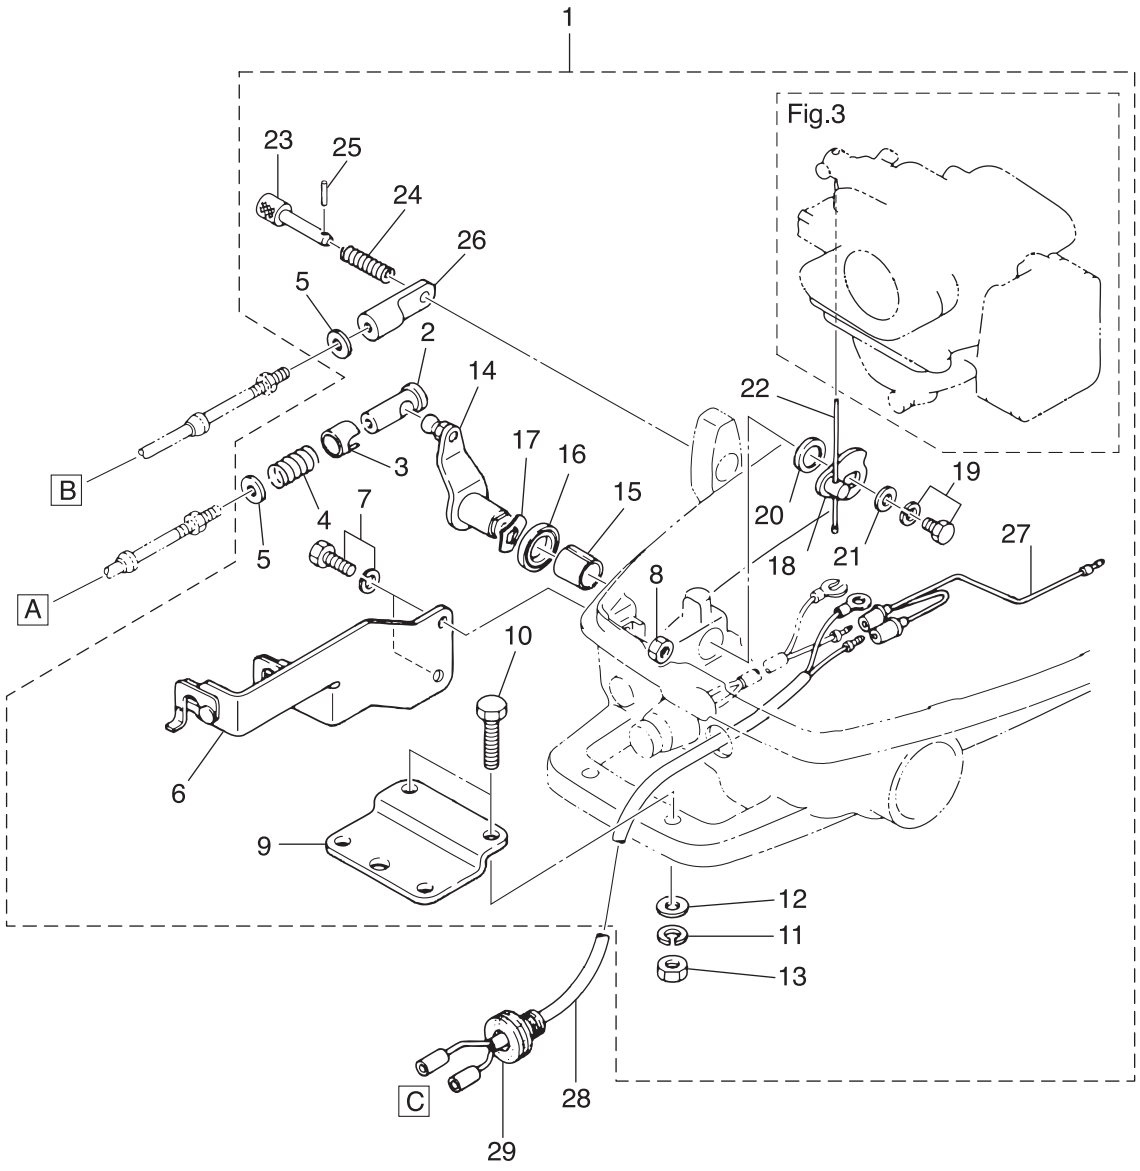

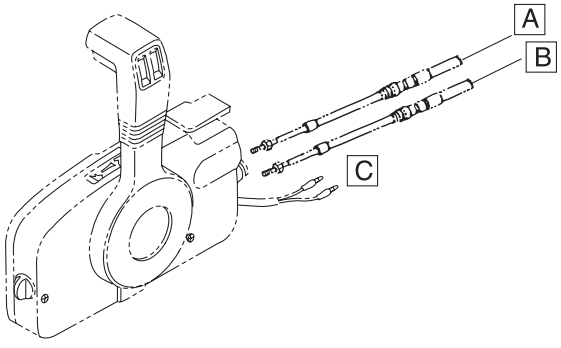


Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
13-28	3	369-83853-0	REMOTE CONTROL STOP CORD L=3900	1	1	
13-28	4	369-83858-0	REMOTE CONTROL STOP CORD L=5900	1	1	
13-29		345-66226-0	GROMMET 17-3	1	1	

Fig. 14 OPTIONAL PARTS (2) REMOTE CONTROL BOX

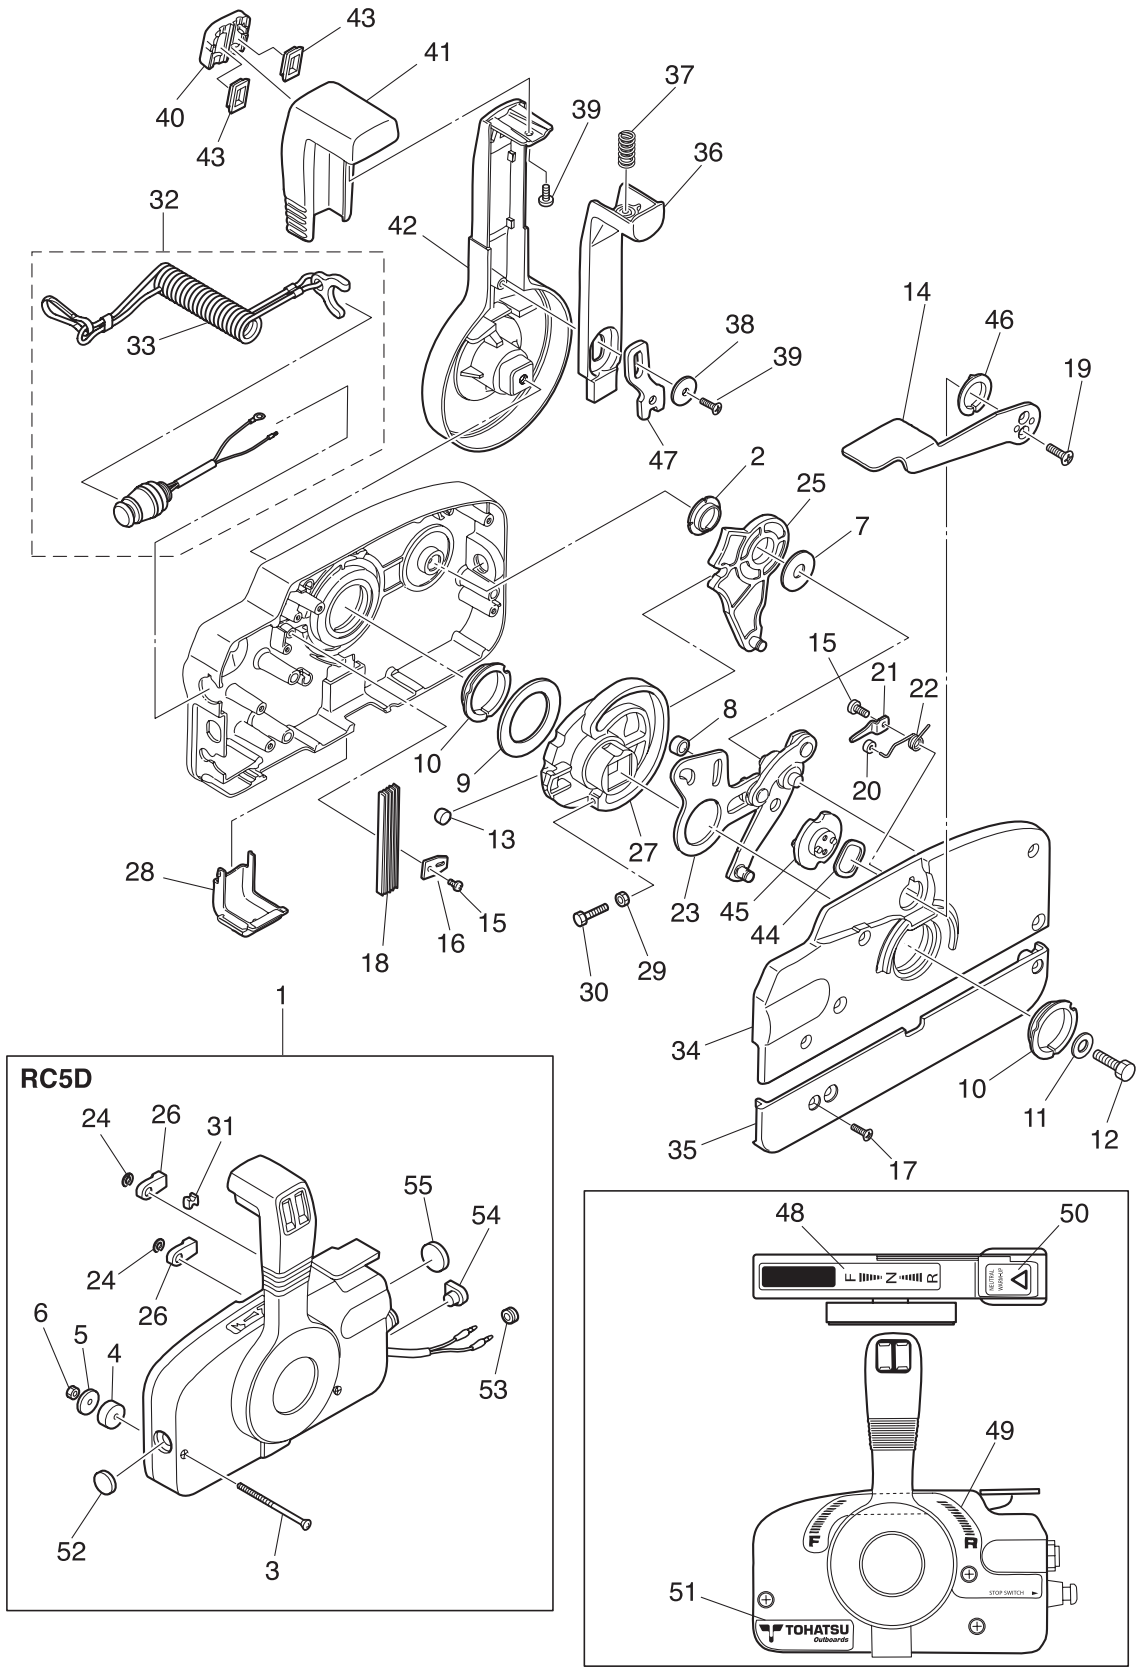


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
14-1	3B7Q84360-1	REMOTE CONTROL HEAD ASSY (RC5D)	1	1	RC5D
14-2	3A3-84432-0	* BUSHING	1	1	
14-3	3A3-84375-0	* SCREW	3	3	
14-4	3A3-84374-0	* SPACER	3	3	
14-5	353-84371-0	* WASHER	3	3	
14-6	930103-0600	* NUT	3	3	
14-7	3A3-84383-0	* WASHER	1	1	
14-8	3A3-84421-0	* ROLLER	1	1	
14-9	3A3-84422-0	* THRUST PLATE	1	1	
14-10	3A3-84431-0	* BUSHING	2	2	
14-11	940103-0800	* WASHER	1	1	
14-12	3A3-84442-0	* BOLT	1	1	
14-13	353-84388-0	* DETENT ROLLER	1	1	
14-14	3B7Q84312-0	* FREE THROTTLE LEVER	1	1	
14-15	921503-0406	* SCREW	2	2	
14-16	3A3-84423-0	* DETENT RETAINER	1	1	
14-17	921603-0518	* SCREW	5	5	
14-18	3A3-84307-0	* DETENT SPRING	5	5	
14-19	921603-0512	* SCREW	2	2	
14-20	3A3-84424-0	* FREE THROTTLE ROLLER	1	1	
14-21	3A3-84426-0	* ROLLER RETAINER	1	1	
14-22	3A3-84425-0	* FREE THROTTLE SPRING	1	1	
14-23	3A3-84365-1	* THROTTLE ARM	1	1	
14-24	945303-0600	* E-RING d=6	2	2	
14-25	3A3-84381-0	* SHIFT GEAR ASSY	1	1	
14-26	3A3-83314-2	* CABLE TERMINAL	2	2	
14-27	3A3-84364-2	* DRIVE GEAR	1	1	
14-28	3A3-84429-0	* WIRE COVER	1	1	
14-29	930103-0500	* NUT	1	1	

Fig. 14 OPTIONAL PARTS (2) REMOTE CONTROL BOX

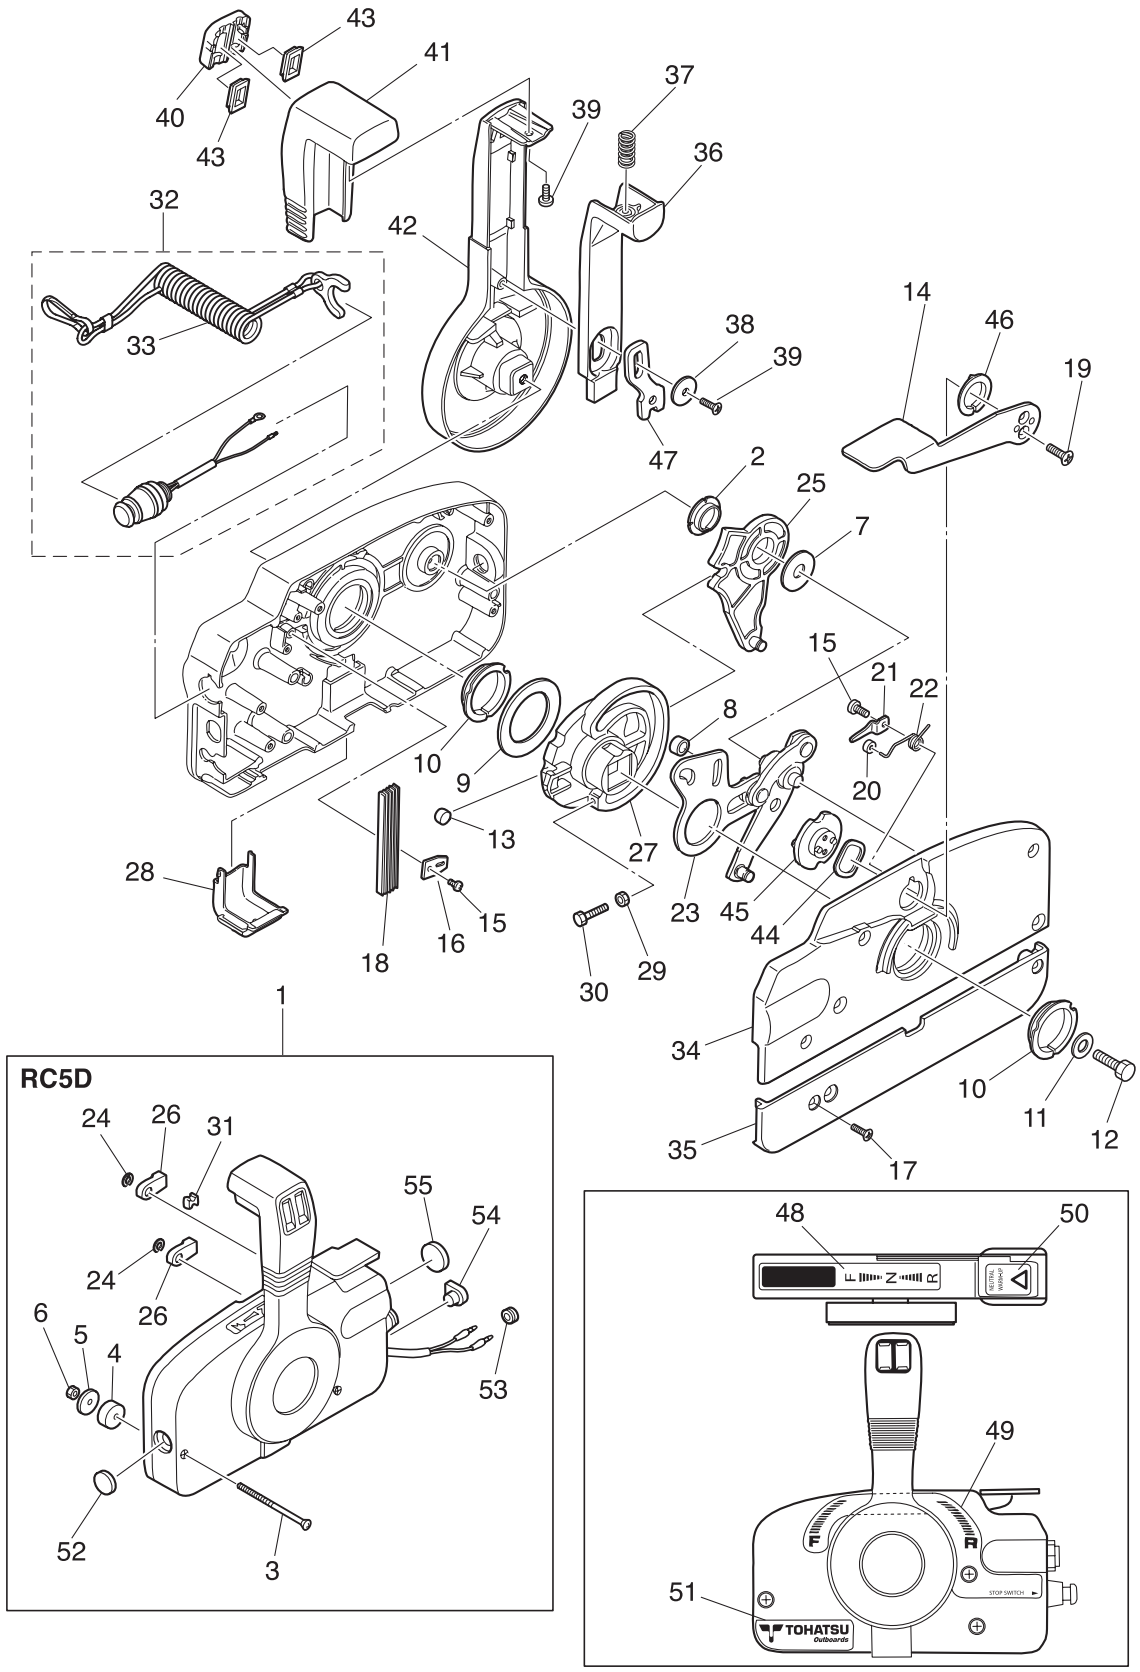


Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
14-30	910103-0525	* BOLT	1	1	
14-31	3A3-84376-0	* GROMMET	1	1	
14-32	398-06830-0	* STOP SWITCH ASSY	1	1	
14-33	353-06821-0	** STOP SWITCH LANYARD ASSY	1	1	
14-34	3B7Q84441-0	* REAR HOUSING	1	1	
14-35	3B7Q84366-0	* REAR PANEL	1	1	
14-36	3A3-84401-0	* NEUTRAL LOCK ARM	1	1	
14-37	3A3-84403-0	* NEUTRAL LOCK SPRING	1	1	
14-38	3A3-84407-0	* WASHER	1	1	
14-39	921503-0510	* SCREW	2	2	
14-40	3A3-84451-0	* TILT SWITCH COVER	1	1	
14-41	3A3-84404-0	* GRIP	1	1	
14-42	3B7Q84343-0	* CONTROL LEVER	1	1	
14-43	3A3-84452-0	* TILT SWITCH PLUG	2	2	
14-44	3A3-84368-0	* WAVE WASHER	1	1	
14-45	3A3-84391-0	* FREE THROTTLE DRUM	1	1	
14-46	3A3-84435-0	* BUSHING	1	1	
14-47	3A3-84406-0	* PLATE	1	1	
14-48	3N5-84336-0	* SHIFT POSITION DECAL	1	1	
14-49	3N5-84465-0	* SHIFT POSITION SIDE DECAL	1	1	
14-50	3N5-84331-0	* DECAL (LEVER)	1	1	
14-51	3N5-84333-0	* DECAL (TOHATSU)	1	1	
14-52	361-84414-0	* GROMMET	1	1	
14-53	369-84418-0	* GROMMET	1	1	
14-54	353-84321-0	* GROMMET	1	1	
14-55	369-84416-0	* GROMMET	1	1	

Fig. 15 OPTIONAL PARTS (3) ACCESSORIES

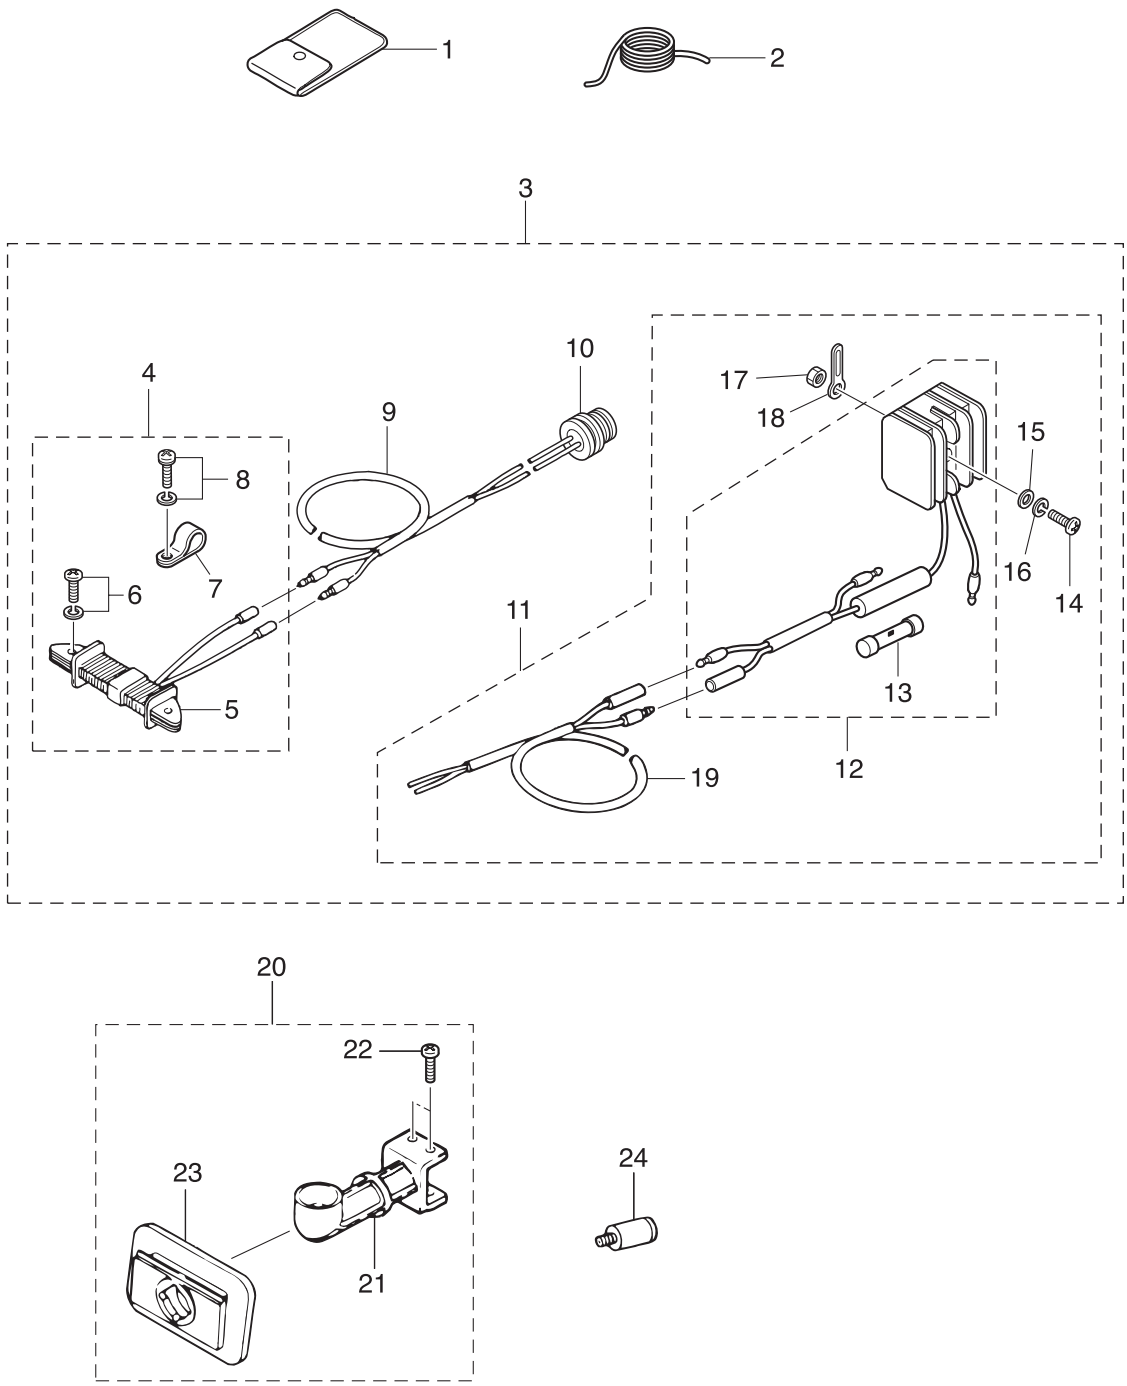

Ref.No.	Part No.	Description	Q'ty		Remarks
			M4C	M5B	
15-1	369-72100-0	TOOL KIT	1	1	
15-2	312-72201-0	SAFETY ROPE ϕ4-1000	1	1	
15-3	399-76101-0	LIGHTING KIT	1	1	
15-4	3H6-06128-0	* ALTERNATOR KIT	1	1	12V60W
15-5	399-06023-1	** ALTERNATOR ASSY (60W)	1	1	12V60W
15-6	921521-6520	** SCREW	2	2	
15-7	369-06915-0	** CLAMP 4.2-3-8	1	1	
15-8	921521-6408	** SCREW	1	1	
15-9	369-76167-0	* EXTENSION CORD (LIGHT) L=2000	1	1	
15-10	345-66226-0	* GROMMET 17-3	1	1	
15-11	3H6-76160-0	* RECTIFIER KIT	1	1	
15-12	369-76060-1	** RECTIFIER COMPLETE	1	1	
15-13	334-76211-0	*** FUSE 10A	1	1	
15-14	921503-0525	** SCREW	1	1	
15-15	940103-0500	** WASHER	1	1	
15-16	941303-0500	** SPRING WASHER	1	1	
15-17	930103-0500	** NUT	1	1	
15-18	353-06972-0	** CLAMP 7-80P	1	1	
15-19	369-76161-0	** EXTENSION CORD	1	1	
15-20	399B05180-0	VERTICAL STARTER KIT	1	1	
15-21	369B05911-0	* VERTICAL STARTER GUIDE	1	1	
15-22	369-05913-0	* TAPPING SCREW	4	4	
15-23	3B2-05912-0	* SEAL	1	1	
15-24	336-60007-0	FLUSHING PLUG	1	1	

Fig. 16 ASSEMBLY • KIT PARTS

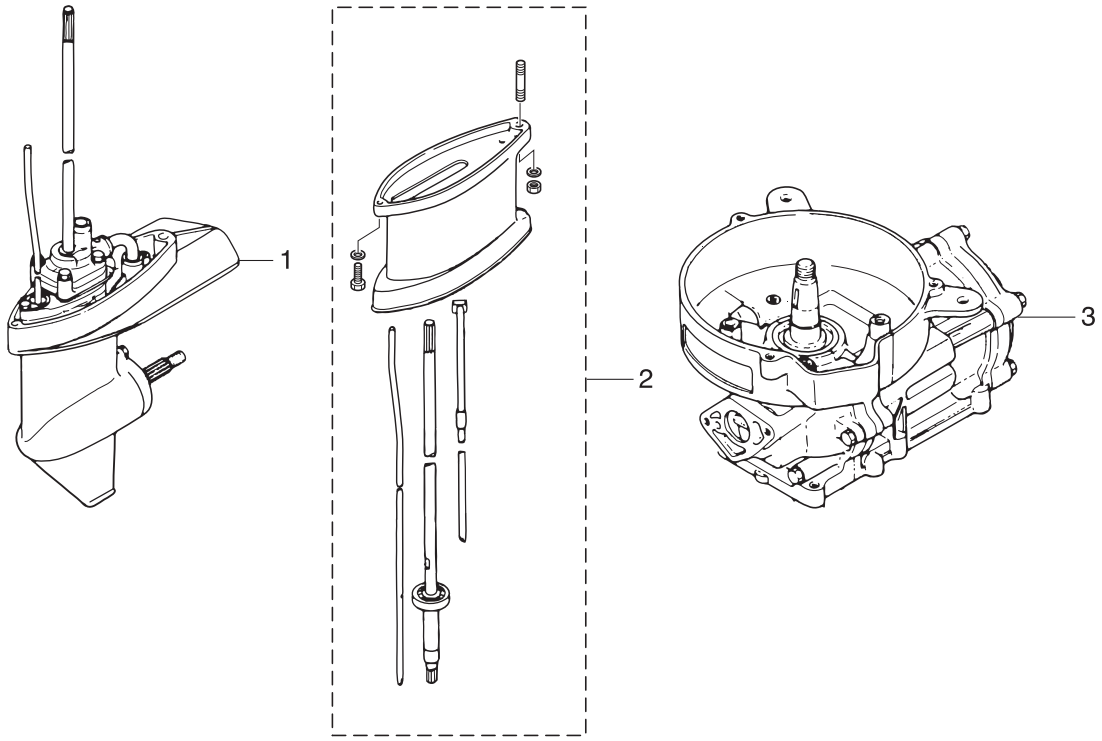

CABURETOR REPAIR KIT — 4

POWER HEAD GASKET SET — 5


WATER PUMP REPAIR KIT — 6

WATER PUMP KIT (CHROME PLATED) — 7

LOWER UNIT GASKET SET — 8

Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
16-1	1	369Q87301-4	LOWER UNIT ASSY (S)	1	1	for Transom "S"
16-1	2	369Q87302-4	LOWER UNIT ASSY (L)	1	1	for Transom "L"
16-1	3	369Q87304-2	LOWER UNIT ASSY (UL)		1	for Transom "UL"
16-2	1	369Q87314-4	EXTENSION HOUSING KIT (UL)	1	1	for Transom "L"⇒"UL"
16-2	2	369Q61110-2	* EXTENSION HOUSING	1	1	
16-2	3	9161E3-0625	* BOLT	1	1	
16-2	4	9401E3-0600	* WASHER	1	1	
16-2	5	9401E3-0800	* WASHER	1	1	
16-2	6	930103-0800	* NUT	1	1	
16-2	7	9152E3-0825	* STUD	1	1	
16-2	8	369-64303-0	* DRIVE SHAFT ASSY (UL)	1	1	
16-2	9	369-65120-0	* WATER PIPE ASSY (UL)	1	1	
16-2	10	369-66014-2	* CAM ROD (UL)	1	1	
16-3	1	3F9B87090-4	ENGINE SHORT BLOCK KIT	1		for M4C
16-3	2	369B87090-4	ENGINE SHORT BLOCK KIT		1	for M5B
16-4	1	369-87122-1	CARBURETOR REPAIR KIT	1	1	
16-4	2	369-02011-0	* CARBURETOR GASKET	1	1	
16-4	3	369-03222-0	* FLOAT CHAMBER O-RING	1	1	
16-4	4	369-03293-1	* GASKET	1	1	
16-4	5	922503-6412	* SCREW	4	4	
16-4	6	369-03231-0	* FLOAT	1	1	
16-4	7	346-03232-0	* FLOAT ARM PIN	1	1	
16-4	8	369-03240-0	* FLOAT VALVE	1	1	
16-4	9	344-03244-0	* CLIP	1	1	
16-4	10	921521-0408	* SCREW	1	1	
16-4	11	346-03256-0	* RUBBER CAP	1	1	

Fig. 16 ASSEMBLY • KIT PARTS

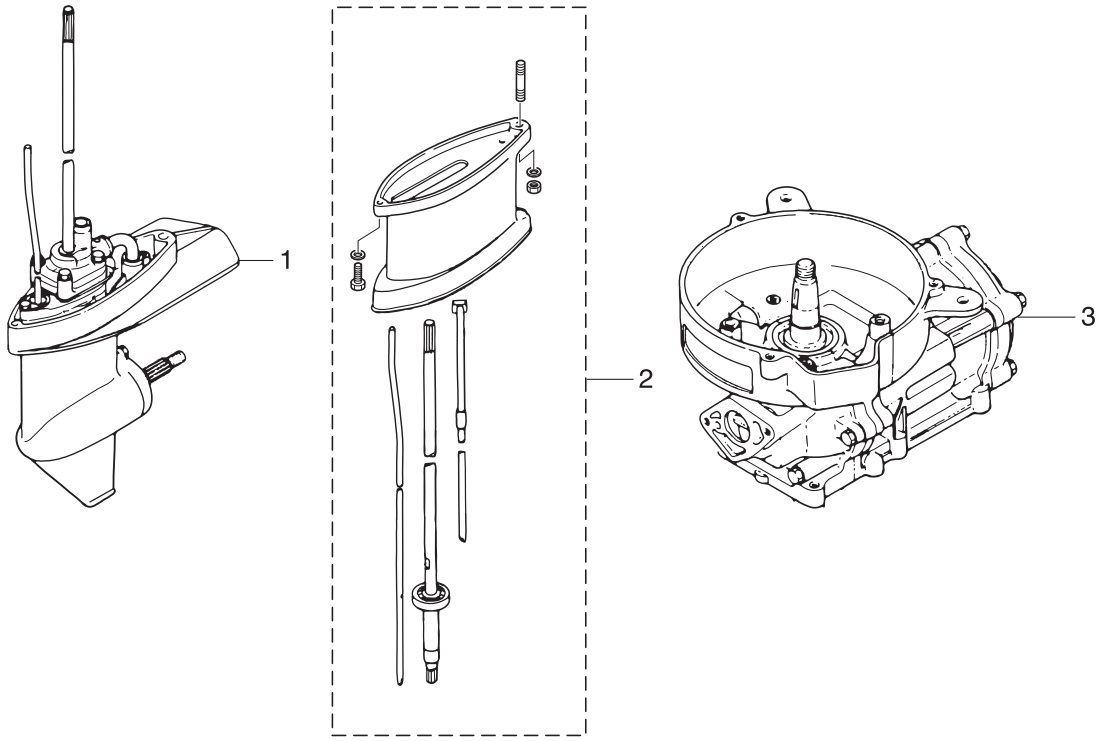

CABURETOR REPAIR KIT — 4

POWER HEAD GASKET SET — 5


WATER PUMP REPAIR KIT — 6

WATER PUMP KIT (CHROME PLATED) — 7

LOWER UNIT GASKET SET — 8

Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
16-4	12	369-03303-0	* DIAPHRAGM A	1	1	
16-4	13	369-03306-0	* DIAPHRAGM B	1	1	
16-4	14	922553-6423	* SCREW	4	4	
16-4	15	369-03302-0	* PUMP COVER GASKET	1	1	
16-4	16	369-03307-0	* PUMP BODY GASKET	1	1	
16-4	17	369-03182-0	* CARBURETOR COVER GASKET	1	1	
16-4	18	369-03183-0	* CARBURETOR COVER GASKET	1	1	
16-4	19	369-03186-0	* SCREW	2	2	
16-5	1	369-87121-5	POWER HEAD GASKET SET	1	1	
16-5	2	369-01005-2	* CYLINDER HEAD GASKET	1	1	
16-5	3	369-01215-0	* OIL SEAL 10.1-25-7	2	2	Crankcase Head
16-5	4	369-01214-0	* CRANKCASE HEAD GASKET	1	1	
16-5	5	369-00122-0	* OIL SEAL 20-47-8	2	2	Crankshaft
16-5	6	369-03222-0	* FLOAT CHAMBER O-RING	1	1	
16-5	7	369-03293-1	* GASKET	1	1	
16-5	8	369-02011-0	* CARBURETOR GASKET	1	1	
16-5	9	369-61012-2	* DRIVE SHAFT HOUSING GASKET	1	1	
16-6	1	369-87322-1	WATER PUMP REPAIR KIT	1	1	
16-6	2	369-65018-0	* PUMP CASE GASKET	1	1	
16-6	3	369-65025-0	* WATER PUMP GUIDE PLATE	1	1	
16-6	4	369-65029-0	* GUIDE PLATE GASKET	1	1	
16-6	5	369-65020-0	* PUMP CASE GASKET (LOWER)	1	1	
16-6	6	9161E3-0645	* BOLT	4	4	
16-6	7	940103-0600	* WASHER	4	4	
16-6	8	369-65022-0	* KEY ϕ2-11	1	1	
16-6	9	369-65011-0	* PUMP CASE LINER	1	1	
16-6	10	369-65021-1	* WATER PUMP IMPELLER	1	1	

Fig. 16 ASSEMBLY • KIT PARTS

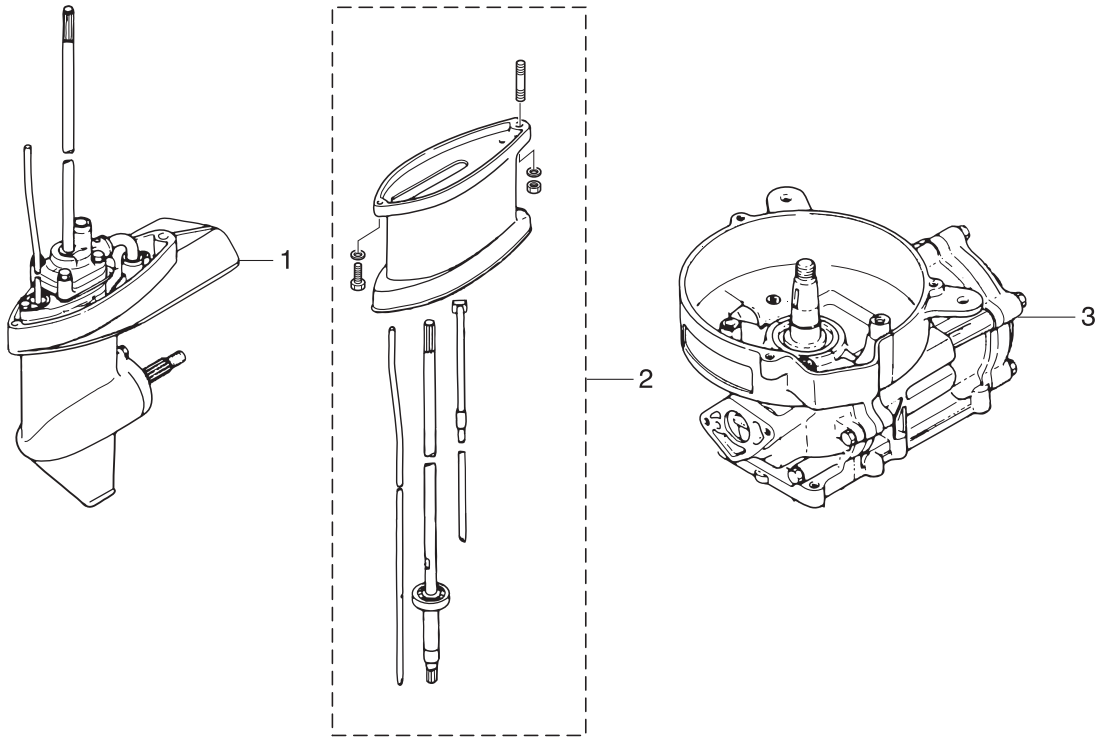

CABURETOR REPAIR KIT — 4

POWER HEAD GASKET SET — 5

WATER PUMP REPAIR KIT — 6

WATER PUMP KIT (CHROME PLATED) — 7

LOWER UNIT GASKET SET — 8

Ref.No.		Part No.	Description	Q'ty		Remarks
				M4C	M5B	
16-7	1	369-65231-0	WATER PUMP KIT (CHROME PLATED)	1	1	
16-7	2	369-65021-1	* WATER PUMP IMPELLER	1	1	
16-7	3	369-65238-0	* PUMP CASE LINER	1	1	Chrome Plated
16-7	4	369-65239-0	* WATER PUMP GUIDE PLATE	1	1	Chrome Plated
16-7	5	369-65018-0	* PUMP CASE GASKET	1	1	
16-7	6	369-65029-0	* GUIDE PLATE GASKET	1	1	
16-8	1	369-87321-0	LOWER UNIT GASKET SET	1	1	
16-8	2	332-60006-0	* GASKET 8.1-15-1	2	2	
16-8	3	369-60111-0	* OIL SEAL 15-28-10	1	1	Propeller Shaft
16-8	4	345-65015-0	* O-RING 3.2-47	1	1	Propeller Shaft Housing
16-8	5	369-65018-0	* PUMP CASE GASKET	1	1	
16-8	6	369-65029-0	* GUIDE PLATE GASKET	1	1	
16-8	7	369-60223-0	* OIL SEAL 10-24-8	1	1	Pump Case (Lower)
16-8	8	369-65020-0	* PUMP CASE GASKET (LOWER)	1	1	
16-8	9	369-66021-1	* O-RING 2.5-4.9	1	1	Cam Rod
16-8	10	332-66032-0	* O-RING 2.4-15.4	1	1	Cam Rod Bushing

INDEX

<A>
ADJUSTING SCREW 9-23
ALTERNATOR ASSY (60W) 15-5
ALTERNATOR KIT 15-4
ANODE 7-5
<B>
BALL BEARING 6002 7-12
BALL BEARING 6004 7-7
BALL BEARING 6204 2-10
BALL BEARING 6300 7-44
BALL JOINT HOLDER 13-2
BAND 205 12-22
BAND 205 12-27
BEVEL GEAR ASSY (A) 7-13
BEVEL GEAR ASSY (C) 7-15
BEVEL GEAR B 7-14
BOLT 1-3
BOLT 1-4
BOLT 1-8
BOLT 1-17
BOLT 3-35
BOLT 4-10
BOLT 4-28
BOLT 4-30
BOLT 5-13
BOLT 6-10
BOLT 6-14
BOLT 6-22
BOLT 6-25
BOLT 6-30
BOLT 7-6
BOLT 7-35
BOLT 7-41
BOLT 7-52
BOLT 7-53
BOLT 7-55
BOLT 8-16
BOLT 8-28
BOLT 8-32
BOLT 9-9
BOLT 9-35
BOLT 9-48
BOLT 11-11
BOLT 13-7
BOLT 13-10
BOLT 13-19
BOLT 14-12
BOLT 14-30
BOLT 16-2-3
BOLT 16-6-6
BOLT 8-122 8-5
BOTTOM COWL 9-1
BOTTOM COWL 9-2
BUSHING 6-2
BUSHING 8-18
BUSHING 8-19
BUSHING 8-26
BUSHING 9-30
BUSHING 9-38
BUSHING 14-2
BUSHING 14-10
BUSHING 14-46
BUSHING 8.4-10-11 9-18
<C>
CABLE CLIP ASSY 13-6
CABLE JOINT 13-26
CABLE TERMINAL 14-26
CAM ROD (L) 7-45-2
CAM ROD (S) 7-45-1
CAM ROD (UL) 7-45-3
CAM ROD (UL) 16-2-10
CAM ROD BUSHING 7-48
CARBURETOR ASSY 3-1-1
CARBURETOR ASSY 3-1-2
CARBURETOR COVER 3-30
CARBURETOR COVER GASKET 3-31
CARBURETOR COVER GASKET 3-32
CARBURETOR COVER GASKET 16-4-17
CARBURETOR COVER GASKET 16-4-18
CARBURETOR GASKET 3-34
CARBURETOR GASKET 16-4-2
CARBURETOR GASKET 16-5-8
CARBURETOR REPAIR KIT 16-4-1
CAUTION DECAL (A) 10-1
CAUTION DECAL (B) 4-32
CD UNIT 5-6
CERAMIC BALL 7.7 6-17
CHECK VALVE 3-21
CHOKE ROD 3-37
CHOKE ROD 9-49
CHOKE ROD BUSHING 9-50
CLAMP 12-5
CLAMP 12-11
CLAMP 4.2-3-8 5-4
CLAMP 4.2-3-8 15-7
CLAMP 7-80P 15-18
CLAMP BRACKET (L) 8-4
CLAMP BRACKET (R) 8-3
CLAMP SCREW 8-37
CLAMP SCREW ASSY 8-36
CLAMP SCREW HANDLE 8-38
CLAMP SCREW KIT 8-35
CLAMP SCREW PAD 8-40
CLIP 3-8
CLIP 16-4-9
CLIP φ10 9-45
CLIP φ10 11-15
CLIP φ10 12-19
CLIP φ10 12-26
CLUTCH 7-19
CLUTCH CAM 7-46
COLLAR 13.5-18-2.5 13-20
COLLAR 4-6-21 4-17
COLLAR 6.1-8-6.5 4-23
CONNECTING ROD 2-9
CONTROL LEVER 14-42
COVER HOOK 9-8
CRANK PIN 2-7
CRANKCASE HEAD 1-13
CRANKCASE HEAD GASKET 1-16
CRANKCASE HEAD GASKET 16-5-4
CRANKSHAFT A 2-5
CRANKSHAFT D 2-6
CRANKSHAFT SUB-ASSY 2-4
CYL BLOCK & CRANKCASE ASSY 1-1
CYLINDER HEAD 1-6
CYLINDER HEAD GASKET 1-7
CYLINDER HEAD GASKET 16-5-2
<D>
DECAL (LEVER) 14-50
DECAL (TOHATSU) 14-51
DECAL SET (M4C) 10-6-1
DECAL SET (M5B) 10-6-2
DETENT RETAINER 14-16
DETENT ROLLER 14-13
DETENT SPRING 14-18
DIAPHRAGM A 3-27
DIAPHRAGM A 16-4-12
DIAPHRAGM B 3-28
DIAPHRAGM B 16-4-13
DISTANCE PLATE 8-9
DOWEL PIN 6-12 1-2
DOWEL PIN 6-12 6-9
DRAIN SCREW 3-14
DRIVE GEAR 14-27
DRIVE SHAFT ASSY (L) 7-43-2
DRIVE SHAFT ASSY (S) 7-43-1
DRIVE SHAFT ASSY (UL) 7-43-3
DRIVE SHAFT ASSY (UL) 16-2-8
DRIVE SHAFT BUSHING 6-4
DRIVE SHAFT BUSHING ASSY 6-3
DRIVE SHAFT HOUSING ASSY (L) 6-1-2
DRIVE SHAFT HOUSING ASSY (S) 6-1-1
DRIVE SHAFT HOUSING GASKET 6-26
DRIVE SHAFT HOUSING GASKET 16-5-9
<E>
ENGINE SHORT BLOCK KIT 16-3-1
ENGINE SHORT BLOCK KIT 16-3-2
E-RING d=6 14-24
EXCITER COIL 5-2
EXTENSION CORD 15-19
EXTENSION CORD (LIGHT) L=2000 15-9
EXTENSION HOUSING 6-29
EXTENSION HOUSING 16-2-2
EXTENSION HOUSING KIT (UL) 16-2-1
<F>
FILTER 12-17
FLOAT 3-6
FLOAT 16-4-6
FLOAT ARM PIN 3-9
FLOAT ARM PIN 16-4-7
FLOAT CHAMBER 3-11
FLOAT CHAMBER O-RING 3-12
FLOAT CHAMBER O-RING 16-4-3
FLOAT CHAMBER O-RING 16-5-6
FLOAT VALVE 3-7
FLOAT VALVE 16-4-8
FLUSHING PLUG 15-24
FLYWHEEL 5-1
FREE THROTTLE DRUM 14-45
FREE THROTTLE LEVER 14-14
FREE THROTTLE ROLLER 14-20
FREE THROTTLE SPRING 14-22
FRICTION KNOB 8-22
FRICTION PIECE 8-20
FRICTION PIECE 9-22
FRICTION PLATE 4-11
FRICTION SPRING 4-9
FUEL COCK ASSY 9-46
FUEL COCK ASSY 11-13
FUEL COCK KNOB 9-55
FUEL COCK ROD 9-54
FUEL COCK ROD HOSE 9-58
FUEL CONNECTOR 12-9
FUEL CONNECTOR 12-10
FUEL CONNECTOR (MALE) 9-40
FUEL CONNECTOR MARK 12-8
FUEL FILTER ASSY 12-20
FUEL GAUGE VENT CAP ASSY (12L) 12-13
FUEL HOSE 11-14
FUEL HOSE 12-21
FUEL HOSE 12-25
FUEL LEVEL DECAL 9-52
FUEL TANK 11-4
FUEL TANK ASSY 12L 12-12
FUEL TANK CAP ASSY 11-1
FUEL TANK MOUNT 11-9-1
FUEL TANK MOUNT 11-9-2
FUEL TANK SEAL 11-3
FUEL TANK STAY 11-10
FUSE 10A 15-13
<G>
GASKET 3-15
GASKET 16-4-4
GASKET 16-5-7
GASKET 8.1-15-1 6-11
GASKET 8.1-15-1 7-4
GASKET 8.1-15-1 16-8-2
GEAR CASE ASSY 7-1
GREASE FITTING 8-30
GRIP 9-16
GRIP 14-41
GROMMET 6-12
GROMMET 7-58
GROMMET 9-11
GROMMET 9-12
GROMMET 14-31
GROMMET 14-52
GROMMET 14-53
GROMMET 14-54
GROMMET 14-55
GROMMET 17-2.7 9-51
GROMMET 17-3 13-29
GROMMET 17-3 15-10
GROMMET 29-3 6-27
GROMMET φ11 5-16
GUIDE PLATE GASKET 7-34

GUIDE PLATE GASKET 16-6-4
GUIDE PLATE GASKET 16-7-6
GUIDE PLATE GASKET 16-8-6
<H>
HOLDER 3-40
HOLDER CAP 13-3
HOOK LEVER 9-3
HOOK LEVER BUSHING 9-6
HOOK LEVER BUSHING 13-15
HOSE 9-43
HOSE 9-44
HOSE 12-6
HOSE 12-7
HOSE 12-18
HOSE 12-23
<I>
IGNITION COIL W/CAP 5-9
<J>
JOINT ASSY (INLET) 12-2
JOINT ASSY (OUTLET) 12-3
<K>
KEY 2-11
KEY φ2-11 7-29
KEY φ2-11 16-6-8
<L>
LIGHTING KIT 15-3
LOWER UNIT ASSY (L) 16-1-2
LOWER UNIT ASSY (S) 16-1-1
LOWER UNIT ASSY (UL) 16-1-3
LOWER UNIT GASKET SET 16-8-1
<M>
MAIN JET (#78) 3-3
MAIN NOZZLE 3-2
<N>
NEUTRAL LOCK ARM 14-36
NEUTRAL LOCK SPRING 14-37
NON-RETURN VALVE 12-28
NUT 3-23
NUT 6-34
NUT 9-25
NUT 9-33
NUT 9-42
NUT 11-6
NUT 13-8
NUT 13-13
NUT 14-6
NUT 14-29
NUT 15-17
NUT 16-2-6
NUT 12-P1.25 5-17
NYLON NUT 8-P1.25 8-6
<O>
OIL SEAL 10.1-25-7 1-14
OIL SEAL 10.1-25-7 16-5-3
OIL SEAL 10-24-8 7-38
OIL SEAL 10-24-8 16-8-7
OIL SEAL 15-28-10 7-10
OIL SEAL 15-28-10 16-8-3
OIL SEAL 20-47-8 2-2
OIL SEAL 20-47-8 16-5-5
O-RING 12-16
O-RING 1.9-8.8 6-16
O-RING 2.4-15.4 7-50
O-RING 2.4-15.4 16-8-10
O-RING 2.5-4.9 7-49
O-RING 2.5-4.9 16-8-9
O-RING 3.2-47 7-11
O-RING 3.2-47 16-8-4
<P>
PICK-UP ELBOW ASSY (12L) 12-14
PILOT SCREW 3-18-1
PILOT SCREW 3-18-2
PIN 6-23
PIN 13-23
PIN 3.5-28 7-20
PIPE JOINT 4-4 12-24
PISTON 2-13-1
PISTON (0.5 O/S) 2-13-2
PISTON PIN 2-14
PISTON PIN CLIP 2-15
PISTON REPAIR KIT 2-12-1
PISTON REPAIR KIT (0.5 O/S) 2-12-2
PISTON RING 2-17-1
PISTON RING (0.5 O/S) 2-17-2
PISTON RING SET 2-16-1
PISTON RING SET (0.5 O/S) 2-16-2
PLASTIC RIVET 6.5 9-32
PLATE 3-39
PLATE 14-47
PLUG 8-8 7-3
PLUG CAP 5-10
PLUG CAP TERMINAL 5-11
PLUG CAP W/RESISTANCE 5-12
POWER HEAD GASKET SET 16-5-1
PRE-COATED SCREW 5-25 6-6
PRIMER BULB 12-4
PRIMER BULB ASSY 12-1
PROPELLER ASSY (6") 7-59-1
PROPELLER ASSY (7") 7-59-2
PROPELLER ASSY (8") 7-59-3
PROPELLER ASSY (9") 7-59-4
PROPELLER HARDWARE KIT 7-60
PROPELLER NUT 7-63
PROPELLER SHAFT 7-18
PROPELLER SHAFT HOUSING 7-9
PROPELLER SHAFT HOUSING ASSY 7-8
PULSAR COIL 5-14
PUMP BODY 3-20
PUMP BODY GASKET 3-29
PUMP BODY GASKET 16-4-16
PUMP CASE (LOWER) 7-37
PUMP CASE (UPPER) 7-30
PUMP CASE GASKET 7-33
PUMP CASE GASKET 16-6-2
PUMP CASE GASKET 16-7-5
PUMP CASE GASKET 16-8-5
PUMP CASE GASKET (LOWER) 7-40
PUMP CASE GASKET (LOWER) 16-6-5
PUMP CASE GASKET (LOWER) 16-8-8
PUMP CASE LINER 7-31
PUMP CASE LINER 16-6-9
PUMP CASE LINER 16-7-3
PUMP COVER 3-24
PUMP COVER GASKET 3-26
PUMP COVER GASKET 16-4-15
PUSH ROD 7-23
<Q>
QUICK-CONNECTOR (MALE) 12-15
<R>
RATCHET 4-8
REAR HOUSING 14-34
REAR PANEL 14-35
RECOIL STARTER ASSY 4-1
RECTIFIER COMPLETE 15-12
RECTIFIER KIT 15-11
REED VALVE 1-10
REED VALVE STOPPER 1-11-1
REED VALVE STOPPER 1-11-2
REEL 4-6
REMOTE CONTROL FITTING ASSY 13-1
REMOTE CONTROL HEAD ASSY (RC5D) 14-1
REMOTE CONTROL STOP CORD L=2000 13-28-1
REMOTE CONTROL STOP CORD L=3200 13-28-2
REMOTE CONTROL STOP CORD L=3900 13-28-3
REMOTE CONTROL STOP CORD L=5900 13-28-4
RETURN SPRING 4-7
REVERSE LOCK ARM 8-31
REVERSE LOCK SPRING (L) 8-34
REVERSE LOCK SPRING (R) 8-33
RIVET 3-22 8-39
ROD SNAP 3.5-2 4-22
ROD SNAP 3.5-2 4-31
ROD SNAP 3-B 3-38
ROLLER 14-8
ROLLER BEARING 14-18-20 2-3
ROLLER BEARING 14-20-12 7-2
ROLLER BEARING 20-26-12 2-8
ROLLER RETAINER 14-21
ROPE ANCHOR 4-14
RUBBER CAP 3-5
RUBBER CAP 16-4-11
RUBBER DAMPER 5-7
RUBBER DAMPER 5-8
<S>
SAFETY ROPE φ4-1000 15-2
SCREW 1-12
SCREW 3-10
SCREW 3-13
SCREW 3-22
SCREW 3-25
SCREW 3-33
SCREW 3-41
SCREW 4-21
SCREW 4-25
SCREW 5-3
SCREW 5-5
SCREW 5-15
SCREW 6-8
SCREW 7-25
SCREW 8-10
SCREW 8-12
SCREW 9-19
SCREW 9-21
SCREW 9-41
SCREW 9-47
SCREW 9-56
SCREW 14-3
SCREW 14-15
SCREW 14-17
SCREW 14-19
SCREW 14-39
SCREW 15-6
SCREW 15-8
SCREW 15-14
SCREW 16-4-5
SCREW 16-4-10
SCREW 16-4-14
SCREW 16-4-19
SEAL 7-27
SEAL 15-23
SEAL RING 9-57
SEAL RING 13.8-22-3.7 9-5
SEAL RING 13.8-22-3.7 13-16
SEALING PLATE 4-15
SEPARATE CORD 13-27
SETTING PLATE 8-27
SHIFT GEAR ASSY 14-25
SHIFT LEVER 6-15
SHIFT POSITION DECAL 14-48
SHIFT POSITION SIDE DECAL 14-49
SHIFT ROD (L) 6-19-2
SHIFT ROD (S) 6-19-1
SHIFT ROD JOINT ASSY 6-13
SHIFT ROD LEVER 6-21
SHIM 21-28-0.1 7-17-1
SHIM 21-28-0.15 7-17-2
SHIM 26.5-34.8-0.1 7-39-1
SHIM 26.5-34.8-0.15 7-39-2
SHOULDER BOLT 8-41
SLOW JET (#52) 3-4-1
SLOW JET (#55) 3-4-2
SPACER 14-4
SPACER 19-24.8-1 1-15
SPARK PLUG (BPR7HS10) 1-18
SPARK PLUG DECAL (BPR7HS10) 9-53
SPLIT PIN 6-24
SPLIT PIN 3-18 5-19
SPLIT PIN 3-18 7-64
SPRING 3-17
SPRING 3-19
SPRING 6-18
SPRING 7-21
SPRING 8-21
SPRING 8-29
SPRING 13-4
SPRING 13-24
SPRING PIN 2-12 13-25
SPRING PIN 3-10 7-47
SPRING RETAINER 7-22
SPRING WASHER 1-5
SPRING WASHER 3-36
SPRING WASHER 4-29
SPRING WASHER 9-29
SPRING WASHER 9-39
SPRING WASHER 11-5
SPRING WASHER 13-11
SPRING WASHER 15-16
STARTER CASE 4-2
STARTER HANDLE 4-13

STARTER LOCK 4-16
STARTER LOCK CAM 4-19
STARTER LOCK CAM SPRING 4-24
STARTER LOCK ROD 4-27
STARTER LOCK SPRING..... 4-18
STARTER PULLEY 4-26
STARTER ROPE φ4.5-1620 4-12
STARTER SEAL..... 10-5
STARTER SPRING..... 4-5
STARTER SPRING CASE..... 4-4
STARTER SPRING SET..... 4-3
STEERING HANDLE STOPPER..... 9-31
STEERING HOOK PLATE 13-9
STERN BRACKET SPRING 8-11
STOP SCREW 3-16
STOP SWITCH ASSY..... 9-36
STOP SWITCH ASSY..... 14-32
STOP SWITCH LANYARD ASSY..... 9-37
STOP SWITCH LANYARD ASSY..... 14-33
STOPPER 6-5
STOPPER 7-51
STUD..... 6-32
STUD..... 9-15
STUD..... 16-2-7
SWIVEL BRACKET 8-1
SWIVEL BRACKET 8-2
<T>
TANK FILLER CAP GASKET..... 11-2
TAPPING SCREW..... 15-22
THROTTLE ARM..... 14-23
THROTTLE DECAL..... 9-27
THROTTLE LEVER 13-14
THROTTLE LEVER 13-18
THROTTLE SHAFT..... 9-26
THROTTLE SHAFT DAMPER..... 9-17
THROTTLE SHAFT SUPPORT..... 9-20
THROTTLE WIRE 9-28
THROTTLE WIRE (REMOTE CONTROL).. 13-22
THROTTLE WIRE BRACKET..... 9-34
THRUST HOLDER ASSY..... 7-61
THRUST PLATE..... 2-1
THRUST PLATE..... 14-9
THRUST PLATE (UPPER) 8-17
THRUST ROD 8-14
THRUST ROD SPRING 8-15
TILLER HANDLE..... 9-14
TILLER HANDLE ASSY 9-13
TILT STOPPER ASSY 8-24
TILT STOPPER GRIP 8-25
TILT SWITCH COVER 14-40
TILT SWITCH PLUG..... 14-43
TOOL KIT..... 15-1
TOP COWL ASSY..... 10-2
TOP COWL ASSY..... 10-3
TOP COWL SEAL..... 10-4
TOP COWL SUB-ASSY..... 10-3a
TOP COWL SUB-ASSY..... 10-3b
<V>
VERTICAL STARTER GUIDE..... 15-21
VERTICAL STARTER KIT..... 15-20
<W>
WASHER 1-9
WASHER 4-20
WASHER 5-18
WASHER 6-7
WASHER 6-20
WASHER 6-31
WASHER 6-33
WASHER 7-36
WASHER 7-54
WASHER 7-56
WASHER 8-7
WASHER 8-23
WASHER 9-24
WASHER 11-12
WASHER 13-12
WASHER 14-5
WASHER 14-7
WASHER 14-11
WASHER 14-38
WASHER 15-15
WASHER 16-2-4
WASHER 16-2-5
WASHER 16-6-7
WASHER 10.5-28-2..... 7-62
WASHER 14-22-1 9-4
WASHER 15.2-19-1.9..... 7-16
WASHER 4.3-16-1.5 8-13
WASHER 5.5-14-1.2 13-5
WASHER 6.5-23-1.5 11-8
WASHER 6-16-1.5..... 9-10
WASHER 6-16-1.5..... 11-7
WASHER 6-16-1.5..... 13-21
WASHER 8.5-28-1..... 8-8
WATER OUTLET HOSE..... 6-28
WATER PIPE (LOWER) 7-26
WATER PIPE ASSY (L)..... 7-57-2
WATER PIPE ASSY (S)..... 7-57-1
WATER PIPE ASSY (UL) 7-57-3
WATER PIPE ASSY (UL) 16-2-9
WATER PIPE SEAL (LOWER)..... 7-42
WATER PUMP GUIDE PLATE..... 7-32
WATER PUMP GUIDE PLATE..... 16-6-3
WATER PUMP GUIDE PLATE..... 16-7-4
WATER PUMP IMPELLER 7-28
WATER PUMP IMPELLER 16-6-10
WATER PUMP IMPELLER 16-7-2
WATER PUMP KIT (CHROME PLATED).. 16-7-1
WATER PUMP REPAIR KIT 16-6-1
WATER STRAINER..... 7-24
WAVE WASHER..... 14-44
WAVE WASHER d=14 9-7
WAVE WASHER d=14 13-17
WIRE COVER..... 14-28

INDEX (Parts Number)

301-61021-0 6-2
301-64215-1 7-19
301-64217-0 7-20
301-66136-0 6-16
307-62116-1 8-8
309-62115-2 8-5
309-62446-1 8-21
309Q62442-2. 8-22
312-72201-0 15-2
332-60005-2 7-3
332-60006-0 6-11
332-60006-0 7-4
332-60006-0 16-8-2
332-62101-1 8-40
332-66032-0 7-50
332-66032-0 16-8-10
332-70201-0 12-11
332-83723-0 13-3
332-83724-0 13-4
332-83725-0 13-5
332-83728-0 13-23
332-83729-0 13-24
334-76211-0 15-13
336-60007-0 15-24
338-00131-0 2-11
338-02215-0 9-45
338-02215-0 11-15
338-02215-0 12-19
338-02215-0 12-26
338-67147-0 9-5
338-67147-0 13-16
344-03244-0 3-8
344-03244-0 16-4-9
344-67177-1 8-30
345-01111-0 1-2
345-01111-0 6-9
345-05122-1 11-8
345-05223-1 4-31
345-63048-0 9-17
345-65015-0 7-11
345-65015-0 16-8-4
345-66226-0 13-29
345-66226-0 15-10
345-67117-0 9-51
346-03232-0 3-9
346-03232-0 16-4-7
346-03256-0 3-5
346-03256-0 16-4-11
346-03265-0 3-16
346-03267-0 3-17
346-67196-1 3-38
350-00024-1 2-15
350-00042-0 2-3
350-62121-2 8-14
350-63046-0 9-18
350-67154-0 9-32
351-00011-0 2-17-1
351-00014-0 2-17-2
353-06821-0 9-37
353-06821-0 14-33
353-06972-0 15-18
353-72544-1 9-58
353-84321-0 14-54
353-84371-0 14-5
353-84388-0 14-13
356-03266-0 3-18-2
356-03268-0 3-19
361-84414-0 14-52
369-00001-1 2-13-1
369-00004-1 2-13-2
369-00021-1 2-14
369-00031-0 2-5
369-00034-0 2-6
369-00040-0 2-9
369-00043-0 2-8
369-00061-1 2-7
369-00069-0 2-4
369-00115-0 2-1
369-00122-0 2-2
369-00122-0 16-5-5
369-00132-0 5-17
369-01005-2 1-7
369-01005-2 16-5-2
369-01210-4 1-13
369-01214-0 1-16
369-01214-0 16-5-4
369-01215-0 1-14
369-01215-0 16-5-3
369-01217-0 1-15
369-02011-0 3-34
369-02011-0 16-4-2
369-02011-0 16-5-8
369-02111-0 1-10
369-02113-0 1-11-1
369-02230-0 12-20
369-02501-2 3-39
369-02503-1 3-40
369-03181-0 3-30
369-03182-0 3-31
369-03182-0 16-4-17
369-03183-0 3-32
369-03183-0 16-4-18
369-03186-0 3-33
369-03186-0 16-4-19
369-03200-2 3-1-1
369-03221-0 3-11
369-03222-0 3-12
369-03222-0 16-4-3
369-03222-0 16-5-6
369-03231-0 3-6
369-03231-0 16-4-6
369-03240-0 3-7
369-03240-0 16-4-8
369-03251-0 3-3
369-03252-1 3-2
369-03254-0 3-4-2
369-03292-0 3-14
369-03293-1 3-15
369-03293-1 16-4-4
369-03293-1 16-5-7
369-03301-0 3-24
369-03302-0 3-26
369-03302-0 16-4-15
369-03303-0 3-27
369-03303-0 16-4-12
369-03304-0 3-20
369-03305-0 3-21
369-03306-0 3-28
369-03306-0 16-4-13
369-03307-0 3-29
369-03307-0 16-4-16
369-05217-1 4-27
369-05913-0 15-22
369-06001-1 5-1
369-06021-0 5-2
369-06060-1 5-6
369-06071-0 5-14
369-06908-0 5-16
369-06915-0 5-4
369-06915-0 15-7
369-60003-0 6-4
369-60111-0 7-10
369-60111-0 16-8-3
369-60206-0 7-24
369-60211-0 7-2
369-60223-0 7-38
369-60223-0 16-8-7
369-61012-2 6-26
369-61012-2 16-5-9
369-61016-0 6-27
369-61097-0 6-28
369-62106-1 8-37
369-62118-0 8-9
369-62122-2 8-15
369-62146-1 8-11
369-62147-0 8-13
369-62422-0 8-17
369-62434-0 8-29
369-62439-1 8-27
369-62441-1 8-20
369-63012-1 9-16
369-63102-0 9-30
369-63103-1 9-31
369-63508-0 9-34
369-63600-1 9-28
369-64010-2 7-13
369-64014-0 7-17-1
369-64015-0 7-17-2
369-64020-2 7-14
369-64030-2 7-15
369-64032-0 7-16
369-64081-1 7-39-1
369-64082-1 7-39-2
369-64121-0 7-63
369-64124-0 7-62
369-64211-1 7-18
369-64222-0 7-22
369-64223-0 7-23
369-64301-0 7-43-1
369-64302-0 7-43-2
369-64303-0 7-43-3
369-64303-0 16-2-8
369-64331-2 6-3
369-64332-1 6-5
369-65011-0 7-31
369-65011-0 16-6-9
369-65014-0 7-42
369-65016-0 7-30
369-65017-1 7-37
369-65018-0 7-33
369-65018-0 16-6-2
369-65018-0 16-7-5
369-65018-0 16-8-5
369-65020-0 7-40
369-65020-0 16-6-5
369-65020-0 16-8-8
369-65021-1 7-28
369-65021-1 16-6-10
369-65021-1 16-7-2
369-65022-0 7-29
369-65022-0 16-6-8
369-65025-0 7-32
369-65025-0 16-6-3
369-65029-0 7-34
369-65029-0 16-6-4
369-65029-0 16-7-6
369-65029-0 16-8-6
369-65035-0 7-26
369-65036-0 7-27
369-65100-0 7-57-1
369-65110-0 7-57-2
369-65120-0 7-57-3
369-65120-0 16-2-9
369-65195-0 7-58
369-65231-0 16-7-1
369-65238-0 16-7-3
369-65239-0 16-7-4
369-66011-0 7-46
369-66012-1 7-45-1
369-66013-1 7-45-2
369-66014-2 7-45-3
369-66014-2 16-2-10
369-66021-1 7-49
369-66021-1 16-8-9
369-66031-0 7-48
369-66033-0 7-51
369-66043-1 6-12
369-66110-4 6-15
369-66112-1 6-18
369-66116-0 6-17
369-66214-0 6-19-1
369-66215-0 6-19-2
369-66223-0 6-23
369-66225-0 6-21
369-66241-0 6-13
369-66313-0 8-31
369-66338-0 8-33
369-66339-0 8-34
369-67105-0 9-6
369-67105-0 13-15
369-67142-0 9-8
369-67151-2 9-49
369-67187-0 9-12
369-67188-0 9-11
369-70036-2 11-3
369-70057-0 11-9-1
369-70061-0 9-54
369-70062-0 9-55
369-70063-0 9-57
369-70263-0 9-38
369-70311-0 11-13
369-70312-1 11-10
369-70315-0 11-14
369-70316-4 11-4
369-72016-0 9-52
369-72019-1 9-27
369-72026-0 9-53
369-72100-0 15-1
369-76060-1 15-12
369-76161-0 15-19
369-76167-0 15-9
369-83715-1 13-26
369-83726-0 13-14
369-83820-0 13-6
369-83830-2 13-9
369-83846-0 13-28-1
369-83848-0 13-28-2
369-83853-0 13-28-3
369-83858-0 13-28-4
369-83863-0 13-22
369-83880-2 13-1
369-83883-0 13-27
369-83887-0 13-18
369-83888-0 13-20
369-84416-0 14-55
369-84418-0 14-53
369-87121-5 16-5-1
369-87122-1 16-4-1
369-87123-0 2-16-1
369-87124-0 2-16-2
369-87130-0 2-12-1
369-87131-0 2-12-2
369-87321-0 16-8-1
369-87322-1 16-6-1
369-87801-3 10-6-2
369B01001-1 1-6
369B01100-2 1-1
369B05911-0 15-21
369B64518-1 7-59-4
369B87090-4 16-3-2
369Q60000-3. 7-1
369Q60101-1. 7-9
369Q61020-3. 6-1-1
369Q61030-5. 6-1-2
369Q61110-2. 6-29
369Q61110-2. 16-2-2
369Q62112-3. 8-3
369Q62113-2. 8-4
369Q62391-2. 8-1
369Q63010-1. 9-13
369Q67100-3. 9-1
369Q67141-1. 9-3
369Q67560-5. 10-2
369Q67640-1. . . . . .10-3b
369Q67645-1. 10-3
369Q87301-4. 16-1-1
369Q87302-4. 16-1-2
369Q87304-2. 16-1-3
369Q87314-4. 16-2-1
369Q87323-1. 7-8
393-02113-0 1-11-2
393-03200-2 3-1-2
393-03254-0 3-4-1
393-62416-1 8-18
393-62417-1 8-19
393-62437-1 8-26

393-64221-0 7-21
393-67104-0 9-50
393-67192-0 3-37
393-70020-6 11-1
393B64512-1 7-59-1
393Q62392-1. 8-2
393Q67100-3. 9-2
394-67501-0 10-4
394-70013-0 12-24
394-70311-0 9-46
394-70315-0 12-21
394-70325-0 12-25
394-70327-0 12-28
398-06830-0 14-32
399-06023-1 15-5
399-76101-0 15-3
399B05180-0 15-20
3A1-83722-0 13-2
3A3-83314-2 14-26
3A3-84307-0 14-18
3A3-84364-2 14-27
3A3-84365-1 14-23
3A3-84368-0 14-44
3A3-84374-0 14-4
3A3-84375-0 14-3
3A3-84376-0 14-31
3A3-84381-0 14-25
3A3-84383-0 14-7
3A3-84391-0 14-45
3A3-84401-0 14-36
3A3-84403-0 14-37
3A3-84404-0 14-41
3A3-84406-0 14-47
3A3-84407-0 14-38
3A3-84421-0 14-8
3A3-84422-0 14-9
3A3-84423-0 14-16
3A3-84424-0 14-20
3A3-84425-0 14-22
3A3-84426-0 14-21
3A3-84429-0 14-28
3A3-84431-0 14-10
3A3-84432-0 14-2
3A3-84435-0 14-46
3A3-84442-0 14-12
3A3-84451-0 14-40
3A3-84452-0 14-43
3ABQ62102-0. 8-38
3AS-05090-1 4-1
3AS-62431-0 8-24
3AS-62433-0 8-25
3AS-64230-0 7-61
3B2-03266-0 3-18-1
3B2-05912-0 15-23
3B2-63034-0 9-23
3B2-63035-1 9-22
3B2-63041-0 9-26
3B2-63063-0 9-20
3B2-63104-1 9-15
3B2-67503-0 10-5
3B2-70050-1 12-13
3B2-70155-0 12-14
3B2-70167-1 12-12
3B2-70260-1 9-40
3B2Q63011-1. 9-14
3B7-70200-4 12-1
3B7-70280-1 12-8
3B7Q84312-0. 14-14
3B7Q84343-0. 14-42
3B7Q84360-1. 14-1
3B7Q84366-0. 14-35
3B7Q84441-0. 14-34
3C7-06921-0 5-12
3C7-70113-0 12-17
3C7-70199-0 12-16
3C7-70211-1 12-4
3C7-70217-0 12-5
3C7-70220-1 12-2
3C7-70224-1 12-3
3C7-72180-3 10-1
3C8-62104-2 8-39
3C8-62107-0 8-41
3C8-66308-0 9-10
3C8-66308-0 11-7
3C8-66308-0 13-21
3C8-67146-0 9-4
3D5-06870-0 9-36
3D6-70021-0 11-2
3E0-70270-0 12-15
3F9-06050-0 5-9
3F9-70057-0 11-9-2
3F9-84398-0 12-22
3F9-84398-0 12-27
3F9-87801-2 10-6-1
3F9B87090-4 16-3-1
3GF-70250-0 12-10
3GF-70281-0 12-9
3GTQ62105-1. 8-35
3GTQ62108-1. 8-36
3H6-06128-0 15-4
3H6-06906-0 5-8
3H6-06907-0 5-7
3H6-60218-0 7-5
3H6-64333-1 6-6
3H6-76160-0 15-11
3H6-87326-0 7-60
3M2-06921-0 5-10
3M2-06926-0 5-11
3N5-84331-0 14-50
3N5-84333-0 14-51
3N5-84336-0 14-48
3N5-84465-0 14-49
3R0-72181-0 4-32
3R1-05003-2 4-8
3R1-05004-0 4-5
3R1-05006-2 4-11
3R1-05007-0 4-9
3R1-05010-0 4-3
3R1-05012-0 4-7
3R1-05013-0 4-12
3R1-05019-0 4-13
3R1-05104-0 4-6
3R1-05105-0 4-2
3R1-05116-0 4-15
3R1-05125-0 4-4
3R1-05131-1 4-14
3R1-05138-1 4-10
3R1-05215-0 4-23
3R1-05216-0 4-18
3R1-05223-0 4-22
3R1-05252-0 4-16
3R1-05253-0 4-19
3R1-05255-0 4-17
3R1-05258-0 4-24
3R1-05901-0 4-26
3R1B64514-1 7-59-2
3R1B64516-1 7-59-3
3X3Q67640-0. . . . . .10-3a
910103-0525 14-30
910103-0616 7-6
910103-0830 13-10
910103-5616 6-14
910103-5625 7-41
910103-6612 9-9
910103-6612 13-19
910103-6616 13-7
910103-6620 1-17
910121-6612 4-30
910121-6612 9-35
910121-7622 5-13
9101E3-5612 8-28
9101E3-5614 8-32
9101E3-5616 7-52
9101E3-5616 9-48
9101E3-5630 6-25
9101E3-5635 8-16
9101F4-0616 11-11
9101F4-0623 4-28
9106E3-0808 6-10
910903-6416 6-22
9152E3-0825 6-32
9152E3-0825 16-2-7
916124-0630 1-4
916124-0653 1-3
9161E3-0625 6-30
9161E3-0625 16-2-3
9161E3-0645 7-35
9161E3-0645 7-53
9161E3-0645 16-6-6
9161E3-0835 7-55
9161F1-0685 3-35
9161F4-0835 1-8
920803-0518 9-19
921503-0406 14-15
921503-0414 9-41
921503-0510 14-39
921503-0525 15-14
921503-5418 3-41
921503-5430 4-25
921503-6410 9-56
921503-7616 4-21
921521-0408 3-10
921521-0408 16-4-10
921521-6408 5-5
921521-6408 15-8
921521-6410 1-12
921521-6412 5-15
921521-6520 5-3
921521-6520 15-6
921553-0510 6-8
9215E3-0612 9-21
921603-0512 14-19
921603-0518 14-17
9216E3-0612 8-10
921703-0406 8-12
921803-0410 9-47
921803-0620 7-25
921821-0306 3-22
922503-6412 3-13
922503-6412 16-4-5
922553-6423 3-25
922553-6423 16-4-14
930103-0400 9-42
930103-0500 14-29
930103-0500 15-17
930103-0600 9-25
930103-0600 9-33
930103-0600 11-6
930103-0600 13-8
930103-0600 14-6
930103-0800 6-34
930103-0800 13-13
930103-0800 16-2-6
930121-0300 3-23
930403-0800 8-6
940103-0500 15-15
940103-0600 4-20
940103-0600 7-36
940103-0600 9-24
940103-0600 11-12
940103-0600 16-6-7
940103-0800 13-12
940103-0800 14-11
940121-1200 5-18
940124-0800 1-9
9401E3-0500 6-7
9401E3-0600 6-20
9401E3-0600 6-31
9401E3-0600 7-54
9401E3-0600 8-23
9401E3-0600 16-2-4
9401E3-0800 6-33
9401E3-0800 7-56
9401E3-0800 8-7
9401E3-0800 16-2-5
941303-0500 15-16
941303-0600 4-29
941303-0600 9-29
941303-0600 11-5
941303-0800 13-11
941303-1000 9-39
941322-0600 1-5
941322-0600 3-36
941403-1400 9-7
941403-1400 13-17
945303-0600 14-24
951403-0212 13-25
951407-0310 7-47
951503-0318 5-19
951503-0318 7-64
951503-1210 6-24
9601-0-6002 7-12
9601-0-6004 7-7
9601-0-6300 7-44
9603-3-6204 2-10
9701-1-1014 1-18
98AB-50-035 12-23
98AB-50-110 9-44
98AB-50-150 12-18
98AB-50-200 9-43
98AB-701600. 12-7
98AB-70-700 12-6

Copyright © 2013 Tohatsu Corporation. All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means without the express written permission of Tohatsu Corporation.

TOHATSU

TOHATSU CORPORATION
Address : 5-4,3-chome,Azusawa,Itabashi-ku,
TOKYO,174-0051 JAPAN
Phone : TOKYO (03)3966-3117
FAX : TOKYO (03)3966-0090
Website : www.tohatsu.co.jp

2013 PARTS CATALOG

M 4C
5B

Serial Number 000001AC~

002-21005-A
1301