
2013 PARTS CATALOG

TOHATSU

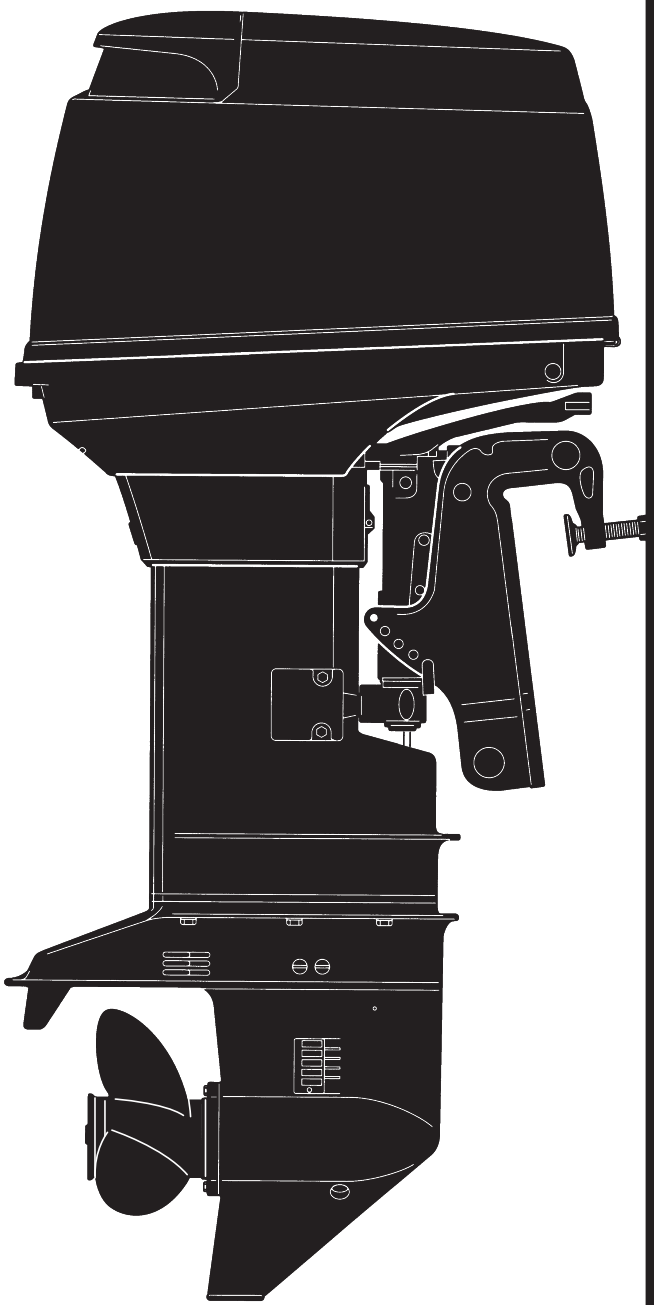

MX 50D2
MWX 50D2

Serial Number 000001AC~

OB NO.002-21038X9
1301


HOW TO USE THIS PARTS CATALOG

1. This Parts Catalog provides information available as of the end of January, 2013.

2. Please keep the Parts Catalog updated each time when receiving the Service Bulletin describing the addition, abolition and/or change of parts.

3. Actual shapes of parts may be different from the illustrations shown in this Parts Catalog because they are described only as a guide for searching parts.

4. One illustration is given more than one article number. Please confirm the sub-number, applicable model and remarks before ordering parts.

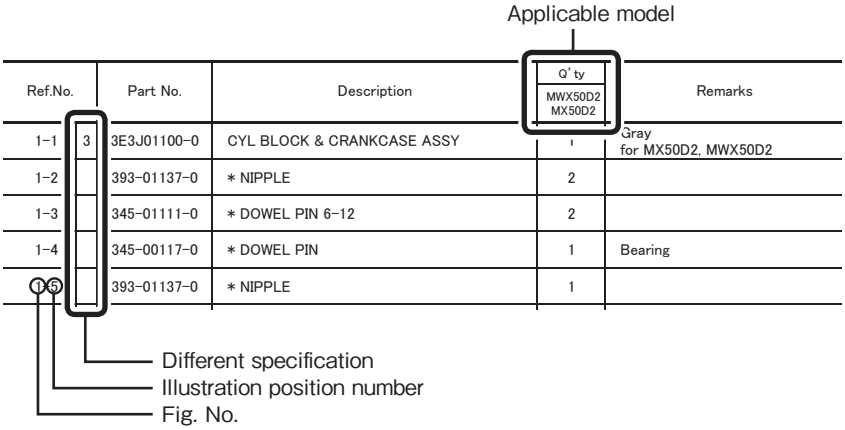

5. Given mark in (*) to part number shows assembly or kit part.

6. Marks in this Parts Catalog show.

STD	: Standard	OPT	: Optional Parts
O/S	: Over size	ASSY	: Assembly
DO	: Domestic Model	EX	: Export Model
A	: As required	EU	: European Union

7. Attention to order
   Please order painted parts in accordance with following.
   The parts that fourth figure of the parts number is (B), (Q) have painted.
   Present coloring of power head is black (B) and lower unit is aqua marine blue (Q).
   [Example]

Engine Short Block Kit	Lower Unit Assy (L)
3C8B87090-E	3T5Q87302-3
B: Black	Q: Aquamarine Blue

8. About dimensional identification of bolts, nuts and washers.

BOLT 916124 - 0845
- Length below neck
- Diameter

NUTS & WASHERS 940121 - 0800
- Diameter

9. Hose, that is a standard part, is replaced with long hose.

HOSE 98AL - 40 - 160

Length

Diameter

HOSE/PIPE

Fig No	Part No.	Description	Bulk part No.	Bulk part	
				Inner Diameter (mm)	Length(m)
1-42	98AL-40-030	HOSE	98AL-401000	4	1
1-43	98AL-40-120	HOSE	98AL-401000	4	1
1-44	98AL-40-180	HOSE	98AL-401000	4	1
1-45	98AL-40-040	HOSE	98AL-401000	4	1
1-46	98AL-40-270	HOSE	98AL-401000	4	1
3-6	98AB-50-065	HOSE	98AB-501000	5	1
3-7	98AB-50-155	HOSE	98AB-501000	5	1
4-40	98AB-50-080	HOSE	98AB-501000	5	1
5-11	98AB-50-350	HOSE	98AB-501000	5	1
5-12	98AB-50-530	HOSE	98AB-501000	5	1
23-28	98AB-50-260	HOSE	98AB-501000	5	1
25-6	98AB-70-700	HOSE	98AB-701000	7	1
25-7	98AB-701600	HOSE	98AB-701000 x2	7	1

CONTENTS

Fig. 1 CYLINDER • CRANK CASE ····· 1
Fig. 2 PISTON • CRANK SHAFT ····· 5
Fig. 3 INTAKE MANIFOLD • REED VALVE ····· 9
Fig. 4 INTAKE SILENCER • CARBURETOR ····· 11
Fig. 5 FUEL LINE ····· 15
Fig. 6 THROTTLE ····· 17
Fig. 7 RECOIL STARTER ····· 21
Fig. 8 MAGNETO ····· 25
Fig. 9 ELECTRIC PARTS (STARTER MOTOR) ····· 27
Fig. 10 ELECTRIC PARTS (C.D. UNIT) ····· 29
Fig. 11 ELECTRIC PARTS (DIAGRAM) ····· 31
Fig. 13 DRIVE SHAFT HOUSING ····· 33
Fig. 14 GEAR CASE (DRIVE SHAFT)M40/50D2 • MX50D2 ····· 37
Fig. 15 GEAR CASE (PROPELLER SHAFT) M40/50D2 • MX50D2 ····· 43
Fig. 16 GEAR CASE (DRIVE SHAFT) MW50D2/MWX50D2 ····· 47
Fig. 17 GEAR CASE (PROPELLER SHAFT) MW50D2/MWX50D2 ····· 51
Fig. 18 BRACKET (MANUAL TILT) ····· 53
Fig. 19 MANUAL TILT ····· 59
Fig. 22 TILLER HANDLE (F TYPE) ····· 61
Fig. 23 BOTTOM COWL • SHIFT ····· 65
Fig. 24 TOP COWL ····· 69
Fig. 25 FUEL TANK ····· 71
Fig. 28 ACCESSORIES ····· 73
Fig. 29 OPTIONAL PARTS (1) ····· 75
Fig. 32 OPTIONAL PARTS (4) ····· 77
Fig. 33 ASSEMBLY • KIT PARTS ····· 79
INDEX ····· 89
INDEX (Parts Number) ····· 93

Fig. 1 CYLINDER • CRANK CASE

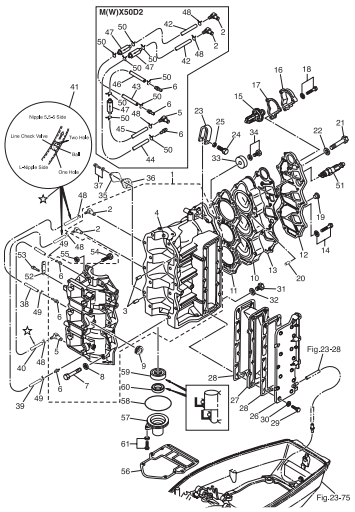


Fig. 2 PISTON • CRANK SHAFT

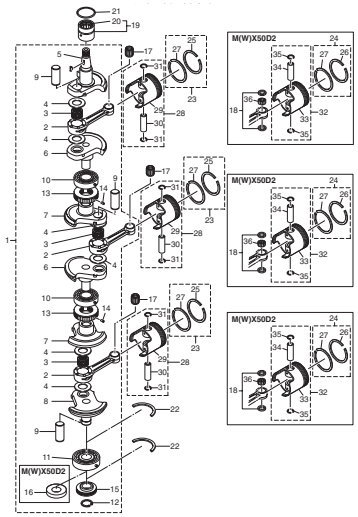


Fig. 3 INTAKE MANIFOLD • REED VALVE

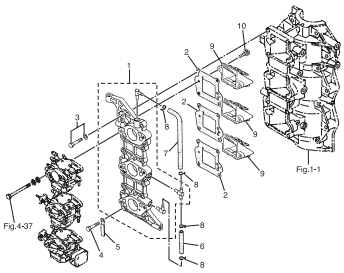


Fig. 4 INTAKE SILENCER • CARBURETOR

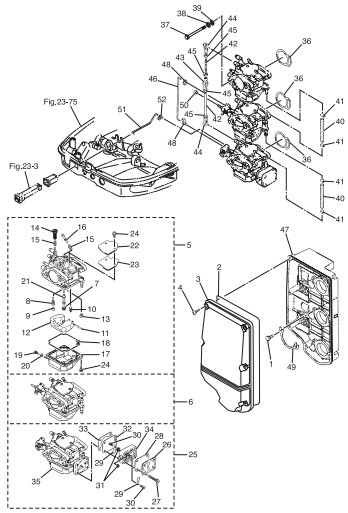


Fig. 5 FUEL LINE

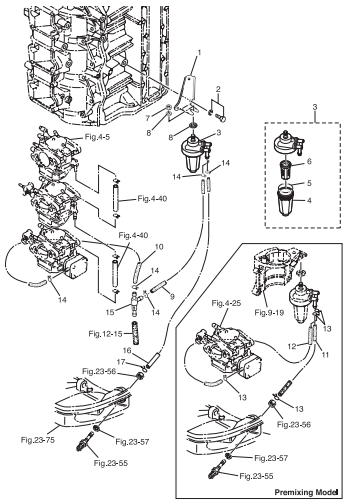


Fig. 6 THROTTLE

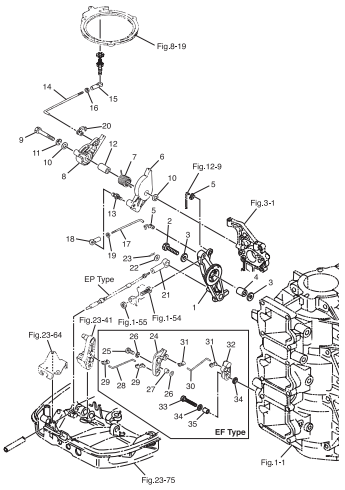


Fig. 7 RECOIL STARTER

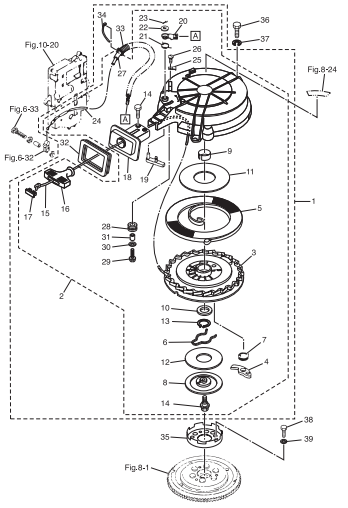


Fig. 8 MAGNETO

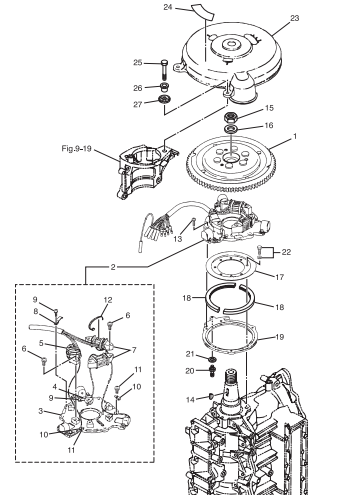


Fig. 9 ELECTRIC PARTS (STARTER MOTOR)

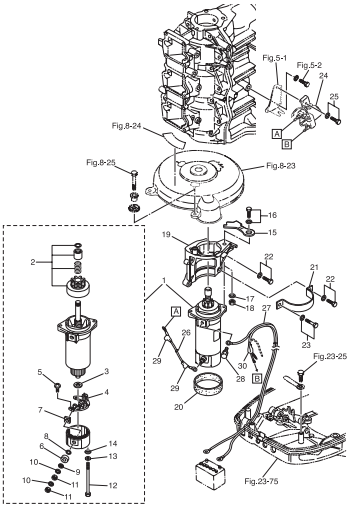


Fig. 10 ELECTRIC PARTS (C.D. UNIT)

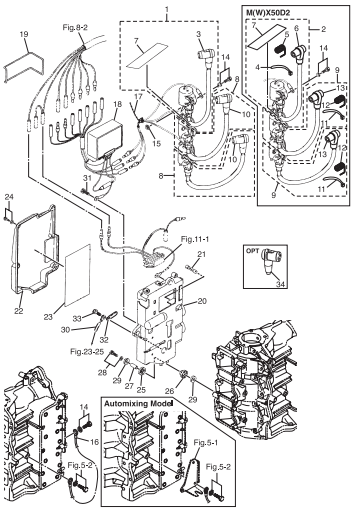


Fig. 11 ELECTRIC PARTS (DIAGRAM)

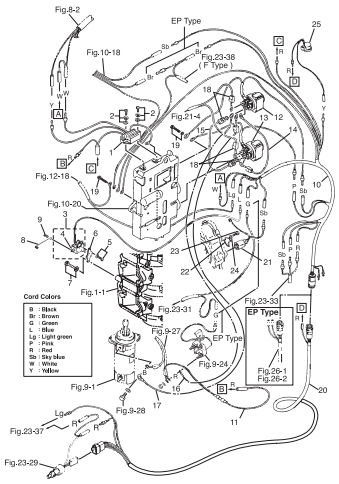


Fig. 13 DRIVE SHAFT HOUSING

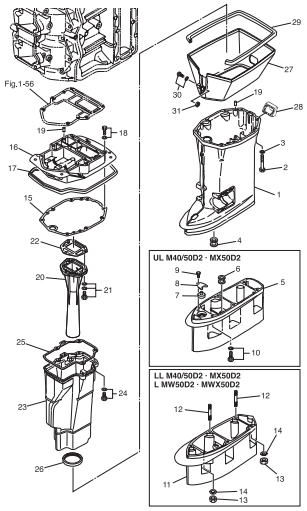


Fig. 14 GEAR CASE (DRIVE SHAFT) M40/50D2 · MX50D2

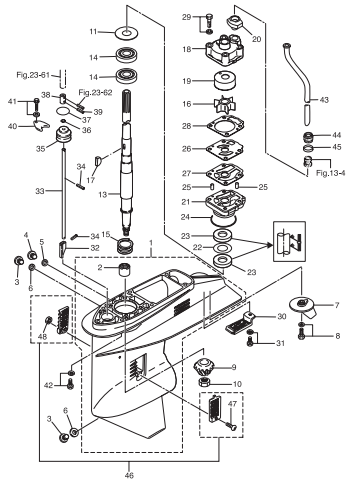


Fig. 15 GEAR CASE (PROPELLER SHAFT) M40/50D2 · MX50D2

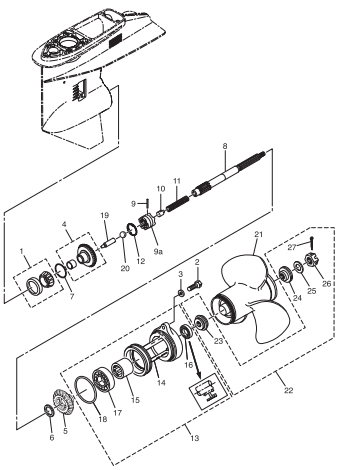


Fig. 16 GEAR CASE (DRIVE SHAFT) MW50D2/MWX50D2

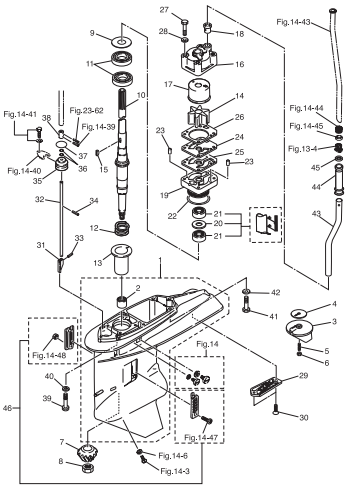


Fig. 17 GEAR CASE (PROPELLER SHAFT) MW50D2/MWX50D2

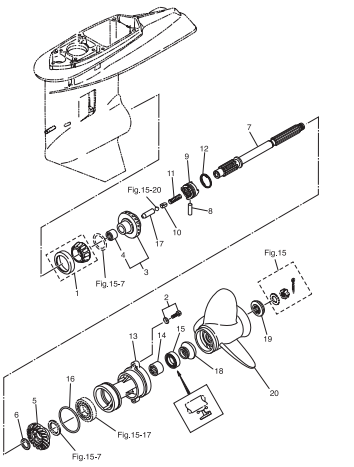


Fig. 18 BRACKET (MANUAL TILT)

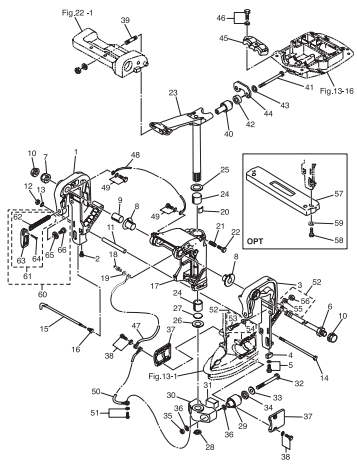


Fig. 19 MANUAL TILT

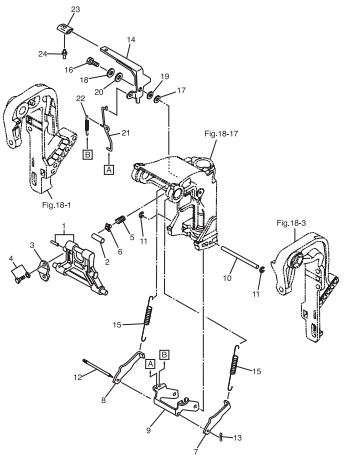


Fig. 22 TILLER HANDLE (F TYPE)

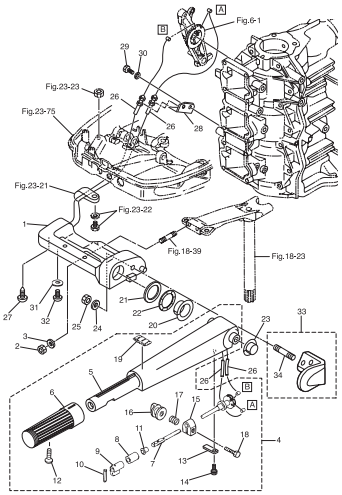


Fig. 23 BOTTOM COWL • SHIFT

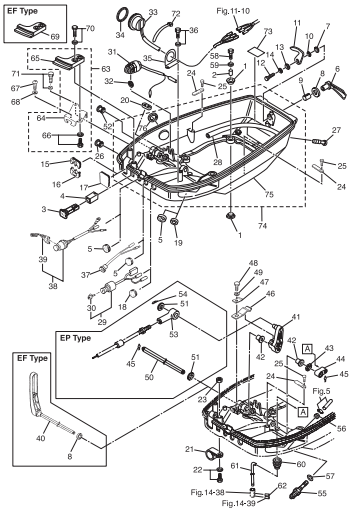


Fig. 24 TOP COWL

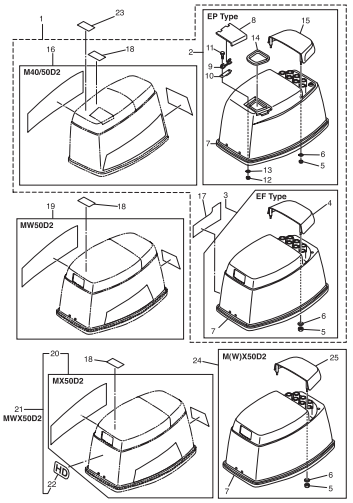


Fig. 25 FUEL TANK

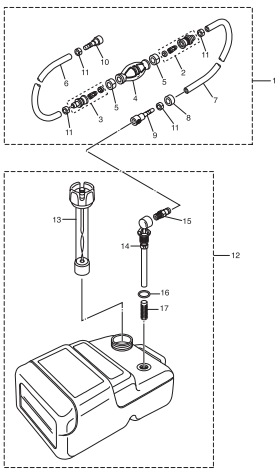


Fig. 28 ACCESSORIES

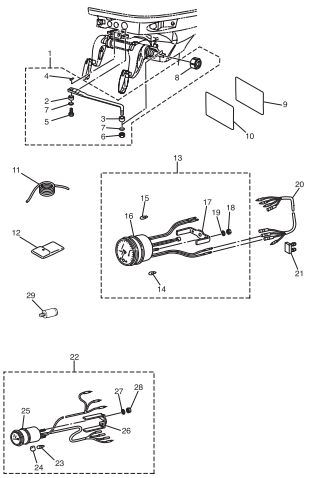


Fig. 29 OPTIONAL PARTS (1)

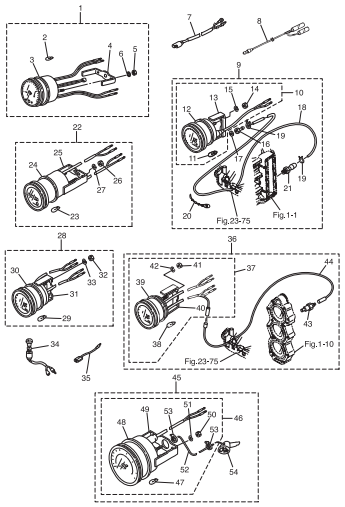


Fig. 32 OPTIONAL PARTS (4)

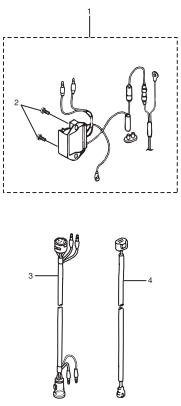


Fig. 33 ASSEMBLY • KIT PARTS



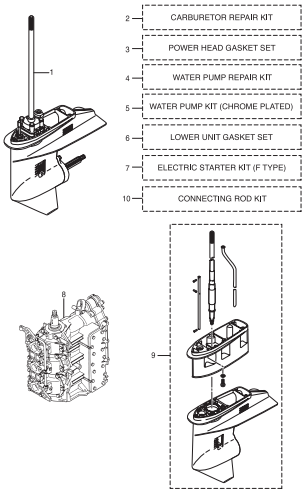


Fig. 1 CYLINDER • CRANK CASE

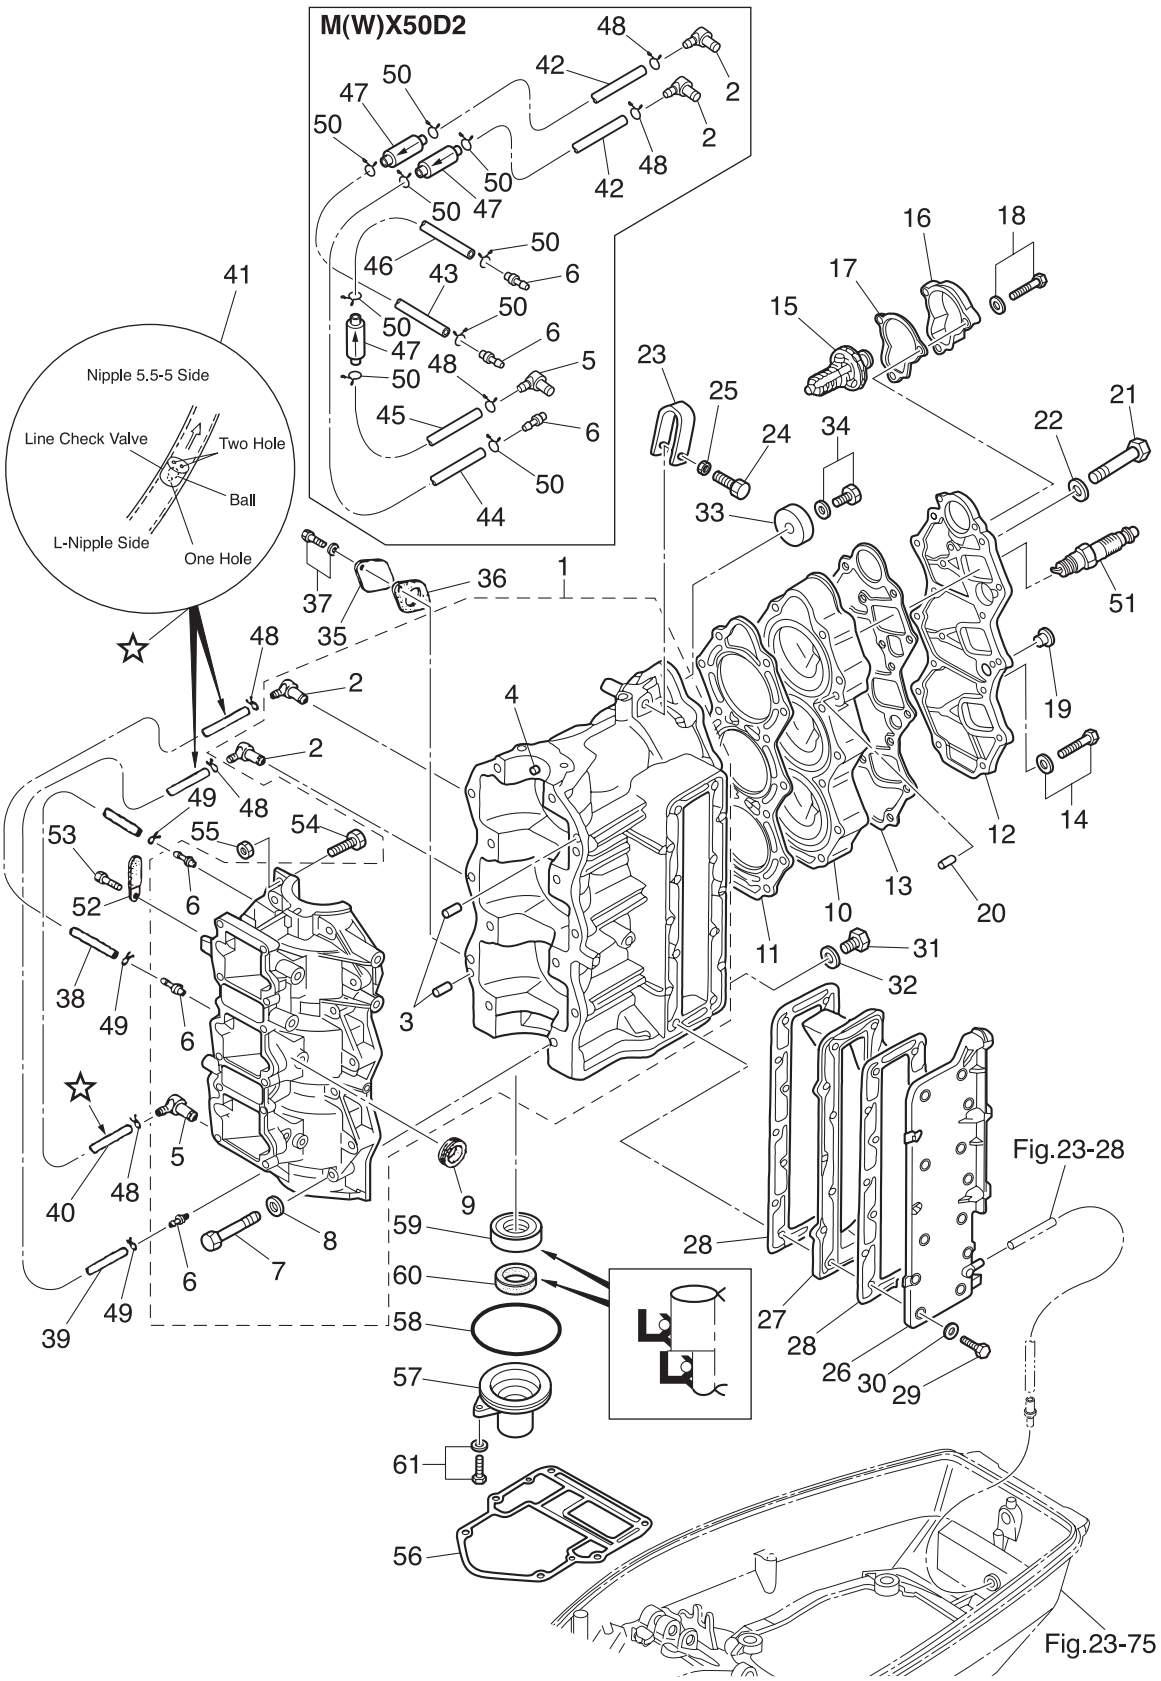


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
1-1	3	3E3J01100-0	CYL BLOCK & CRANKCASE ASSY	1	Gray for MX50D2, MWX50D2
1-2		393-01137-0	* NIPPLE	2	
1-3		345-01111-0	* DOWEL PIN 6-12	2	
1-4		345-00117-0	* DOWEL PIN	1	Bearing
1-5		393-01137-0	* NIPPLE	1	
1-6		393-01131-0	* NIPPLE 5.5-5	3	
1-7		916124-0845	* BOLT	14	
1-8		940121-0800	* WASHER	14	
1-10	2	3LCJ01091-0	CYLINDER HEAD	1	Gray for MX50D2, MWX50D2
1-11		3C8-01005-5	CYLINDER HEAD GASKET	1	
1-12	2	3C8J01021-0	CYLINDER HEAD COVER	1	Gray for MX50D2, MWX50D2
1-13		3C8-01024-1	CYLINDER HEAD COVER GASKET	1	
1-14		3C8-01113-0	BOLT	4	
1-15	1	3S7-01030-0	THERMOSTAT	1	for MW50D2, MWX50D2 Mark S60 PRV
1-15	2	353-01030-0	THERMOSTAT	1	for M40/50D2, MX50D2 PRV 60°
1-16	2	3B7J01031-0	THERMOSTAT CAP	1	Gray for MWX50D2
1-16	4	353J01031-0	THERMOSTAT CAP	1	Gray for MX50D2
1-17		353-01032-0	THERMOSTAT CAP GASKET	1	
1-18		9101E3-5625	BOLT	3	
1-19		3B7-01046-0	PLUG	1	
1-20		345-01111-0	DOWEL PIN 6-12	2	
1-21		3C8-01012-0	CYLINDER HEAD BOLT	14	
1-22		3C8-01015-0	WASHER 8.5-19.5-3.2	14	
1-23		3C8-01513-1	HANGER	1	
1-24		9101F4-0835	BOLT	1	
1-25		940121-0800	WASHER	1	
1-26	2	3C8J02301-1	EXHAUST COVER (OUTER)	1	Gray for MX50D2, MWX50D2
1-27		3C8-02302-0	EXHAUST COVER (INNER)	1	
1-28		3C8-02305-2	EXHAUST COVER GASKET	2	

Fig. 1 CYLINDER • CRANK CASE

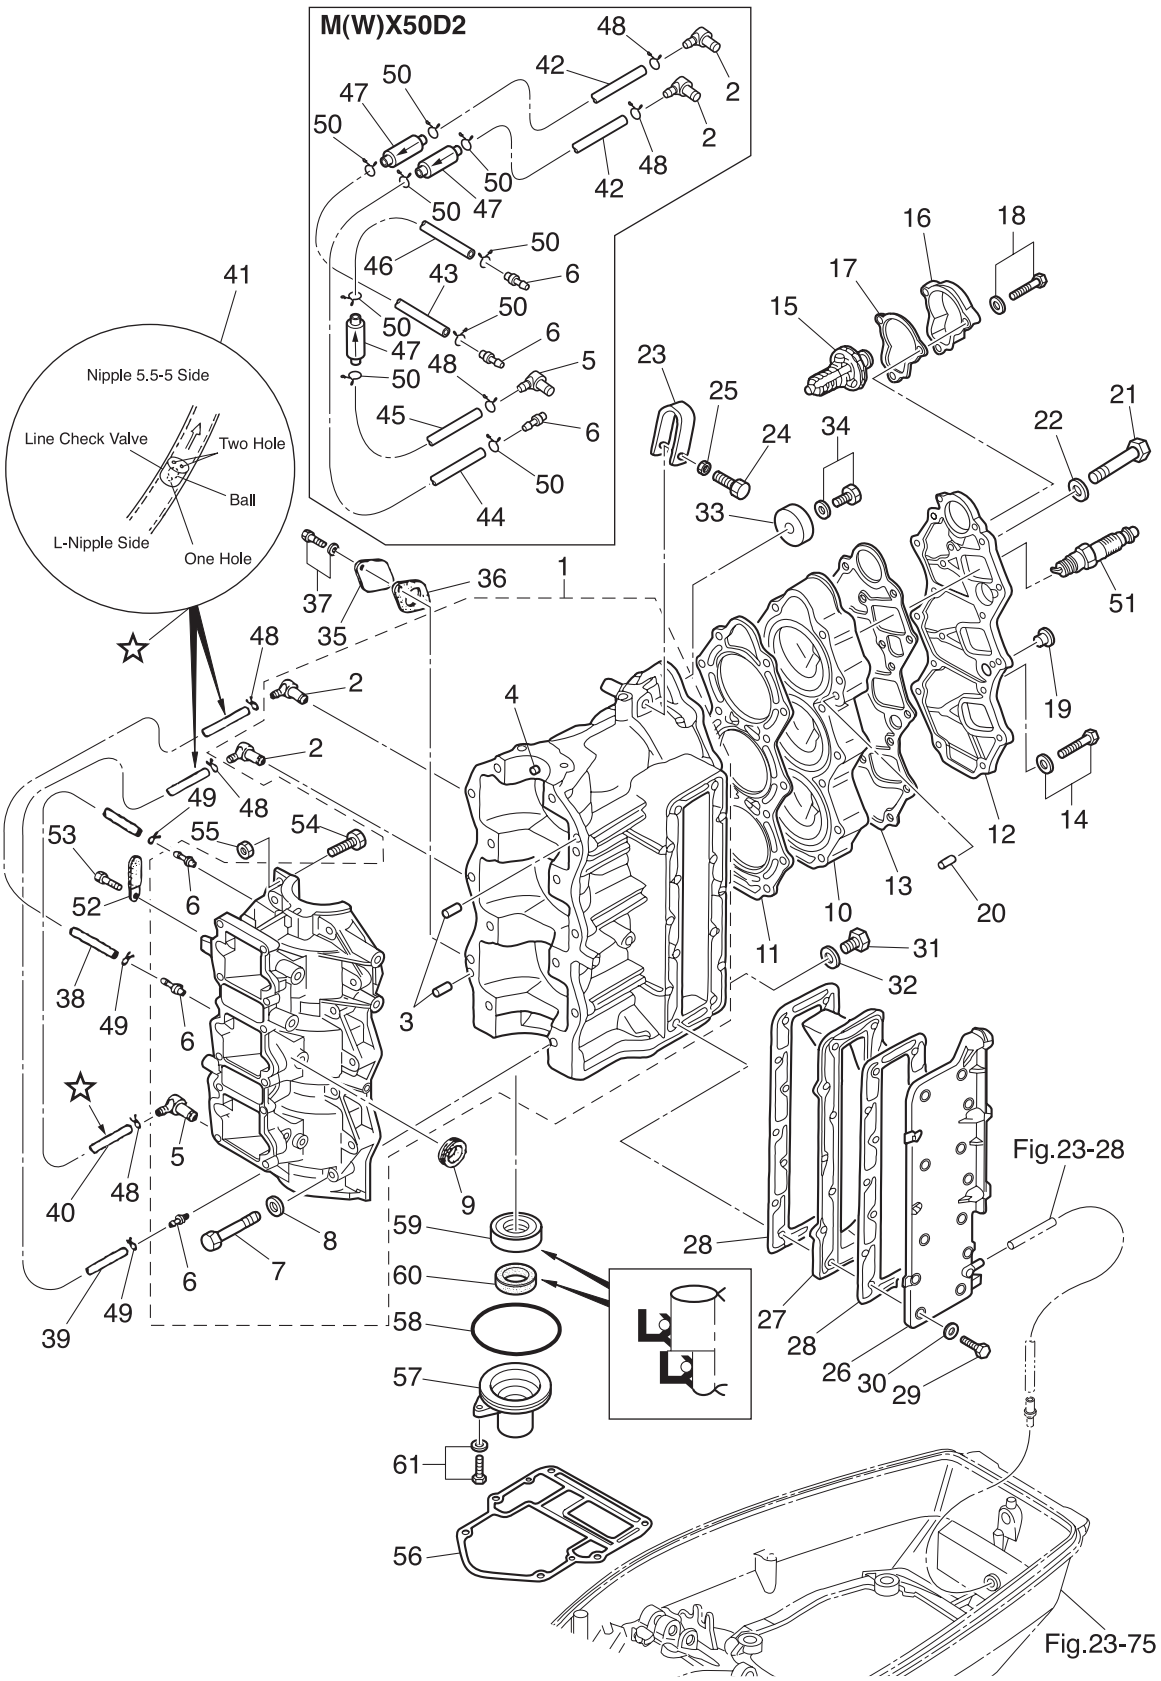


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
1-29		9161F9-0630	BOLT	14	
1-30		9401E3-0600	WASHER	14	
1-31		9106E3-0808	BOLT	1	
1-32		332-60006-0	GASKET 8.1-15-1	1	
1-33		338-60218-2	ANODE	1	
1-34		910103-5620	BOLT	1	
1-35		3C8-09081-1	COVER	1	for Premixing Model
1-36		3C8-09082-2	GASKET	1	for Premixing Model
1-37		910103-6616	BOLT	2	for Premixing Model
1-42		98AL-40-030	HOSE	2	for MX50D2, MWX50D2 98AL-401000 #1/2Cyl-C/Valve
1-43		98AL-40-120	HOSE	1	for MX50D2, MWX50D2 98AL-401000 C/Valve-#2C/Case
1-44		98AL-40-180	HOSE	1	for MX50D2, MWX50D2 98AL-401000 C/Valve-#3C/Case
1-45		98AL-40-040	HOSE	1	for MX50D2, MWX50D2 98AL-401000 #3C/Case-C/Valve
1-46		98AL-40-270	HOSE	1	for MX50D2, MWX50D2 98AL-401000 C/Valve-#1C/Case
1-47		3LC-01160-0	CHECK VALVE	3	for MX50D2, MWX50D2
1-48		3T5-01133-0	CLIP ϕ 8	3	L-Nipple Side
1-50		369-70098-2	CLIP ϕ 7	9	for MX50D2, MWX50D2 Nipple 5.5-5, Chack Valve
1-51	1	9701-1-1009	SPARK PLUG (B8HS10)	3	for MX50D2, MWX50D2
1-52		309-06972-0	CLAMP 6.5-47.5P	1	
1-53		910103-0610	BOLT	1	
1-54		910103-0630	BOLT	1	
1-55		930103-0600	NUT	1	
1-56		3C8-01303-4	ENGINE BASEMENT GASKET	1	
1-57		3C8-01291-0	CRANKCASE HEAD	1	
1-58		346-01216-0	O-RING 1.7-59	1	
1-59		334-00122-0	OIL SEAL 25-40-8	1	
1-60		3C8-01215-0	OIL SEAL 16-28-7	1	
1-61		910103-5620	BOLT	2	

Fig. 2 PISTON・CRANK SHAFT

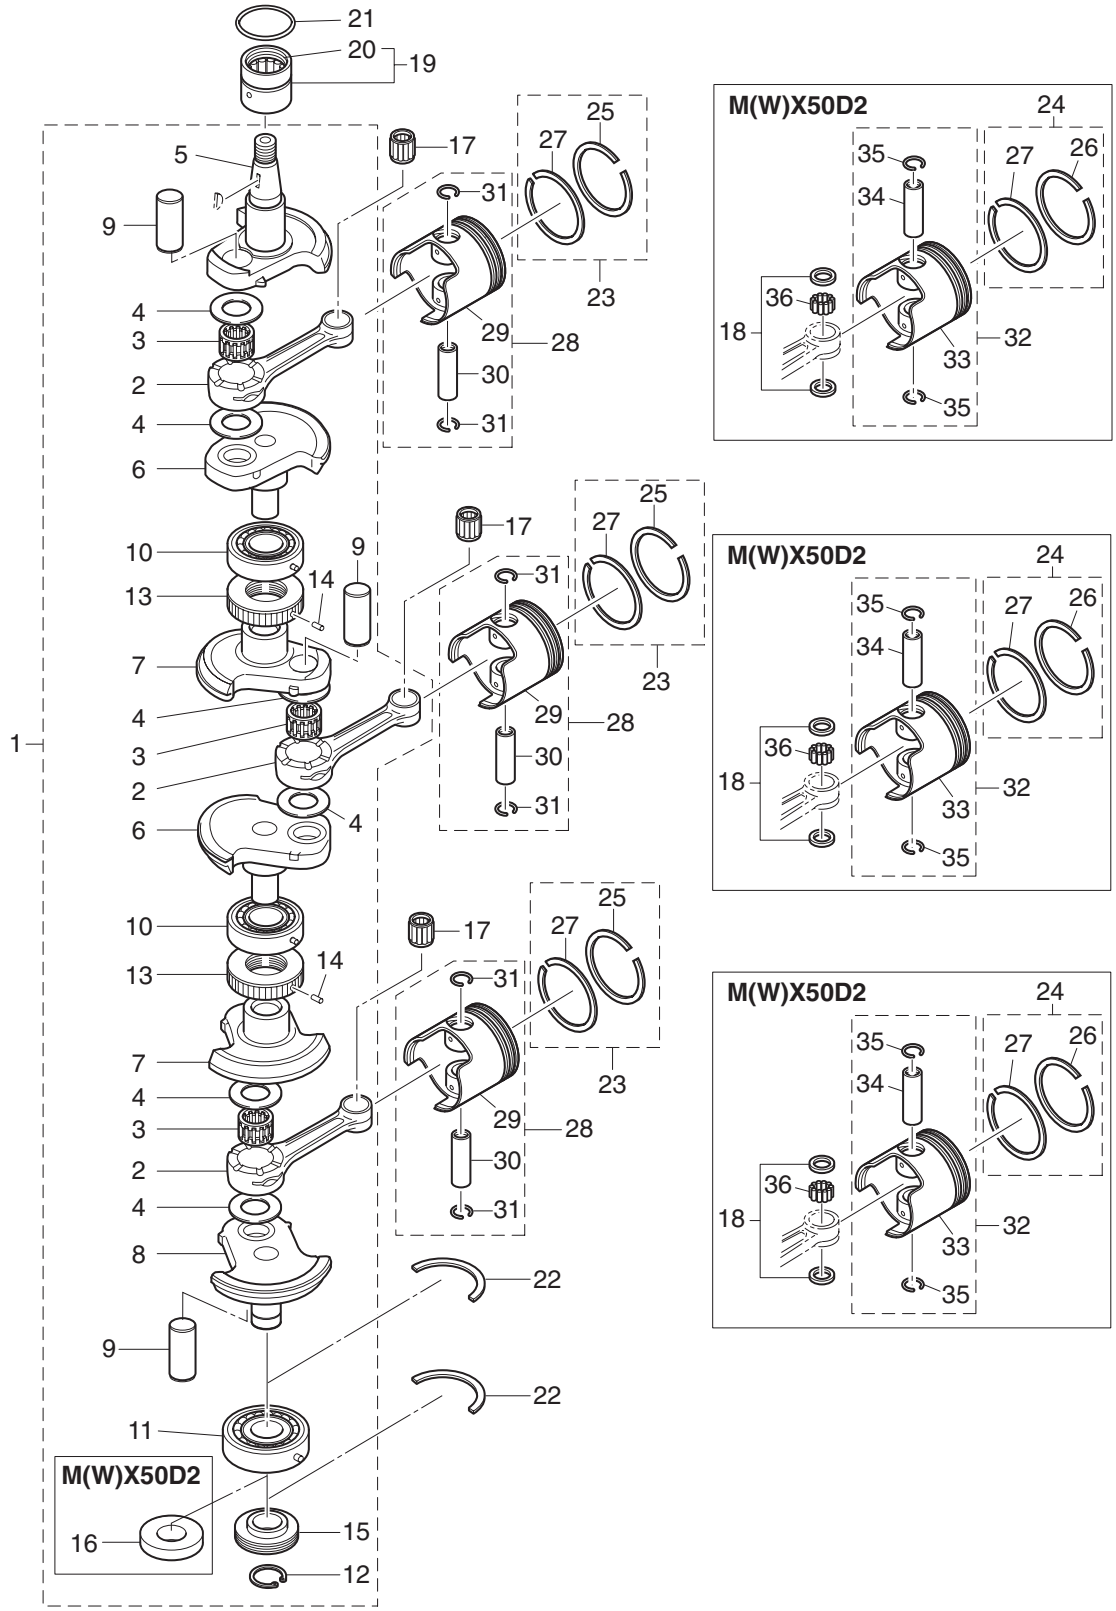


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
2-1	2	3LC-00030-0	CRANKSHAFT ASSY	1	for MX50D2, MWX50D2
2-2	2	3LC-00041-0	* CONNECTING ROD	3	for MX50D2, MWX50D2
2-3		345-00043-0	* ROLLER BEARING 25-32-20	3	
2-4		345-00045-0	* BIG END BEARING WASHER	6	
2-5		3C8-00031-1	* CRANKSHAFT A	1	
2-6		3C8-00032-0	* CRANKSHAFT B	2	
2-7		3C8-00033-0	* CRANKSHAFT C	2	
2-8		3C8-00034-0	* CRANKSHAFT D	1	
2-9		348-00061-1	* CRANK PIN	3	
2-10		3C8-00114-0	* MAIN BEARING 6305R	2	
2-11		3J2-00114-0	* MAIN BEARING 6305	1	
2-12		945107-2500	* C-RING d=25	1	
2-13		3C8-00051-2	* LABYRINTH PACKING	2	
2-14		951407-0308	* SPRING PIN 3-8	2	
2-16		346-00116-0	* SPACER 25.2-34-1.6	1	for MX50D2, MWX50D2
2-18		3LC-00046-0	SMALL END BEARING WASHER 17.6-22.4-4.45	6	for MX50D2, MWX50D2
2-19		3C8-00113-0	MAIN BEARING	1	
2-20		3C8-00121-0	* OIL SEAL 32-42-6	1	
2-21		3C8-00108-0	O-RING 2.4-39.7	1	
2-22		346-00115-0	THRUST PLATE	2	
2-24	1	3LC-87123-1	PISTON RING SET	3	for MX50D2, MWX50D2 STD
2-24	2	3LC-87124-1	PISTON RING SET (0.5 O/S)	3	for MX50D2, MWX50D2 OPT
2-26	1	3LC-00011-0	* PISTON RING	1	for MX50D2, MWX50D2 STD 1st Keystone Ring
2-26	2	3LC-00014-0	* PISTON RING (0.5 O/S)	1	for MX50D2, MWX50D2 OPT 1st Keystone Ring
2-27	1	346-00011-0	* PISTON RING	1	ALL STD 2nd
2-27	2	346-00014-0	* PISTON RING (0.5 O/S)	1	ALL OPT 2nd
2-32	1	3LC-87130-0	PISTON REPAIR KIT	3	for MX50D2, MWX50D2 STD
2-32	2	3LC-87131-0	PISTON REPAIR KIT (0.5 O/S)	3	for MX50D2, MWX50D2 OPT
2-33	1	3LC-00001-0	* PISTON	1	for MX50D2, MWX50D2 STD

Fig. 2 PISTON・CRANK SHAFT

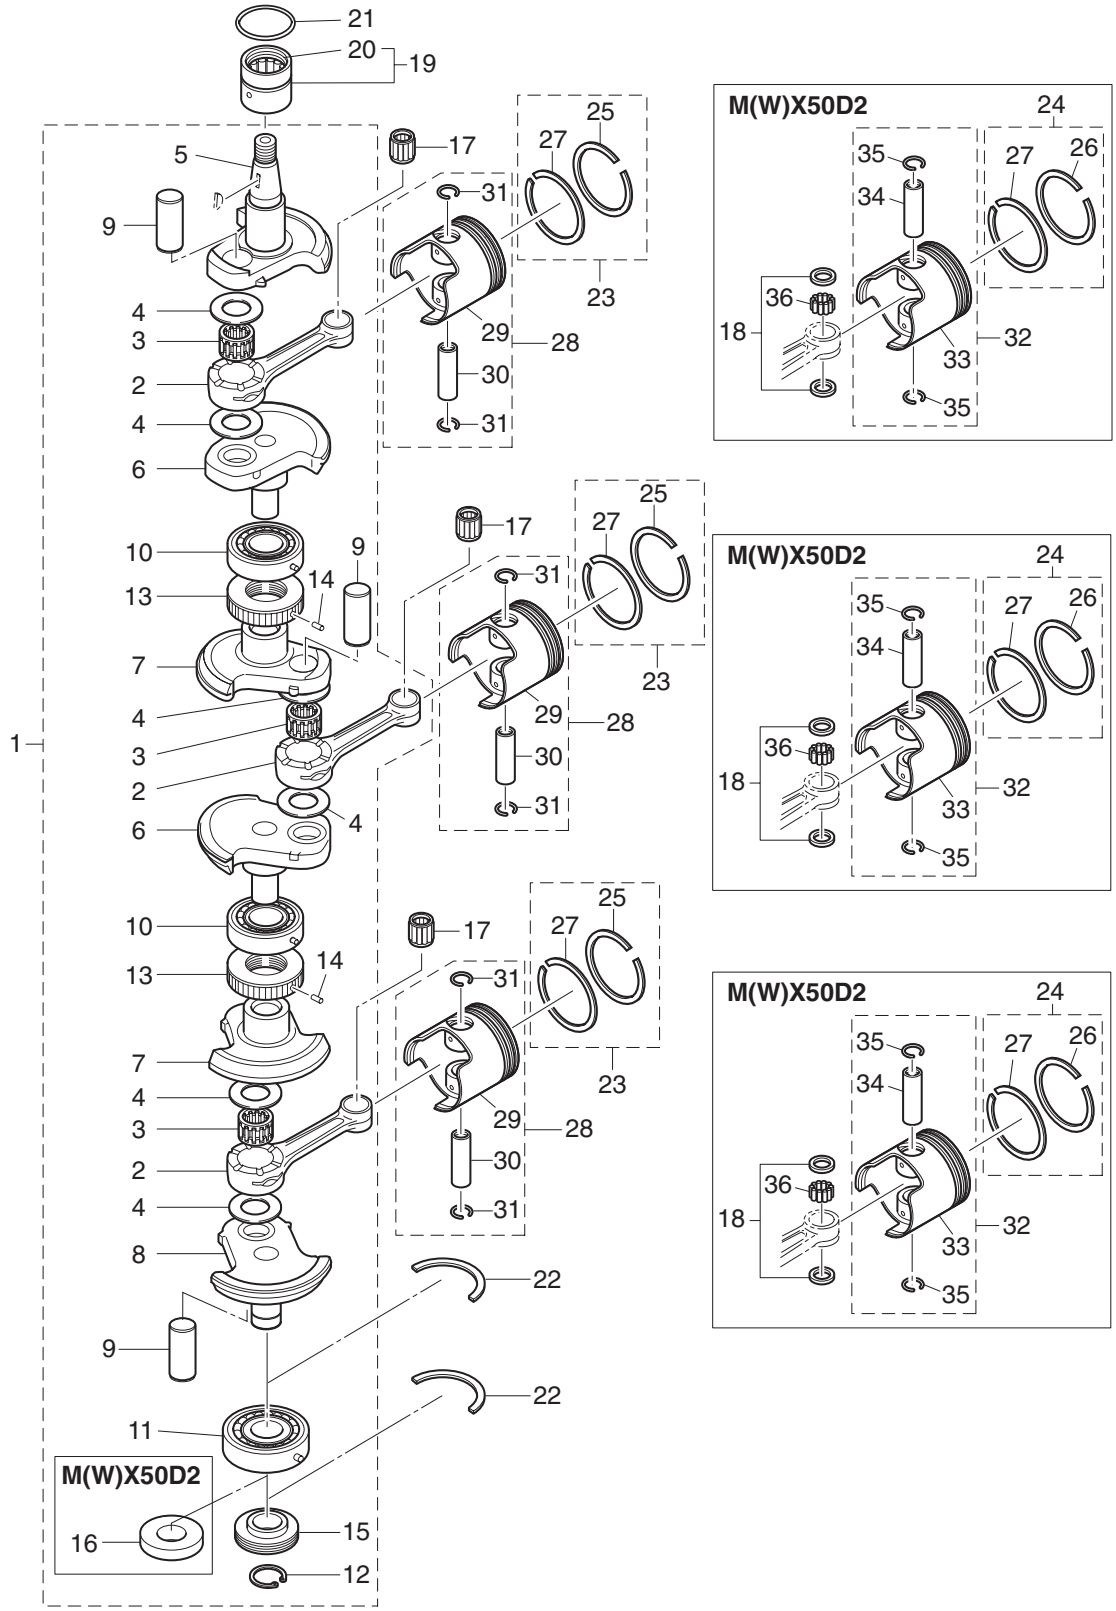


Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
2-33	2	3LC-00004-0	* PISTON (0.5 O/S)	1	for MX50D2, MWX50D2 OPT
2-34		3LC-00021-0	* PISTON PIN	1	
2-35		3LC-00024-0	* PISTON PIN CLIP	2	
2-36		3LC-00090-0	NEEDLE ROLLER SET	3	for MX50D2, MWX50D2 Roller x25

Fig. 3 INTAKE MANIFOLD・REED VALVE

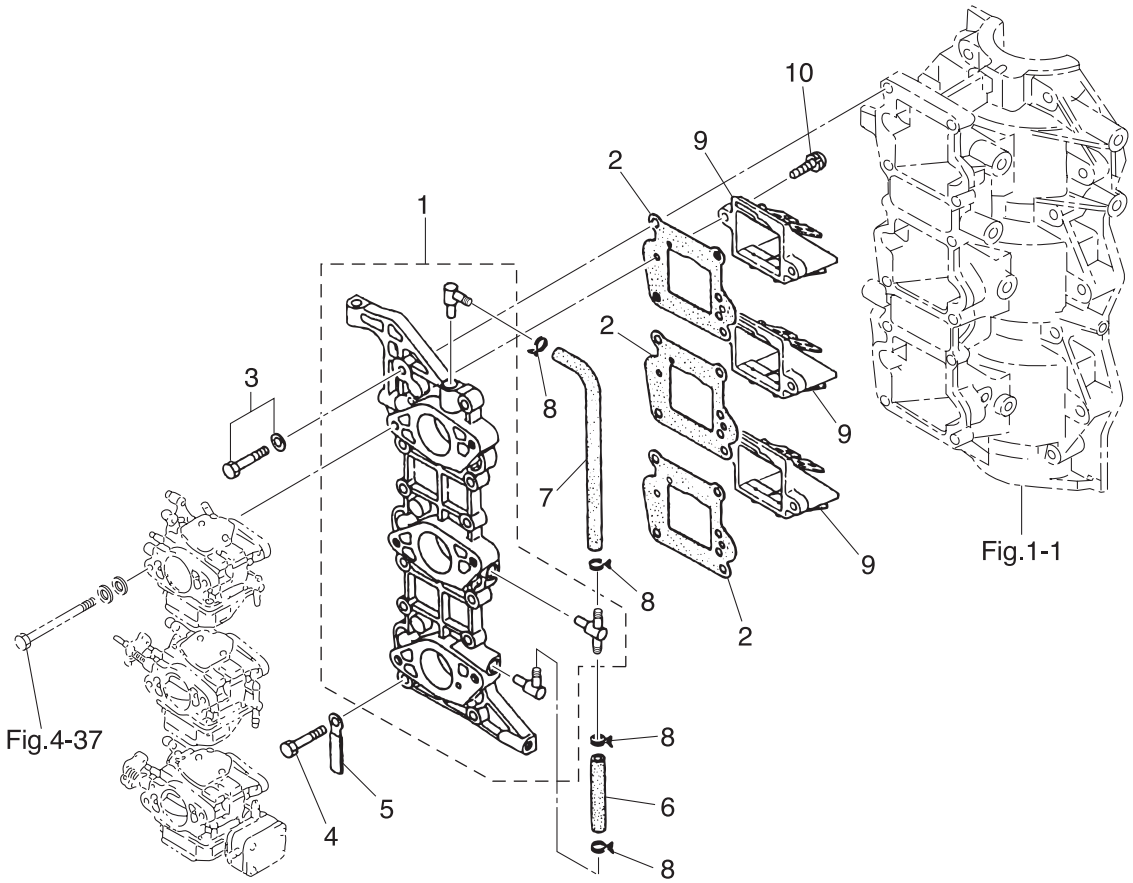


Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
3-1	3	3E3J02020-0	INTAKE MANIFOLD ASSY	1	Gray for MX50D2, MWX50D2
3-2		3C8-02104-2	INTAKE MANIFOLD GASKET	3	
3-3		910103-5625	BOLT	11	
3-4		910103-0625	BOLT	1	
3-5		309-06972-0	CLAMP 6.5-47.5P	1	
3-6		98AB-50-065	HOSE	1	98AB-501000
3-7		98AB-50-155	HOSE	1	98AB-501000
3-8		338-02215-0	CLIP ϕ 10	4	
3-9	2	3T5-02100-1	REED VALVE ASSY	3	for M50D2, MW50D2 MX50D2, MWX50D2
3-10		921521-6516	SCREW	6	

Fig. 4 INTAKE SILENCER・CARBURETOR

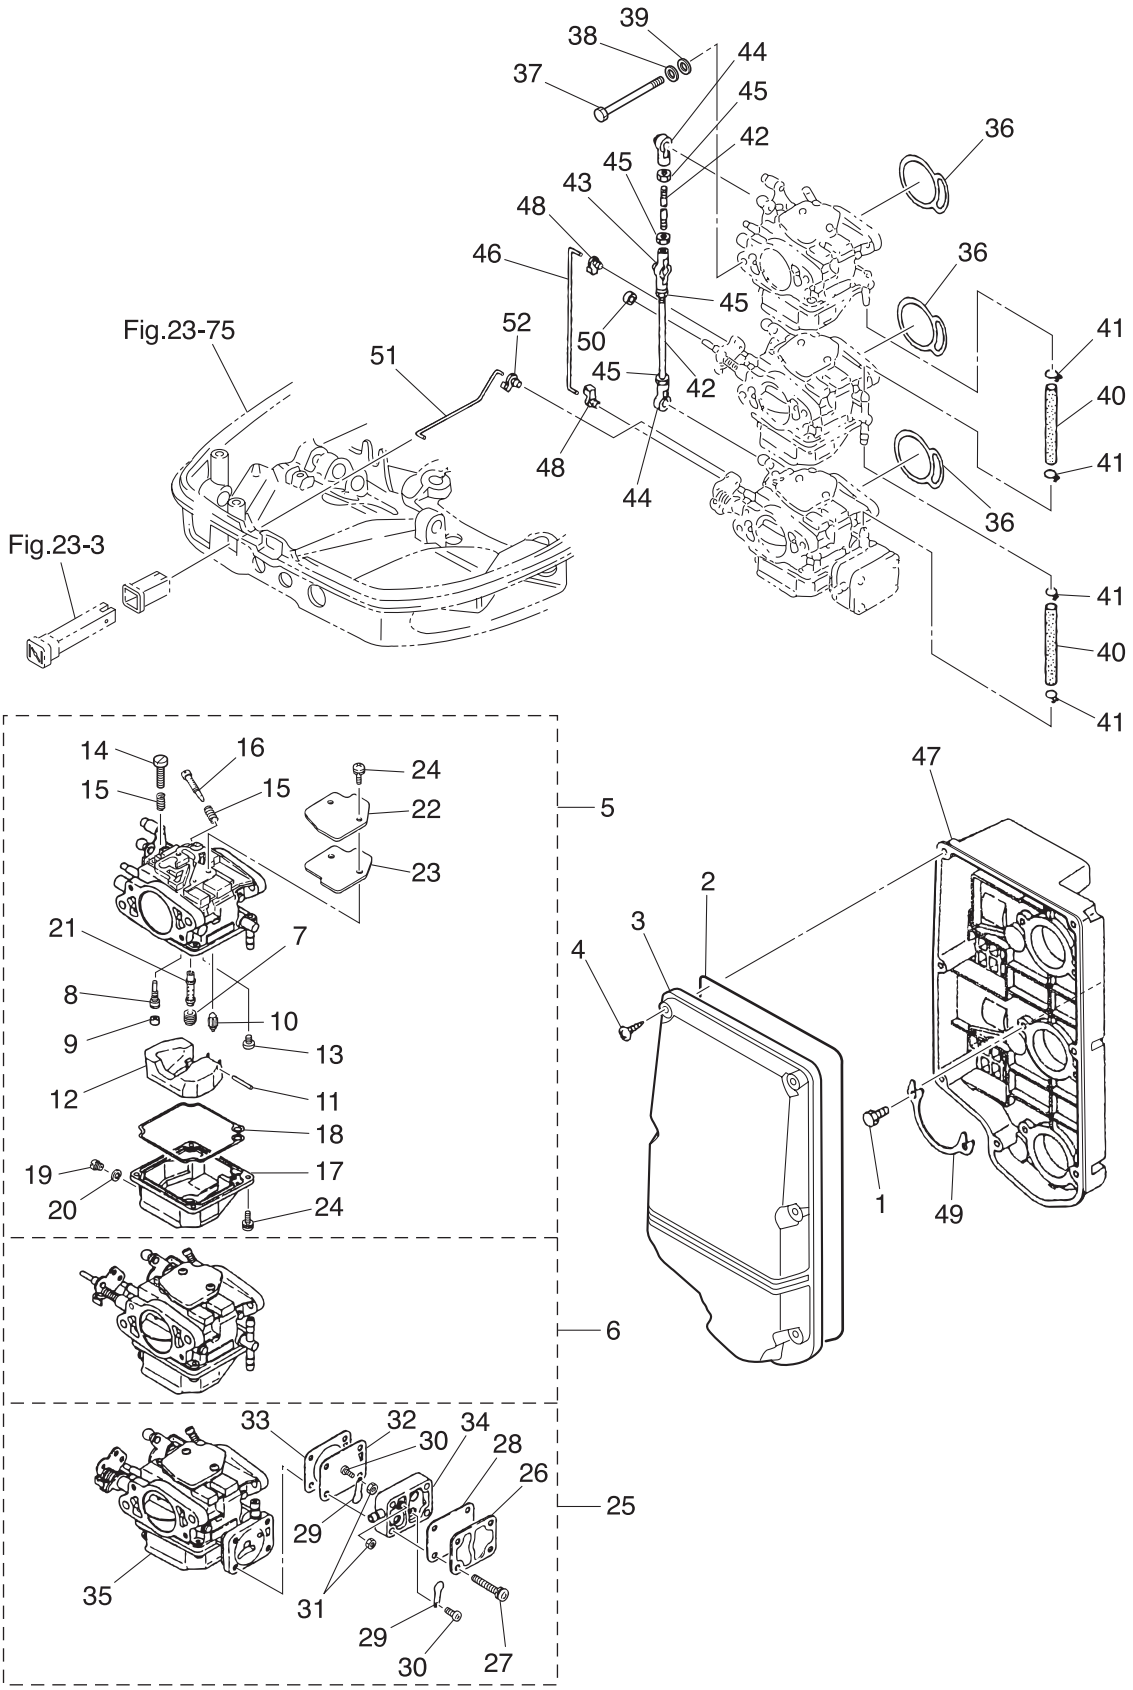


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
4-1		3C8-02420-0	BOLT 5-16	6	
4-2		3C8-02418-0	GASKET	1	Seal Rubber
4-3		3C8-02415-0	INTAKE SILENCER COVER	1	
4-4		3F3-02423-0	TAPPING SCREW 5-30	7	
4-5	3	3LC-03200-1	CARBURETOR ASSY	1	for MX50D2, MWX50D2 Upper 3LC 0
4-6	3	3LC-03207-1	CARBURETOR ASSY (SECOND)	1	for MX50D2, MWX50D2 Center 3LC 0
4-7	3	3LC-04438-0	* MAIN JET (#138)	1	for MX50D2, MWX50D2 x 3
4-8	2	3M2-03152-0	* SLOW JET (#80)	1	for M50D2, MW50D2 x 3 MX50D2, MWX50D2
4-9		3C8-03169-0	* PLUG	1	x 3
4-10	1	3E3-03147-0	* FLOAT VALVE		for M40/50D2, MW50D2 x 3
4-11		3C8-03126-0	* FLOAT ARM PIN	1	x 3
4-12		3C8-03125-0	* FLOAT	1	x 3
4-13		921722-0410	* SCREW	1	x 3
4-14		3C8-03179-1	* STOP SCREW	1	Upper x 1
4-15		3C8-03157-0	* SPRING	2	Upper x 2 Center x 1, Lower x 1
4-16		3G2-03156-0	* ADJUST SCREW	1	x 3
4-17		3C8-03120-0	* FLOAT CHAMBER	1	Upper, Center x 2
4-18		3C8-03121-0	* FLOAT CHAMBER GASKET	1	O-Ring x 3
4-19		910306-0405	* BOLT	1	x 3
4-20		3C8-03193-0	* GASKET	1	x 3
4-21		3E3-03141-0	* MAIN NOZZLE	1	for M50D2, MW50D2 x 3 MX50D2, MWX50D2
4-22		3C8-03181-0	* CARBURETOR COVER	1	x 3
4-23		3C8-03182-0	* CARBURETOR COVER GASKET	1	x 3
4-24		922503-6410	* SCREW	6	C/Cover, Float Chamber x 3
4-25	3	3LC-03210-1	CARBURETOR ASSY (THIRD)	1	for MX50D2, MXW50D2 Lower 3LC 0
4-26		3C8-04004-0	* PUMP COVER	1	Lower
4-27		3E3-64333-0	* PRE-COATED SCREW	4	Lower
4-28		3C8-04018-0	* PUMP COVER GASKET	1	Lower
4-29		350-04014-0	* CHECK VALVE	2	Lower

Fig. 4 INTAKE SILENCER・CARBURETOR

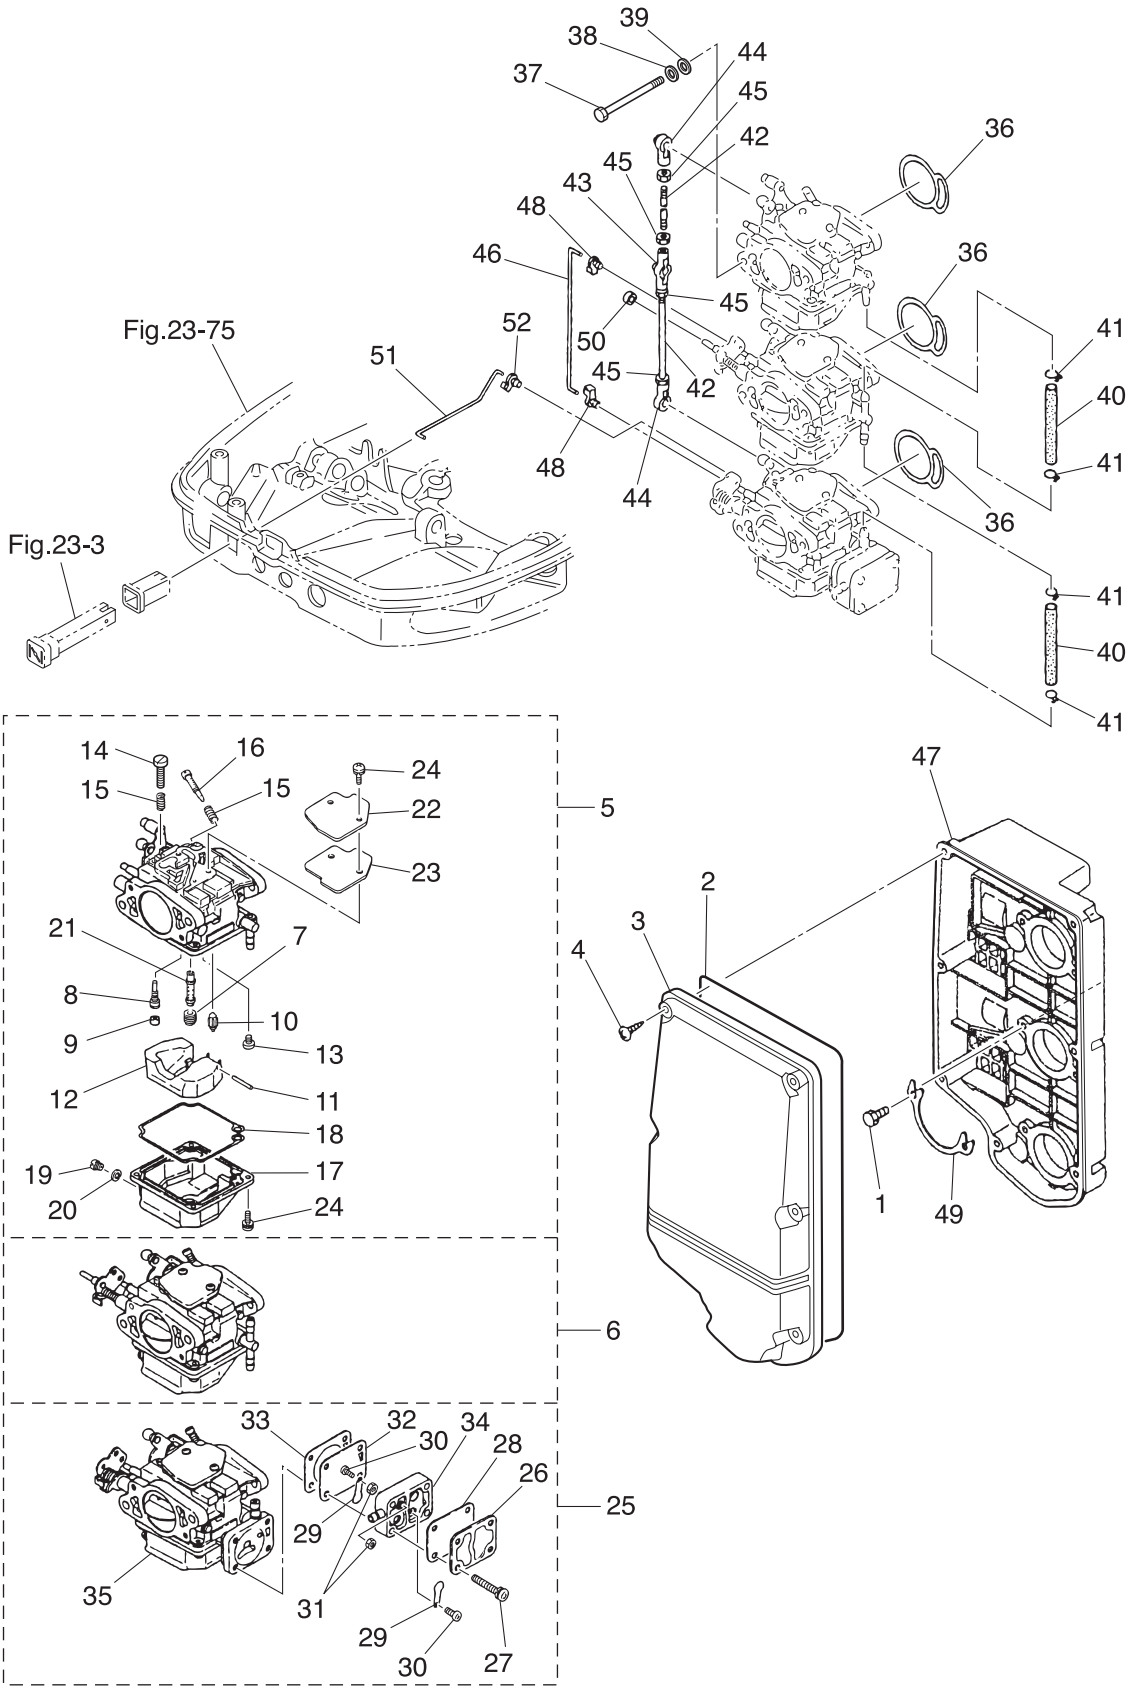


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
4-30		921703-0305	* SCREW	2	Lower
4-31		930203-0300	* NUT	2	Lower
4-32		350-04005-0	* PUMP DIAPHRAGM	1	Lower
4-33		3C8-04028-0	* PUMP BODY GASKET	1	Lower
4-34		3C8-04002-0	* PUMP BODY	1	Lower
4-35		3C8-03123-0	* LOWER FLOAT CHAMBER	1	Lower
4-36		3E3-02011-0	CARBURETOR GASKET	3	for M50D2, MW50D2 MX50D2, MWX50D2
4-37		916103-0685	BOLT	6	
4-38		941303-0600	SPRING WASHER	6	
4-39		940103-0600	WASHER	6	
4-40		98AB-50-080	HOSE	2	98AB-501000
4-41		338-02215-0	CLIP ϕ 10	4	
4-42		348-63717-1	ROD 5-68	2	
4-43		3B7-05229-0	BALL JOINT CONNECTOR	1	
4-44		3B7-05243-0	BALL JOINT CONNECTOR	2	
4-45		930103-0500	NUT	4	
4-46		3C8-67191-1	CHOKE ROD 3-90	1	
4-47	2	3E3-02411-0	INTAKE SILENCER	1	for M50D2, MW50D2 MX50D2, MWX50D2
4-48		346-67196-1	ROD SNAP 3-B	2	
4-49		3C8-02417-0	INTAKE SILENCER LOCK PLATE	3	
4-51		3C8-67192-0	CHOKE ROD	1	
4-52		346-67196-1	ROD SNAP 3-B	1	

Fig. 5 FUEL LINE

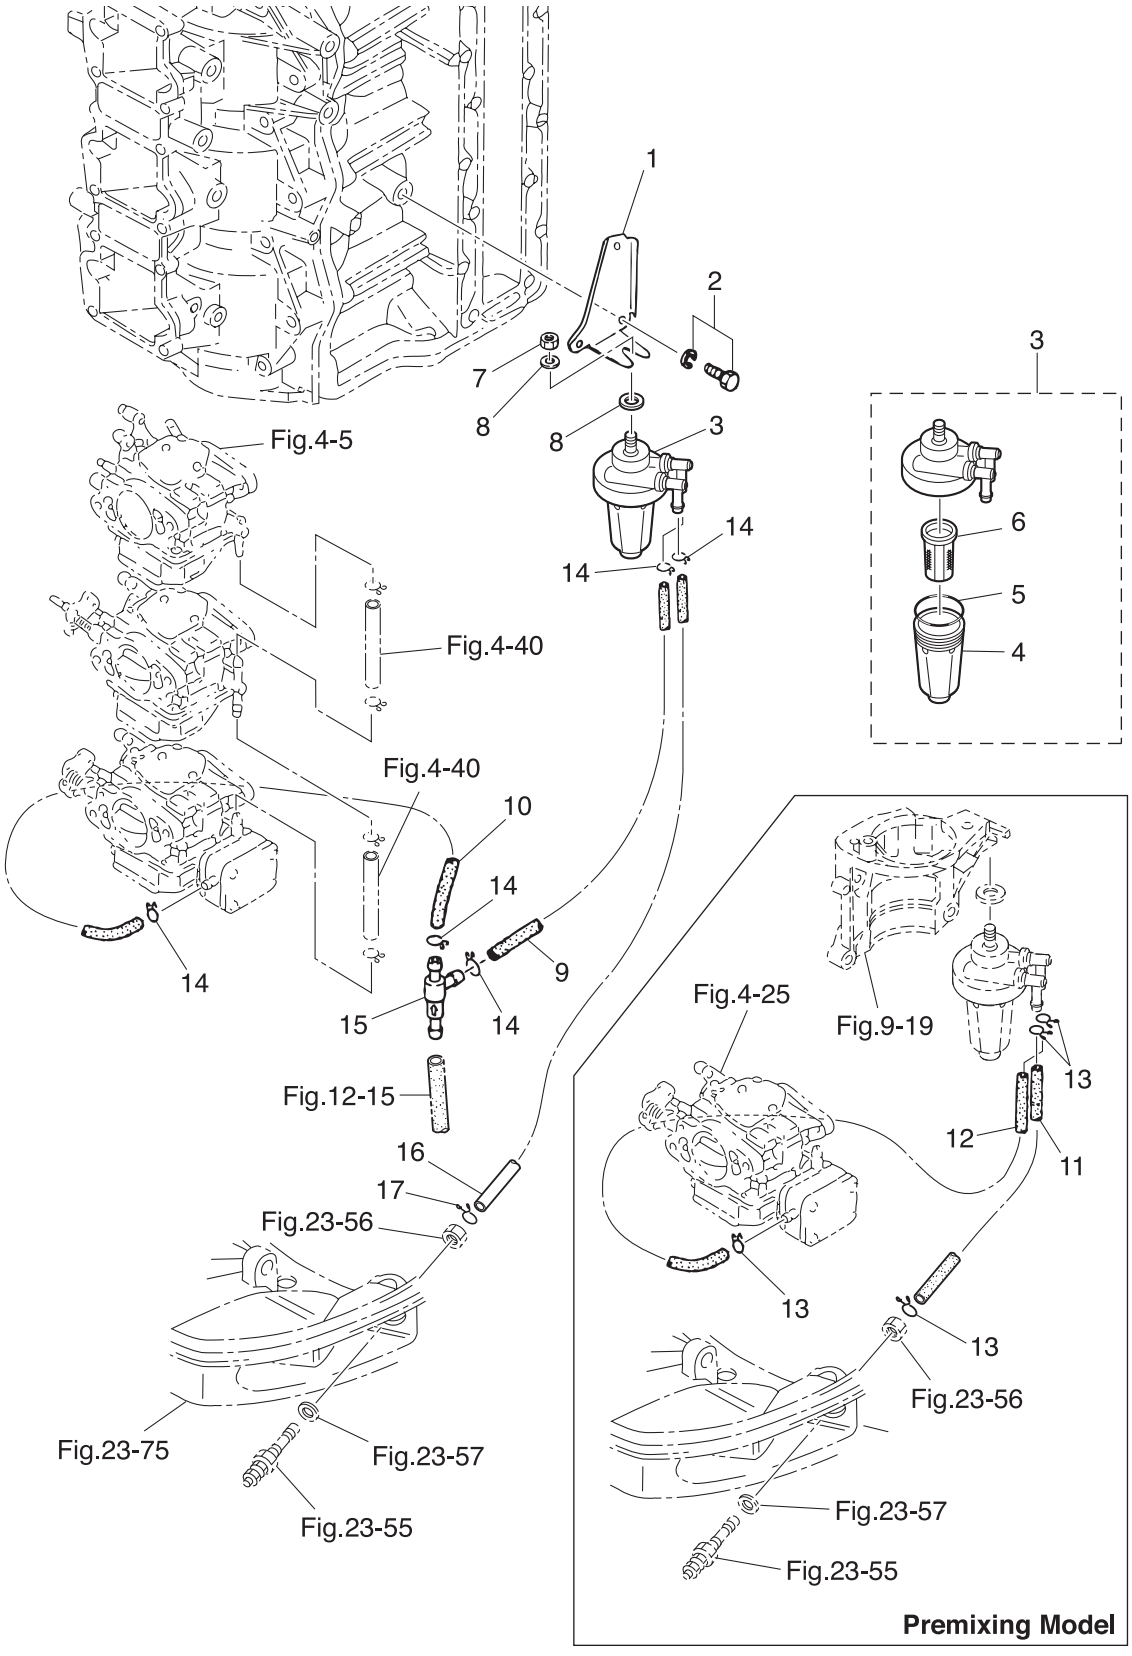


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
5-2	2	910103-5610	BOLT	1	for MF Type
5-3		3AD-02230-0	FUEL FILTER ASSY	1	
5-4		3AD-02237-0	* CUP	1	
5-5		3AD-02235-0	* O-RING	1	
5-6		3AD-02234-0	* FILTER	1	
5-7		930103-0800	NUT	1	
5-8		940103-0800	WASHER	2	
5-11		98AB-50-350	HOSE	1	for Premixing Model 98AB-501000
5-12		98AB-50-530	HOSE	1	for Premixing Model 98AB-501000
5-13		338-02215-0	CLIP ϕ 10	4	for Premixing Model

Fig. 6 THROTTLE

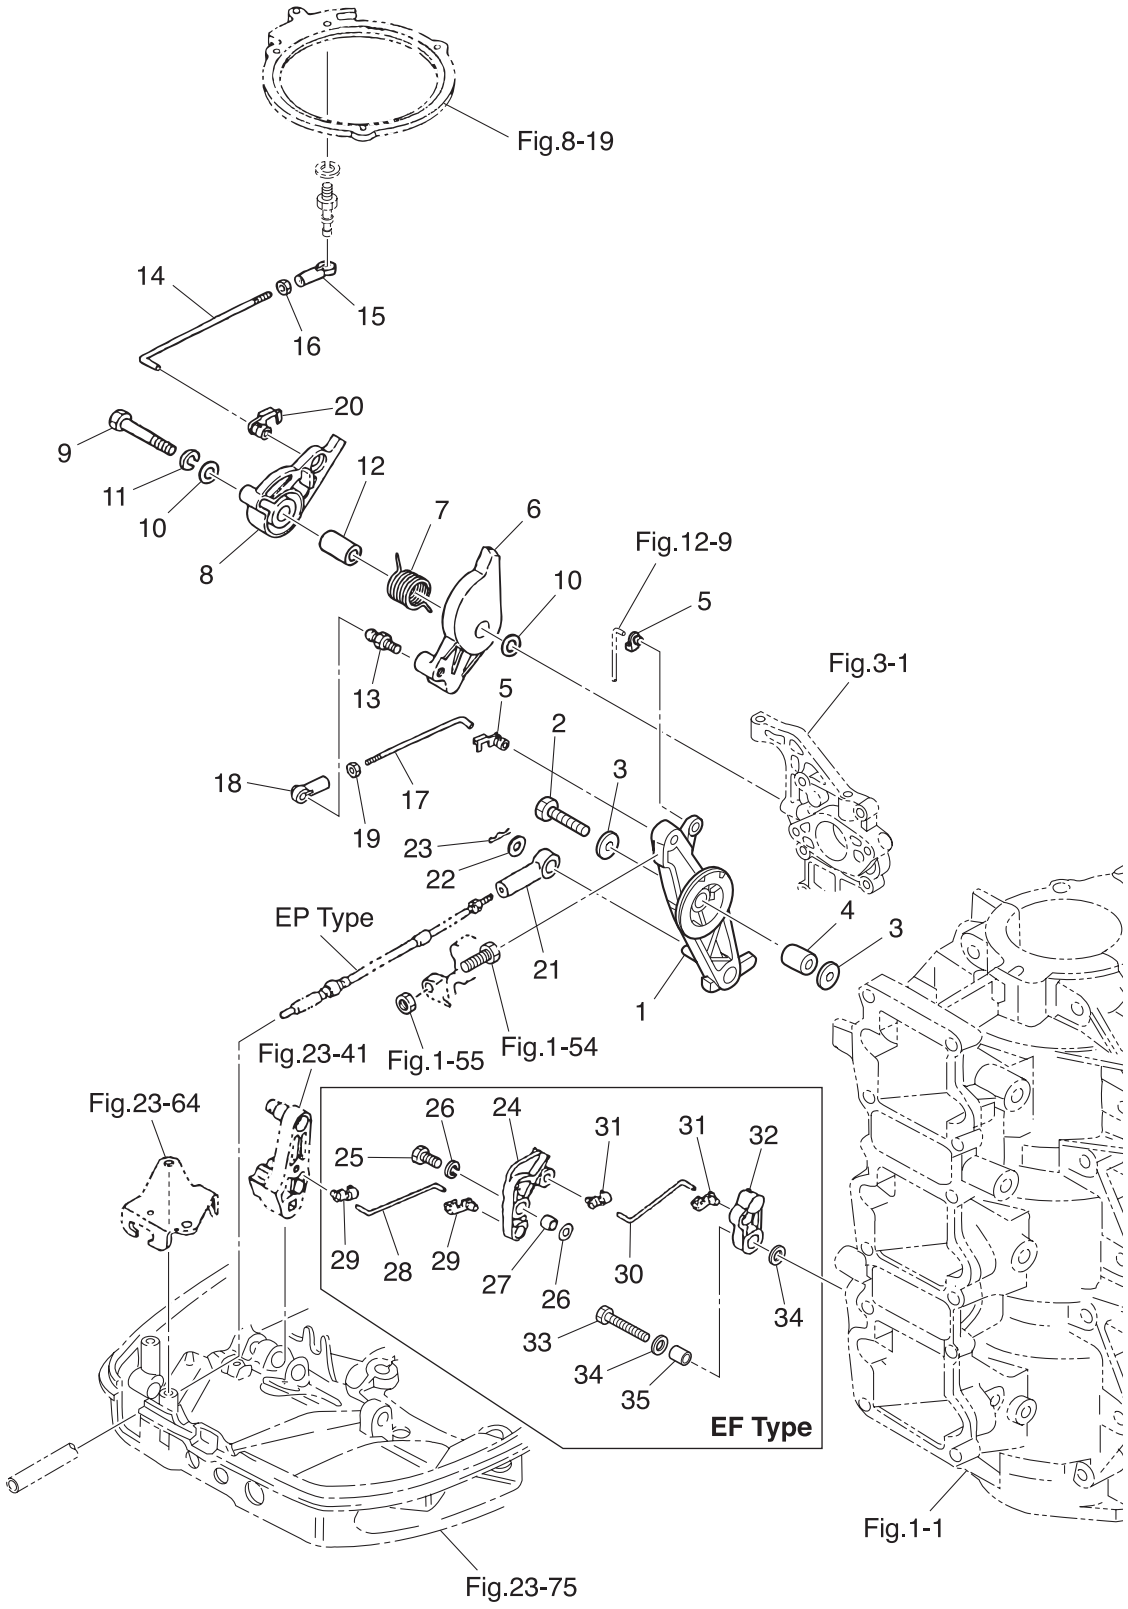


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
6-1		3C8-63711-1	ADVANCER ARM	1	
6-2		910103-0635	BOLT	1	
6-3		346-67115-0	WASHER 6.5-21-1	2	
6-4		3C8-63732-0	COLLAR 6.2-12-17	1	
6-5		3C8-63733-0	ROD SNAP 5-3	2	
6-6	2	3E3-63718-1	THROTTLE CAM	1	for M50D2, MW50D2 MX50D2, MWX50D2
6-7		3E3-63727-0	SPRING	1	
6-8		3E3-63712-0	ADVANCER LEVER	1	
6-9		910103-0640	BOLT	1	
6-10		3C8-66308-0	WASHER 6-16-1.5	2	
6-11		941303-0600	SPRING WASHER	1	
6-12		3E3-63721-0	COLLAR 6.5-10.5-26.3	1	
6-13		346-05228-1	BALL JOINT	1	
6-14		3E5-63715-1	ROD 5-90	1	
6-15		3B7-05243-0	BALL JOINT CONNECTOR	1	
6-16		930103-0500	NUT	1	
6-17		3E3-63709-1	THROTTLE ROD 5-105	1	
6-18		3B7-05243-0	BALL JOINT CONNECTOR	1	
6-19		930103-0500	NUT	1	
6-20		3C8-63733-0	ROD SNAP 5-3	1	
6-24		3C8-05213-0	THROTTLE LIMITER ARM	1	for MF/EF Type
6-25		910103-0625	BOLT	1	for MF/EF Type
6-26		940103-0600	WASHER	2	for MF/EF Type
6-27		353-76079-0	COLLAR 6.2-9-9.3	1	for MF/EF Type
6-28		3C8-05221-0	THROTTLE LIMITER ROD 3.5-56	1	for MF/EF Type
6-29		3C8-05223-0	ROD SNAP 3.5-4	2	for MF/EF Type
6-30		3C8-05221-0	THROTTLE LIMITER ROD 3.5-56	1	for MF/EF Type
6-31		3C8-05223-0	ROD SNAP 3.5-4	2	for MF/EF Type
6-32		3C8-05211-0	STARTER LOCK ARM	1	for MF/EF Type

Fig. 6 THROTTLE

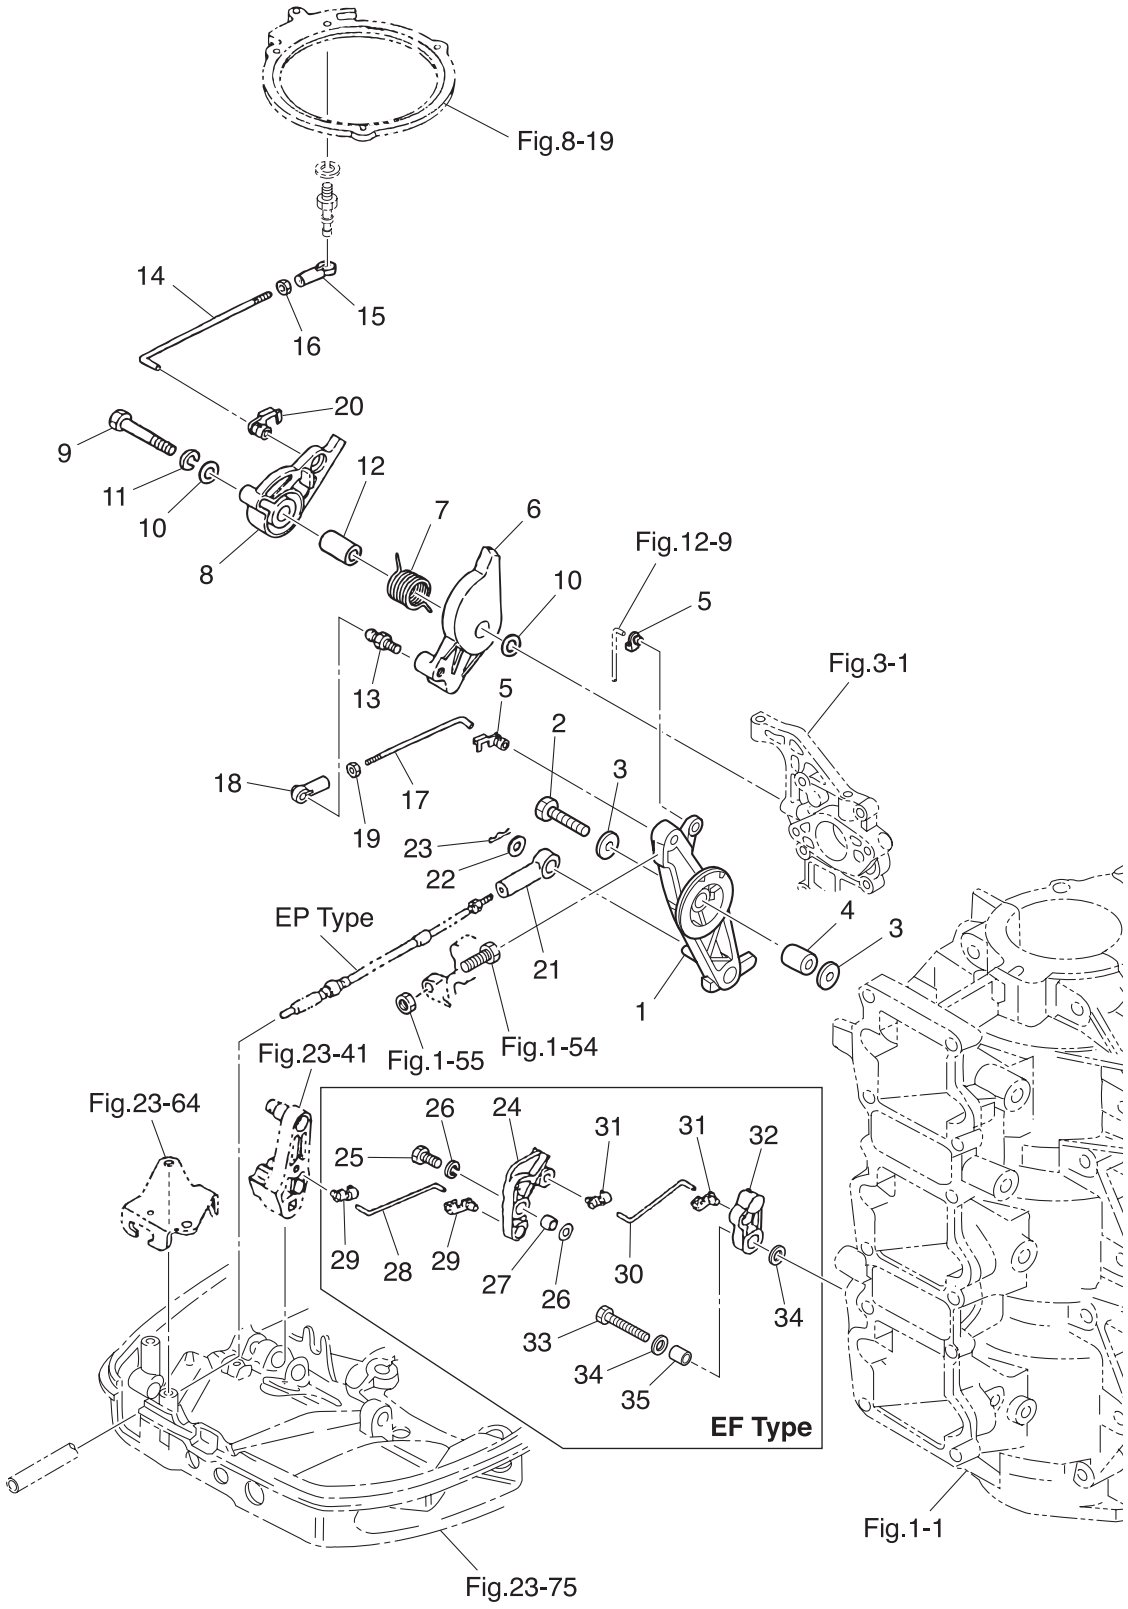


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
6-33	910103-0625	BOLT	1	for MF/EF Type
6-34	940103-0600	WASHER	2	for MF/EF Type
6-35	353-76079-0	COLLAR 6.2-9-9.3	1	for MF/EF Type

Fig. 7 RECOIL STARTER

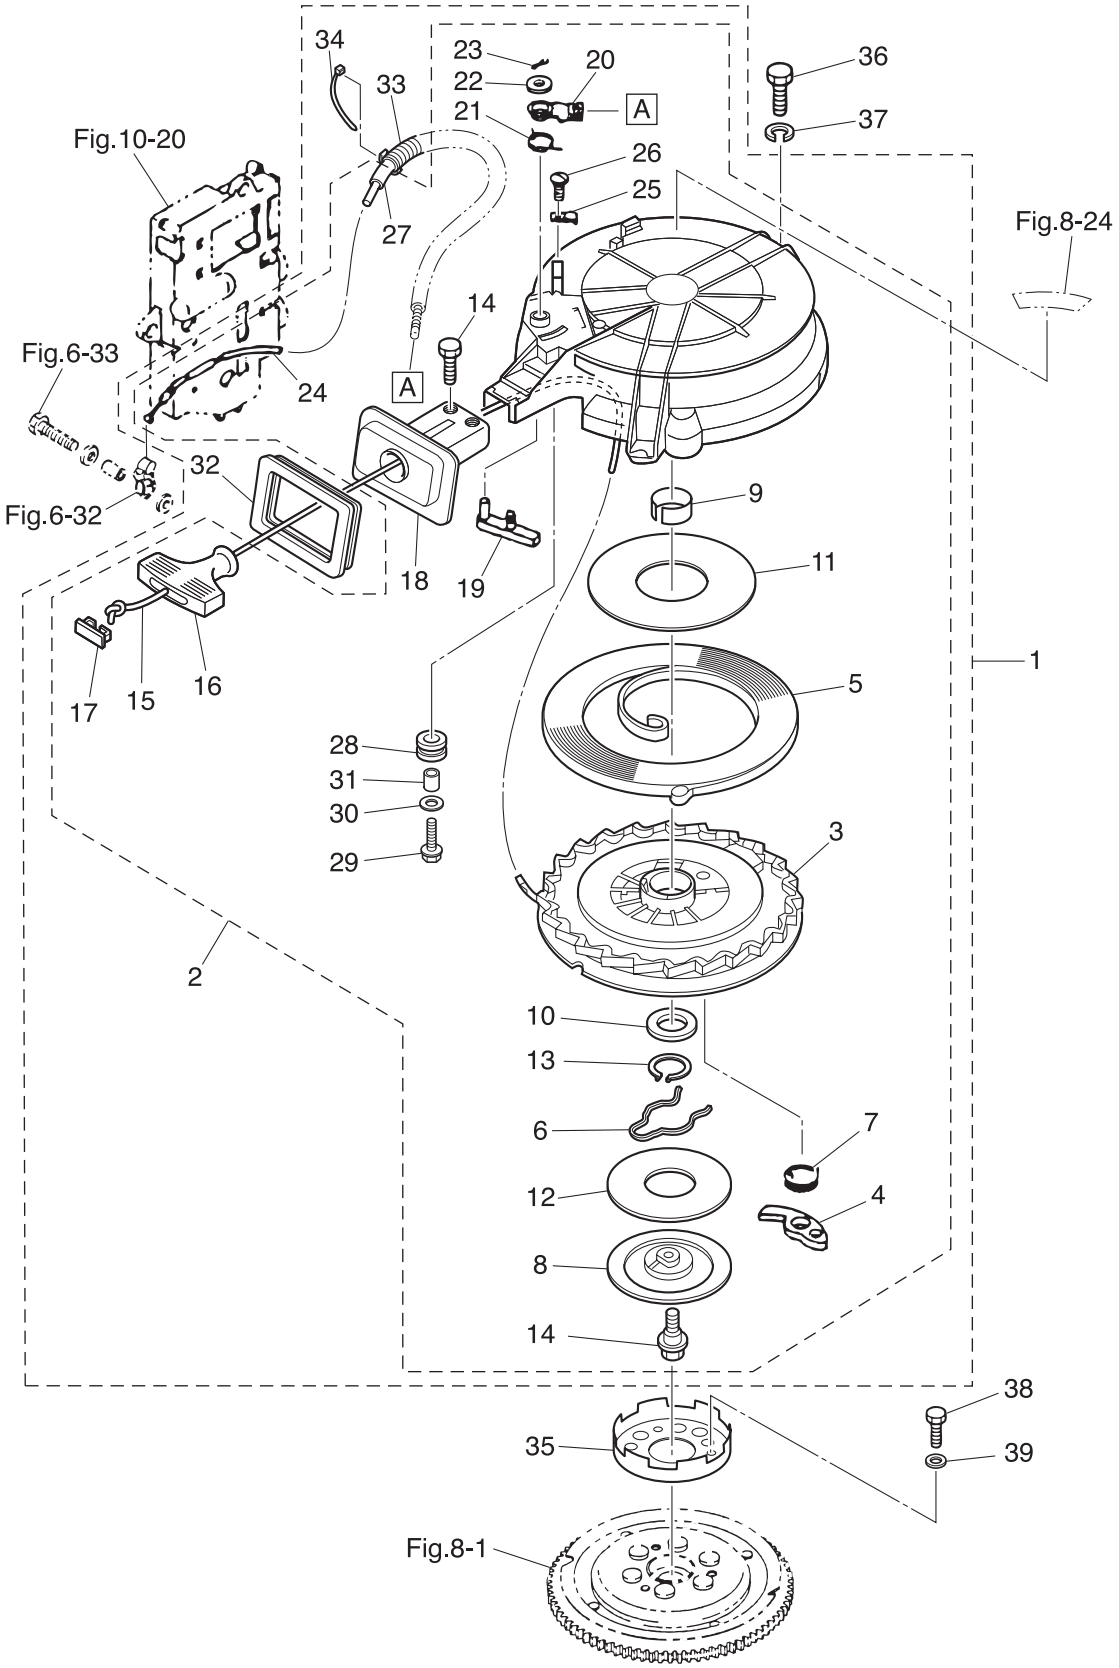


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
7-1	3MC-05090-0	RECOIL STARTER ASSY	1	for MF/EF Type
7-2	3C8-05090-2	* RECOIL STARTER ASSY	1	
7-3	3C8-05106-0	** REEL ASSY	1	
7-4	3C8-05003-0	** RATCHET	1	
7-5	3C8-05004-0	** STARTER SPRING	1	
7-6	3C8-05007-0	** FRICTION SPRING	1	
7-7	3C8-05012-0	** RETURN SPRING	1	
7-8	3C8-05006-0	** FRICTION PLATE	1	
7-9	3C8-05107-0	** BUSHING	1	
7-10	3C8-05108-0	** WASHER	1	
7-11	3C8-05023-0	** SLIDING PLATE	1	
7-12	3C8-05029-0	** SLIDING PLATE	1	
7-13	945127-2800	** C-RING d=28	1	
7-14	3C8-05138-0	** BOLT	3	Rope Guide, Reel
7-15	3C8-05013-0	** STARTER ROPE ϕ6-2250	1	
7-16	3C8-05019-0	** STARTER HANDLE	1	
7-17	3R3-05131-0	** ROPE ANCHOR	1	
7-18	3C8-05014-1	** ROPE GUIDE	1	
7-19	3C8-05252-0	** STARTER LOCK	1	
7-20	3C8-05253-0	** STARTER LOCK CAM	1	
7-21	3C8-05216-0	** STARTER LOCK SPRING	1	
7-22	3C8-05237-0	** WASHER	1	
7-23	951503-1520	** SPLIT PIN	1	
7-24	3C8-05217-0	** STARTER LOCK WIRE	1	
7-25	3C8-05257-0	** CABLE HOLDER	1	
7-26	922432-0510	** SCREW	1	
7-27	3C8-05238-0	** PIPE	1	
7-28	3C8-05030-0	** STARTER ROLLER	1	
7-29	3C8-05031-0	** BOLT	1	

Fig. 7 RECOIL STARTER

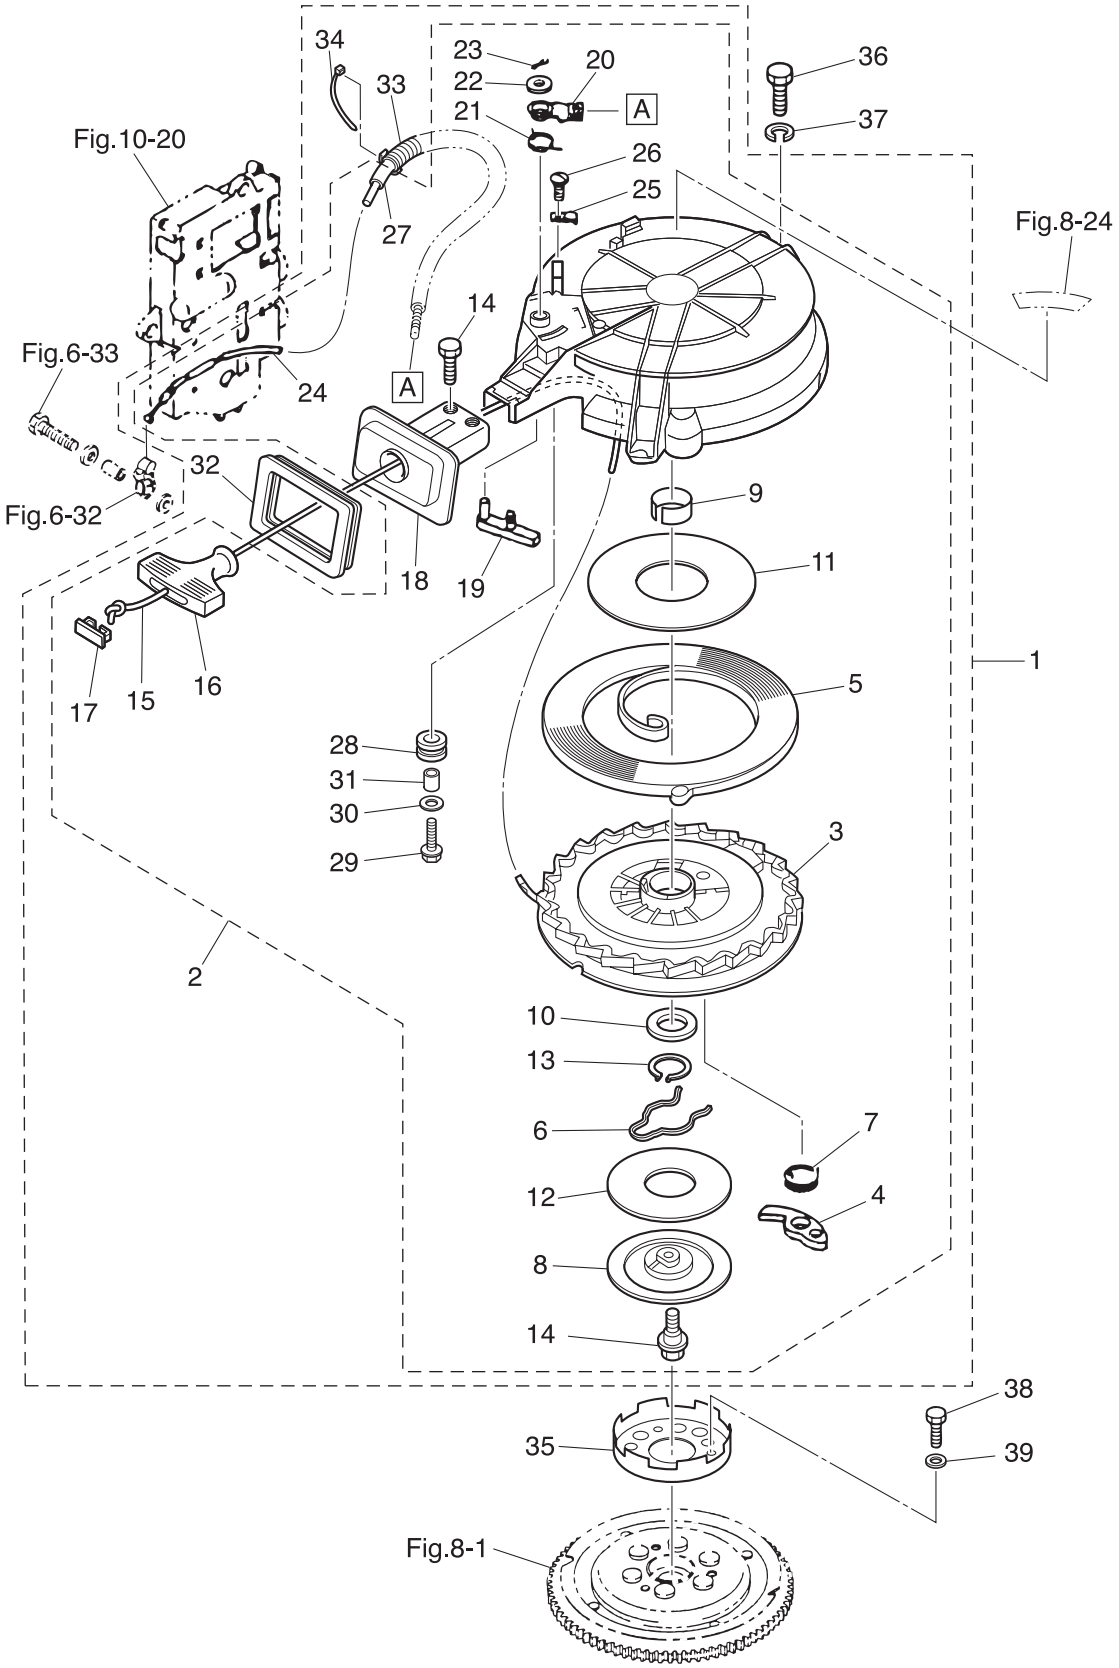


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
7-30	3C8-05032-0	** WASHER	1	
7-31	3C8-05033-0	** COLLAR	1	
7-32	3C8-67503-0	* STARTER SEAL	1	
7-33	3C8-06133-0	* PROTECTOR	1	
7-34	369-84398-0	* BAND 158	1	
7-35	3C8-05901-1	STARTER PULLEY	1	
7-36	9101F4-0625	BOLT	3	
7-37	940103-0600	WASHER	3	
7-38	9101F4-0818	BOLT	3	
7-39	940103-0800	WASHER	3	

Fig. 8 MAGNETO

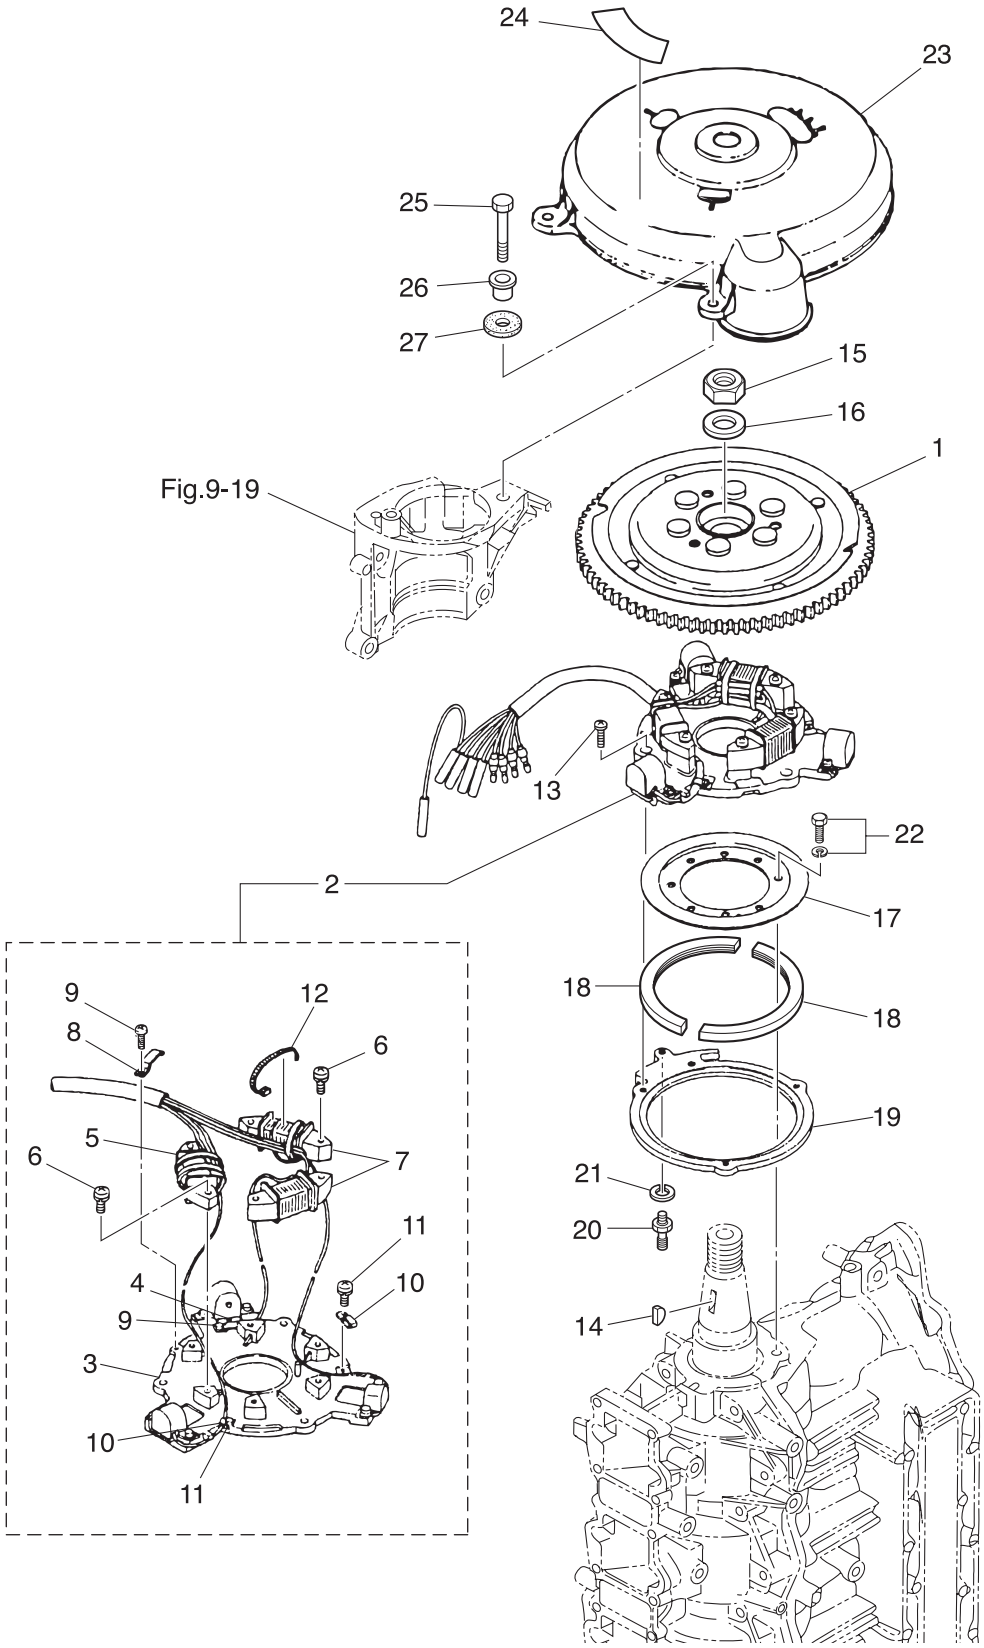


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
8-1	3C8-06101-1	FLYWHEEL W/RING GEAR	1	F4T405-72
8-2	3C8-06103-3	COIL PLATE ASSY W/ALTERNATOR	1	
8-3	3C8-06130-2	* PULSAR COIL & PLATE ASSY	1	
8-4	3B7-06131-0	* PULSAR HOLDER	1	
8-5	3C8-06120-1	* EXCITER COIL	1	
8-6	921521-6630	* SCREW	6	
8-7	3C8-06123-1	* ALTERNATOR ASSY	1	
8-8	3B7-06135-0	* HOLDER	1	
8-9	921521-0406	* SCREW	2	
8-10	3B7-06132-0	* CLAMP	2	
8-11	921521-6406	* SCREW	2	
8-12	3B7-06133-0	* BAND	3	
8-13	921503-6510	SCREW	3	
8-14	334-00131-0	KEY	1	Magneto
8-15	353-00132-0	NUT 18-P1.5	1	
8-16	353-00133-0	WASHER 19-34-3	1	
8-17	3C8-63722-0	GUIDE PLATE	1	
8-18	3C8-63725-0	GUIDE PLATE COVER	2	
8-19	3C8-63723-0	SETTING RING	1	
8-20	346-05228-1	BALL JOINT	1	
8-21	941303-0600	SPRING WASHER	1	
8-22	910121-6616	BOLT	3	
8-24	3C7-72182-2	CAUTION DECAL (C)	1	

Fig. 9 ELECTRIC PARTS (STARTER MOTOR)

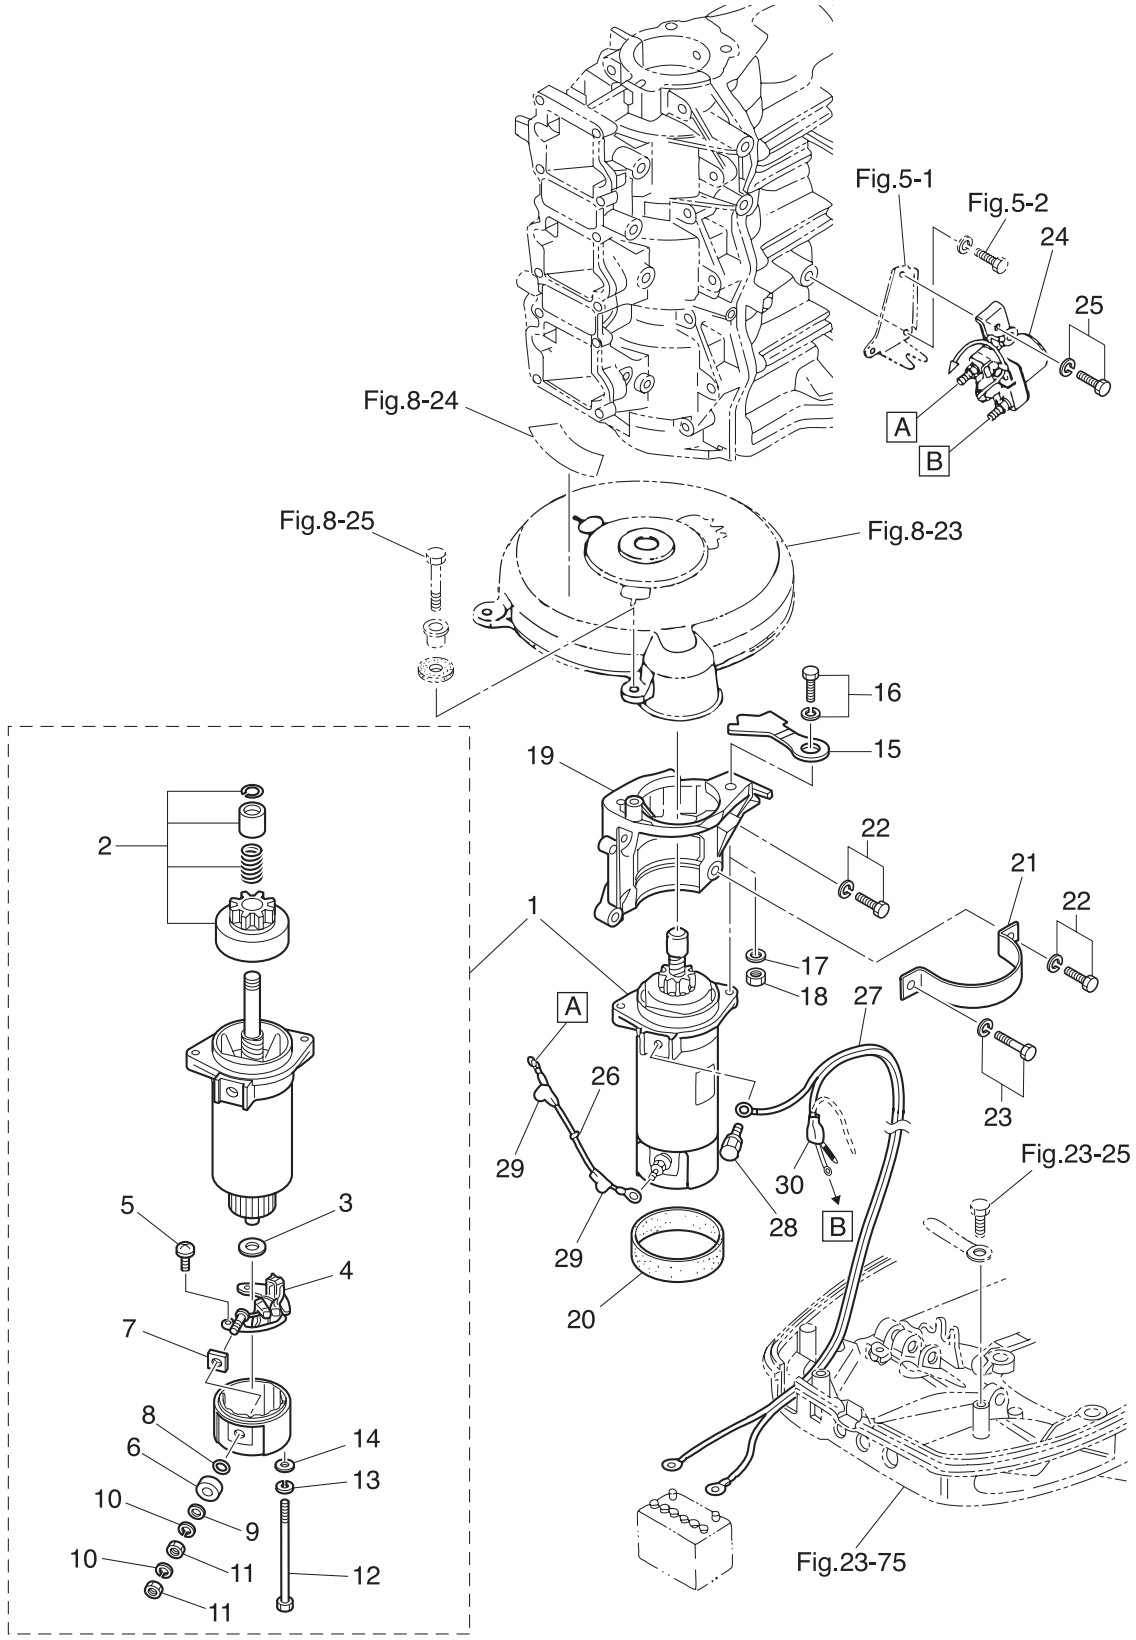


Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
9-15		3C8-06105-0	COIL PLATE STOPPER	1	ALL
9-16	1	910103-6825	BOLT	1	for MF Type
9-17		940103-0800	WASHER	1	for MF Type
9-18		930103-0800	NUT	1	for MF Type
9-19	2	3C8J05101-0	BRACKET	1	Gray for MX50D2, MWX50D2
9-22		910103-6825	BOLT	4	

Fig. 10 ELECTRIC PARTS (C.D. UNIT)

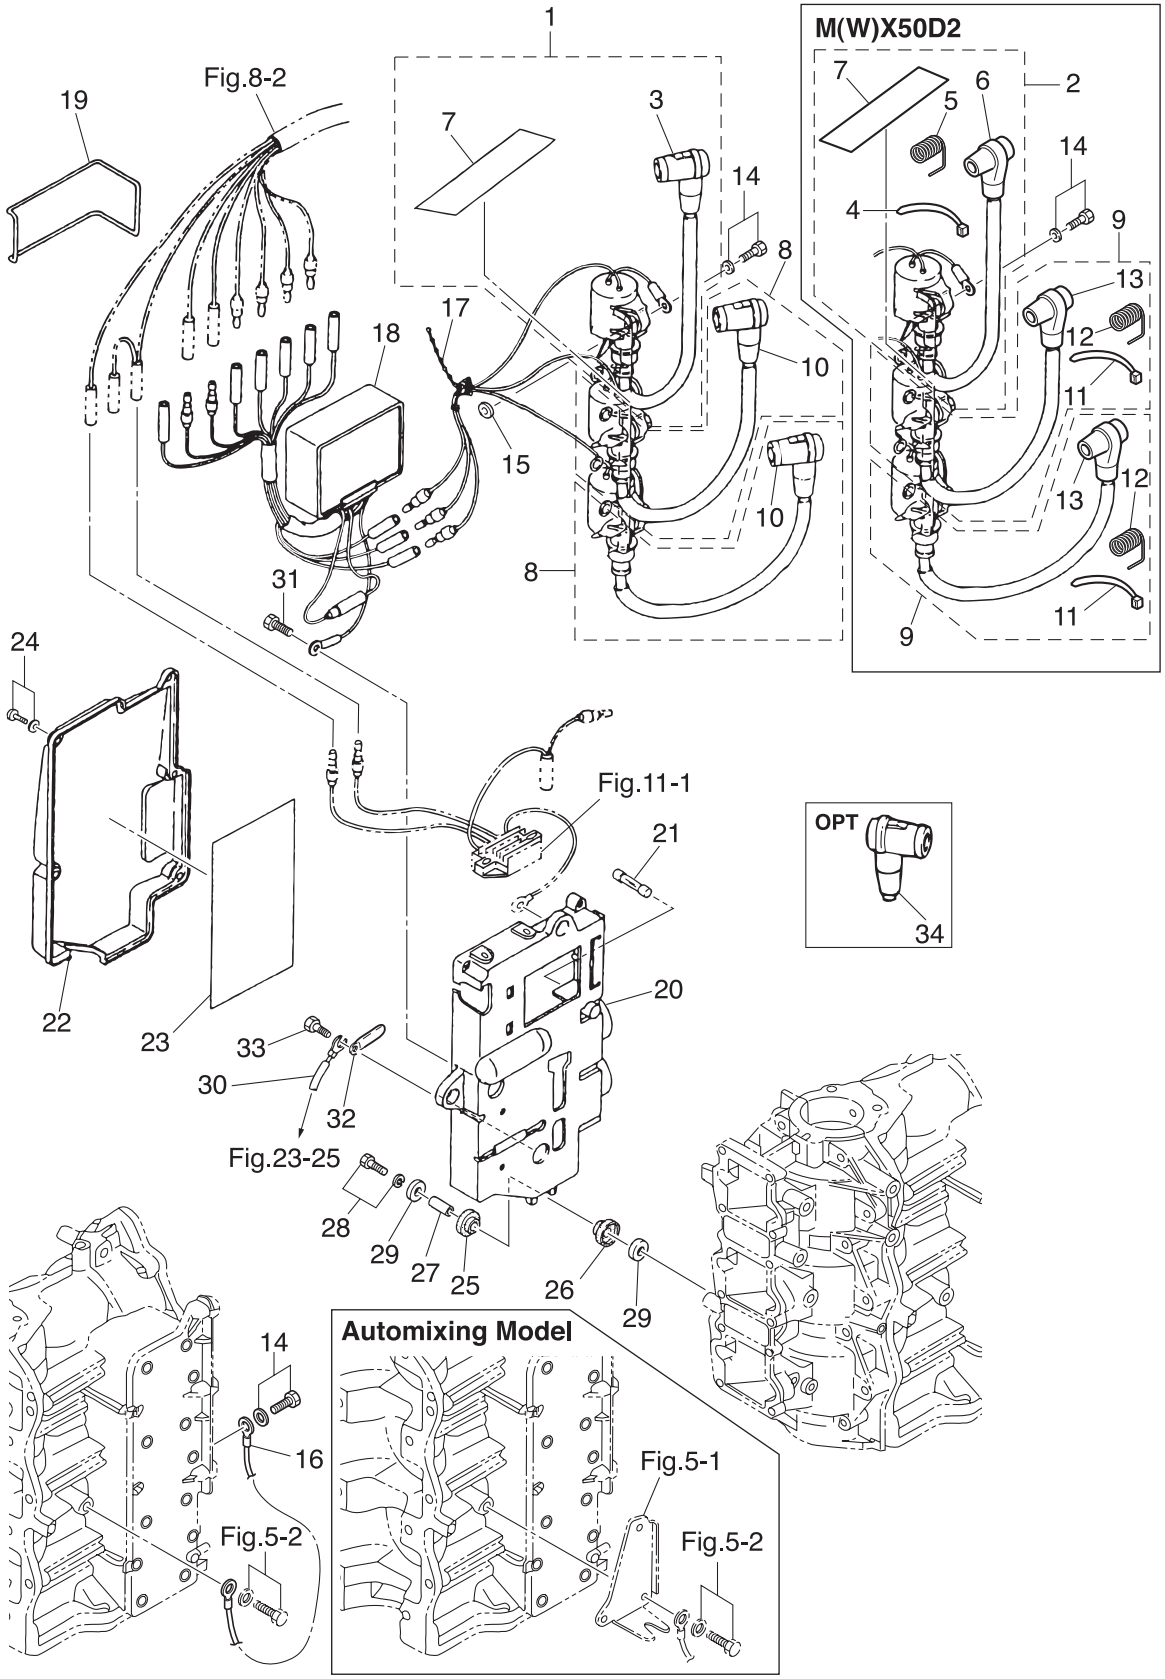


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
10-2		3C8-06049-3	IGNITION COIL ASSY W/LABEL	1	for MX50D2, MWX50D2 F6T530
10-4		3T5-84398-0	* BAND 104	1	for MX50D2, MWX50D2
10-5		3M2-06926-0	* PLUG CAP TERMINAL	1	for MX50D2, MWX50D2
10-6		3M2-06921-0	* PLUG CAP	1	for MX50D2, MWX50D2
10-7		3C8-72181-0	* CAUTION DECAL (B)	1	
10-9		3C8-06050-2	IGNITION COIL W/CAP	2	for MX50D2, MWX50D2 F6T530
10-11		3T5-84398-0	* BAND 104	1	for MX50D2, MWX50D2
10-12		3M2-06926-0	* PLUG CAP TERMINAL	1	for MX50D2, MWX50D2
10-13		3M2-06921-0	* PLUG CAP	1	for MX50D2, MWX50D2
10-14		910103-5620	BOLT	3	
10-15		151-33159-0	GASKET 6.2-11-1	3	
10-16		3C7-76142-1	GROUND CABLE L=170	1	#3 Ignition Coil -Cylinder Block
10-17		336-76091-0	LEAD WIRE BAND 100	1	
10-18		3C8-06160-1	CD UNIT	1	F8T20572
10-19		3B7-60103-0	O-RING 3.1-94.4	1	
10-20	2	3C8J06901-1	BRACKET	1	Gray for MX50D2, MWX50D2
10-22		3C8-06902-0	COVER	1	
10-24		921503-5514	SCREW	5	
10-25		346-67113-0	MOUNT 8.5-14-2.5	3	
10-26		3B7-06920-0	RUBBER MOUNT 8.5-14-2.5	3	
10-27		346-67114-1	SPACER 6.2-9-15.7	3	
10-28		910103-6630	BOLT	3	
10-29		346-67115-0	WASHER 6.5-21-1	6	
10-30		3N4-76142-1	GROUND CABLE L=270	1	Electric Bracket -Bottom Cowl
10-31		910103-0612	BOLT	1	for Manual Tilt Model

Fig. 11 ELECTRIC PARTS (DIAGRAM)

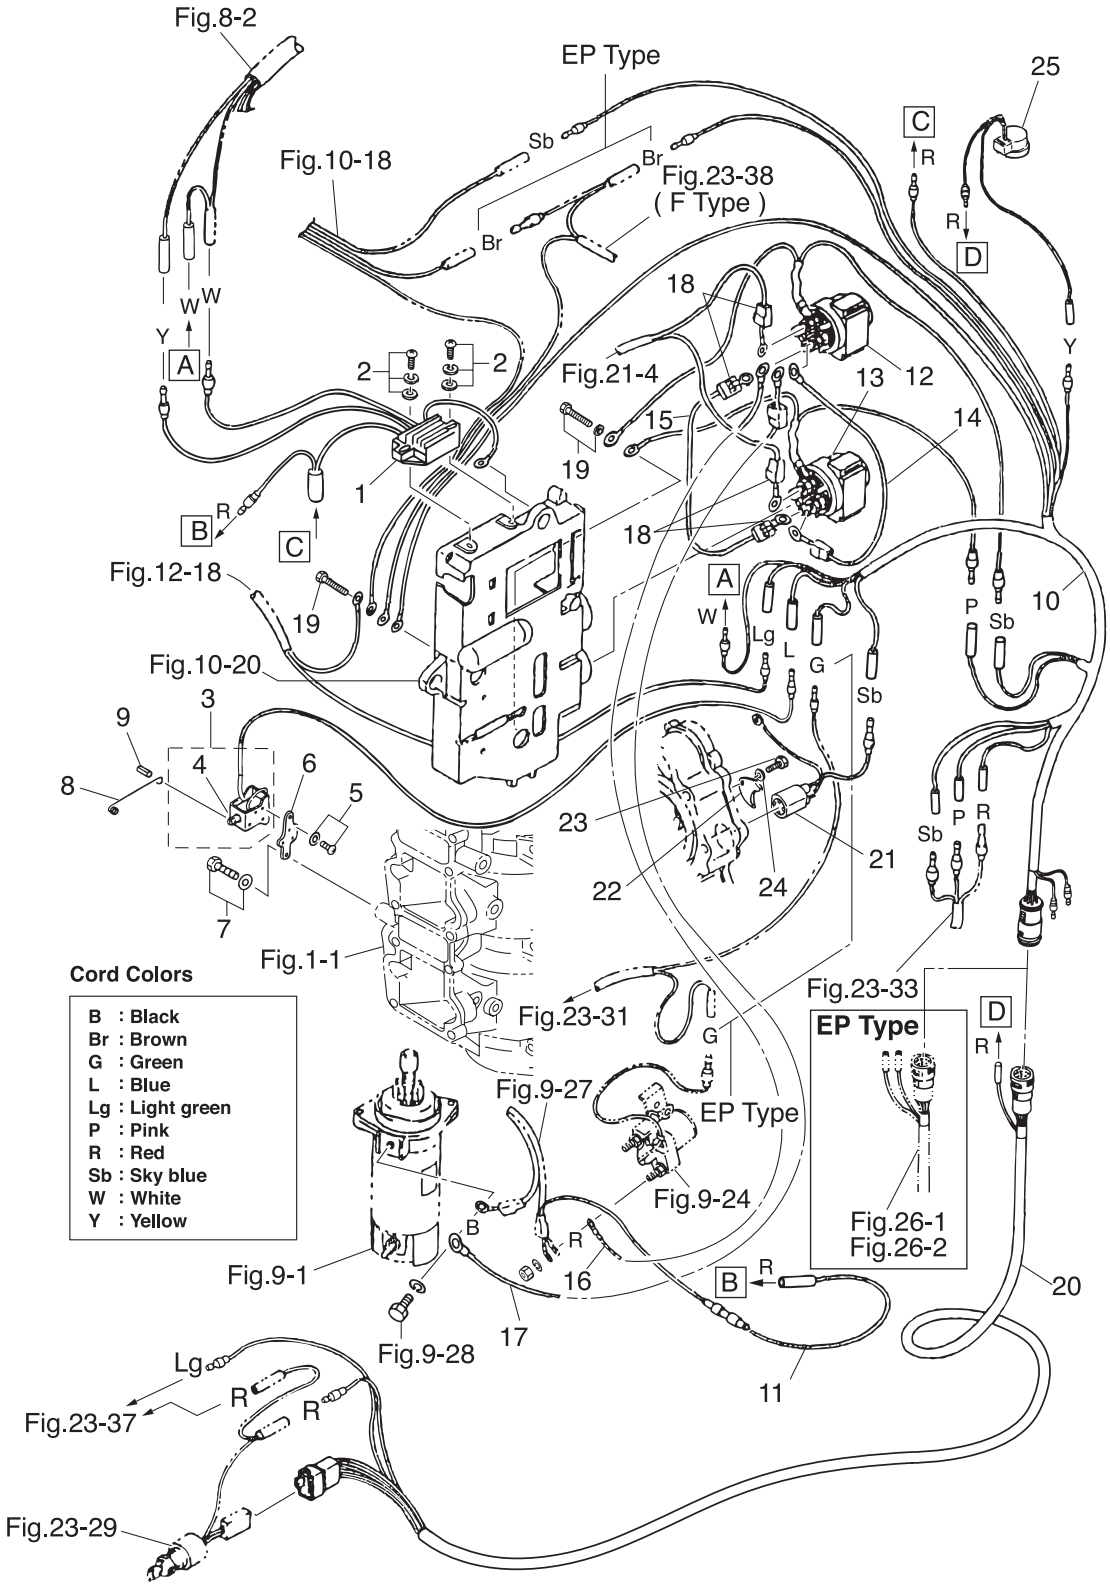


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
11-21	3C8-76172-1	OVERHEAT SENSOR ASSY	1	OPT
11-22	353-66024-0	STOPPER	1	OPT
11-23	910103-0620	BOLT	1	OPT
11-24	941303-0600	SPRING WASHER	1	OPT
11-25	3C8-76171-0	OVERHEAT BUZZER	1	OPT

Fig. 13 DRIVE SHAFT HOUSING

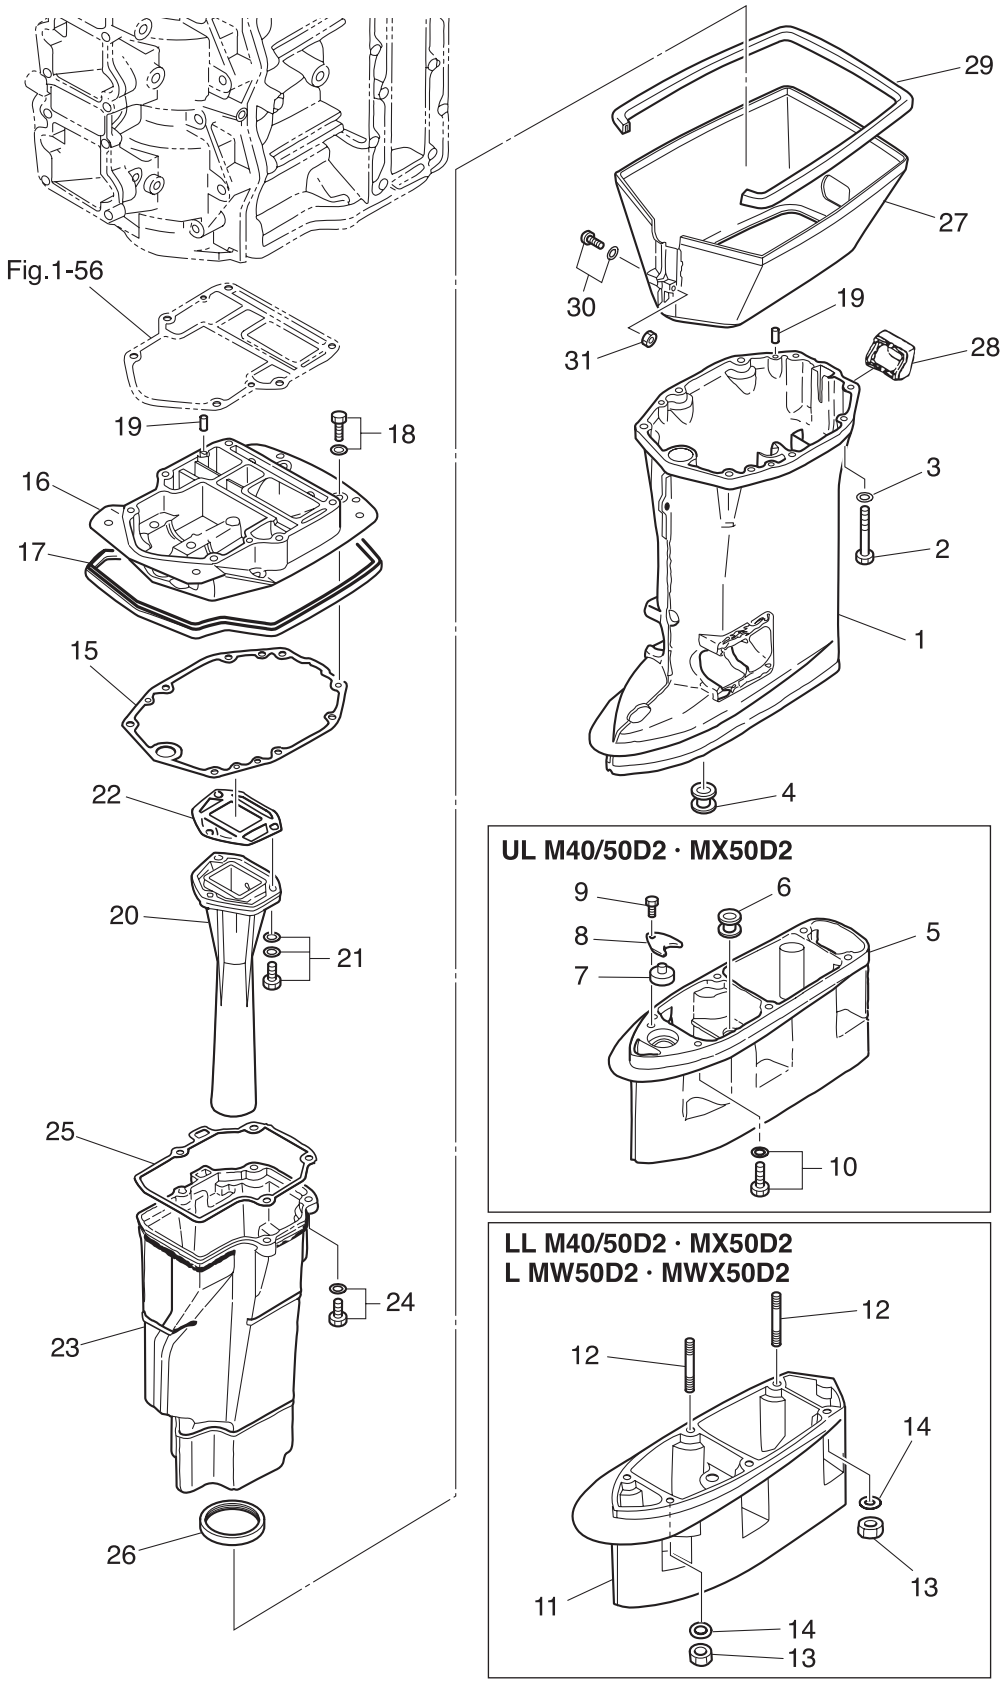


Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
13-1	1	3C8Q61192-3	DRIVE SHAFT HOUSING (L)	1	M40/50D2, MX50D2 for Transom "L","LL"&"UL"
13-1	2	3C8Q61191-3	DRIVE SHAFT HOUSING (S)	1	M40/50D2 for Transom "S" & MW50D2, MWX50D2
13-2		9161F4-0880	BOLT	6	
13-3		9401E3-0800	WASHER	6	
13-4		346-65204-0	WATER PIPE AUXILIARY MOUNT	1	Water Pipe Locking Rubber
13-5		3C8Q61110-0	EXTENSION HOUSING	1	M40/50D2, MX50D2 for Transom "UL"
13-6		346-65204-0	WATER PIPE AUXILIARY MOUNT	1	M40/50D2, MX50D2 for Transom "UL"
13-7		346-66037-0	CAM ROD HOLDER	1	M40/50D2, MX50D2 for Transom "UL"
13-8		353-66024-0	STOPPER	1	M40/50D2, MX50D2 for Transom "UL"
13-9		910103-6612	BOLT	1	M40/50D2, MX50D2 for Transom "UL"
13-10		9101E3-5835	BOLT	6	M40/50D2, MX50D2 for Transom "UL"
13-11	1	3C8Q61120-0	EXTENSION HOUSING (LL)	1	M40/50D2, MX50D2 for Transom "LL"
13-11	2	3S7Q61110-0	EXTENSION HOUSING	1	MW50D2, MWX50D2 for Transom "L"
13-12	1	346-61111-1	STUD	6	M40/50D2, MX50D2 for Transom "LL"
13-12	2	9153E3-0825	STUD	6	MW50D2, MWX50D2 for Transom "L"
13-13	1	930103-0800	NUT	6	M40/50D2, MX50D2 for Transom "LL"
13-13	2	930103-0800	NUT	6	MW50D2, MWX50D2 for Transom "L"
13-14	1	9401E3-0800	WASHER	6	M40/50D2, MX50D2 for Transom "LL"
13-14	2	9402E3-0800	WASHER	6	MW50D2, MWX50D2 for Transom "L"
13-15		3C8-61012-2	DRIVE SHAFT HOUSING GASKET	1	
13-16		3C8Q01301-0	ENGINE BASEMENT	1	
13-17		3C8-67116-0	ENGINE BASEMENT SEAL L=805	1	
13-18		910103-5625	BOLT	4	
13-19		345-01111-0	DOWEL PIN 6-12	4	
13-20		3C8-02311-1	EXHAUST PIPE	1	
13-21		3C8-02319-0	BOLT 8-30	3	
13-22		3C8-02312-2	EXHAUST PIPE GASKET	1	
13-23		3C8-61180-0	EXHAUST HOUSING	1	
13-24		3C8-61184-0	BOLT 8-30	4	

Fig. 13 DRIVE SHAFT HOUSING

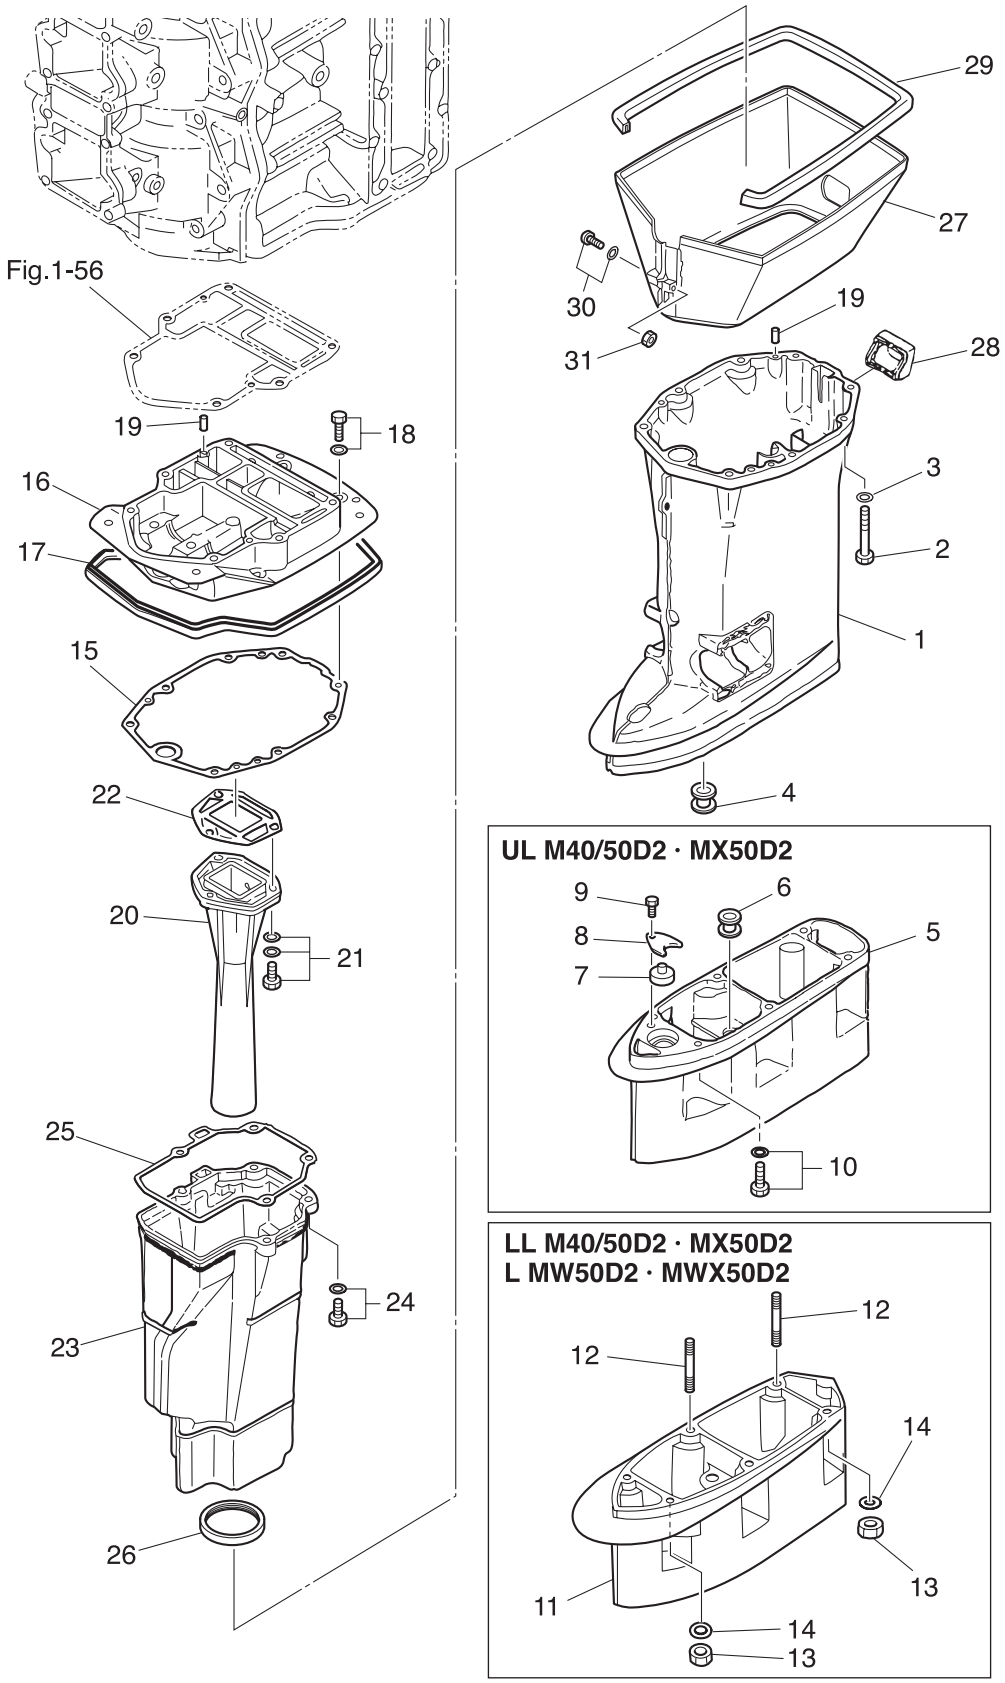


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
13-25	3C8-61181-2	EXHAUST HOUSING GASKET	1	
13-26	3C8-61182-0	GROMMET	1	
13-27	3C8Q61210-1	APRON	1	
13-28	3C8-61212-0	GROMMET	1	
13-29	3C8-61213-0	SEAL	1	
13-30	9215E3-5540	SCREW	1	
13-31	930403-0500	NYLON NUT 5-P0.8	1	

Fig. 14 GEAR CASE (DRIVE SHAFT)M40/50D2 • MX50D2

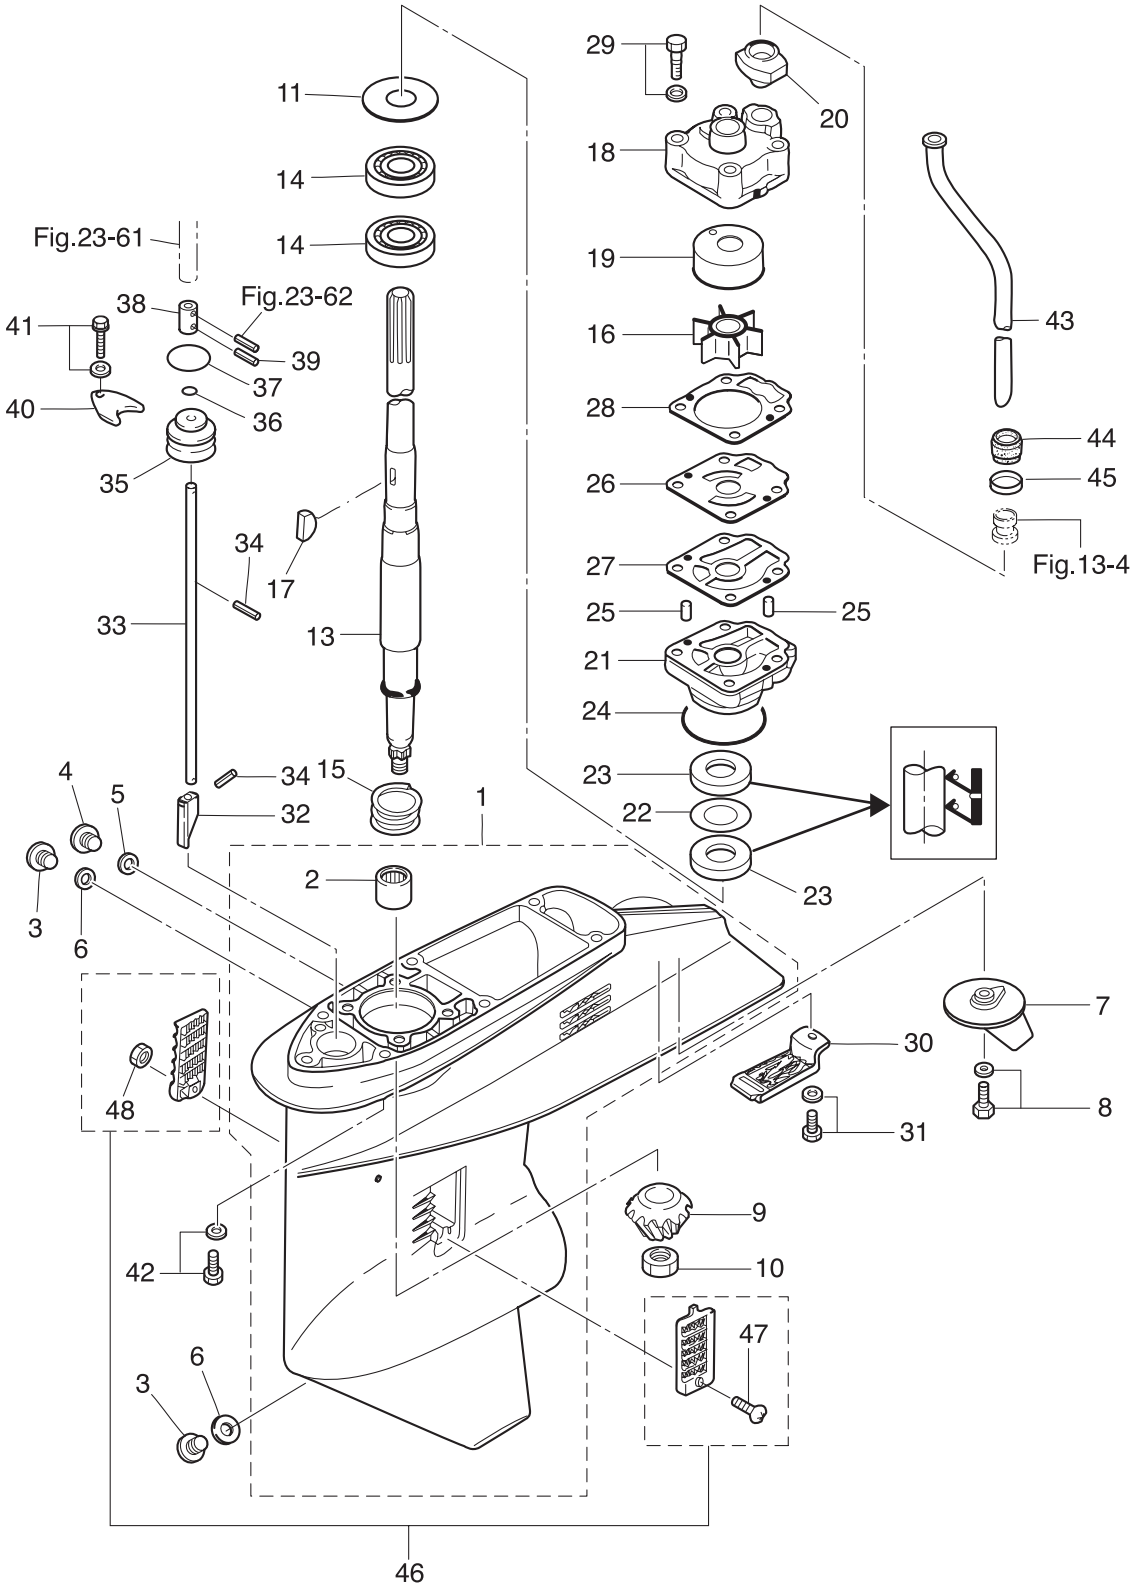


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
14-1	2	3C8Q60090-0	GEAR CASE ASSY	1	M40/50D2 for Transom "UL" & MX50D2 Sub Water Pipe
14-2		345-60211-0	* ROLLER BEARING 22-30-30	1	
14-3		332-60005-2	PLUG 8-8	2	
14-4		3B7-60015-1	PLUG	1	
14-5		3B7-60016-1	GASKET 10.1-15-1	1	
14-6		332-60006-0	GASKET 8.1-15-1	2	
14-7		3C8-60217-1	TRIM TAB	1	
14-8		910103-5620	BOLT	1	
14-9		3C8-64020-2	BEVEL GEAR B	1	
14-10		3C8-64027-0	NUT	1	
14-11	1	345-64081-0	SHIM 41-51.5-0.1	A	
14-11	2	345-64082-0	SHIM 41-51.5-0.15	A	
14-11	3	345-64083-0	SHIM 41-51.5-0.3	A	
14-11	4	345-64084-0	SHIM 41-51.5-0.5	A	
14-13	1	3C8-64301-0	DRIVE SHAFT (S)	1	for Transom "S"
14-13	2	3C8-64302-0	DRIVE SHAFT (L)	1	for Transom "L"
14-13	3	3C8-64303-0	DRIVE SHAFT (UL)	1	for Transom "UL"
14-13	4	3C8-64304-0	DRIVE SHAFT (LL)	1	for Transom "LL"
14-14		3C8-60213-0	BALL BEARING 6304	2	
14-15		3C8-64327-0	DRIVE SHAFT SPRING	1	
14-16		3C8-65021-2	WATER PUMP IMPELLER	1	
14-17		332-65022-0	KEY	1	
14-18		3T5-65016-0	PUMP CASE (UPPER)	1	
14-19		3T5-65011-0	PUMP CASE LINER	1	
14-20		3C8-65014-0	WATER PIPE SEAL (LOWER)	1	
14-21		3C8-65017-1	PUMP CASE (LOWER)	1	
14-22		3C8-64084-0	SHIM 32.9-26-0.5	1	
14-23		3C8-60223-0	OIL SEAL 17-33-6	2	
14-24		345-65015-0	O-RING 3.2-47	1	

Fig. 14 GEAR CASE (DRIVE SHAFT)M40/50D2 • MX50D2

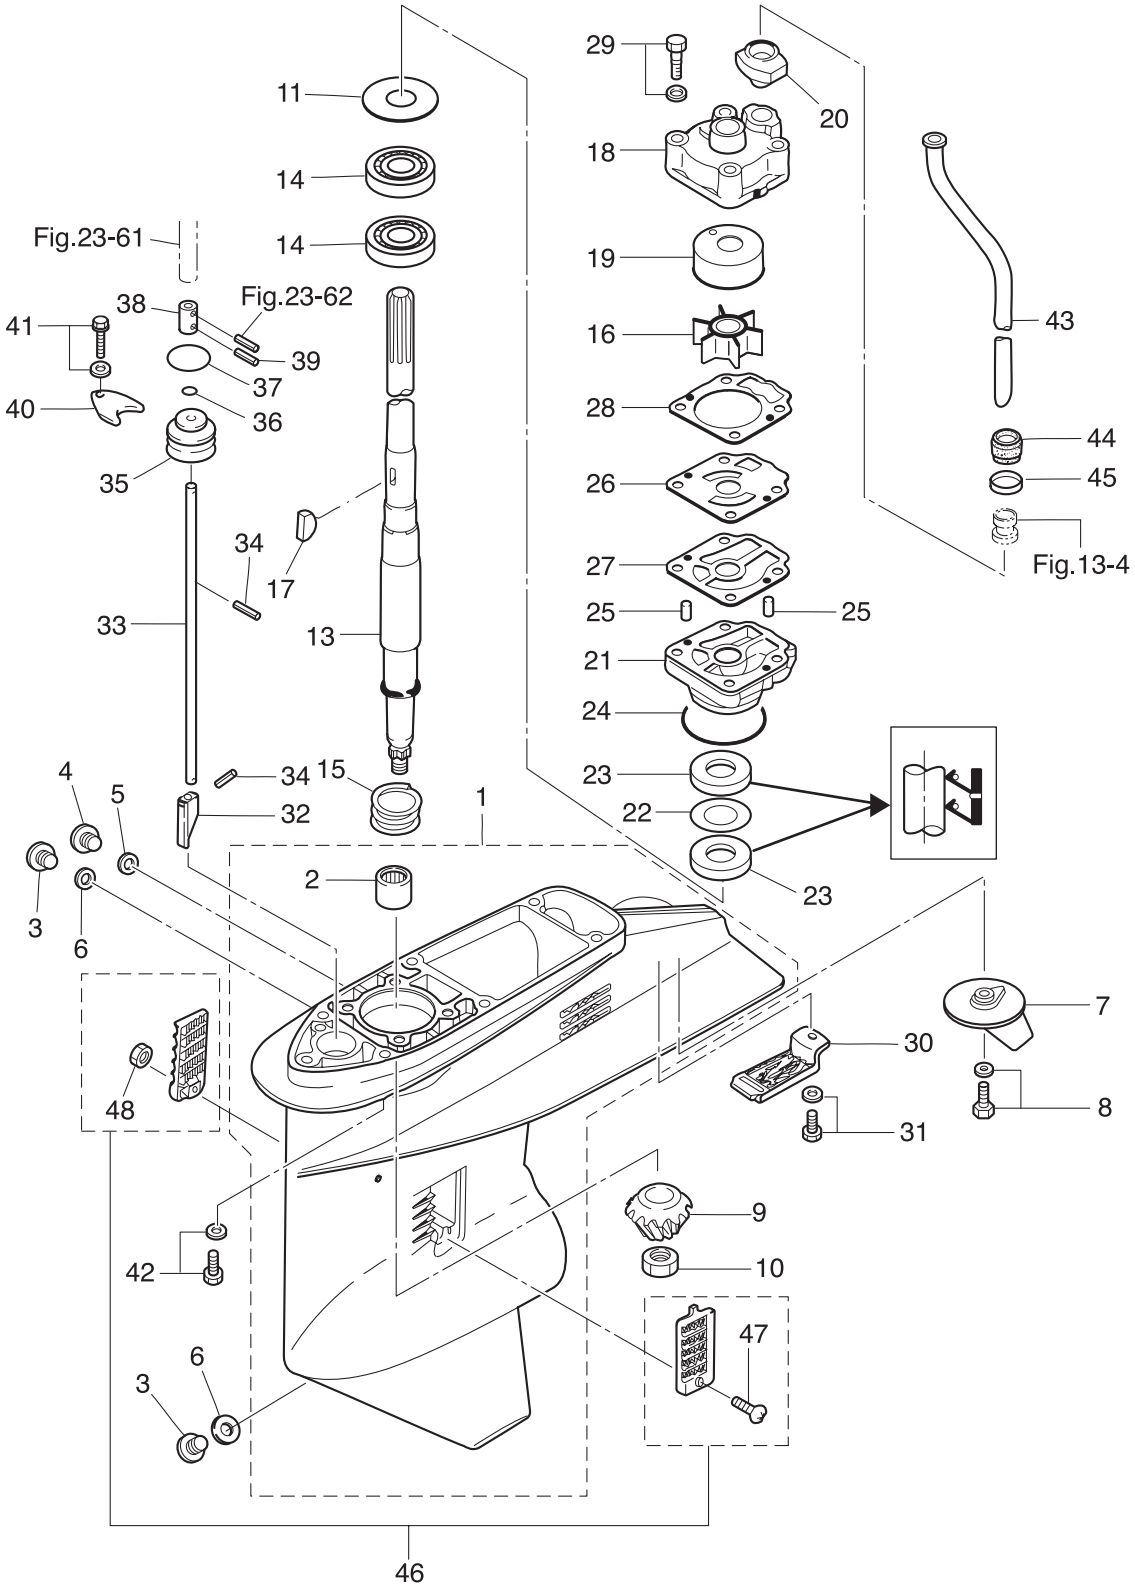


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
14-25		334-65012-0	DOWEL PIN 4-10	2	
14-26		3C8-65025-0	WATER PUMP GUIDE PLATE	1	
14-27		3C8-65029-2	GUIDE PLATE GASKET	1	
14-28		3T5-65018-2	PUMP CASE GASKET	1	
14-29		9101E3-5855	BOLT	4	
14-30		3C8-60204-0	SUB-WATER INLET STRAINER	1	
14-31		910103-5616	BOLT	1	
14-32		3C8-66011-0	CLUTCH CAM	1	
14-33	1	3C8-66012-0	CAM ROD (S)	1	for Transom "S"
14-33	2	3C8-66013-0	CAM ROD (L)	1	for Transom "L"
14-33	3	3C8-66014-0	CAM ROD (UL)	1	for Transom "UL"
14-33	4	3C8-66015-0	CAM ROD (LL)	1	for Transom "LL"
14-34		951407-0312	SPRING PIN 3-12	2	
14-35		3C8-66031-1	CAM ROD BUSHING	1	
14-36		332-66021-0	O-RING 2.4-5.8	1	
14-37		3C8-66032-0	O-RING 3.5-21.7	1	
14-38		3C8-66241-0	SHIFT ROD JOINT	1	
14-39		951403-0312	SPRING PIN 3-12	1	
14-40		353-66024-0	STOPPER	1	
14-41		910103-6612	BOLT	1	
14-42		9101E3-5835	BOLT	6	
14-43	1	3C8-65100-0	WATER PIPE (S)	1	M(X)40/50D2 for Transom "S" MW50D2 for Transom "L"
14-43	2	3C8-65110-0	WATER PIPE (L)	1	M40/50D2, MX50D2 for Transom "L"
14-43	3	3C8-65120-0	WATER PIPE (UL)	1	M40/50D2, MX50D2 for Transom "UL"
14-43	4	3C8-65130-0	WATER PIPE (LL)	1	M40/50D2, MX50D2 for Transom "LL"
14-44		345-65206-0	WATER PIPE SEAL (UPPER)	1	
14-45		345-65205-0	COLLAR 18-20-4.5	1	
14-46		3C8-60205-1	WATER STRAINER SET	1	
14-47		921503-0438	* SCREW	1	

Fig. 14 GEAR CASE (DRIVE SHAFT)M40/50D2 • MX50D2

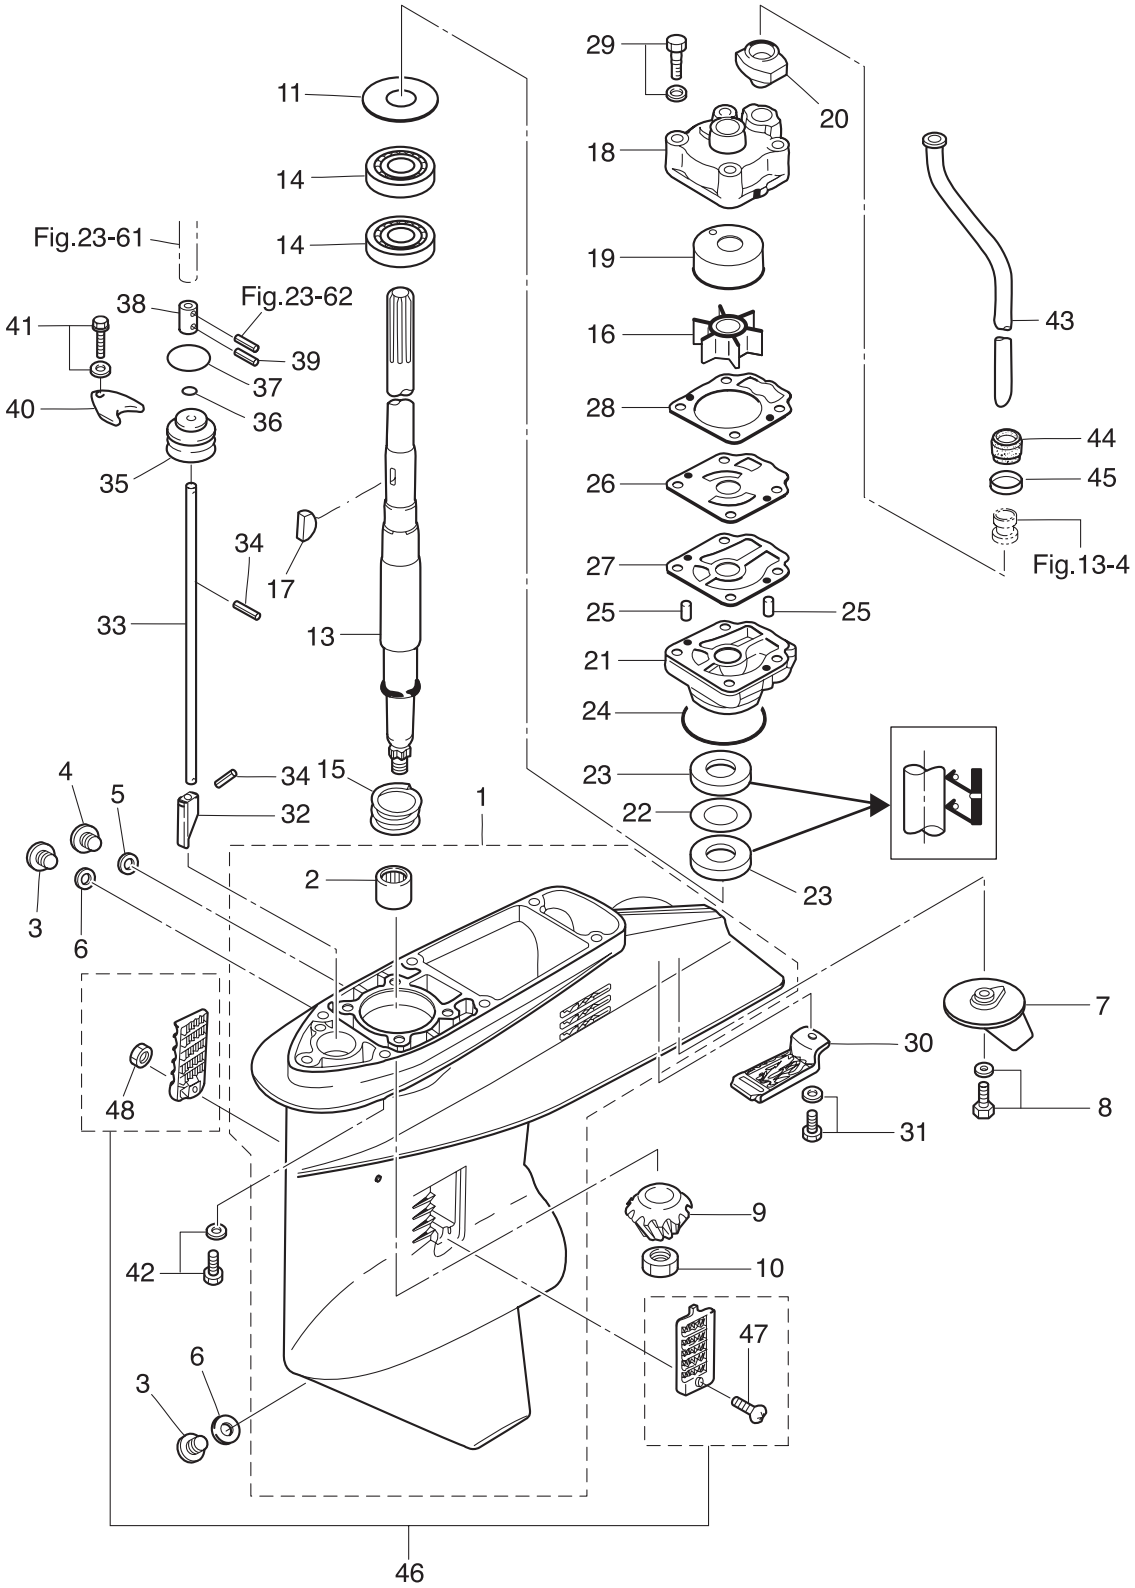


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
14-48	930403-0400	* NYLON NUT 4-P0.7	1	

Fig. 15 GEAR CASE (PROPELLER SHAFT) M40/50D2・MX50D2

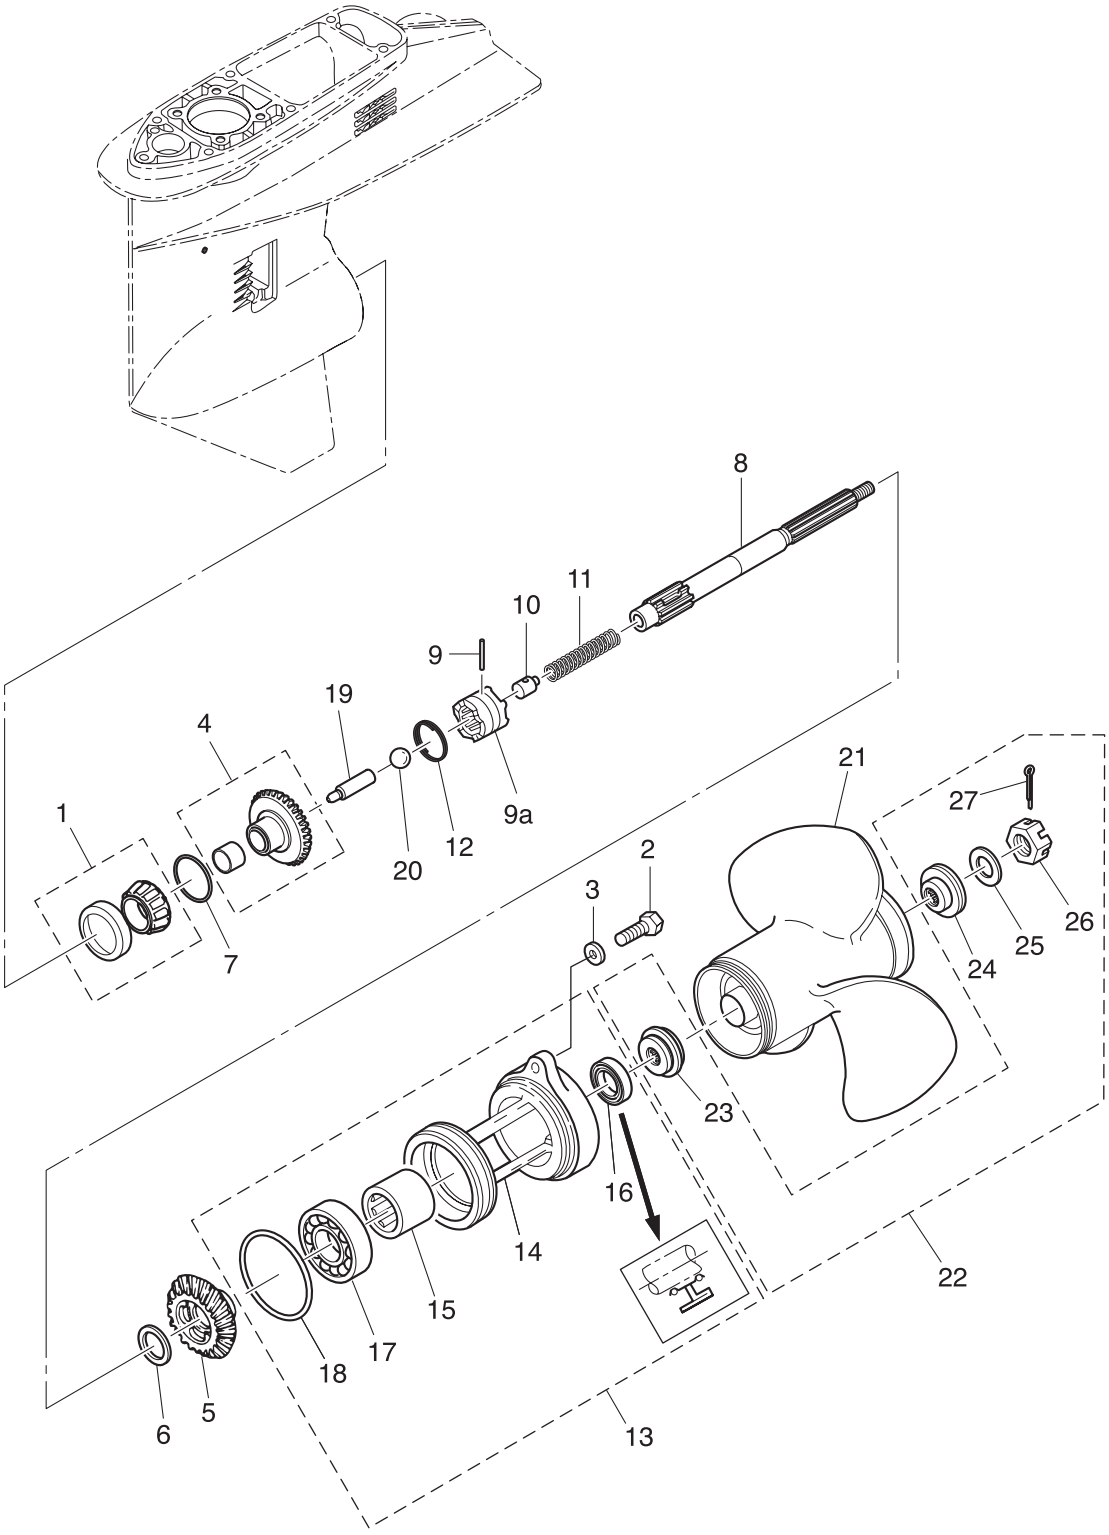


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
15-1		345-60215-0	TAPERED ROLLER BEARING 32007	1	
15-2		3C8-60108-1	PRE-COATED BOLT 6-25	2	
15-3		9401E3-0600	WASHER	2	
15-4		3C8-64010-1	BEVEL GEAR ASSY (A)	1	
15-5		3C8-64030-0	BEVEL GEAR C	1	
15-6		345-64032-0	WASHER 22.1-28-3	1	
15-7	1	353-64036-0	SHIM 36-44-0.3	A	
15-7	2	353-64037-0	SHIM 36-44-0.15	A	
15-7	3	353-64038-0	SHIM 36-44-0.1	A	
15-8		3C8-64211-0	PROPELLER SHAFT	1	
15-9		3C8-64217-0	PIN	1	
15-9a		3C8-64215-2	CLUTCH	1	
15-10		3C8-64222-0	SPRING RETAINER	1	
15-11		3C8-64221-0	SPRING	1	
15-12		3C8-64219-1	SNAP	1	
15-13		3C8Q60100-0	PROPELLER SHAFT HOUSING ASSY	1	
15-14		3C8Q60101-0	* PROPELLER SHAFT HOUSING	1	
15-15		345-60211-0	* ROLLER BEARING 22-30-30	1	
15-16		334-60223-0	* OIL SEAL 22-36-10	1	
15-17		9601-0-6007	* BALL BEARING 6007	1	
15-18		345-60103-0	* O-RING 3.5-69.4	1	
15-19		3C8-64223-1	PUSH ROD	1	
15-20		965002-0803	BALL 3/8	1	
15-21	1	3T5B64518-0	PROPELLER ASSY (9″)	1	MX50D2: ″UL″ STD 3 x 311 x 229
15-21	2	3T5B64523-0	PROPELLER ASSY (11″)	1	M40D2/MX50D2: ″S″,″L″ & ″LL″ STD 3 x 290 x 279
15-21	5	3T5B64529-0	PROPELLER ASSY (14″)	1	OPT 3 x 279 x 356
15-21	6	3T5B64532-0	PROPELLER ASSY (15″)	1	OPT 3 x 278 x 381
15-21	7	348B64108-1	PROPELLER ASSY (7″)	1	OPT 4 x 290 x 180
15-22		3T5-87326-0	PROPELLER HARDWARE KIT	1	

Fig. 15 GEAR CASE (PROPELLER SHAFT) M40/50D2・MX50D2

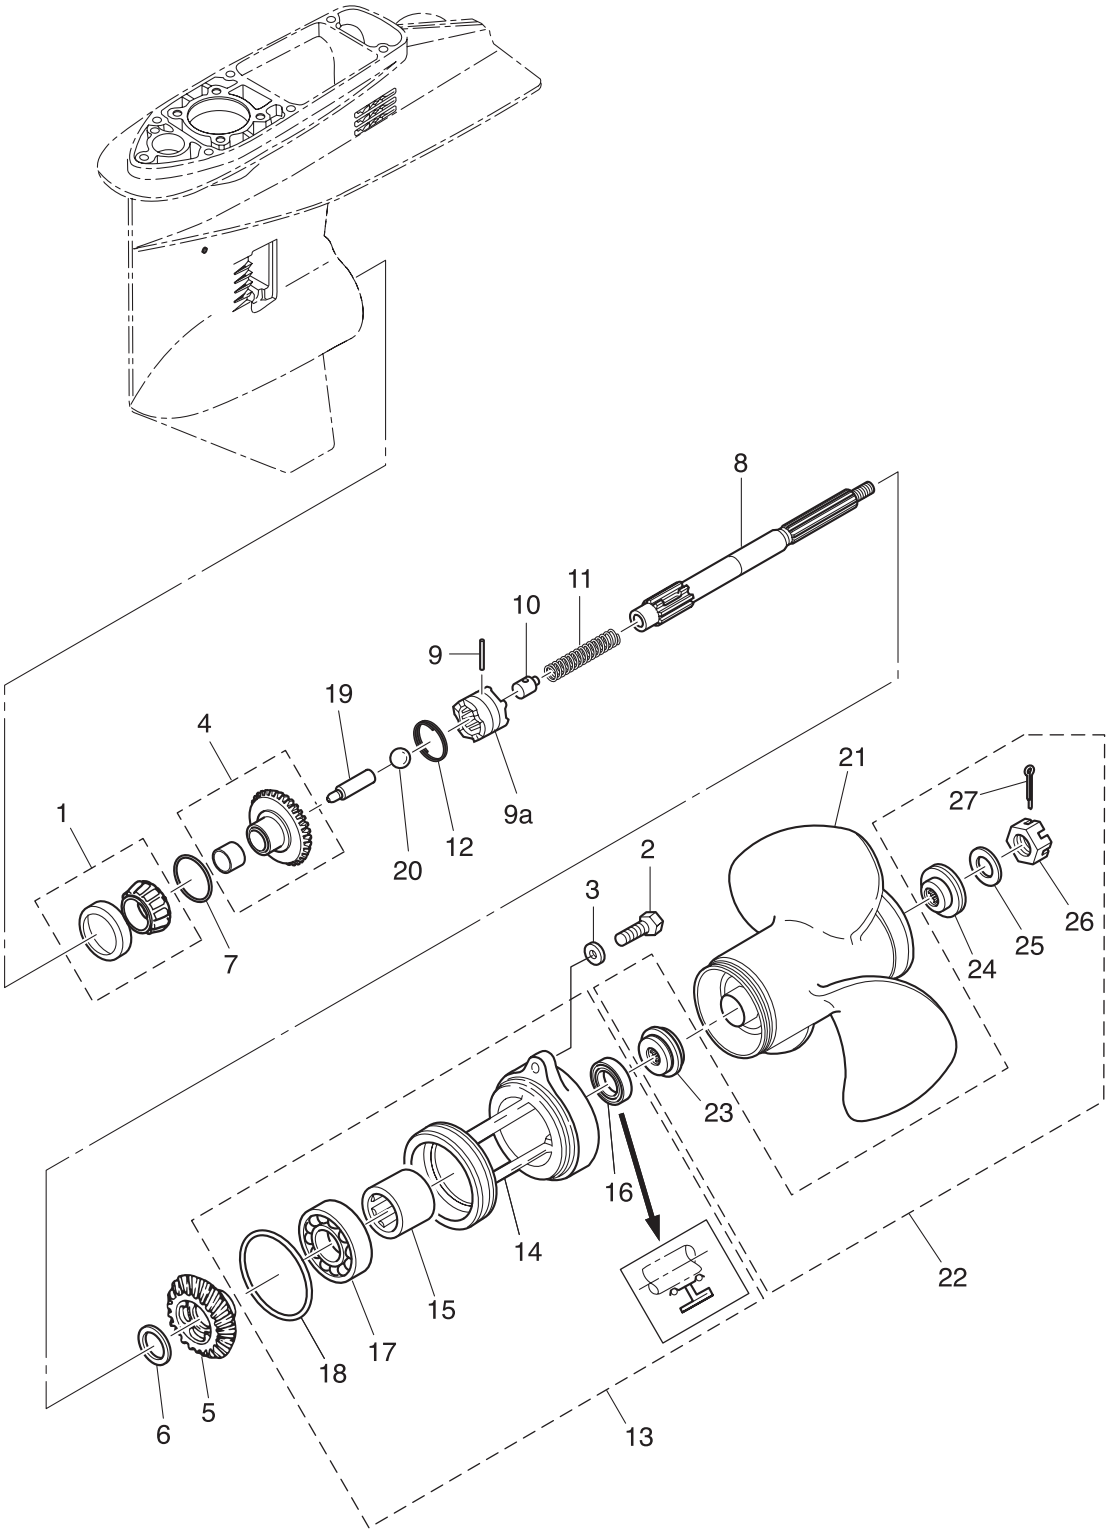


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
15-23	3C8-64231-0	* THRUST HOLDER	1	
15-24	348-64232-0	* STOPPER	1	
15-25	345-64124-0	* WASHER 17-32-3	1	
15-26	353-64121-0	* PROPELLER NUT	1	
15-27	951503-0325	* SPLIT PIN 3-25	1	

Fig. 16 GEAR CASE (DRIVE SHAFT) MW50D2/MWX50D2

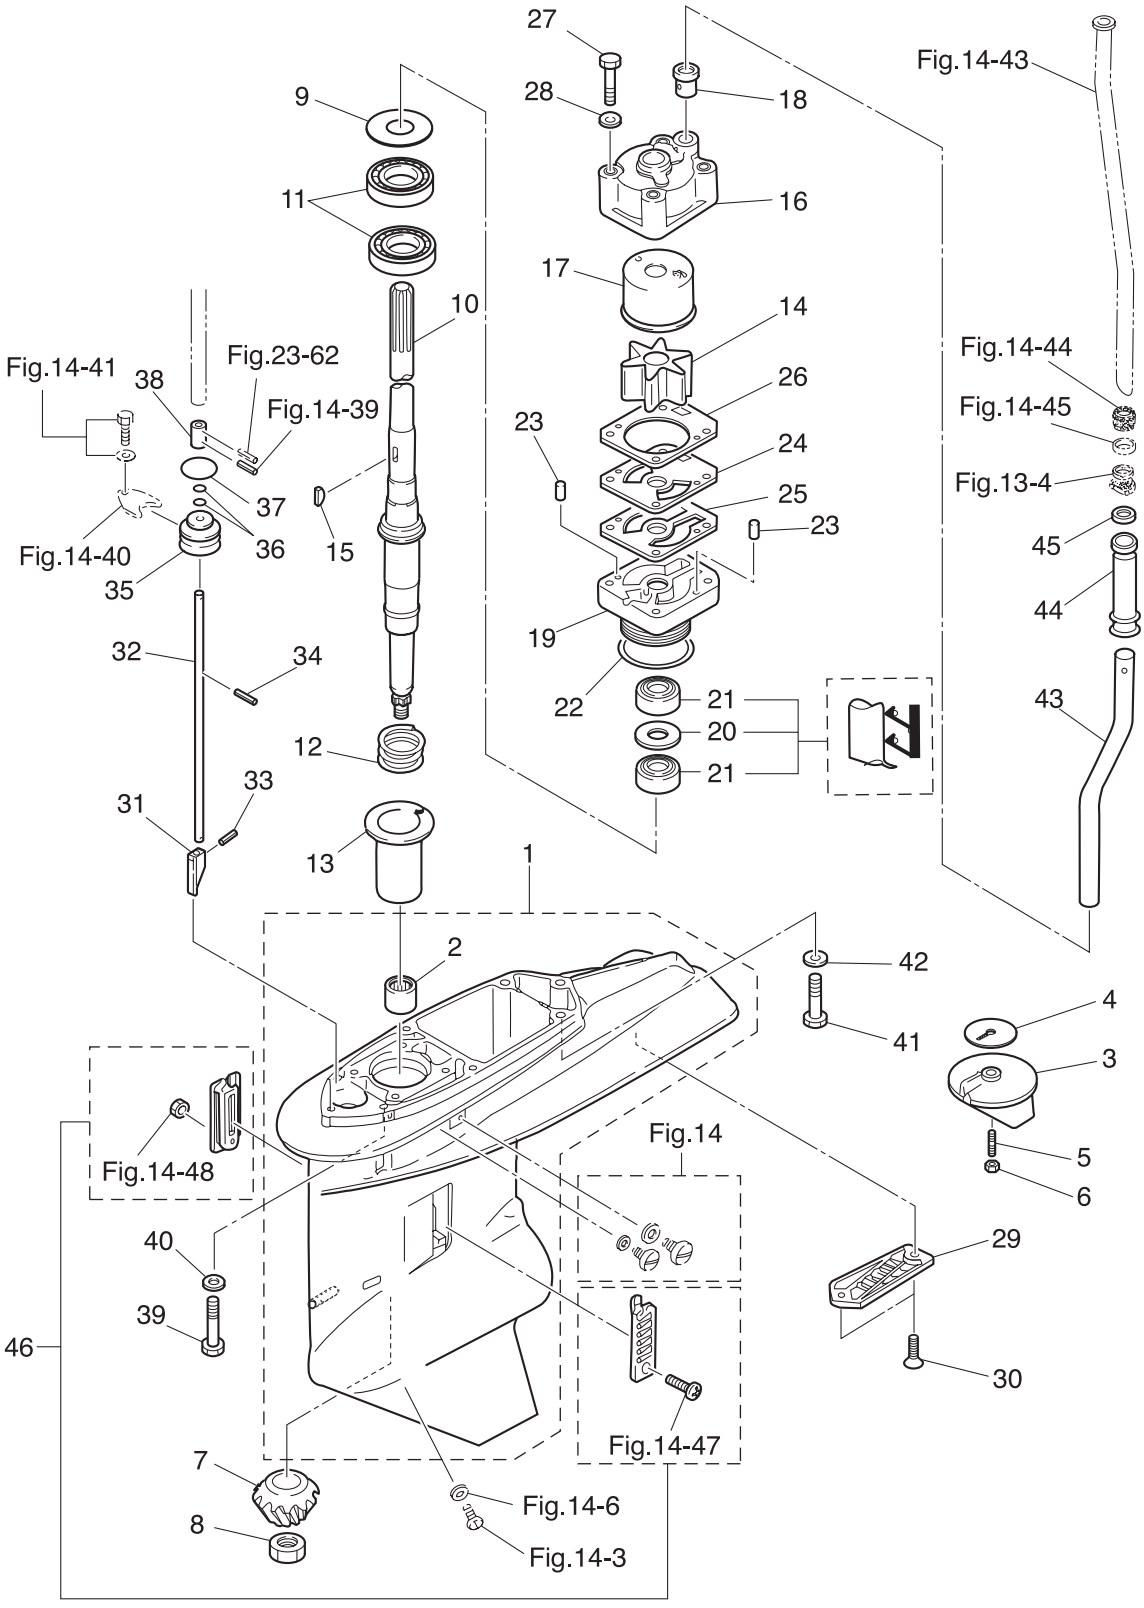


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
16-1		3S7Q60090-1	GEAR CASE ASSY	1	Sub Water Pipe
16-2		353-60211-0	* ROLLER BEARING 25-33-30	1	
16-3		3B7-60217-1	TRIM TAB	1	
16-4		3B7-60219-0	TRIM TAB GASKET	1	
16-5		915303-0825	STUD	1	
16-6		930403-0800	NYLON NUT 8-P1.25	1	
16-7		3F3-64020-0	BEVEL GEAR B	1	
16-8		353-64027-0	NUT	1	
16-9	1	353-64081-0	SHIM 44-50.5-0.1	A	
16-9	2	353-64082-0	SHIM 44-50.5-0.15	A	
16-9	3	353-64083-0	SHIM 44-50.5-0.3	A	
16-10		3S7-64302-0	DRIVE SHAFT (L)	1	
16-11		3S7-60213-0	BALL BEARING 6205R	2	
16-12		353-64327-0	DRIVE SHAFT SPRING	1	
16-13		3A3-64328-0	DRIVE SHAFT SPRING GUIDE	1	
16-14		3B7-65021-2	WATER PUMP IMPELLER	1	
16-15		3B7-65022-1	KEY	1	
16-16		3B7-65016-0	PUMP CASE SUB-ASSY (UPPER)	1	
16-17		3B7-65238-0	PUMP CASE LINER	1	Chrome Plated
16-18		3B7-65014-0	WATER PIPE SEAL (LOWER)	1	
16-19		3F3-65017-1	PUMP CASE (LOWER)	1	
16-20		3F3-64084-0	SHIM 36.9-30-0.5	1	
16-21		3F3-60223-0	OIL SEAL 22-37-8	2	
16-22		345-65015-0	O-RING 3.2-47	1	
16-23		334-65012-0	DOWEL PIN 4-10	2	
16-24		3F3-65239-2	WATER PUMP GUIDE PLATE	1	Chrome Plated
16-25		3B7-65029-0	GUIDE PLATE GASKET	1	
16-26		3B7-65018-0	PUMP CASE GASKET	1	
16-27		9161E3-0880	BOLT	4	

Fig. 16 GEAR CASE (DRIVE SHAFT) MW50D2/MWX50D2

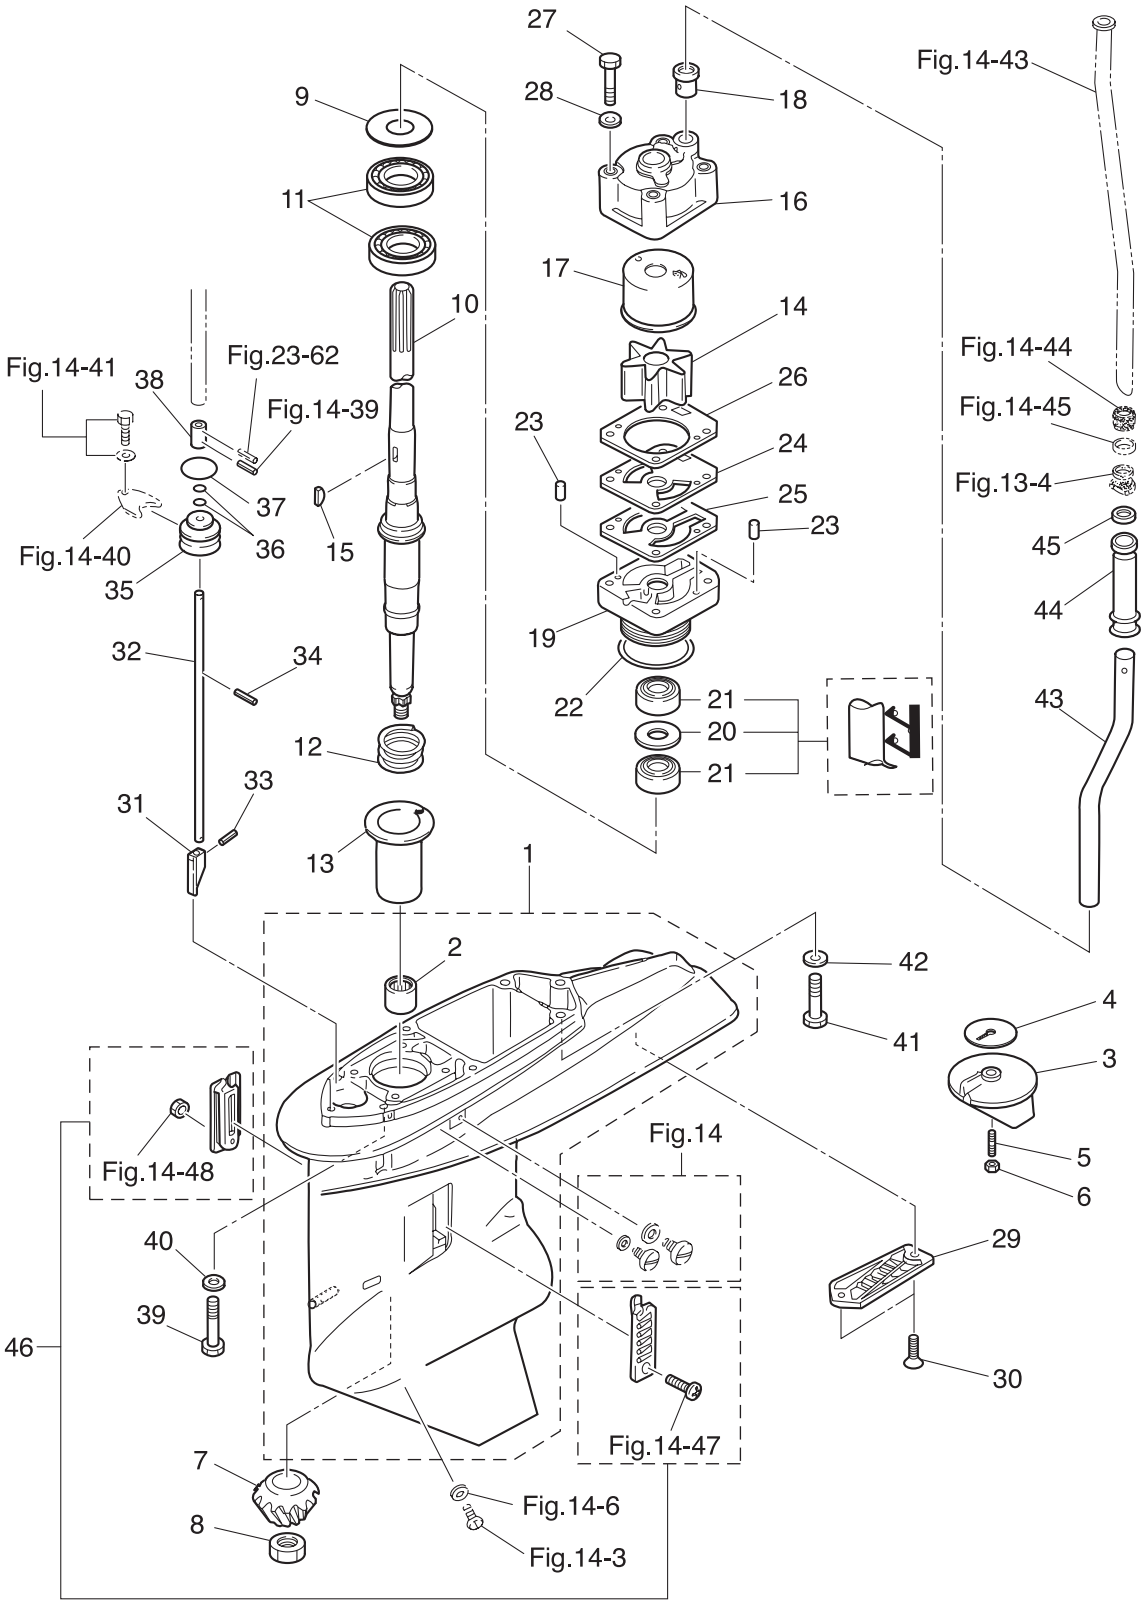


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
16-28	940103-0800	WASHER	4	
16-29	3F3-60204-0	SUB-WATER INLET STRAINER	1	
16-30	921503-0608	SCREW	2	
16-31	3S7-66011-0	CLUTCH CAM	1	
16-32	3S7-66013-0	CAM ROD (L)	1	
16-33	951403-3514	SPRING PIN 3.5-14	1	
16-34	951403-3510	SPRING PIN 3.5-10	1	
16-35	3B7-66031-1	CAM ROD BUSHING	1	
16-36	345-66021-0	O-RING 1.9-6.8	2	
16-37	3B7-66023-0	O-RING 3.5-27.7	1	
16-38	3S7-66241-0	SHIFT ROD JOINT	1	
16-39	3T1-60001-1	BOLT 8-35	4	
16-40	9402E3-0800	WASHER	4	
16-41	3B7-60001-5	BOLT 10-40	2	
16-42	9402E3-1000	WASHER	2	
16-43	3S7-60252-0	EXTENSION PIPE	1	
16-44	3S7-60251-0	JOINT HOSE	1	
16-45	345-65205-0	COLLAR 18-20-4.5	1	
16-46	3B7-60205-0	WATER STRAINER SET	1	Screw Nylon Nut

Fig. 17 GEAR CASE (PROPELLER SHAFT) MW50D2/MWX50D2

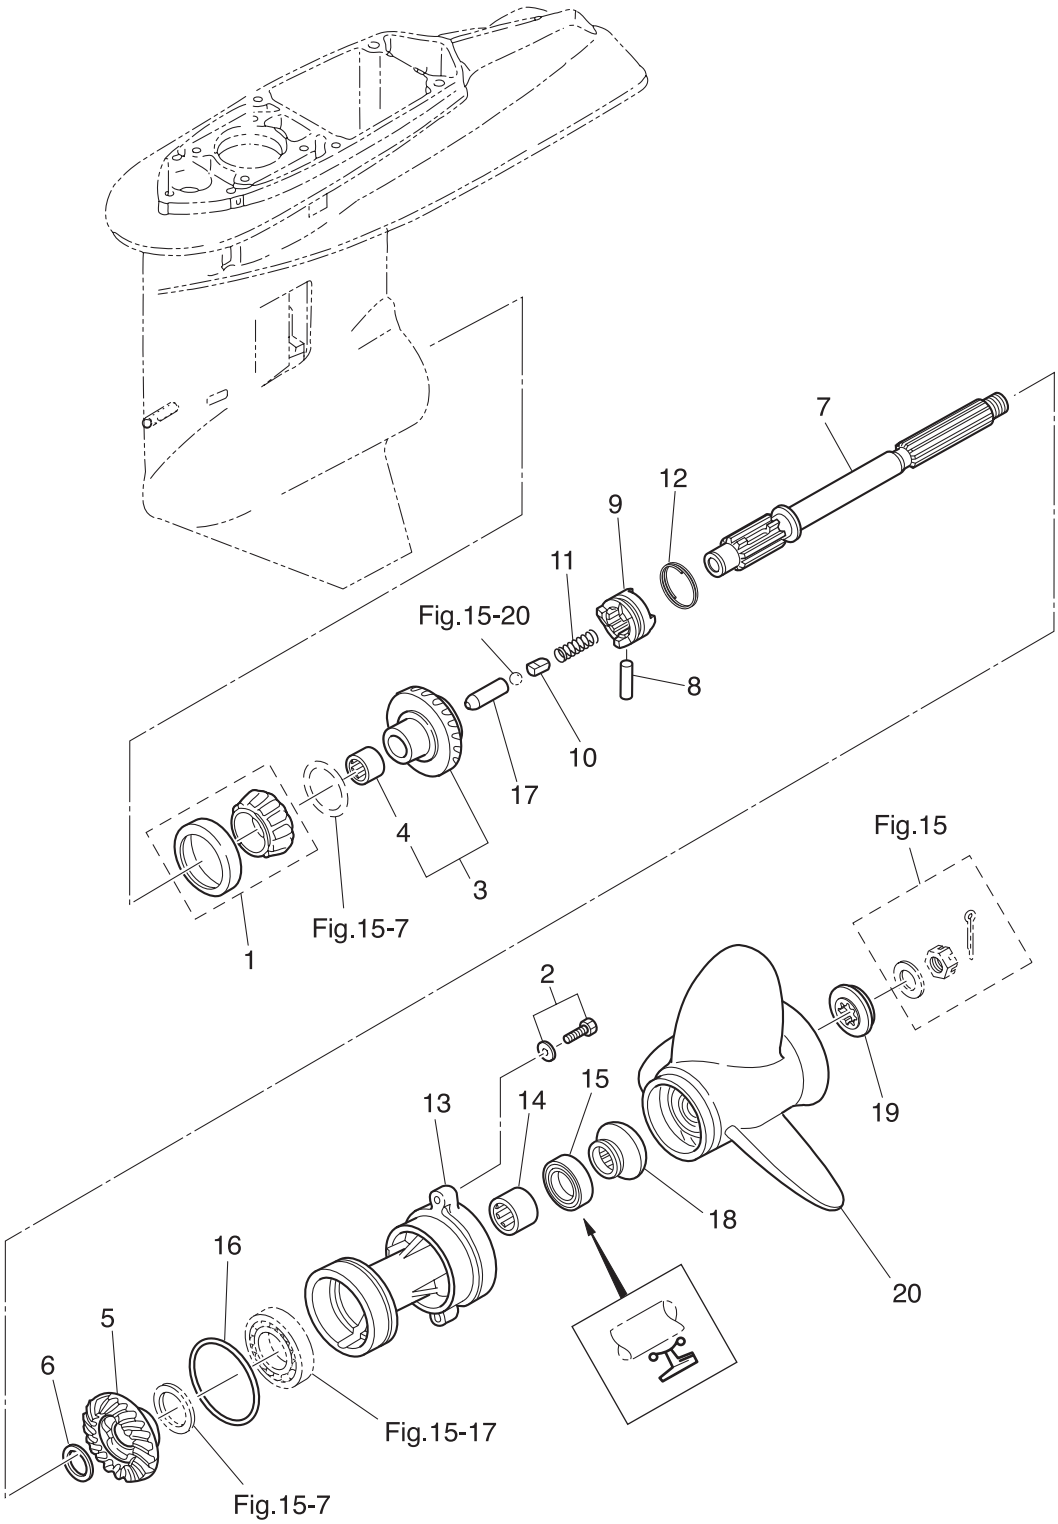


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
17-1		3F3-60215-0	TAPERED ROLLER BEARING 32007JR	1	
17-2		3C7-60108-2	PRE-COATED BOLT 8-30	2	
17-3		3F3-64010-3	BEVEL GEAR ASSY (A)	1	
17-4		345-64011-0	* ROLLER BEARING 202720	1	
17-5		3F3-64030-0	BEVEL GEAR C	1	
17-6	1	353-64032-0	WASHER t=3.0	A	
17-6	2	353-64034-0	WASHER t=2.75	A	
17-6	3	353-64035-0	WASHER t=2.5	A	
17-7		3A3-64211-0	PROPELLER SHAFT	1	
17-8		353-64218-1	PIN	1	
17-9		3F3-64215-0	CLUTCH	1	
17-10		3A3-64222-0	SPRING RETAINER	1	
17-11		346-64221-0	SPRING	1	
17-12		353-64219-2	SNAP	1	
17-13		3A3Q60101-0	PROPELLER SHAFT HOUSING	1	
17-14		353-60211-0	ROLLER BEARING 25-33-30	1	
17-15		353-60111-0	OIL SEAL 25-38-10	1	
17-16		353-60103-0	O-RING 3.5-74.6	1	
17-17		353-64223-1	PUSH ROD	1	
17-18		353-64231-0	THRUST HOLDER	1	
17-19		353-64233-0	STOPPER	1	
17-20	1	353B64101-0	PROPELLER ASSY (9″)	1	OPT 3 x 305 x 229
17-20	2	353B64102-0	PROPELLER ASSY (10″)	1	OPT 3 x 292 x 254
17-20	3	353B64103-0	PROPELLER ASSY (11″)	1	MWX50D2 STD 3 x 292 x 279
17-20	5	353B64105-0	PROPELLER ASSY (13″)	1	OPT 3 x 292 x 330
17-20	6	353B64106-0	PROPELLER ASSY (14″)	1	OPT 3 x 289 x 355
17-20	7	353B64107-0	PROPELLER ASSY (15″)	1	OPT 3 x 280 x 381
17-20	8	353B64108-0	PROPELLER ASSY (16.5″)	1	OPT 3 x 273 x 417
17-20	9	353B64109-0	PROPELLER ASSY (17.5″)	1	OPT 3 x 276 x 447

Fig. 18 BRACKET (MANUAL TILT)

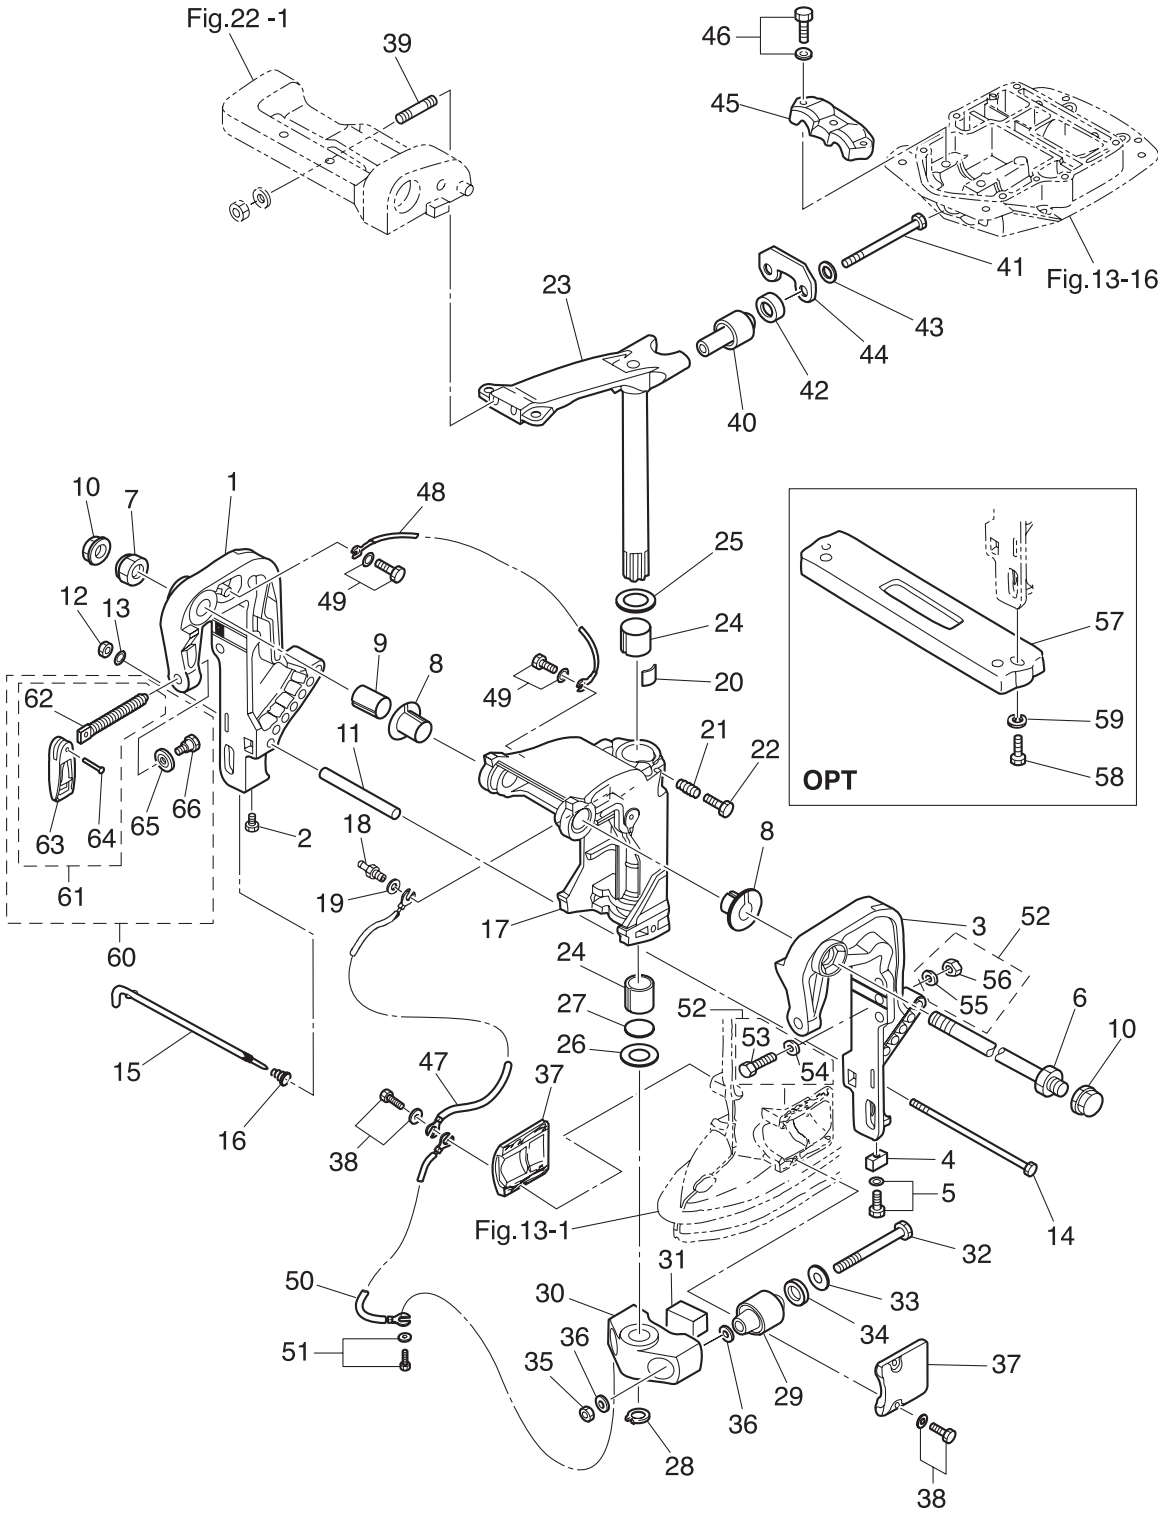


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
18-1	3C8Q62112-1	CLAMP BRACKET (R)	1	Starboard Side
18-2	9101E3-0612	BOLT	1	
18-3	3C8Q62113-1	CLAMP BRACKET (L)	1	Port Side
18-4	3B7-60218-1	ANODE	1	
18-5	910103-5635	BOLT	1	
18-6	3AC-62191-0	SWIVEL BRACKET SHAFT ASSY	1	Bracket Bolt
18-7	346-62124-1	NYLON NUT 7/8-14	1	
18-8	349-62126-0	BUSHING	2	
18-9	3C8-62132-0	BUSHING 22-25-35.5	1	
18-10	346-62127-0	CAP NUT	2	for MF/EF Type
18-11	3C8-62117-1	DISTANCE PIECE	1	
18-12	930103-0800	NUT	1	
18-13	9401E3-0800	WASHER	1	
18-14	3C8-62120-1	BOLT 8-170	1	
18-15	3C8-62121-1	THRUST ROD	1	
18-16	345-62122-2	THRUST ROD SPRING	1	
18-17	3C8Q62310-3	SWIVEL BRACKET	1	
18-18	344-67177-1	GREASE FITTING	1	
18-19	940103-0600	WASHER	1	
18-20	345-62441-0	FRICTION PIECE	1	
18-21	346-62421-1	FRICTION SPRING	1	
18-22	9101E3-0830	BOLT	1	
18-23	3E3Q62010-0	STEERING SHAFT ASSY	1	
18-24	345-62417-0	BUSHING 26-32	2	
18-25	3A0-62423-2	THRUST PLATE (UPPER) 27-50-1	1	
18-26	346-62424-1	THRUST PLATE (LOWER) 26.5-46-1	1	
18-27	3H8-62415-0	O-RING 3.5-25.7	1	
18-28	945103-2500	C-RING d=25	1	
18-29	3C8-61302-1	RUBBER MOUNT (LOWER)	2	

Fig. 18 BRACKET (MANUAL TILT)

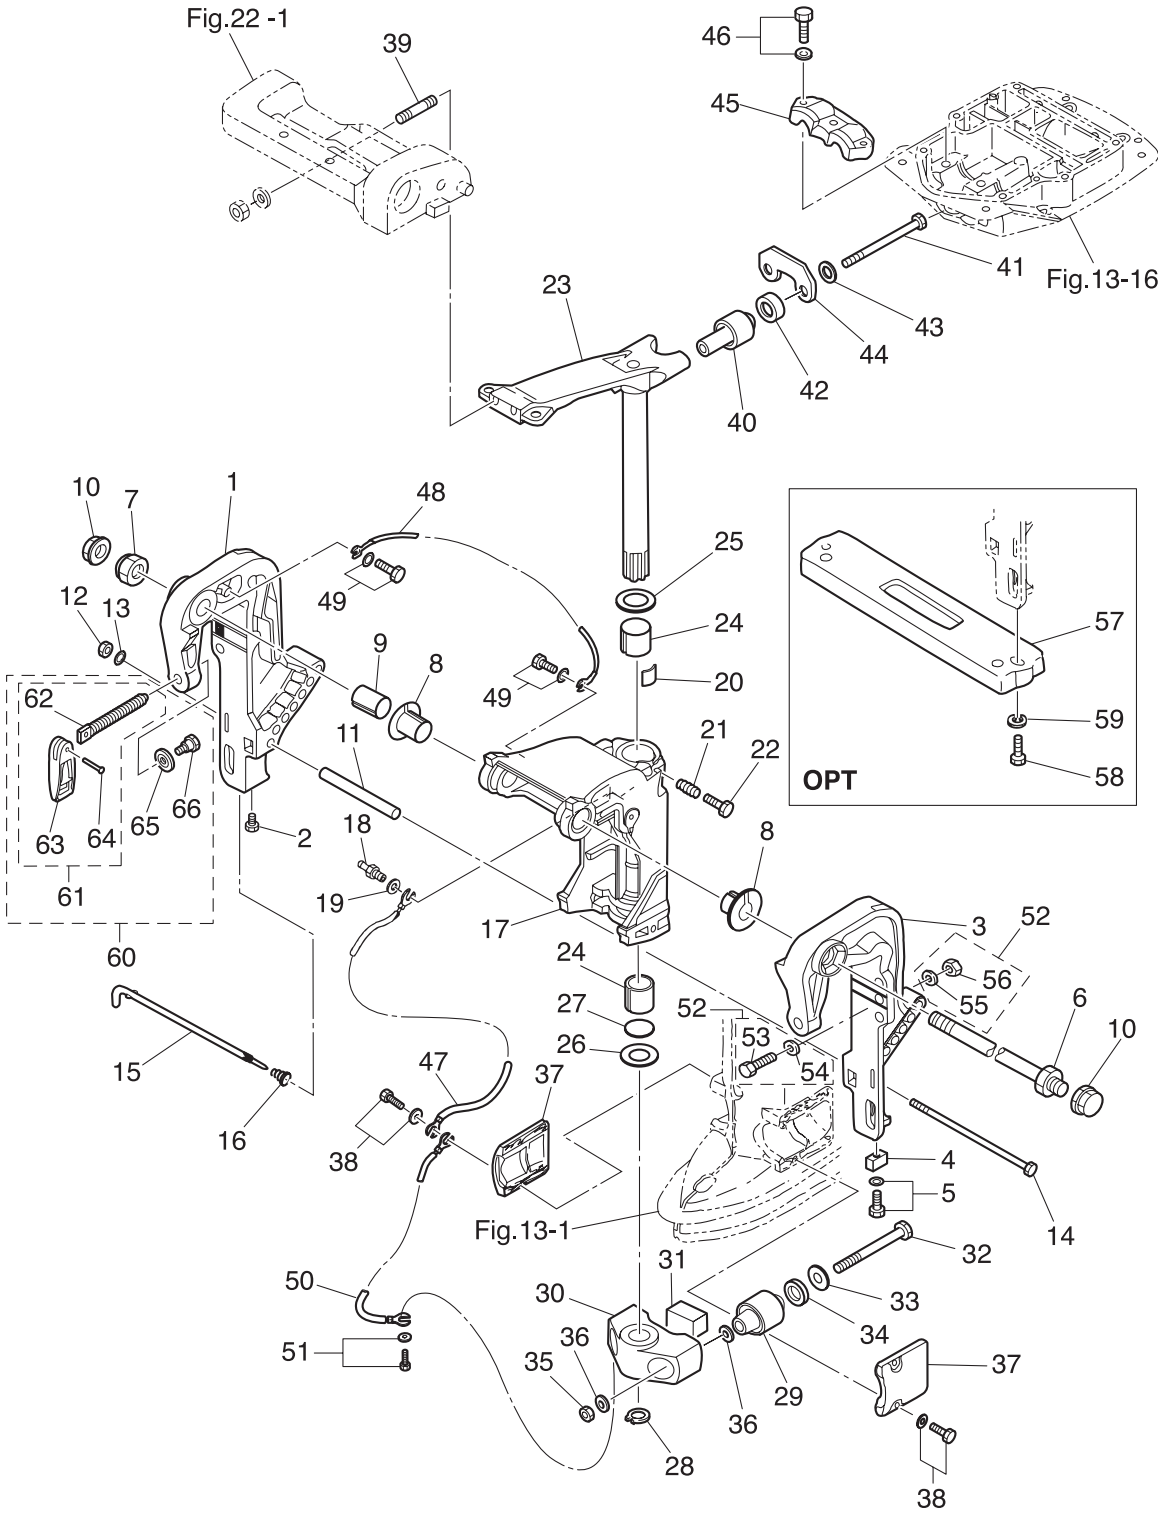


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
18-30	3C8Q61411-3	MOUNT BRACKET	1	
18-31	3C8-61336-0	DAMPER (LOWER)	1	
18-32	3C8-61321-1	BOLT	2	
18-33	353-61334-0	WASHER 13-34-3	2	
18-34	3C7-61338-0	DAMPER 21-36-5	2	
18-35	930403-1200	NYLON NUT 12-P1.75	2	
18-36	9402E3-1200	WASHER	4	
18-37	3C8Q61342-0	MOUNT HOLDING PLATE (LOWER)	2	
18-38	9101E3-5620	BOLT	4	
18-39	3C8-62097-0	STUD 10-50 P1.25	2	for MF/EF Type
18-40	3E3-61301-2	RUBBER MOUNT (UPPER)	2	
18-41	353-61307-1	BOLT	2	
18-42	3E3-61333-0	DAMPER (UPPER)	2	
18-43	353-61335-0	WASHER 10-29-3	2	
18-44	3E3-61335-0	LOCK PLATE	1	
18-45	3C8-61341-0	MOUNT HOLDING PLATE (UPPER)	1	
18-46	9101E3-5835	BOLT	3	
18-47	3C8-62396-1	GROUND L=210	1	Swivel Bracket -Drive Shaft Housing
18-48	398-62396-1	GROUND L=130	1	Clamp Bracket -Swivel Bracket
18-49	9101E3-5612	BOLT	2	
18-50	3A3-62396-1	GROUND L=110	1	Mount Bracket -Drive Shaft Housing
18-51	9101E3-5612	BOLT	1	
18-57	3C7-60218-2	ANODE	1	OPT
18-58	910103-0630	BOLT	2	OPT
18-59	941303-0600	SPRING WASHER	2	OPT
18-60	3E3Q62105-0	CLAMP SCREW KIT	2	
18-61	3E3Q62108-0	* CLAMP SCREW ASSY	1	
18-62	3E3-62106-0	** CLAMP SCREW	1	
18-63	332Q62102-1	** CLAMP SCREW HANDLE	1	

Fig. 18 BRACKET (MANUAL TILT)

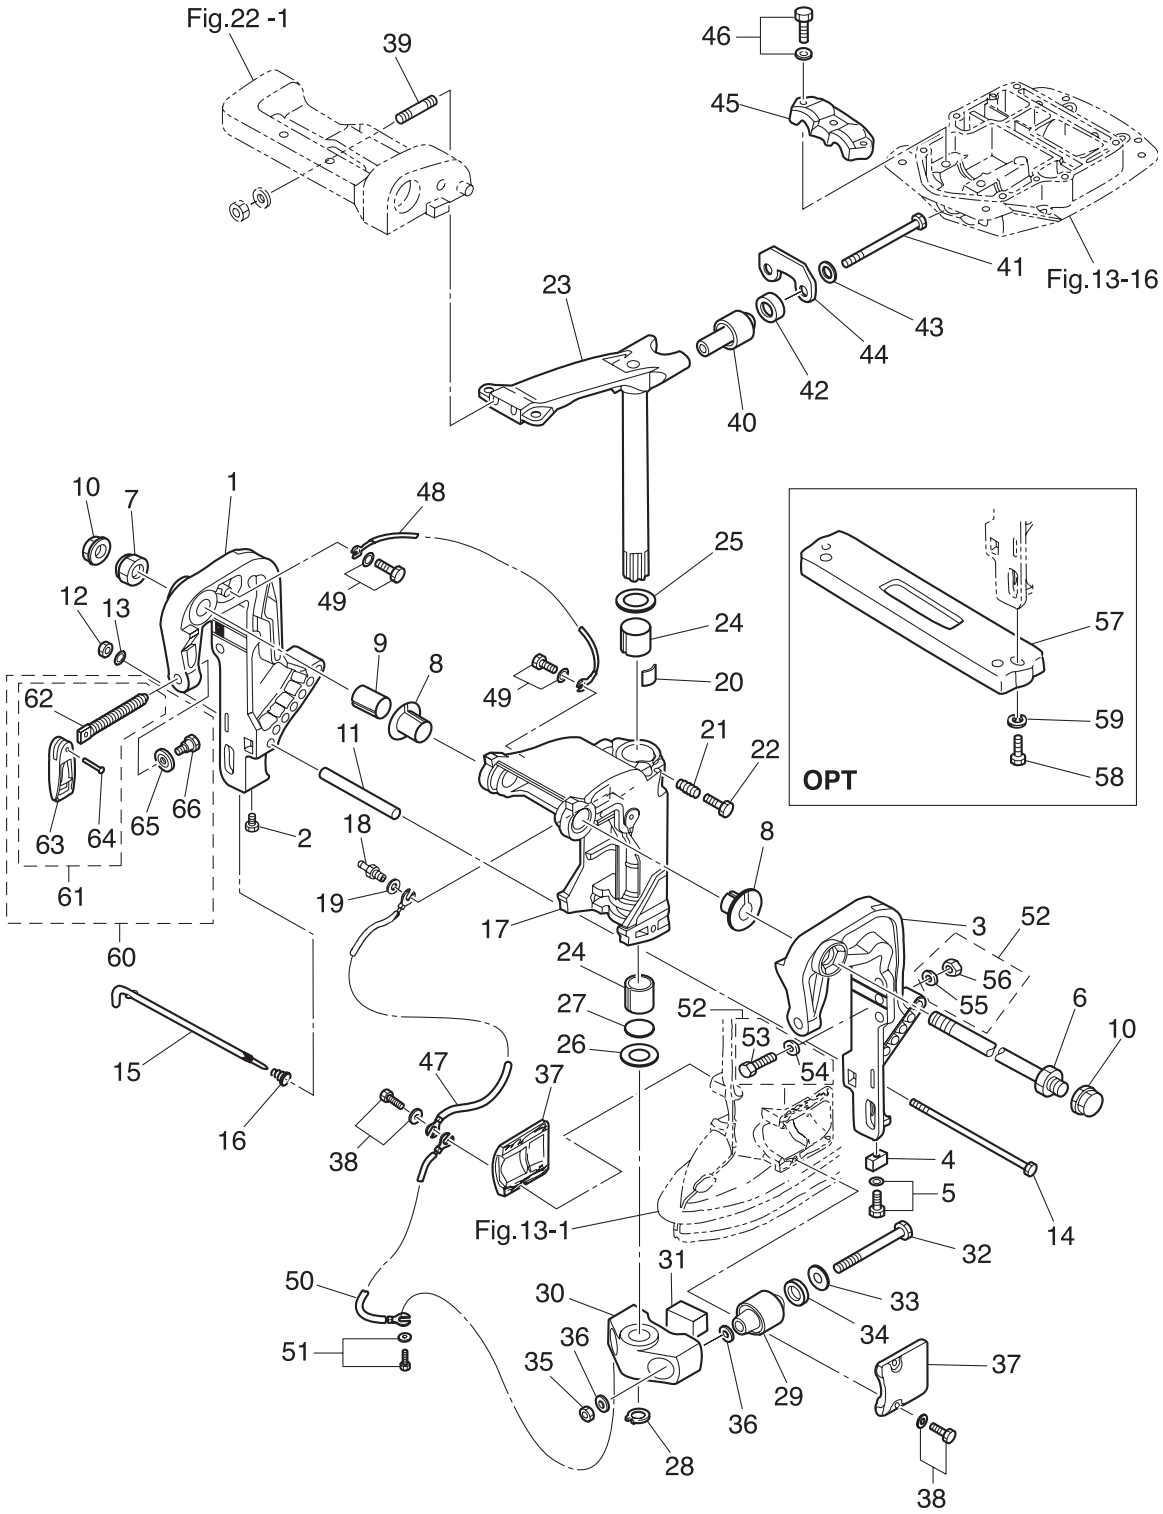


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
18-64	3C8-62104-2	** RIVET 3-22	1	
18-65	332-62101-1	* CLAMP SCREW PAD	1	
18-66	3C8-62107-0	* SHOULDER BOLT	1	

Fig. 19 MANUAL TILT

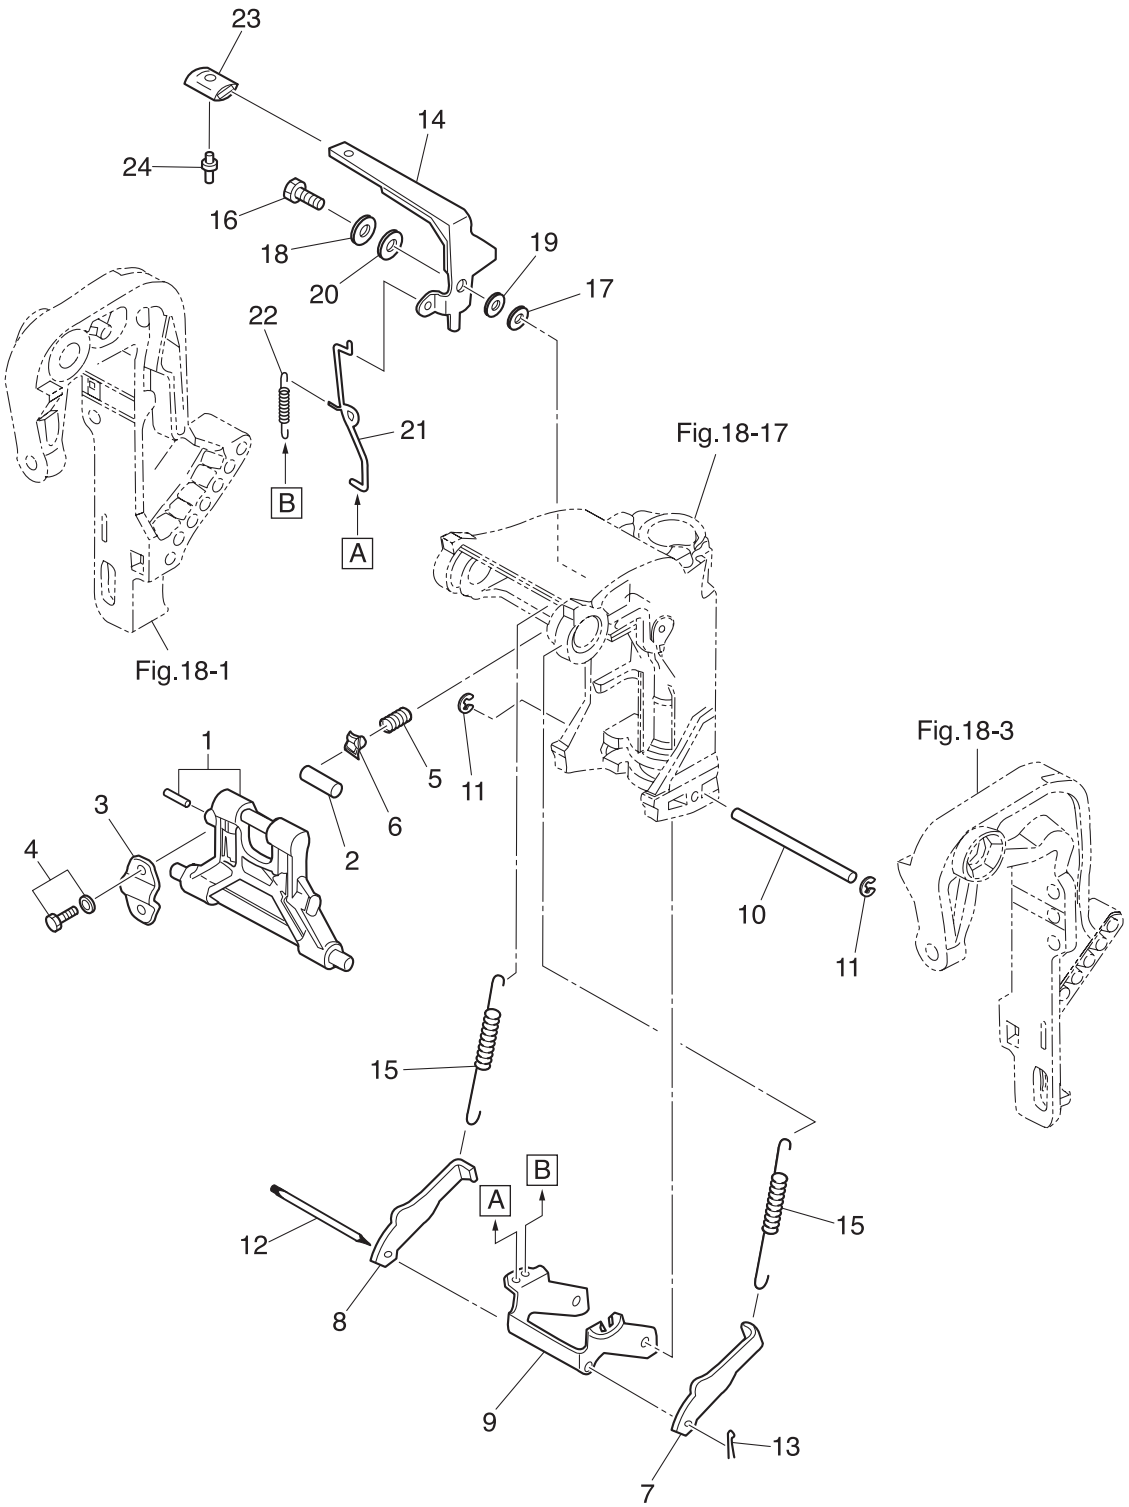


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
19-1		3C8Q62431-0	TILT STOPPER ASSY	1	
19-2		346-62437-0	BUSHING 10.2-12-29.5	1	
19-3		346-62439-1	SETTING PLATE	1	
19-4		9101E3-5820	BOLT	2	
19-5		3C8-62421-1	FRICTION SPRING	1	
19-6		346-62438-0	SETTING PIECE	1	
19-7		3C8-66352-2	REVERSE LOCK (L)	1	
19-8		3C8-66351-2	REVERSE LOCK (R)	1	
19-9		3C8-66313-4	REVERSE LOCK ARM	1	
19-10		3C8-66319-1	REVERSE LOCK SHAFT	1	
19-11		945303-0600	E-RING d=6	2	
19-12		3C8-66321-0	REVERSE LOCK ROD	1	
19-13		951503-0212	SPLIT PIN 2-12	1	
19-14		3E3-62436-1	TILT STOPPER LEVER	1	
19-15	1	3C8-66332-2	REVERSE LOCK SPRING (L)	2	for Transom "L","LL"&"UL"
19-15	2	3C8-66331-2	REVERSE LOCK SPRING (S)	2	for Transom "S"
19-16		3AL-05254-0	SHOULDER BOLT 6-8	1	
19-17		3R0-66308-0	WASHER 6-16-1.5	1	
19-18		940103-0800	WASHER	1	
19-19		3AL-05212-0	BUSHING 8.1-20	1	
19-20		3AA-83719-0	WASHER 8.5-18-1.6	1	
19-21		3C8-66318-1	LINK	1	
19-22		3C8-66336-0	SPRING	1	
19-23		346-66333-0	REVERSE LOCK LEVER GRIP	1	
19-24		346-66334-0	STOPPER	1	

Fig. 22 TILLER HANDLE (F TYPE)

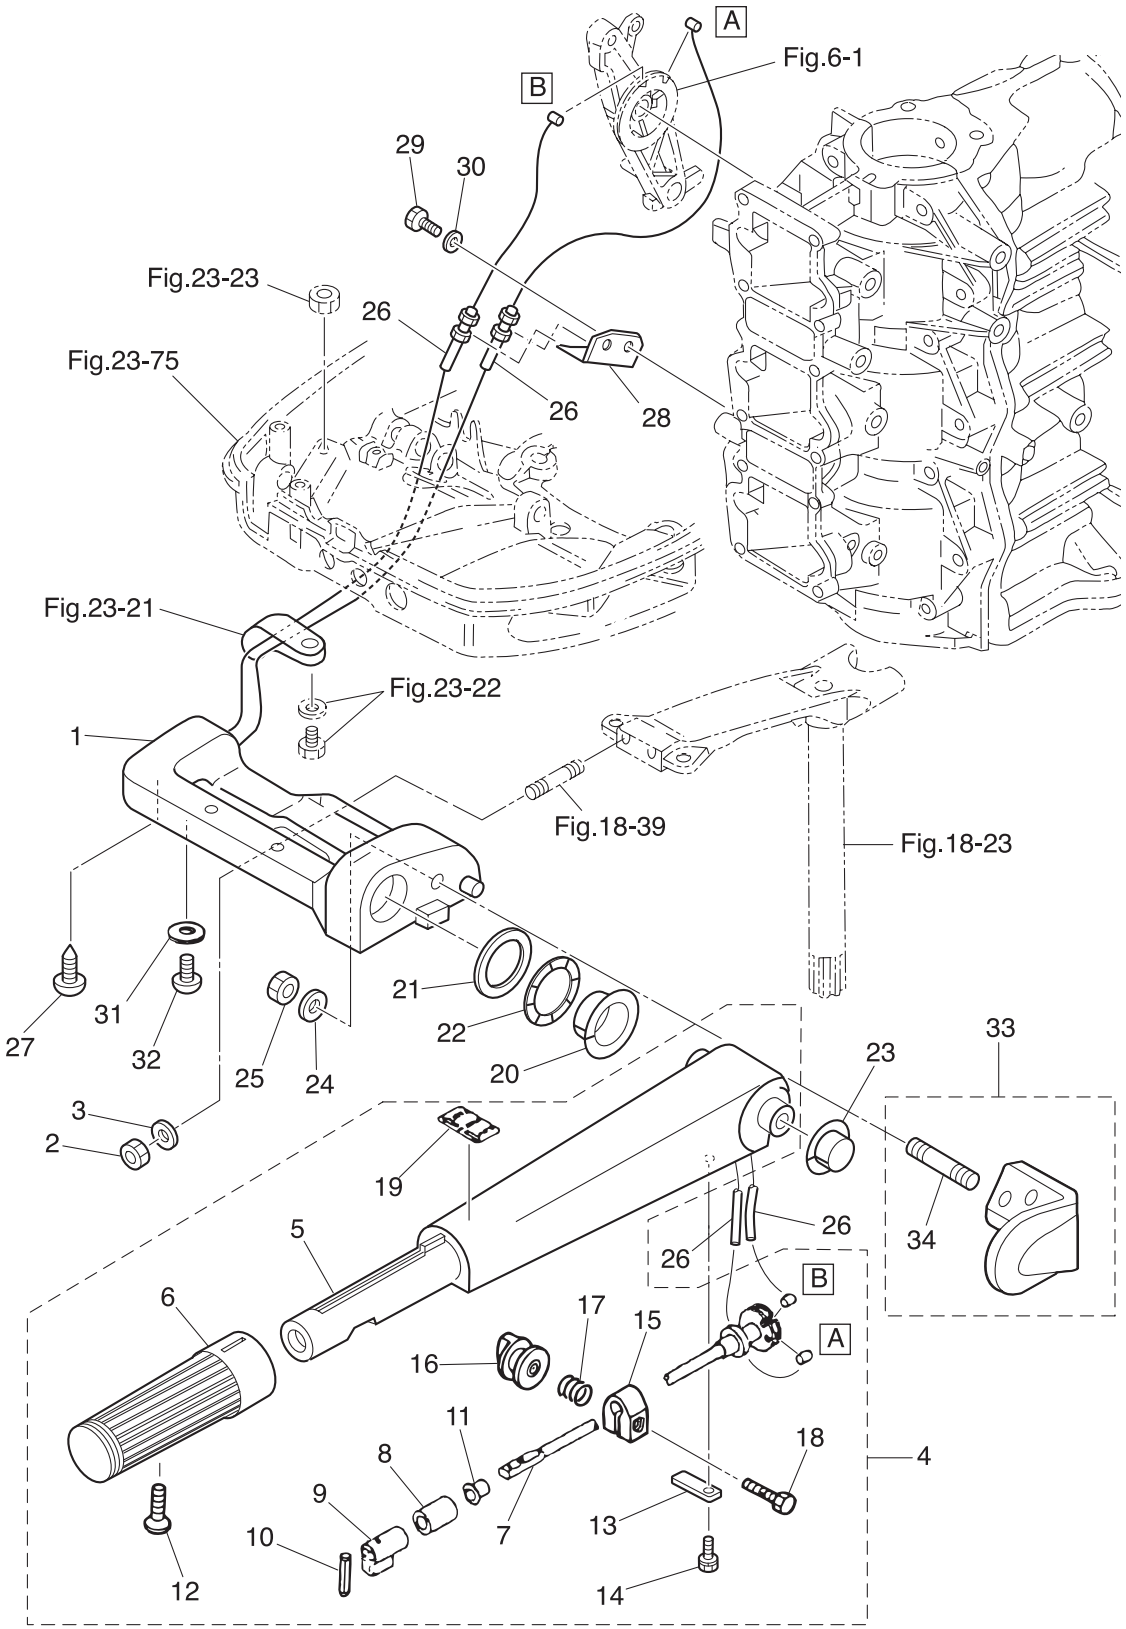


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
22-1	3E3Q62001-0	STEERING BRACKET	1	
22-2	3C8-62098-0	NYLON NUT 10-P1.25	2	
22-3	9402E3-1000	WASHER	2	
22-4	3C8Q63003-1	TILLER HANDLE ASSY	1	
22-5	3C8Q63011-2	* TILLER HANDLE	1	
22-6	398-63012-0	* GRIP	1	
22-7	3C8-63041-1	* THROTTLE SHAFT	1	
22-8	345-63048-0	* THROTTLE SHAFT DAMPER	1	
22-9	398-63053-0	* SPACER	1	
22-10	951403-0310	* SPRING PIN 3-10	1	
22-11	350-63046-0	* BUSHING 8.4-10-11	1	
22-12	921803-0525	* SCREW	1	
22-13	3C8-63063-0	* THROTTLE SHAFT SUPPORT	1	
22-14	9101E3-5612	* BOLT	1	
22-15	3V1-63035-1	* FRICTION PIECE	1	
22-16	3V1-63077-0	* ADJUSTING NUT	1	
22-17	3V1-63036-0	* SPRING	1	
22-18	9101E3-0625	* BOLT	1	
22-19	369-72019-1	* THROTTLE DECAL	1	
22-20	3C8-63101-0	BUSHING	1	
22-21	3B2-63108-0	WASHER 30-45-1	1	
22-22	3B2-63109-0	WAVE WASHER 30-45-1.2	1	
22-23	3C8-63102-1	BUSHING	1	
22-24	9401E3-1000	WASHER	1	
22-25	930103-1000	NUT 10-P1.5	1	
22-26	3C8-63600-1	THROTTLE WIRE	2	
22-27	3C8-63607-0	CLIP	1	
22-28	3C8-63508-1	THROTTLE WIRE BRACKET	1	
22-29	910103-0614	BOLT	2	

Fig. 22 TILLER HANDLE (F TYPE)

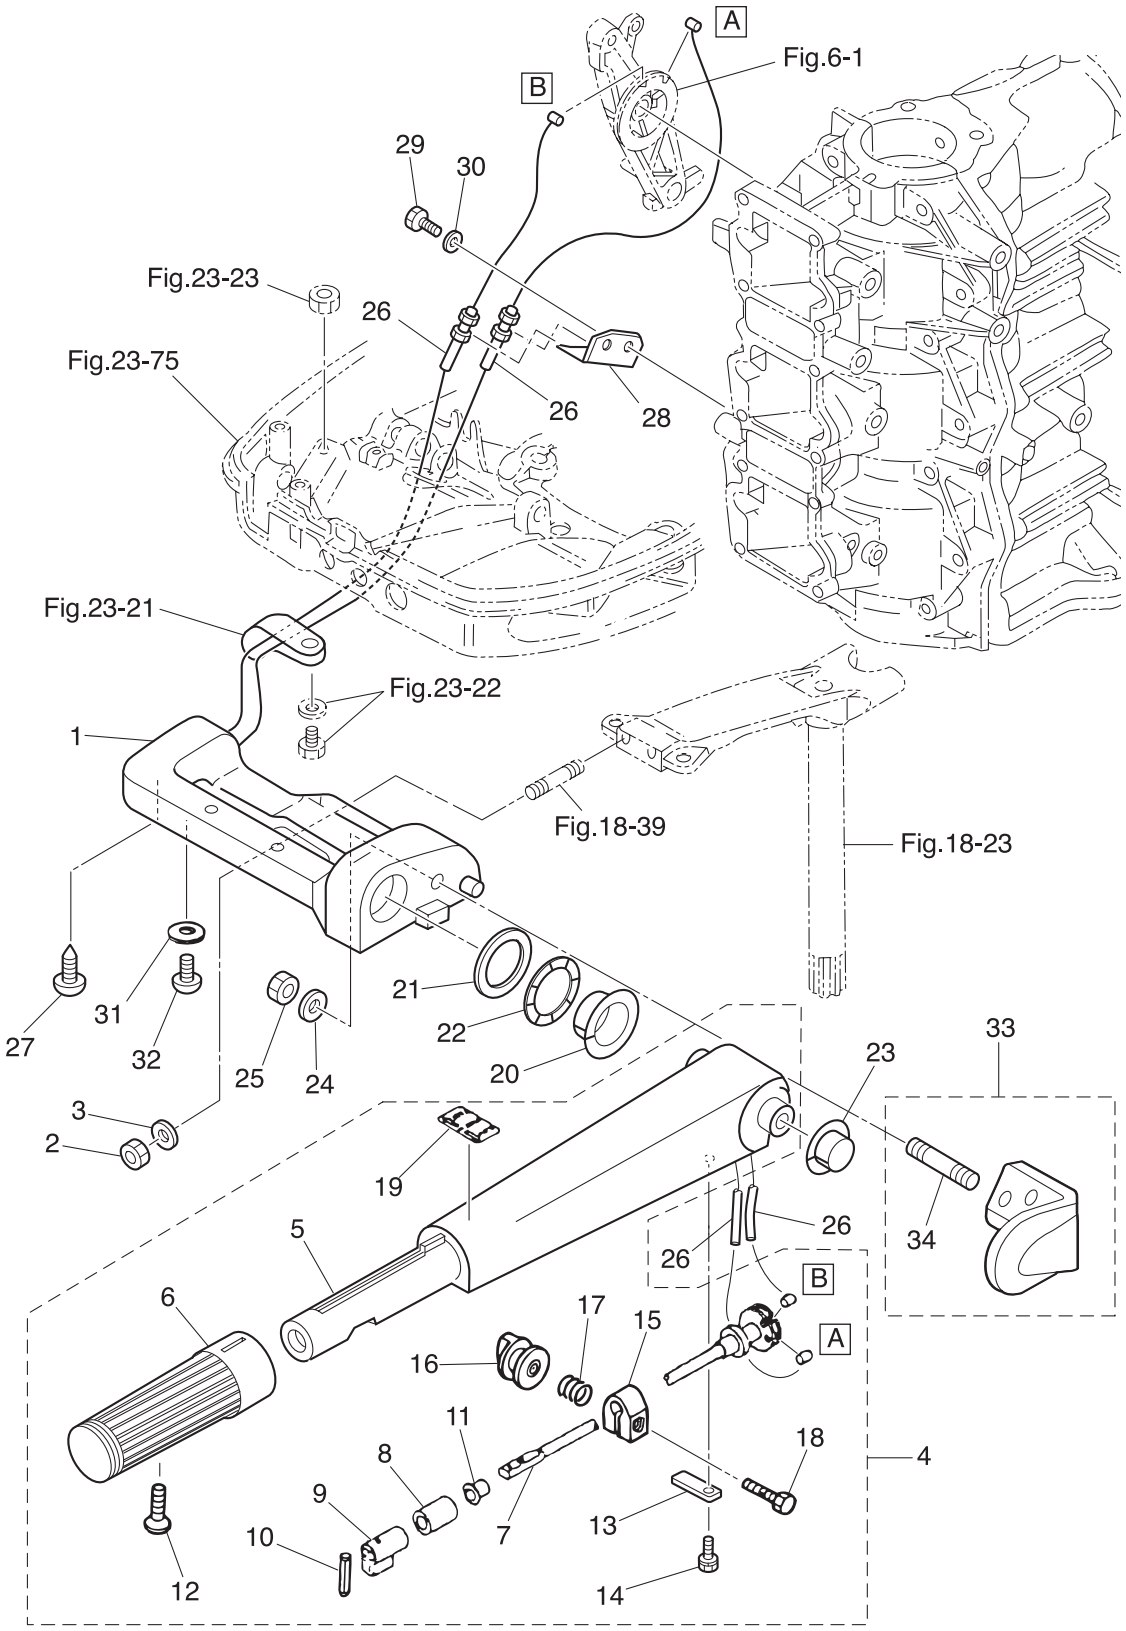


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
22-30	940103-0600	WASHER	2	
22-31	3C8-66308-0	WASHER 6-16-1.5	1	
22-32	921503-0610	SCREW	1	
22-33	3E5Q63028-1	TILLER HANDLE HOLDER ASSY	1	
22-34	9153E3-1022	* STUD	1	

Fig. 23 BOTTOM COWL • SHIFT

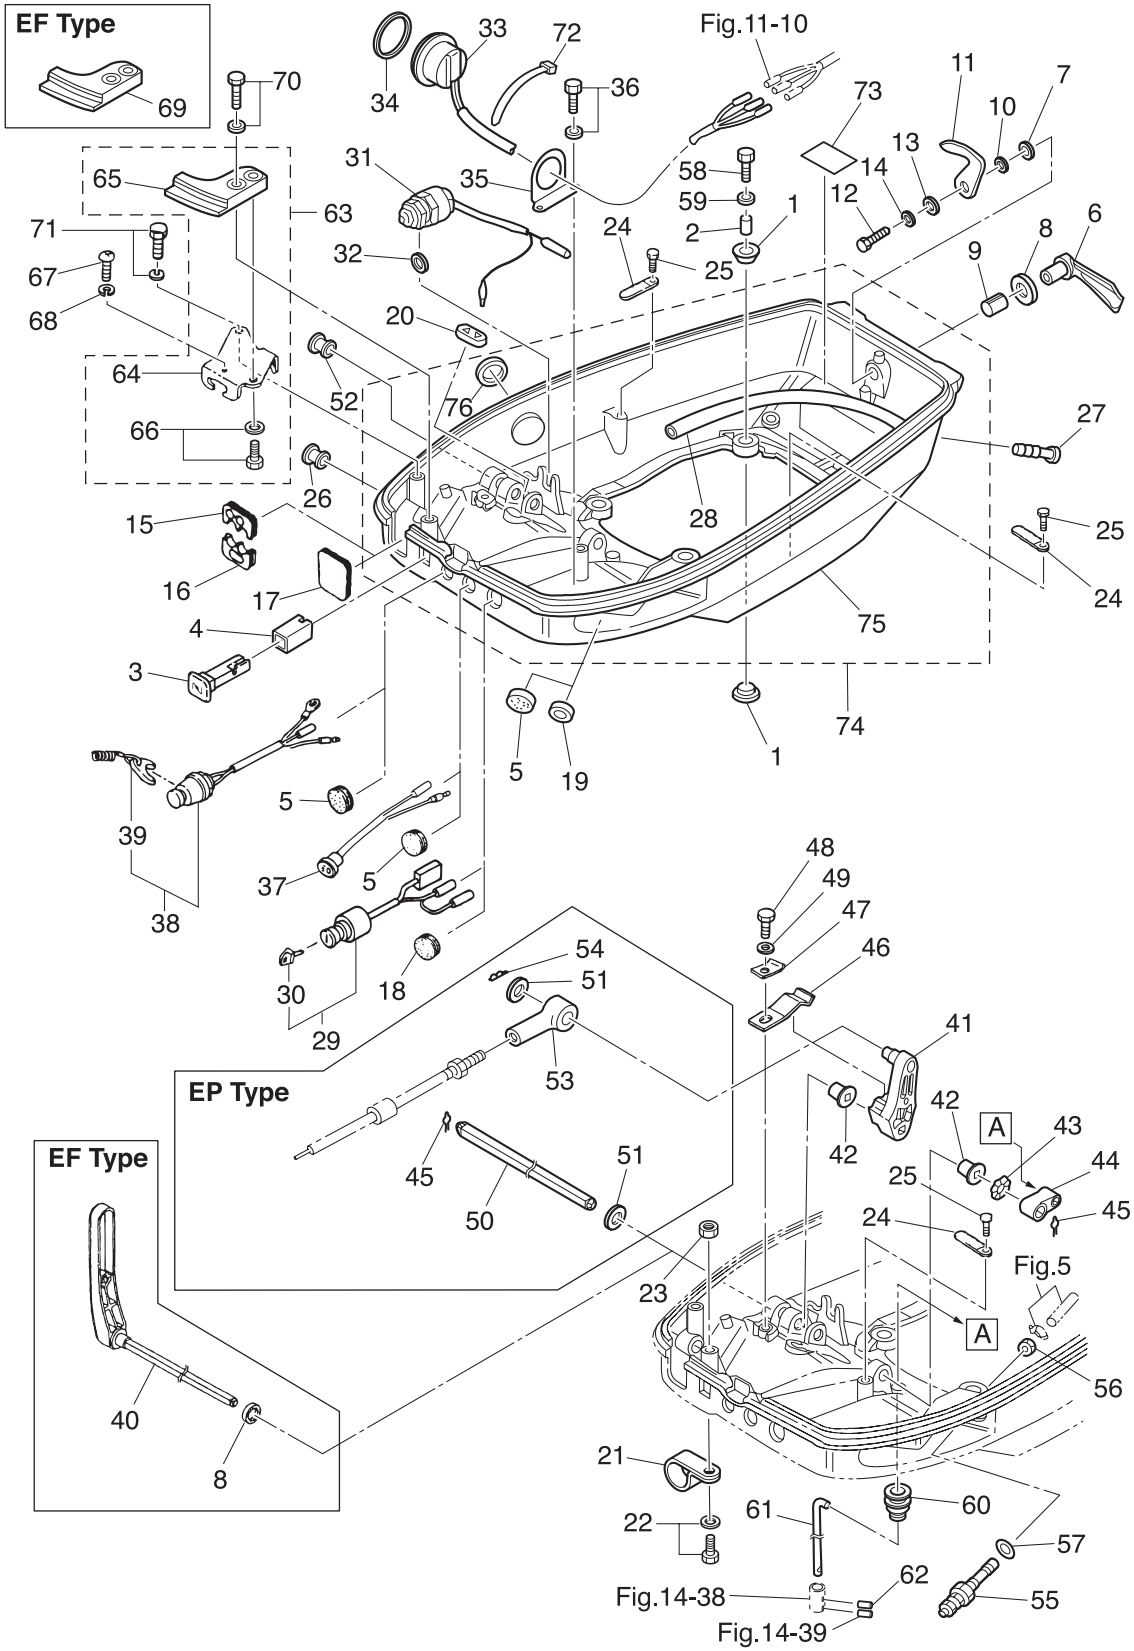


Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
23-1		346-67113-0	MOUNT 8.5-14-2.5	8	
23-2		346-67114-1	SPACER 6.2-9-15.7	4	
23-3		3C8-67151-1	CHOKE ROD	1	
23-4		3C8-67156-0	BUSHING	1	
23-6		3C8Q67141-0	HOOK LEVER	1	
23-7		3C8-67146-0	WASHER 14-22-1	1	
23-8	2	338-67147-0	SEAL RING 13.8-22-3.7	2	Hook Lever, Shift Lever for MF/EF Type
23-9		369-67105-0	HOOK LEVER BUSHING	1	
23-10		941403-1400	WAVE WASHER d=14	1	
23-11		3C8-67142-1	COVER HOOK	1	
23-12		910103-0612	BOLT	1	
23-13		3C8-66308-0	WASHER 6-16-1.5	1	
23-14		941303-0600	SPRING WASHER	1	
23-17		3C8-67162-1	GROMMET	1	for MF/EF Type
23-18		345-76092-0	GROMMET	1	for MF/EP Type
23-20	1	3C8-63621-0	GROMMET	1	for MF/EF Type
23-21		345-06915-0	CLAMP 6.5-14L	1	for MF Type
23-22		910103-5612	BOLT	1	for MF Type
23-23		930103-0600	NUT	1	for MF Type
23-24	3	309-06972-0	CLAMP 6.5-47.5P	1	for MF/EPO Model
23-25	2	910103-0610	BOLT	3	for MF & EPO/EFTO Model
23-26		3B2-67187-0	GROMMET	1	
23-27		3T1-01138-0	NIPPLE	1	
23-28		98AB-50-260	HOSE	1	98AB-501000
23-38		3C8-06820-0	STOP SWITCH ASSY	1	for MF/EF Type
23-39		353-06821-0	* STOP SWITCH LANYARD ASSY	1	
23-40		3E3-66110-0	SHIFT LEVER	1	for MF/EF Type
23-41		3C8-66122-1	SHIFT ARM	1	
23-42		350-67101-0	BUSHING	2	

Fig. 23 BOTTOM COWL • SHIFT

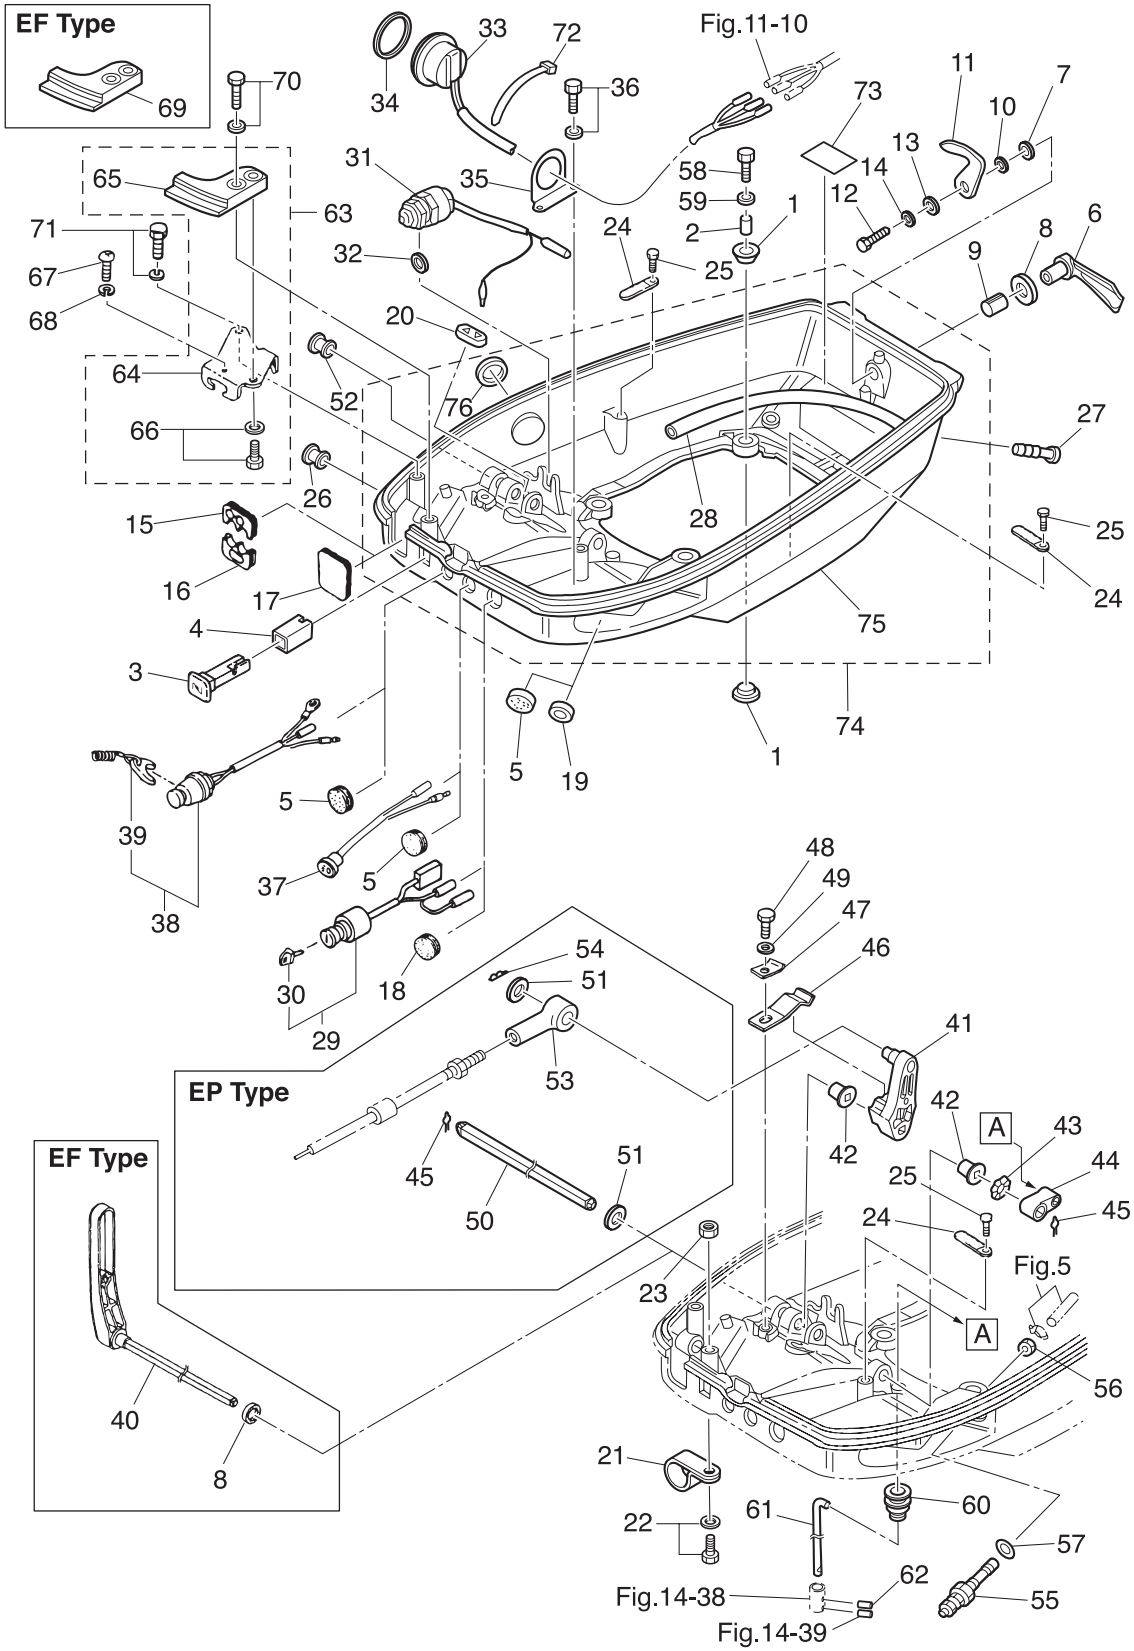


Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
23-43		941403-1200	WAVE WASHER d=12	1	
23-44	1	3C8-66225-0	SHIFT ROD LEVER	1	for M40/50D2, MX50D2
23-44	2	3S7-66225-0	SHIFT ROD LEVER	1	for MW50D2, MWX50D2
23-45	1	951703-0800	SNAP RETAINER d=8	1	for MF/EF Type
23-46		3C8-66112-0	SHIFT LEVER STOPPER	1	
23-47		3C8-66116-0	SHIFT LEVER STOPPER	1	
23-48		9101F4-0610	BOLT	1	
23-49		940103-0600	WASHER	1	
23-55		3B2-70260-1	FUEL CONNECTOR (MALE)	1	
23-56		332-70261-0	NUT 10-P1.25	1	
23-57		336-70112-0	GASKET 10.2-16-0.5	1	
23-58		9101E3-0630	BOLT	4	
23-59		346-67115-0	WASHER 6.5-21-1	4	
23-60		345-66226-0	GROMMET 17-3	1	
23-61		3C8-66211-0	SHIFT ROD	1	
23-62		951403-0312	SPRING PIN 3-12	1	
23-69		3C8Q76118-0	CLAMP	1	for MF/EF Type
23-70		910103-5625	BOLT	1	ALL
23-73	1	360-72025-0	SPARK PLUG DECAL (B8HS10)	1	for MX50D2, MWX50D2

Fig. 24 TOP COWL

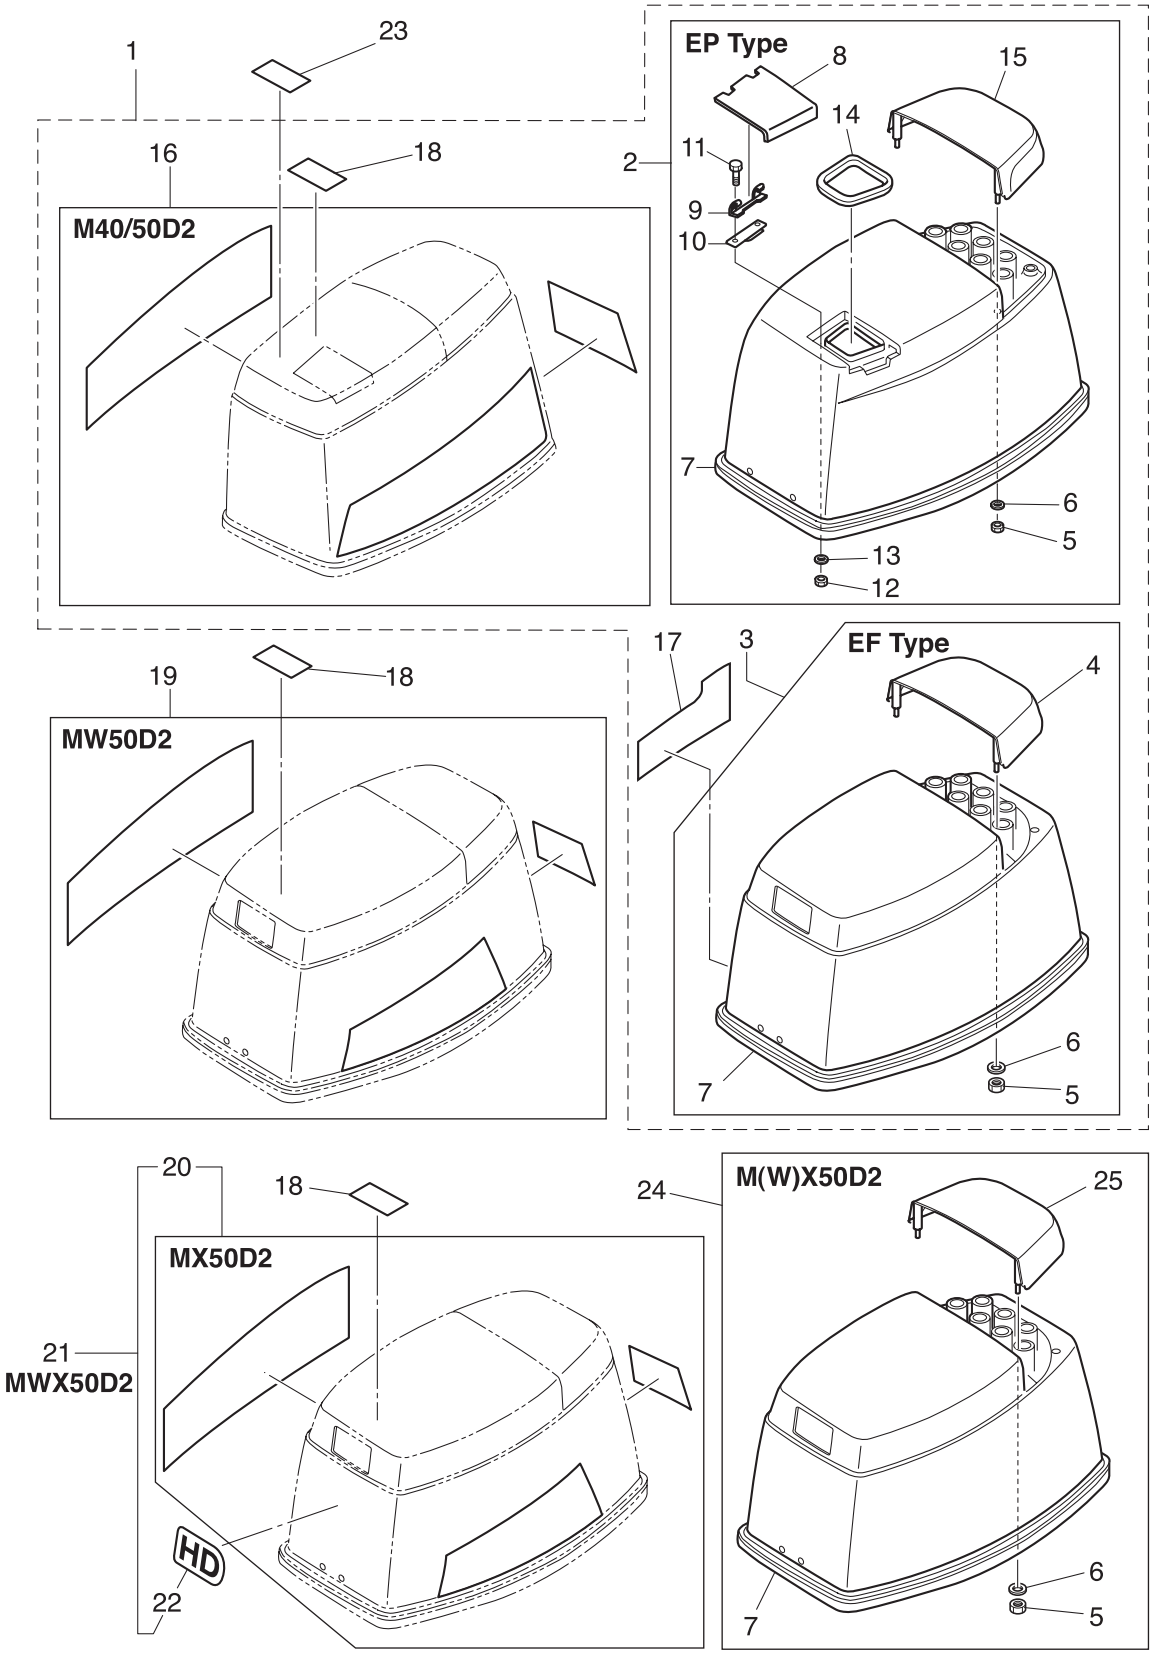


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
24-5	930403-0600	** NYLON NUT 6-P1.0	4	
24-6	3C8-66308-0	** WASHER 6-16-1.5	4	
24-7	3C8-67501-1	** TOP COWL SEAL	1	
24-18	3C7-72180-3	* CAUTION DECAL (A)	1	ALL
24-20	3MC-87801-0	DECAL SET (MX50D2)	1	MX50D2
24-21	3LC-87801-0	DECAL SET (MWX50D2)	1	MWX50D2
24-22	3LC-67534-0	* SYMBOL DECAL	1	MWX50D2
24-24	3LCH67640-0	TOP COWL SUB-ASSY	1	MX50D2, MWX50D2 Silver
24-25	3C8H67521-1	* TILT HANDLE	1	MX50D2, MWX50D2 Silver

Fig. 25 FUEL TANK

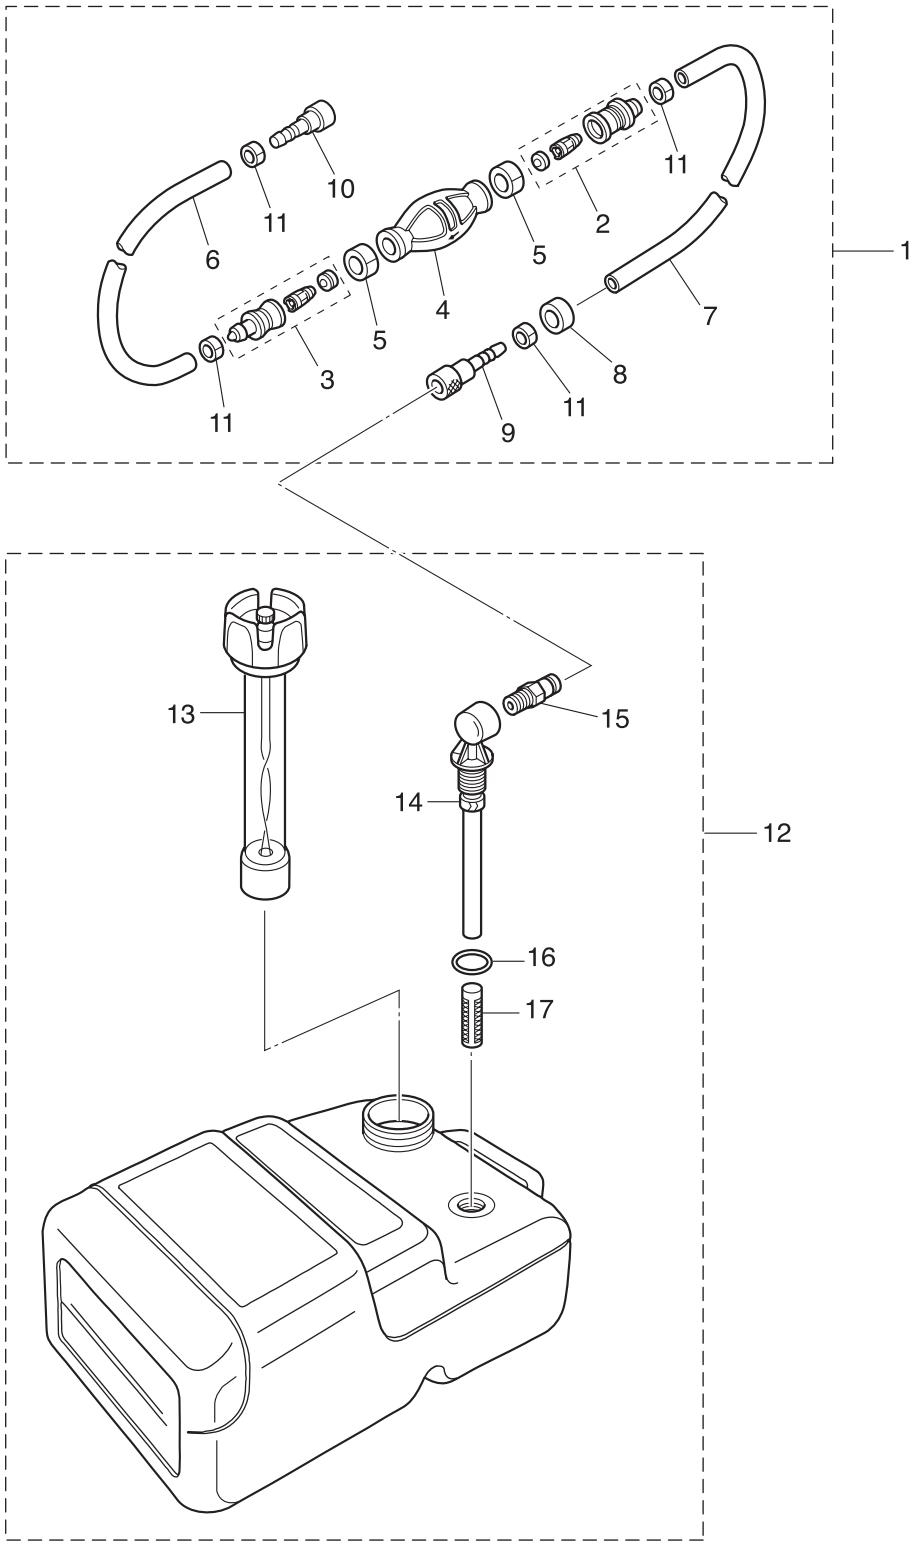


Ref.No.	Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
25-1	3B7-70200-4	PRIMER BULB ASSY	1	
25-2	3C7-70220-1	* JOINT ASSY (INLET)	1	
25-3	3C7-70224-1	* JOINT ASSY (OUTLET)	1	
25-4	3C7-70211-1	* PRIMER BULB	1	
25-5	3C7-70217-0	* CLAMP	2	
25-6	98AB-70-700	* HOSE	1	98AB-701000
25-7	98AB-701600	* HOSE	1	98AB-701000 x2
25-8	3B7-70280-1	* FUEL CONNECTOR MARK	1	
25-9	3GF-70281-0	* FUEL CONNECTOR	1	
25-10	3GF-70250-0	* FUEL CONNECTOR	1	
25-11	332-70201-0	* CLAMP	4	
25-12	3C7-70177-1	FUEL TANK ASSY 25L	1	
25-13	3C7-70050-1	* FUEL GAUGE VENT CAP ASSY (25L)	1	
25-14	3C7-70155-0	* PICK-UP ELBOW ASSY (25L)	1	
25-15	3E0-70270-0	* QUICK-CONNECTOR (MALE)	1	
25-16	3C7-70199-0	* O-RING	1	
25-17	3C7-70113-0	* FILTER	1	

Fig. 28 ACCESSORIES

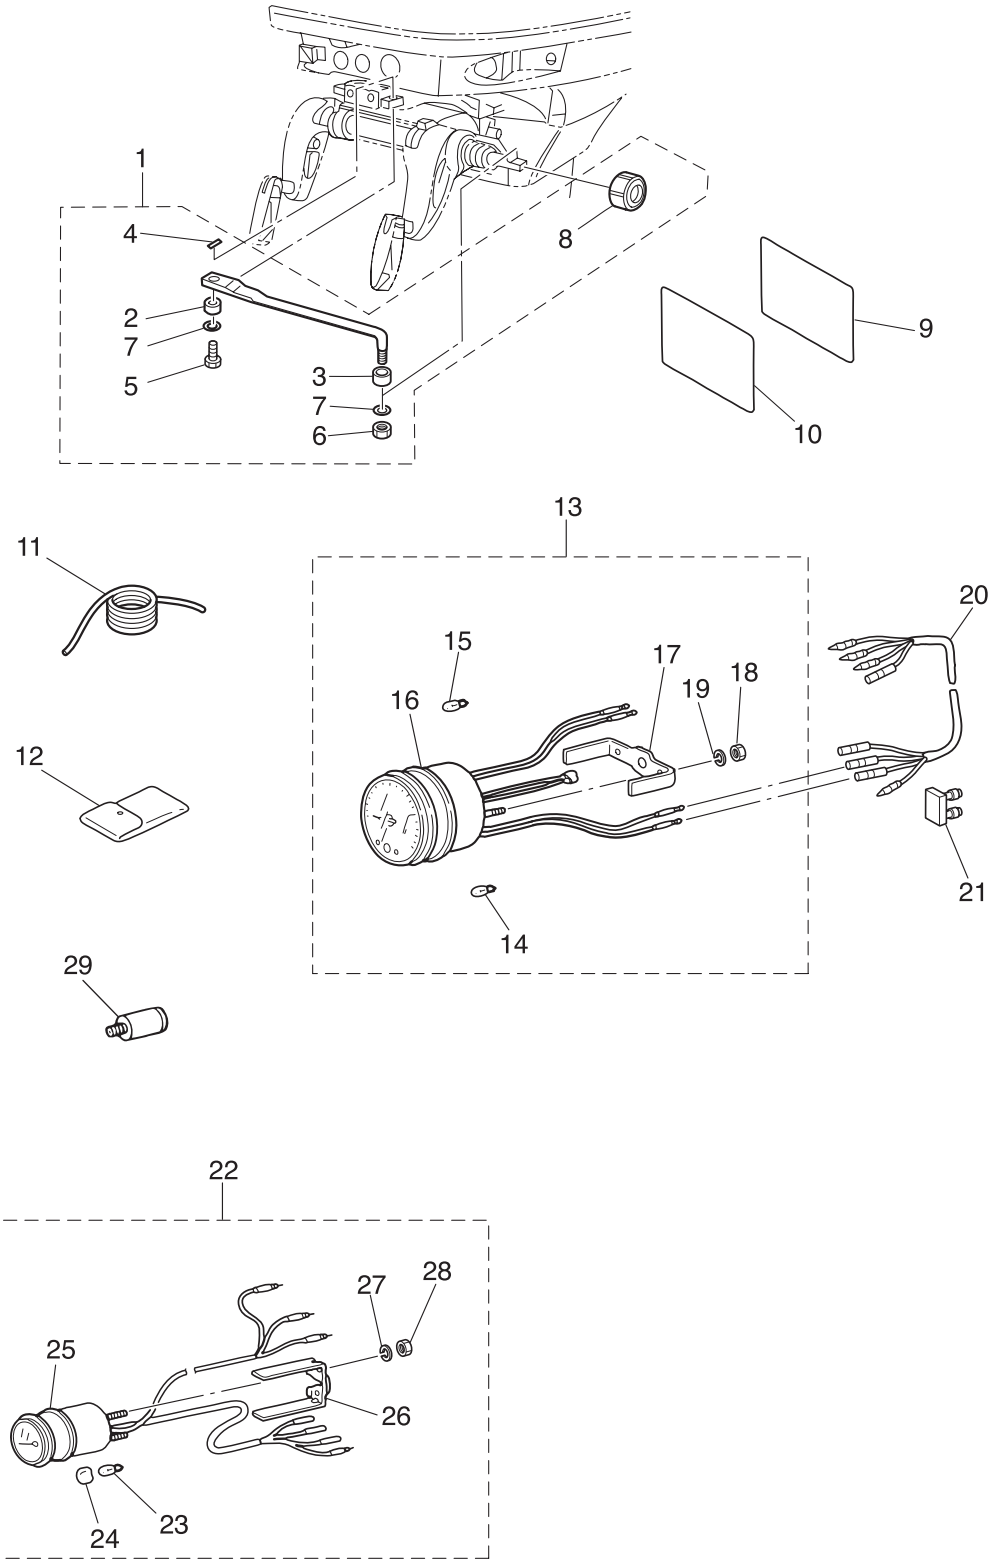


Ref.No.	Part No.	Description	Q'ty	Remarks
			MWX50D2 MX50D2	
28-12	3C8-72100-1	TOOL KIT	1	
28-29	3B7-60007-0	FLUSHING PLUG	1	


Fig. 29 OPTIONAL PARTS (1)

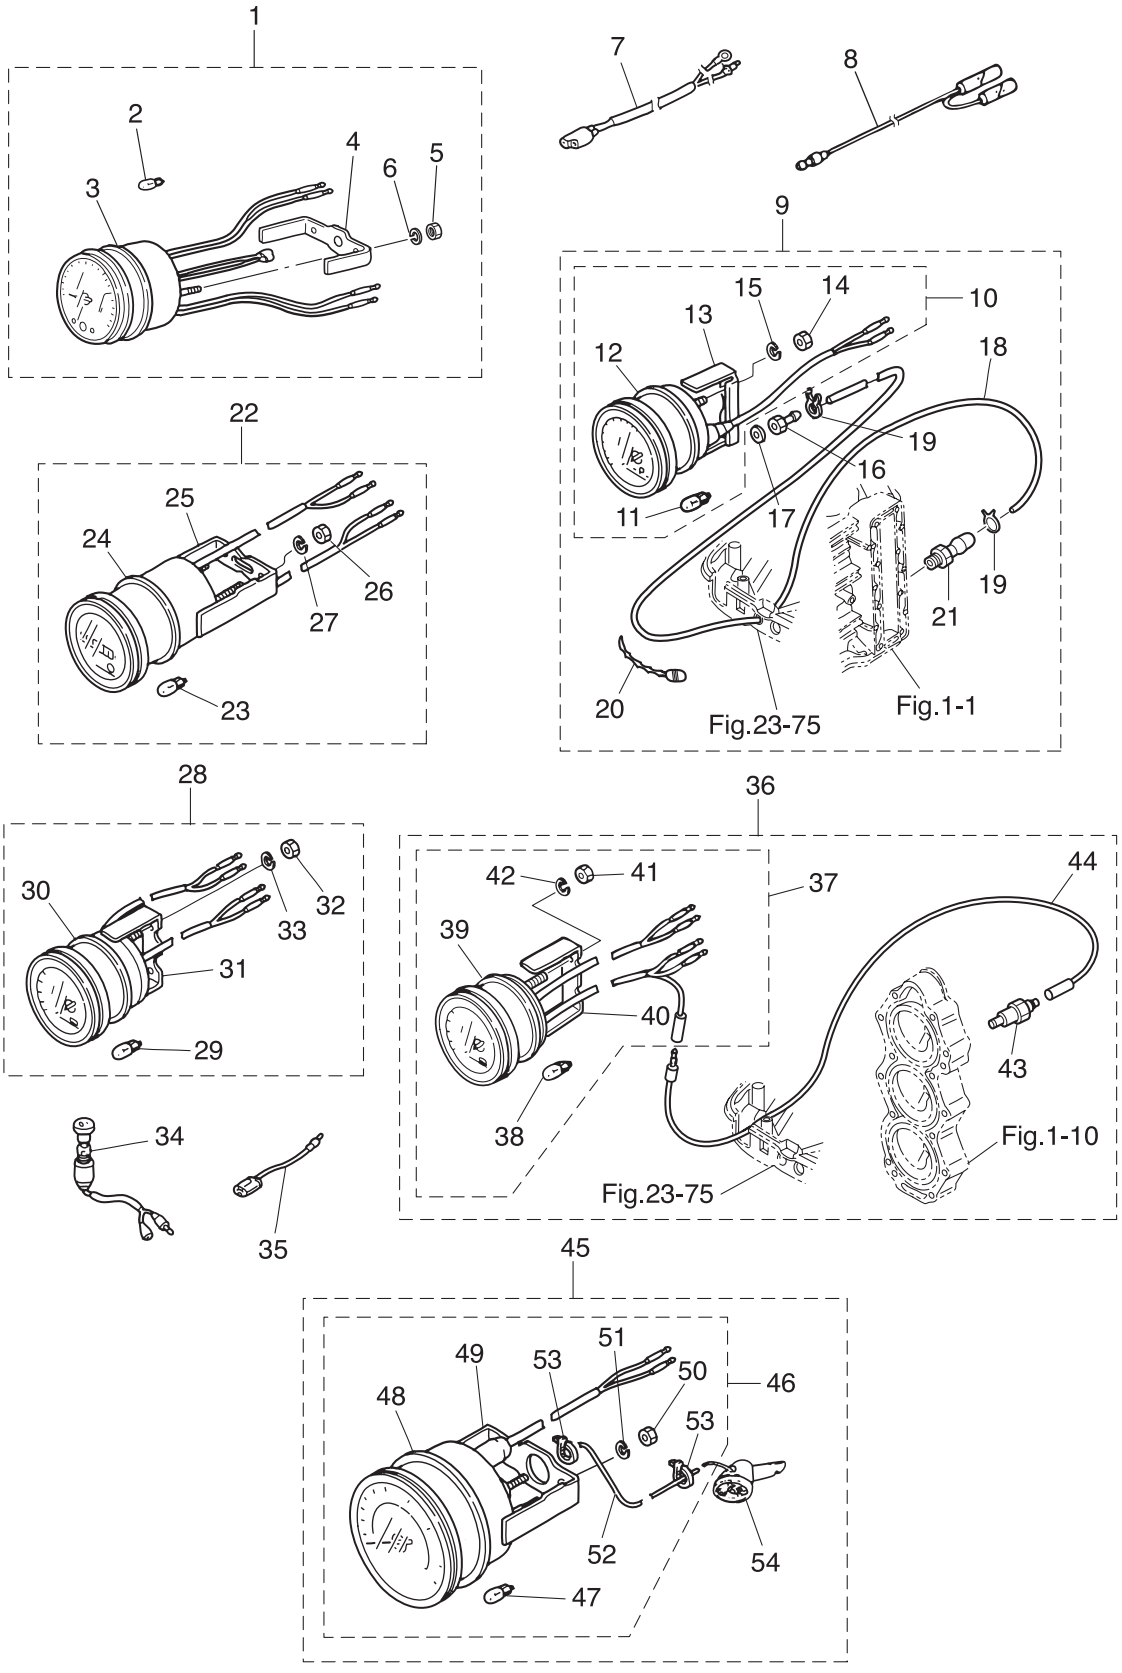

Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
29-1		3B7-72530-2	TACHOMETER ASSY	1	for Premixing Model
29-2		3B7-72659-0	* METER BULB 12V-1.8W	1	
29-3		3B7-72656-0	* METER DAMPER	1	
29-4		3B7-72661-0	* FITTING PLATE	1	
29-5		930103-0500	* NUT	2	
29-6		941303-0500	* SPRING WASHER	2	
29-7		361-72539-0	TACHOMETER LEAD WIRE L=6000	1	for Premixing Model
29-8	1	361-72542-0	SEPARATE CORD	1	for Premixing Model White
29-8	2	361-72543-0	SEPARATE CORD	1	for Premixing Model Yellow


Fig. 32 OPTIONAL PARTS (4)

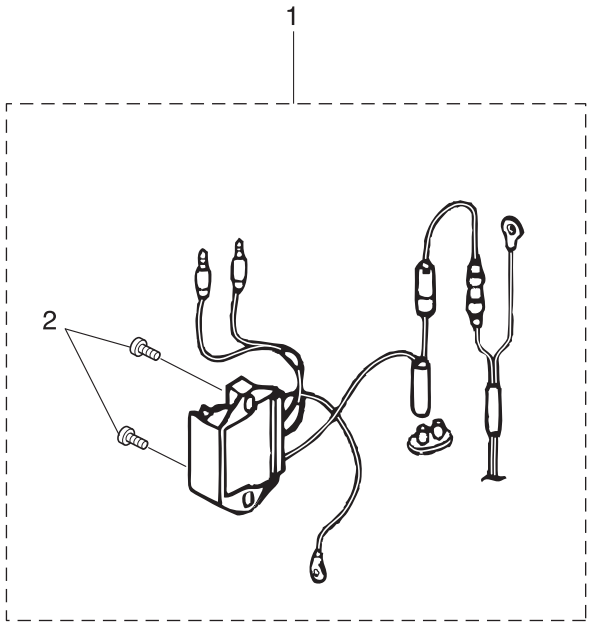

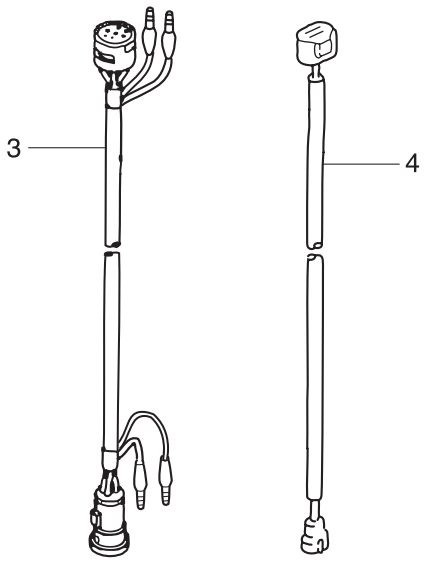

Ref.No.	Part No.	Description	Q'ty	Remarks
			MWX50D2 MX50D2	
32-1	3C8-76160-3	RECTIFIER KIT	1	for MF Type
32-2	921503-7625	* SCREW	2	for MF Type

Fig. 33 ASSEMBLY • KIT PARTS

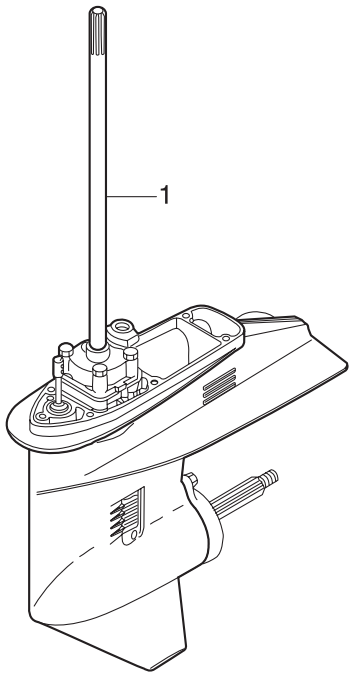

2 CARBURETOR REPAIR KIT

3 POWER HEAD GASKET SET


4 WATER PUMP REPAIR KIT


5 WATER PUMP KIT (CHROME PLATED)

6 LOWER UNIT GASKET SET

7 ELECTRIC STARTER KIT (F TYPE)


10 CONNECTING ROD KIT

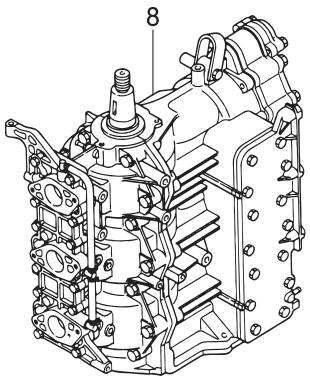

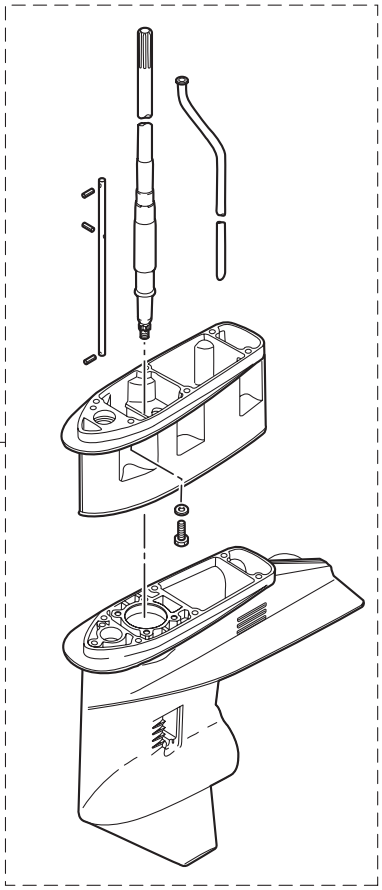

Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
33-1	3	3T5Q87304-3	LOWER UNIT ASSY (UL)	1	M40/50D2, MX50D2 for Transom "UL"
33-1	4	3S7Q87302-7	LOWER UNIT ASSY (L)	1	MW50D2, MWX50D2 for Transom "L"
33-1	6	3MCQ87301-0	LOWER UNIT ASSY (S)	1	MX50D2 forTransome "S"
33-1	7	3MCQ87302-0	LOWER UNIT ASSY (L)	1	MX50D2 forTransome "L"
33-1	8	3MCQ87303-0	LOWER UNIT ASSY (LL)	1	MX50D2 forTransome "LL"
33-2	2	3LC-87122-0	CARBURETOR REPAIR KIT	1	for MX50D2, MWX50D2
33-2	3	3C8-02011-0	* CARBURETOR GASKET	3	O-Ring for M40D2
33-2	4	3E3-02011-0	* CARBURETOR GASKET	3	for M50D2, MW50D2 MX50D2, MWX50D2
33-2	5	3C8-03169-0	* PLUG	3	
33-2	7	3LD-03147-0	* FLOAT VALVE	3	for MX50D2, MWX50D2
33-2	8	3C8-03126-0	* FLOAT ARM PIN	3	
33-2	9	3C8-03125-0	* FLOAT	3	
33-2	10	3C8-03121-0	* FLOAT CHAMBER GASKET	3	
33-2	11	3C8-03193-0	* GASKET	3	
33-2	12	3C8-03181-0	* CARBURETOR COVER	3	
33-2	13	3C8-03182-0	* CARBURETOR COVER GASKET	3	
33-2	14	922503-6410	* SCREW	18	
33-3	1	3C8-87121-C	POWER HEAD GASKET SET	1	
33-3	2	3C8-01005-5	* CYLINDER HEAD GASKET	1	
33-3	3	3C8-01024-1	* CYLINDER HEAD COVER GASKET	1	
33-3	4	353-01032-0	* THERMOSTAT CAP GASKET	1	
33-3	5	346-01216-0	* O-RING 1.7-59	1	Crankcase Head
33-3	6	3C8-01215-0	* OIL SEAL 16-28-7	1	Crankcase Head
33-3	7	334-00122-0	* OIL SEAL 25-40-8	1	Crankshaft (Lower)
33-3	8	3C8-02305-2	* EXHAUST COVER GASKET	2	
33-3	9	3C8-09082-2	* GASKET	1	for Premixing Model
33-3	10	151-33159-0	* GASKET 6.2-11-1	3	Ignition Coil

Fig. 33 ASSEMBLY • KIT PARTS

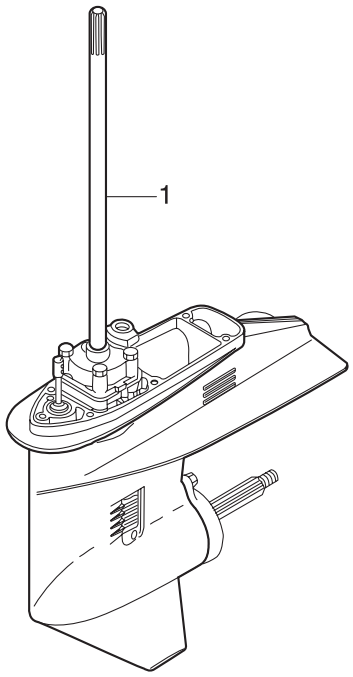

2 CARBURETOR REPAIR KIT

3 POWER HEAD GASKET SET


4 WATER PUMP REPAIR KIT


5 WATER PUMP KIT (CHROME PLATED)

6 LOWER UNIT GASKET SET

7 ELECTRIC STARTER KIT (F TYPE)


10 CONNECTING ROD KIT

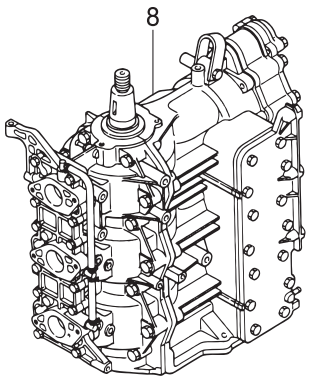

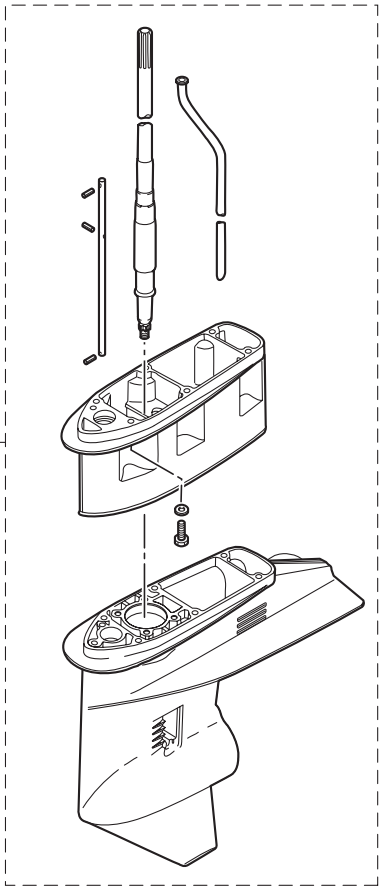

Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
33-3	11	3C8-02104-2	* INTAKE MANIFOLD GASKET	3	
33-3	12	3C8-02011-0	* CARBURETOR GASKET	3	O-Ring for M40D2
33-3	13	3B7-02235-0	* O-RING	1	for Premixing Model Oil Filter
33-3	14	3B7-02236-0	* O-RING	1	for Premixing Model Oil Filter
33-3	15	3C8-01303-4	* ENGINE BASEMENT GASKET	1	
33-3	16	3C8-00108-0	* O-RING 2.4-39.7	1	Crankshaft (Upper)
33-4	1	3T5-87322-3	WATER PUMP REPAIR KIT	1	for M40/50D2, MX50D2
33-4	2	3C8-65021-2	* WATER PUMP IMPELLER	1	
33-4	3	332-65022-0	* KEY	1	
33-4	4	3T5-65011-0	* PUMP CASE LINER	1	
33-4	5	3T5-65018-2	* PUMP CASE GASKET	1	
33-4	6	3C8-65025-0	* WATER PUMP GUIDE PLATE	1	
33-4	7	3C8-65029-2	* GUIDE PLATE GASKET	1	
33-4	8	9101E3-5855	* BOLT	4	
33-5	1	3Z5-65231-1	WATER PUMP KIT (CHROME PLATED)	1	for M40/50D2, MX50D2
33-5	2	3C8-65021-2	* WATER PUMP IMPELLER	1	
33-5	3	3Z5-65238-1	* PUMP CASE LINER	1	Chrome Plated
33-5	4	3T5-65018-2	* PUMP CASE GASKET	1	
33-5	5	3C8-65239-1	* WATER PUMP GUIDE PLATE	1	Chrome Plated
33-5	6	3C8-65029-2	* GUIDE PLATE GASKET	1	
33-6	1	3T5-87321-2	LOWER UNIT GASKET SET	1	for M40/50D2, MX50D2
33-6	2	3C8-61012-2	* DRIVE SHAFT HOUSING GASKET	1	
33-6	3	3C8-02312-2	* EXHAUST PIPE GASKET	1	
33-6	4	3C8-61181-2	* EXHAUST HOUSING GASKET	1	
33-6	5	332-60006-0	* GASKET 8.1-15-1	1	
33-6	6	3B7-60016-1	* GASKET 10.1-15-1	1	

Fig. 33 ASSEMBLY • KIT PARTS

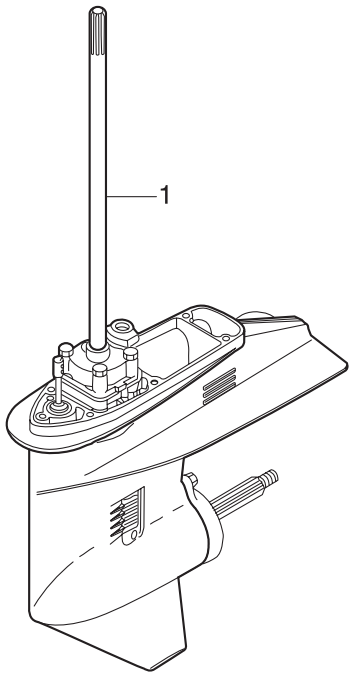

2 CARBURETOR REPAIR KIT

3 POWER HEAD GASKET SET


4 WATER PUMP REPAIR KIT


5 WATER PUMP KIT (CHROME PLATED)

6 LOWER UNIT GASKET SET

7 ELECTRIC STARTER KIT (F TYPE)


10 CONNECTING ROD KIT

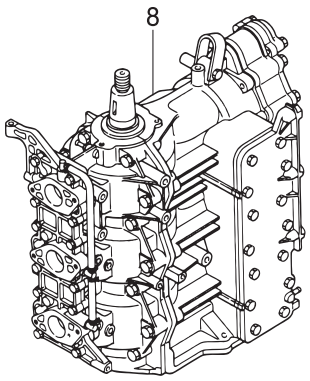

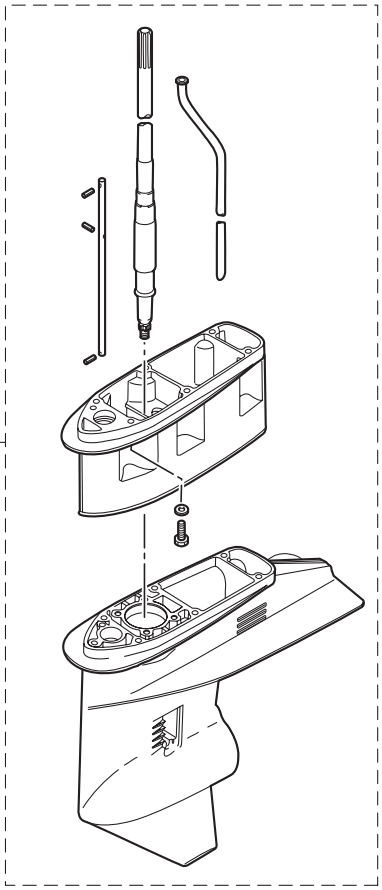

Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
33-6	7	3T5-65018-2	* PUMP CASE GASKET	1	
33-6	8	3C8-65029-2	* GUIDE PLATE GASKET	1	
33-6	9	3C8-60223-0	* OIL SEAL 17-33-6	2	Pump Case (Lower)
33-6	10	345-65015-0	* O-RING 3.2-47	1	Pump Case (Lower)
33-6	11	332-66021-0	* O-RING 2.4-5.8	1	Cam Rod
33-6	12	3C8-66032-0	* O-RING 3.5-21.7	1	Cam Rod Bushing
33-6	13	334-60223-0	* OIL SEAL 22-36-10	1	Propeller Shaft
33-6	14	345-60103-0	* O-RING 3.5-69.4	1	Propeller Shaft Housing
33-7	1	3C8-76300-2	ELECTRIC STARTER KIT (F)	1	for MF⇒EF
33-7	2	3B7-76093-0	* GROMMET 25-5	1	
33-7	3	3C8-76010-1	* STARTER MOTOR ASSY	1	
33-7	4	910103-6825	* BOLT	2	
33-7	5	3C8-76007-0	* DAMPER	1	
33-7	6	3C8-76009-0	* STARTER MOTOR BAND	1	
33-7	7	910103-6820	* BOLT	1	
33-7	8	346-76040-0	* STARTER SOLENOID	1	
33-7	9	910103-6616	* BOLT	1	
33-7	10	3C8-71035-0	* OIL FILTER BRACKET	1	
33-7	11	910103-6614	* BOLT	2	
33-7	12	3C8-76141-1	* STARTER CABLE L=160	1	
33-7	13	3B7-76120-2	* BATTERY CABLE L=3000	1	
33-7	14	910403-5612	* BOLT	1	
33-7	15	3A3-76145-0	* TERMINAL CAP	2	
33-7	16	3B7-76065-5	* RECTIFIER COMPLETE	1	
33-7	17	921503-7625	* SCREW	2	
33-7	18	3C8-76110-0	* CORD ASSY	1	
33-7	19	353-76062-1	* FUSE WIRE ASSY L=900 20A	1	
33-7	20	3C8-76119-0	* CORD ASSY	1	

Fig. 33 ASSEMBLY • KIT PARTS

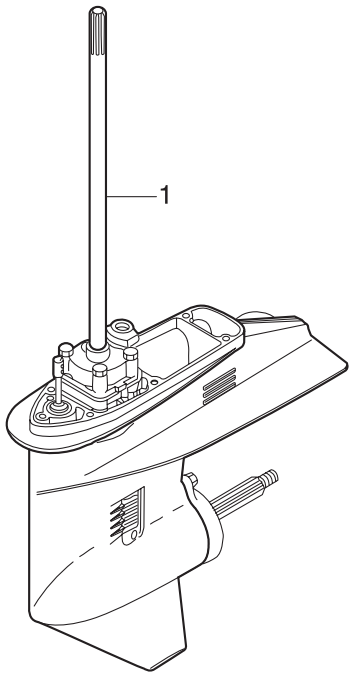

2 CARBURETOR REPAIR KIT

3 POWER HEAD GASKET SET


4 WATER PUMP REPAIR KIT


5 WATER PUMP KIT (CHROME PLATED)

6 LOWER UNIT GASKET SET

7 ELECTRIC STARTER KIT (F TYPE)


10 CONNECTING ROD KIT

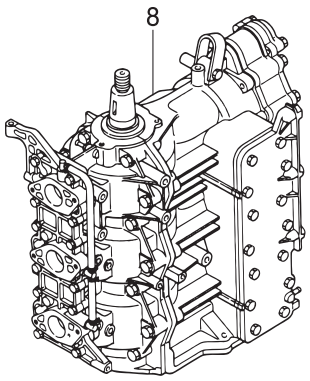

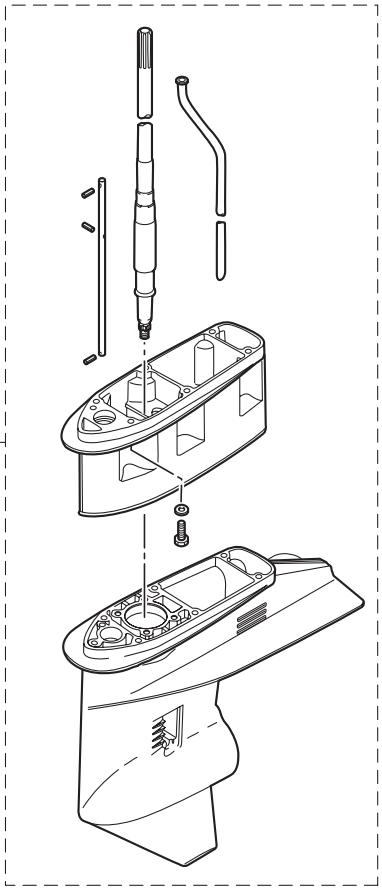

Ref.No.		Part No.	Description	Q'ty MWX50D2 MX50D2	Remarks
33-7	21	353-76020-3	* MAIN SWITCH ASSY	1	
33-7	22	3C8-76080-1	* NEUTRAL SWITCH	1	
33-7	23	3B7-63731-0	* WASHER 12.5-24-1	1	
33-7	24	309-06972-0	* CLAMP 6.5-47.5P	1	
33-7	25	353-06972-0	* CLAMP 7-80P	2	
33-7	26	910403-0612	* BOLT	1	
33-8	2	3LCJ87090-3	ENGINE SHORT BLOCK KIT	1	Gray for MWX50D2
33-8	3	3MCJ87090-3	ENGINE SHORT BLOCK KIT	1	Gray for MX50D2
33-9	1	3C8Q87314-1	EXTENSION HOUSING KIT (UL)	1	M40/50D2, MX50D2 for Transom "L"⇒"UL"
33-9	2	3C8Q61110-0	* EXTENSION HOUSING	1	
33-9	3	9101E3-5835	* BOLT	6	
33-9	4	3C8Q60090-0	* GEAR CASE ASSY	1	Sub Water Pipe
33-9	5	346-65204-0	* WATER PIPE AUXILIARY MOUNT	1	
33-9	6	3C8-64303-0	* DRIVE SHAFT (UL)	1	
33-9	7	3C8-66014-0	* CAM ROD (UL)	1	
33-9	8	951407-0312	* SPRING PIN 3-12	2	
33-9	9	346-66037-0	* CAM ROD HOLDER	1	
33-9	10	353-66024-0	* STOPPER	1	
33-9	11	910103-6612	* BOLT	1	
33-9	12	951403-0312	* SPRING PIN 3-12	2	
33-9	13	3C8-65120-0	* WATER PIPE (UL)	1	
33-10	1	3LC-00039-0	CONNECTING ROD KIT	1	for MX50D2, MWX50D2
33-10	2	3LC-00090-0	* NEEDLE ROLLER SET	1	
33-10	3	3LC-00041-0	* CONNECTING ROD	1	
33-10	4	3LC-00046-0	* SMALL END BEARING WASHER	2	
33-10	5	345-00045-0	* BIG END BEARING WASHER	2	
33-10	6	345-00043-0	* ROLLER BEARING 25-32-20	1	

Fig. 33 ASSEMBLY • KIT PARTS

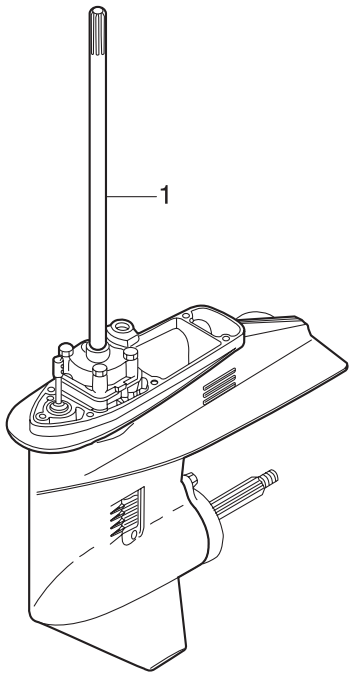

2 CARBURETOR REPAIR KIT

3 POWER HEAD GASKET SET


4 WATER PUMP REPAIR KIT


5 WATER PUMP KIT (CHROME PLATED)

6 LOWER UNIT GASKET SET

7 ELECTRIC STARTER KIT (F TYPE)

10 CONNECTING ROD KIT

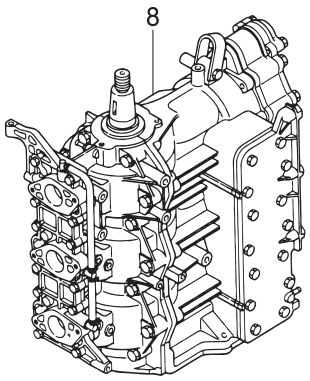

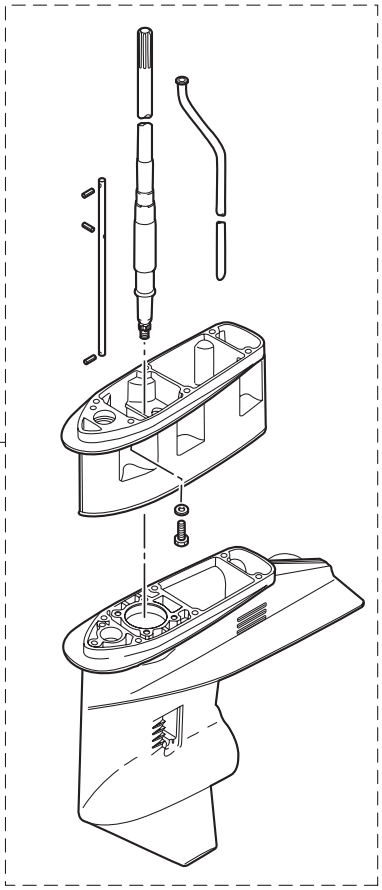

Ref.No.		Part No.	Description	Q'ty	Remarks
				MWX50D2 MX50D2	
33-10	7	348-00061-1	* CRANK PIN	1	

INDEX

<A>
ADJUST SCREW 4-16
ADJUSTING NUT 22-16
ADVANCER ARM 6-1
ADVANCER LEVER 6-8
ALTERNATOR ASSY 8-7
ANODE 1-33
ANODE 18-4
ANODE 18-57
APRON 13-27
<B>
BALL 3/8 15-20
BALL BEARING 6007 15-17
BALL BEARING 6205R 16-11
BALL BEARING 6304 14-14
BALL JOINT 6-13
BALL JOINT 8-20
BALL JOINT CONNECTOR 4-43
BALL JOINT CONNECTOR 4-44
BALL JOINT CONNECTOR 6-15
BALL JOINT CONNECTOR 6-18
BAND 8-12
BAND 104 10-4
BAND 104 10-11
BAND 158 7-34
BATTERY CABLE L=3000 33-7-13
BEVEL GEAR ASSY (A) 15-4
BEVEL GEAR ASSY (A) 17-3
BEVEL GEAR B 14-9
BEVEL GEAR B 16-7
BEVEL GEAR C 15-5
BEVEL GEAR C 17-5
BIG END BEARING WASHER 2-4
BIG END BEARING WASHER 33-10-5
BOLT 1-7
BOLT 1-14
BOLT 1-18
BOLT 1-24
BOLT 1-29
BOLT 1-31
BOLT 1-34
BOLT 1-37
BOLT 1-53
BOLT 1-54
BOLT 1-61
BOLT 3-3
BOLT 3-4
BOLT 4-19
BOLT 4-37
BOLT 5-2-2
BOLT 6-2
BOLT 6-9
BOLT 6-25
BOLT 6-33
BOLT 7-14
BOLT 7-29
BOLT 7-36
BOLT 7-38
BOLT 8-22
BOLT 9-16-1
BOLT 9-22
BOLT 10-14
BOLT 10-28
BOLT 10-31
BOLT 11-23
BOLT 13-2
BOLT 13-9
BOLT 13-10
BOLT 13-18
BOLT 14-8
BOLT 14-29
BOLT 14-31
BOLT 14-41
BOLT 14-42
BOLT 16-27
BOLT 18-2
BOLT 18-5
BOLT 18-22
BOLT 18-32
BOLT 18-38
BOLT 18-41
BOLT 18-46
BOLT 18-49
BOLT 18-51
BOLT 18-58
BOLT 19-4
BOLT 22-14
BOLT 22-18
BOLT 22-29
BOLT 23-12
BOLT 23-22
BOLT 23-25-2
BOLT 23-48
BOLT 23-58
BOLT 23-70
BOLT 33-4-8
BOLT 33-7-4
BOLT 33-7-7
BOLT 33-7-9
BOLT 33-7-11
BOLT 33-7-14
BOLT 33-7-26
BOLT 33-9-3
BOLT 33-9-11
BOLT 10-40 16-41
BOLT 5-16 4-1
BOLT 8-170 18-14
BOLT 8-30 13-21
BOLT 8-30 13-24
BOLT 8-35 16-39
BRACKET 9-19-2
BRACKET 10-20-2
BUSHING 7-9
BUSHING 18-8
BUSHING 22-20
BUSHING 22-23
BUSHING 23-4
BUSHING 23-42
BUSHING 10.2-12-29.5 19-2
BUSHING 22-25-35.5 18-9
BUSHING 26-32 18-24
BUSHING 8.1-20 19-19
BUSHING 8.4-10-11 22-11
<C>
CABLE HOLDER 7-25
CAM ROD (L) 14-33-2
CAM ROD (L) 16-32
CAM ROD (LL) 14-33-4
CAM ROD (S) 14-33-1
CAM ROD (UL) 14-33-3
CAM ROD (UL) 33-9-7
CAM ROD BUSHING 14-35
CAM ROD BUSHING 16-35
CAM ROD HOLDER 13-7
CAM ROD HOLDER 33-9-9
CAP NUT 18-10
CARBURETOR ASSY 4-5-3
CARBURETOR ASSY (SECOND) 4-6-3
CARBURETOR ASSY (THIRD) 4-25-3
CARBURETOR COVER 4-22
CARBURETOR COVER 33-2-12
CARBURETOR COVER GASKET 4-23
CARBURETOR COVER GASKET 33-2-13
CARBURETOR GASKET 4-36
CARBURETOR GASKET 33-2-3
CARBURETOR GASKET 33-2-4
CARBURETOR GASKET 33-3-12
CARBURETOR REPAIR KIT 33-2-2
CAUTION DECAL (A) 24-18
CAUTION DECAL (B) 10-7
CAUTION DECAL (C) 8-24
CD UNIT 10-18
CHECK VALVE 1-47
CHECK VALVE 4-29
CHOKE ROD 4-51
CHOKE ROD 23-3
CHOKE ROD 3-90 4-46
CLAMP 8-10
CLAMP 23-69
CLAMP 25-5
CLAMP 25-11
CLAMP 6.5-14L 23-21
CLAMP 6.5-47.5P 1-52
CLAMP 6.5-47.5P 3-5
CLAMP 6.5-47.5P 23-24-3
CLAMP 6.5-47.5P 33-7-24
CLAMP 7-80P 33-7-25
CLAMP BRACKET (L) 18-3
CLAMP BRACKET (R) 18-1
CLAMP SCREW 18-62
CLAMP SCREW ASSY 18-61
CLAMP SCREW HANDLE 18-63
CLAMP SCREW KIT 18-60
CLAMP SCREW PAD 18-65
CLIP 22-27
CLIP φ10 3-8
CLIP φ10 4-41
CLIP φ10 5-13
CLIP φ7 1-50
CLIP φ8 1-48
CLUTCH 15-9a
CLUTCH 17-9
CLUTCH CAM 14-32
CLUTCH CAM 16-31
COIL PLATE ASSY W/ALTERNATOR 8-2
COIL PLATE STOPPER 9-15
COLLAR 7-31
COLLAR 18-20-4.5 14-45
COLLAR 18-20-4.5 16-45
COLLAR 6.2-12-17 6-4
COLLAR 6.2-9-9.3 6-27
COLLAR 6.2-9-9.3 6-35
COLLAR 6.5-10.5-26.3 6-12
CONNECTING ROD 2-2-2
CONNECTING ROD 33-10-3
CONNECTING ROD KIT 33-10-1
CORD ASSY 33-7-18
CORD ASSY 33-7-20
COVER 1-35
COVER 10-22
COVER HOOK 23-11
CRANK PIN 2-9
CRANK PIN 33-10-7
CRANKCASE HEAD 1-57
CRANKSHAFT A 2-5
CRANKSHAFT ASSY 2-1-2
CRANKSHAFT B 2-6
CRANKSHAFT C 2-7
CRANKSHAFT D 2-8
C-RING d=25 2-12
C-RING d=25 18-28
C-RING d=28 7-13
CUP 5-4
CYL BLOCK & CRANKCASE ASSY 1-1-3
CYLINDER HEAD 1-10-2
CYLINDER HEAD BOLT 1-21
CYLINDER HEAD COVER 1-12-2
CYLINDER HEAD COVER GASKET 1-13
CYLINDER HEAD COVER GASKET 33-3-3
CYLINDER HEAD GASKET 1-11
CYLINDER HEAD GASKET 33-3-2
<D>
DAMPER 33-7-5
DAMPER (LOWER) 18-31
DAMPER (UPPER) 18-42
DAMPER 21-36-5 18-34
DECAL SET (MWX50D2) 24-21
DECAL SET (MX50D2) 24-20
DISTANCE PIECE 18-11
DOWEL PIN 1-4
DOWEL PIN 4-10 14-25
DOWEL PIN 4-10 16-23
DOWEL PIN 6-12 1-3
DOWEL PIN 6-12 1-20
DOWEL PIN 6-12 13-19
DRIVE SHAFT (L) 14-13-2
DRIVE SHAFT (L) 16-10

DRIVE SHAFT (LL) 14-13-4
DRIVE SHAFT (S) 14-13-1
DRIVE SHAFT (UL) 14-13-3
DRIVE SHAFT (UL) 33-9-6
DRIVE SHAFT HOUSING (L) 13-1-1
DRIVE SHAFT HOUSING (S) 13-1-2
DRIVE SHAFT HOUSING GASKET 13-15
DRIVE SHAFT HOUSING GASKET 33-6-2
DRIVE SHAFT SPRING 14-15
DRIVE SHAFT SPRING 16-12
DRIVE SHAFT SPRING GUIDE 16-13
<E>
ELECTRIC STARTER KIT (F) 33-7-1
ENGINE BASEMENT 13-16
ENGINE BASEMENT GASKET 1-56
ENGINE BASEMENT GASKET 33-3-15
ENGINE BASEMENT SEAL L=805 13-17
ENGINE SHORT BLOCK KIT 33-8-2
ENGINE SHORT BLOCK KIT 33-8-3
E-RING d=6 19-11
EXCITER COIL 8-5
EXHAUST COVER (INNER) 1-27
EXHAUST COVER (OUTER) 1-26-2
EXHAUST COVER GASKET 1-28
EXHAUST COVER GASKET 33-3-8
EXHAUST HOUSING 13-23
EXHAUST HOUSING GASKET 13-25
EXHAUST HOUSING GASKET 33-6-4
EXHAUST PIPE 13-20
EXHAUST PIPE GASKET 13-22
EXHAUST PIPE GASKET 33-6-3
EXTENSION HOUSING 13-5
EXTENSION HOUSING 13-11-2
EXTENSION HOUSING 33-9-2
EXTENSION HOUSING (LL) 13-11-1
EXTENSION HOUSING KIT (UL) 33-9-1
EXTENSION PIPE 16-43
<F>
FILTER 5-6
FILTER 25-17
FITTING PLATE 29-4
FLOAT 4-12
FLOAT 33-2-9
FLOAT ARM PIN 4-11
FLOAT ARM PIN 33-2-8
FLOAT CHAMBER 4-17
FLOAT CHAMBER GASKET 4-18
FLOAT CHAMBER GASKET 33-2-10
FLOAT VALVE 4-10-1
FLOAT VALVE 33-2-7
FLUSHING PLUG 28-29
FLYWHEEL W/RING GEAR 8-1
FRICTION PIECE 18-20
FRICTION PIECE 22-15
FRICTION PLATE 7-8
FRICTION SPRING 7-6
FRICTION SPRING 18-21
FRICTION SPRING 19-5
FUEL CONNECTOR 25-9
FUEL CONNECTOR 25-10
FUEL CONNECTOR (MALE) 23-55
FUEL CONNECTOR MARK 25-8
FUEL FILTER ASSY. 5-3
FUEL GAUGE VENT CAP ASSY (25L) 25-13
FUEL TANK ASSY 25L 25-12
FUSE WIRE ASSY L=900 20A 33-7-19
<G>
GASKET 1-36
GASKET 4-2
GASKET 4-20
GASKET 33-2-11
GASKET 33-3-9
GASKET 10.1-15-1 14-5
GASKET 10.1-15-1 33-6-6
GASKET 10.2-16-0.5 23-57
GASKET 6.2-11-1 10-15
GASKET 6.2-11-1 33-3-10
GASKET 8.1-15-1 1-32
GASKET 8.1-15-1 14-6
GASKET 8.1-15-1 33-6-5
GEAR CASE ASSY 14-1-2
GEAR CASE ASSY 16-1
GEAR CASE ASSY 33-9-4
GREASE FITTING 18-18
GRIP 22-6
GROMMET 13-26
GROMMET 13-28
GROMMET 23-17
GROMMET 23-18
GROMMET 23-20-1
GROMMET 23-26
GROMMET 17-3 23-60
GROMMET 25-5 33-7-2
GROUND CABLE L=170 10-16
GROUND CABLE L=270 10-30
GROUND L=110 18-50
GROUND L=130 18-48
GROUND L=210 18-47
GUIDE PLATE 8-17
GUIDE PLATE COVER 8-18
GUIDE PLATE GASKET 14-27
GUIDE PLATE GASKET 16-25
GUIDE PLATE GASKET 33-4-7
GUIDE PLATE GASKET 33-5-6
GUIDE PLATE GASKET 33-6-8
<H>
HANGER 1-23
HOLDER 8-8
HOOK LEVER 23-6
HOOK LEVER BUSHING 23-9
HOSE 1-42
HOSE 1-43
HOSE 1-44
HOSE 1-45
HOSE 1-46
HOSE 3-6
HOSE 3-7
HOSE 4-40
HOSE 5-11
HOSE 5-12
HOSE 23-28
HOSE 25-6
HOSE 25-7
<I>
IGNITION COIL ASSY W/LABEL 10-2
IGNITION COIL W/CAP 10-9
INTAKE MANIFOLD ASSY 3-1-3
INTAKE MANIFOLD GASKET 3-2
INTAKE MANIFOLD GASKET 33-3-11
INTAKE SILENCER 4-47-2
INTAKE SILENCER COVER 4-3
INTAKE SILENCER LOCK PLATE 4-49
<J>
JOINT ASSY (INLET) 25-2
JOINT ASSY (OUTLET) 25-3
JOINT HOSE 16-44
<K>
KEY 8-14
KEY 14-17
KEY 16-15
KEY 33-4-3
<L>
LABYRINTH PACKING 2-13
LEAD WIRE BAND 100 10-17
LINK 19-21
LOCK PLATE 18-44
LOWER FLOAT CHAMBER 4-35
LOWER UNIT ASSY (L) 33-1-4
LOWER UNIT ASSY (L) 33-1-7
LOWER UNIT ASSY (LL) 33-1-8
LOWER UNIT ASSY (S) 33-1-6
LOWER UNIT ASSY (UL) 33-1-3
LOWER UNIT GASKET SET 33-6-1
<M>
MAIN BEARING 2-19
MAIN BEARING 6305 2-11
MAIN BEARING 6305R 2-10
MAIN JET (#138) 4-7-3
MAIN NOZZLE 4-21
MAIN SWITCH ASSY. 33-7-21
METER BULB 12V-1.8W 29-2
METER DAMPER 29-3
MOUNT 8.5-14-2.5 10-25
MOUNT 8.5-14-2.5 23-1
MOUNT BRACKET 18-30
MOUNT HOLDING PLATE (LOWER) 18-37
MOUNT HOLDING PLATE (UPPER) 18-45
<N>
NEEDLE ROLLER SET 2-36
NEEDLE ROLLER SET 33-10-2
NEUTRAL SWITCH 33-7-22
NIPPLE 1-2
NIPPLE 1-5
NIPPLE 23-27
NIPPLE 5.5-5 1-6
NUT 1-55
NUT 4-31
NUT 4-45
NUT 5-7
NUT 6-16
NUT 6-19
NUT 9-18
NUT 13-13-1
NUT 13-13-2
NUT 14-10
NUT 16-8
NUT 18-12
NUT 23-23
NUT 29-5
NUT 10-P1.25 23-56
NUT 10-P1.5 22-25
NUT 18-P1.5 8-15
NYLON NUT 10-P1.25 22-2
NYLON NUT 12-P1.75 18-35
NYLON NUT 4-P0.7 14-48
NYLON NUT 5-P0.8 13-31
NYLON NUT 6-P1.0 24-5
NYLON NUT 7/8-14 18-7
NYLON NUT 8-P1.25 16-6
<O>
OIL FILTER BRACKET 33-7-10
OIL SEAL 16-28-7 1-60
OIL SEAL 16-28-7 33-3-6
OIL SEAL 17-33-6 14-23
OIL SEAL 17-33-6 33-6-9
OIL SEAL 22-36-10 15-16
OIL SEAL 22-36-10 33-6-13
OIL SEAL 22-37-8 16-21
OIL SEAL 25-38-10 17-15
OIL SEAL 25-40-8 1-59
OIL SEAL 25-40-8 33-3-7
OIL SEAL 32-42-6 2-20
O-RING 5-5
O-RING 25-16
O-RING 33-3-13
O-RING 33-3-14
O-RING 1.7-59 1-58
O-RING 1.7-59 33-3-5
O-RING 1.9-6.8 16-36
O-RING 2.4-39.7 2-21
O-RING 2.4-39.7 33-3-16
O-RING 2.4-5.8 14-36
O-RING 2.4-5.8 33-6-11
O-RING 3.1-94.4 10-19
O-RING 3.2-47 14-24
O-RING 3.2-47 16-22
O-RING 3.2-47 33-6-10
O-RING 3.5-21.7 14-37
O-RING 3.5-21.7 33-6-12
O-RING 3.5-25.7 18-27
O-RING 3.5-27.7 16-37
O-RING 3.5-69.4 15-18
O-RING 3.5-69.4 33-6-14
O-RING 3.5-74.6 17-16
OVERHEAT BUZZER 11-25
OVERHEAT SENSOR ASSY 11-21
<P>
PICK-UP ELBOW ASSY (25L) 25-14
PIN 15-9
PIN 17-8
PIPE 7-27
PISTON 2-33-1
PISTON (0.5 O/S) 2-33-2
PISTON PIN 2-34
PISTON PIN CLIP 2-35
PISTON REPAIR KIT 2-32-1
PISTON REPAIR KIT (0.5 O/S) 2-32-2
PISTON RING 2-26-1
PISTON RING 2-27-1

PISTON RING (0.5 O/S) 2-26-2
PISTON RING (0.5 O/S) 2-27-2
PISTON RING SET 2-24-1
PISTON RING SET (0.5 O/S) 2-24-2
PLUG 1-19
PLUG 4-9
PLUG 14-4
PLUG 33-2-5
PLUG 8-8 14-3
PLUG CAP 10-6
PLUG CAP 10-13
PLUG CAP TERMINAL 10-5
PLUG CAP TERMINAL 10-12
POWER HEAD GASKET SET 33-3-1
PRE-COATED BOLT 6-25 15-2
PRE-COATED BOLT 8-30 17-2
PRE-COATED SCREW 4-27
PRIMER BULB 25-4
PRIMER BULB ASSY 25-1
PROPELLER ASSY (10") 17-20-2
PROPELLER ASSY (11") 15-21-2
PROPELLER ASSY (11") 17-20-3
PROPELLER ASSY (13") 17-20-5
PROPELLER ASSY (14") 15-21-5
PROPELLER ASSY (14") 17-20-6
PROPELLER ASSY (15") 15-21-6
PROPELLER ASSY (15") 17-20-7
PROPELLER ASSY (16.5") 17-20-8
PROPELLER ASSY (17.5") 17-20-9
PROPELLER ASSY (7") 15-21-7
PROPELLER ASSY (9") 15-21-1
PROPELLER ASSY (9") 17-20-1
PROPELLER HARDWARE KIT 15-22
PROPELLER NUT 15-26
PROPELLER SHAFT 15-8
PROPELLER SHAFT 17-7
PROPELLER SHAFT HOUSING 15-14
PROPELLER SHAFT HOUSING 17-13
PROPELLER SHAFT HOUSING ASSY 15-13
PROTECTOR 7-33
PULSAR COIL & PLATE ASSY 8-3
PULSAR HOLDER 8-4
PUMP BODY 4-34
PUMP BODY GASKET 4-33
PUMP CASE (LOWER) 14-21
PUMP CASE (LOWER) 16-19
PUMP CASE (UPPER) 14-18
PUMP CASE GASKET 14-28
PUMP CASE GASKET 16-26
PUMP CASE GASKET 33-4-5
PUMP CASE GASKET 33-5-4
PUMP CASE GASKET 33-6-7
PUMP CASE LINER 14-19
PUMP CASE LINER 16-17
PUMP CASE LINER 33-4-4
PUMP CASE LINER 33-5-3
PUMP CASE SUB-ASSY (UPPER) 16-16
PUMP COVER 4-26
PUMP COVER GASKET 4-28
PUMP DIAPHRAGM 4-32
PUSH ROD 15-19
PUSH ROD 17-17
<Q>
QUICK-CONNECTOR (MALE) 25-15
<R>
RATCHET 7-4
RECOIL STARTER ASSY 7-1
RECOIL STARTER ASSY 7-2
RECTIFIER COMPLETE 33-7-16
RECTIFIER KIT 32-1
REED VALVE ASSY 3-9-2
REEL ASSY 7-3
RETURN SPRING 7-7
REVERSE LOCK (L) 19-7
REVERSE LOCK (R) 19-8
REVERSE LOCK ARM 19-9
REVERSE LOCK LEVER GRIP 19-23
REVERSE LOCK ROD 19-12
REVERSE LOCK SHAFT 19-10
REVERSE LOCK SPRING (L) 19-15-1
REVERSE LOCK SPRING (S) 19-15-2
RIVET 3-22 18-64
ROD 5-68 4-42
ROD 5-90 6-14
ROD SNAP 3.5-4 6-29
ROD SNAP 3.5-4 6-31
ROD SNAP 3-B 4-48
ROD SNAP 3-B 4-52
ROD SNAP 5-3 6-5
ROD SNAP 5-3 6-20
ROLLER BEARING 202720 17-4
ROLLER BEARING 22-30-30 14-2
ROLLER BEARING 22-30-30 15-15
ROLLER BEARING 25-32-20 2-3
ROLLER BEARING 25-32-20 33-10-6
ROLLER BEARING 25-33-30 16-2
ROLLER BEARING 25-33-30 17-14
ROPE ANCHOR 7-17
ROPE GUIDE 7-18
RUBBER MOUNT (LOWER) 18-29
RUBBER MOUNT (UPPER) 18-40
RUBBER MOUNT 8.5-14-2.5 10-26
<S>
SCREW 3-10
SCREW 4-13
SCREW 4-24
SCREW 4-30
SCREW 7-26
SCREW 8-6
SCREW 8-9
SCREW 8-11
SCREW 8-13
SCREW 10-24
SCREW 13-30
SCREW 14-47
SCREW 16-30
SCREW 22-12
SCREW 22-32
SCREW 32-2
SCREW 33-2-14
SCREW 33-7-17
SEAL 13-29
SEAL RING 13.8-22-3.7 23-8-2
SEPARATE CORD 29-8-1
SEPARATE CORD 29-8-2
SETTING PIECE 19-6
SETTING PLATE 19-3
SETTING RING 8-19
SHIFT ARM 23-41
SHIFT LEVER 23-40
SHIFT LEVER STOPPER 23-46
SHIFT LEVER STOPPER 23-47
SHIFT ROD 23-61
SHIFT ROD JOINT 14-38
SHIFT ROD JOINT 16-38
SHIFT ROD LEVER 23-44-1
SHIFT ROD LEVER 23-44-2
SHIM 32.9-26-0.5 14-22
SHIM 36.9-30-0.5 16-20
SHIM 36-44-0.1 15-7-3
SHIM 36-44-0.15 15-7-2
SHIM 36-44-0.3 15-7-1
SHIM 41-51.5-0.1 14-11-1
SHIM 41-51.5-0.15 14-11-2
SHIM 41-51.5-0.3 14-11-3
SHIM 41-51.5-0.5 14-11-4
SHIM 44-50.5-0.1 16-9-1
SHIM 44-50.5-0.15 16-9-2
SHIM 44-50.5-0.3 16-9-3
SHOULDER BOLT 18-66
SHOULDER BOLT 6-8 19-16
SLIDING PLATE 7-11
SLIDING PLATE 7-12
SLOW JET (#80) 4-8-2
SMALL END BEARING WASHER 33-10-4
SMALL END BEARING WASHER 17.6-22.4-4.45 2-18
SNAP 15-12
SNAP 17-12
SNAP RETAINER d=8 23-45-1
SPACER 22-9
SPACER 25.2-34-1.6 2-16
SPACER 6.2-9-15.7 10-27
SPACER 6.2-9-15.7 23-2
SPARK PLUG (B8HS10) 1-51-1
SPARK PLUG DECAL (B8HS10) 23-73-1
SPLIT PIN 7-23
SPLIT PIN 2-12 19-13
SPLIT PIN 3-25 15-27
SPRING 4-15
SPRING 6-7
SPRING 15-11
SPRING 17-11
SPRING 19-22
SPRING 22-17
SPRING PIN 3.5-10 16-34
SPRING PIN 3.5-14 16-33
SPRING PIN 3-10 22-10
SPRING PIN 3-12 14-34
SPRING PIN 3-12 14-39
SPRING PIN 3-12 23-62
SPRING PIN 3-12 33-9-8
SPRING PIN 3-12 33-9-12
SPRING PIN 3-8 2-14
SPRING RETAINER 15-10
SPRING RETAINER 17-10
SPRING WASHER 4-38
SPRING WASHER 6-11
SPRING WASHER 8-21
SPRING WASHER 11-24
SPRING WASHER 18-59
SPRING WASHER 23-14
SPRING WASHER 29-6
STARTER CABLE L=160 33-7-12
STARTER HANDLE 7-16
STARTER LOCK 7-19
STARTER LOCK ARM 6-32
STARTER LOCK CAM 7-20
STARTER LOCK SPRING 7-21
STARTER LOCK WIRE 7-24
STARTER MOTOR ASSY 33-7-3
STARTER MOTOR BAND 33-7-6
STARTER PULLEY 7-35
STARTER ROLLER 7-28
STARTER ROPE φ6-2250 7-15
STARTER SEAL 7-32
STARTER SOLENOID 33-7-8
STARTER SPRING 7-5
STEERING BRACKET 22-1
STEERING SHAFT ASSY 18-23
STOP SCREW 4-14
STOP SWITCH ASSY 23-38
STOP SWITCH LANYARD ASSY 23-39
STOPPER 11-22
STOPPER 13-8
STOPPER 14-40
STOPPER 15-24
STOPPER 17-19
STOPPER 19-24
STOPPER 33-9-10
STUD 13-12-1
STUD 13-12-2
STUD 16-5
STUD 22-34
STUD 10-50 P1.25 18-39
SUB-WATER INLET STRAINER 14-30
SUB-WATER INLET STRAINER 16-29
SWIVEL BRACKET 18-17
SWIVEL BRACKET SHAFT ASSY 18-6
SYMBOL DECAL 24-22
<T>
TACHOMETER ASSY 29-1
TACHOMETER LEAD WIRE L=6000 29-7
TAPERED ROLLER BEARING 32007 15-1
TAPERED ROLLER BEARING 32007JR 17-1
TAPPING SCREW 5-30 4-4
TERMINAL CAP 33-7-15
THERMOSTAT 1-15-1
THERMOSTAT 1-15-2
THERMOSTAT CAP 1-16-2
THERMOSTAT CAP 1-16-4
THERMOSTAT CAP GASKET 1-17
THERMOSTAT CAP GASKET 33-3-4
THROTTLE CAM 6-6-2
THROTTLE DECAL 22-19
THROTTLE LIMITER ARM 6-24
THROTTLE LIMITER ROD 3.5-56 6-28
THROTTLE LIMITER ROD 3.5-56 6-30
THROTTLE ROD 5-105 6-17
THROTTLE SHAFT 22-7

THROTTLE SHAFT DAMPER..... 22-8
THROTTLE SHAFT SUPPORT..... 22-13
THROTTLE WIRE..... 22-26
THROTTLE WIRE BRACKET..... 22-28
THRUST HOLDER..... 15-23
THRUST HOLDER..... 17-18
THRUST PLATE..... 2-22
THRUST PLATE (LOWER) 26.5-46-1..... 18-26
THRUST PLATE (UPPER) 27-50-1..... 18-25
THRUST ROD..... 18-15
THRUST ROD SPRING..... 18-16
TILLER HANDLE..... 22-5
TILLER HANDLE ASSY..... 22-4
TILLER HANDLE HOLDER ASSY..... 22-33
TILT HANDLE..... 24-25
TILT STOPPER ASSY..... 19-1
TILT STOPPER LEVER..... 19-14
TOOL KIT..... 28-12
TOP COWL SEAL..... 24-7
TOP COWL SUB-ASSY..... 24-24
TRIM TAB..... 14-7
TRIM TAB..... 16-3
TRIM TAB GASKET..... 16-4
<W>
WASHER..... 1-8
WASHER..... 1-25
WASHER..... 1-30
WASHER..... 4-39
WASHER..... 5-8
WASHER..... 6-26
WASHER..... 6-34
WASHER..... 7-10
WASHER..... 7-22
WASHER..... 7-30
WASHER..... 7-37
WASHER..... 7-39
WASHER..... 9-17
WASHER..... 13-3
WASHER..... 13-14-1
WASHER..... 13-14-2
WASHER..... 15-3
WASHER..... 16-28
WASHER..... 16-40
WASHER..... 16-42
WASHER..... 18-13
WASHER..... 18-19
WASHER..... 18-36
WASHER..... 19-18
WASHER..... 22-3
WASHER..... 22-24
WASHER..... 22-30
WASHER..... 23-49
WASHER 10-29-3..... 18-43
WASHER 12.5-24-1..... 33-7-23
WASHER 13-34-3..... 18-33
WASHER 14-22-1..... 23-7
WASHER 17-32-3..... 15-25
WASHER 19-34-3..... 8-16
WASHER 22.1-28-3..... 15-6
WASHER 30-45-1..... 22-21
WASHER 6.5-21-1..... 6-3
WASHER 6.5-21-1..... 10-29
WASHER 6.5-21-1..... 23-59
WASHER 6-16-1.5..... 6-10
WASHER 6-16-1.5..... 19-17
WASHER 6-16-1.5..... 22-31
WASHER 6-16-1.5..... 23-13
WASHER 6-16-1.5..... 24-6
WASHER 8.5-18-1.6..... 19-20
WASHER 8.5-19.5-3.2..... 1-22
WASHER t=2.5..... 17-6-3
WASHER t=2.75..... 17-6-2
WASHER t=3.0..... 17-6-1
WATER PIPE (L)..... 14-43-2
WATER PIPE (LL)..... 14-43-4
WATER PIPE (S)..... 14-43-1
WATER PIPE (UL)..... 14-43-3
WATER PIPE (UL)..... 33-9-13
WATER PIPE AUXILIARY MOUNT..... 13-4
WATER PIPE AUXILIARY MOUNT..... 13-6
WATER PIPE AUXILIARY MOUNT..... 33-9-5
WATER PIPE SEAL (LOWER)..... 14-20
WATER PIPE SEAL (LOWER)..... 16-18
WATER PIPE SEAL (UPPER)..... 14-44
WATER PUMP GUIDE PLATE..... 14-26
WATER PUMP GUIDE PLATE..... 16-24
WATER PUMP GUIDE PLATE..... 33-4-6
WATER PUMP GUIDE PLATE..... 33-5-5
WATER PUMP IMPELLER..... 14-16
WATER PUMP IMPELLER..... 16-14
WATER PUMP IMPELLER..... 33-4-2
WATER PUMP IMPELLER..... 33-5-2
WATER PUMP KIT (CHROME PLATED)..... 33-5-1
WATER PUMP REPAIR KIT..... 33-4-1
WATER STRAINER SET..... 14-46
WATER STRAINER SET..... 16-46
WAVE WASHER 30-45-1.2..... 22-22
WAVE WASHER d=12..... 23-43
WAVE WASHER d=14..... 23-10

INDEX (Parts Number)

151-33159-0 10-15
151-33159-0 33-3-10
309-06972-0 1-52
309-06972-0 3-5
309-06972-0 23-24-3
309-06972-0 33-7-24
332-60005-2 14-3
332-60006-0 1-32
332-60006-0 14-6
332-60006-0 33-6-5
332-62101-1 18-65
332-65022-0 14-17
332-65022-0 33-4-3
332-66021-0 14-36
332-66021-0 33-6-11
332-70201-0 25-11
332-70261-0 23-56
332Q62102-1. 18-63
334-00122-0 1-59
334-00122-0 33-3-7
334-00131-0 8-14
334-60223-0 15-16
334-60223-0 33-6-13
334-65012-0 14-25
334-65012-0 16-23
336-70112-0 23-57
336-76091-0 10-17
338-02215-0 3-8
338-02215-0 4-41
338-02215-0 5-13
338-60218-2 1-33
338-67147-0 23-8-2
344-67177-1 18-18
345-00043-0 2-3
345-00043-0 33-10-6
345-00045-0 2-4
345-00045-0 33-10-5
345-00117-0 1-4
345-01111-0 1-3
345-01111-0 1-20
345-01111-0 13-19
345-06915-0 23-21
345-60103-0 15-18
345-60103-0 33-6-14
345-60211-0 14-2
345-60211-0 15-15
345-60215-0 15-1
345-62122-2 18-16
345-62417-0 18-24
345-62441-0 18-20
345-63048-0 22-8
345-64011-0 17-4
345-64032-0 15-6
345-64081-0 14-11-1
345-64082-0 14-11-2
345-64083-0 14-11-3
345-64084-0 14-11-4
345-64124-0 15-25
345-65015-0 14-24
345-65015-0 16-22
345-65015-0 33-6-10
345-65205-0 14-45
345-65205-0 16-45
345-65206-0 14-44
345-66021-0 16-36
345-66226-0 23-60
345-76092-0 23-18
346-00011-0 2-27-1
346-00014-0 2-27-2
346-00115-0 2-22
346-00116-0 2-16
346-01216-0 1-58
346-01216-0 33-3-5
346-05228-1 6-13
346-05228-1 8-20
346-61111-1 13-12-1
346-62124-1 18-7
346-62127-0 18-10
346-62421-1 18-21
346-62424-1 18-26
346-62437-0 19-2
346-62438-0 19-6
346-62439-1 19-3
346-64221-0 17-11
346-65204-0 13-4
346-65204-0 13-6
346-65204-0 33-9-5
346-66037-0 13-7
346-66037-0 33-9-9
346-66333-0 19-23
346-66334-0 19-24
346-67113-0 10-25
346-67113-0 23-1
346-67114-1 10-27
346-67114-1 23-2
346-67115-0 6-3
346-67115-0 10-29
346-67115-0 23-59
346-67196-1 4-48
346-67196-1 4-52
346-76040-0 33-7-8
348-00061-1 2-9
348-00061-1 33-10-7
348-63717-1 4-42
348-64232-0 15-24
348B64108-1 15-21-7
349-62126-0 18-8
350-04005-0 4-32
350-04014-0 4-29
350-63046-0 22-11
350-67101-0 23-42
353-00132-0 8-15
353-00133-0 8-16
353-01030-0 1-15-2
353-01032-0 1-17
353-01032-0 33-3-4
353-06821-0 23-39
353-06972-0 33-7-25
353-60103-0 17-16
353-60111-0 17-15
353-60211-0 16-2
353-60211-0 17-14
353-61307-1 18-41
353-61334-0 18-33
353-61335-0 18-43
353-64027-0 16-8
353-64032-0 17-6-1
353-64034-0 17-6-2
353-64035-0 17-6-3
353-64036-0 15-7-1
353-64037-0 15-7-2
353-64038-0 15-7-3
353-64081-0 16-9-1
353-64082-0 16-9-2
353-64083-0 16-9-3
353-64121-0 15-26
353-64218-1 17-8
353-64219-2 17-12
353-64223-1 17-17
353-64231-0 17-18
353-64233-0 17-19
353-64327-0 16-12
353-66024-0 11-22
353-66024-0 13-8
353-66024-0 14-40
353-66024-0 33-9-10
353-76020-3 33-7-21
353-76062-1 33-7-19
353-76079-0 6-27
353-76079-0 6-35
353B64101-0 17-20-1
353B64102-0 17-20-2
353B64103-0 17-20-3
353B64105-0 17-20-5
353B64106-0 17-20-6
353B64107-0 17-20-7
353B64108-0 17-20-8
353B64109-0 17-20-9
353J01031-0 1-16-4
360-72025-0 23-73-1
361-72539-0 29-7
361-72542-0 29-8-1
361-72543-0 29-8-2
369-67105-0 23-9
369-70098-2 1-50
369-72019-1 22-19
369-84398-0 7-34
393-01131-0 1-6
393-01137-0 1-2
393-01137-0 1-5
398-62396-1 18-48
398-63012-0 22-6
398-63053-0 22-9
3A0-62423-2 18-25
3A3-62396-1 18-50
3A3-64211-0 17-7
3A3-64222-0 17-10
3A3-64328-0 16-13
3A3-76145-0 33-7-15
3A3Q60101-0. 17-13
3AA-83719-0 19-20
3AC-62191-0 18-6
3AD-02230-0 5-3
3AD-02234-0 5-6
3AD-02235-0 5-5
3AD-02237-0 5-4
3AL-05212-0 19-19
3AL-05254-0 19-16
3B2-63108-0 22-21
3B2-63109-0 22-22
3B2-67187-0 23-26
3B2-70260-1 23-55
3B7-01046-0 1-19
3B7-02235-0 33-3-13
3B7-02236-0 33-3-14
3B7-05229-0 4-43
3B7-05243-0 4-44
3B7-05243-0 6-15
3B7-05243-0 6-18
3B7-06131-0 8-4
3B7-06132-0 8-10
3B7-06133-0 8-12
3B7-06135-0 8-8
3B7-06920-0 10-26
3B7-60001-5 16-41
3B7-60007-0 28-29
3B7-60015-1 14-4
3B7-60016-1 14-5
3B7-60016-1 33-6-6
3B7-60103-0 10-19
3B7-60205-0 16-46
3B7-60217-1 16-3
3B7-60218-1 18-4
3B7-60219-0 16-4
3B7-63731-0 33-7-23
3B7-65014-0 16-18
3B7-65016-0 16-16
3B7-65018-0 16-26
3B7-65021-2 16-14
3B7-65022-1 16-15
3B7-65029-0 16-25
3B7-65238-0 16-17
3B7-66023-0 16-37
3B7-66031-1 16-35
3B7-70200-4 25-1
3B7-70280-1 25-8
3B7-72530-2 29-1
3B7-72656-0 29-3
3B7-72659-0 29-2
3B7-72661-0 29-4
3B7-76065-5 33-7-16
3B7-76093-0 33-7-2
3B7-76120-2 33-7-13
3B7J01031-0 1-16-2
3C7-60108-2 17-2
3C7-60218-2 18-57
3C7-61338-0 18-34
3C7-70050-1 25-13
3C7-70113-0 25-17
3C7-70155-0 25-14
3C7-70177-1 25-12
3C7-70199-0 25-16
3C7-70211-1 25-4
3C7-70217-0 25-5
3C7-70220-1 25-2
3C7-70224-1 25-3
3C7-72180-3 24-18
3C7-72182-2 8-24
3C7-76142-1 10-16
3C8-00031-1 2-5
3C8-00032-0 2-6
3C8-00033-0 2-7
3C8-00034-0 2-8
3C8-00051-2 2-13
3C8-00108-0 2-21
3C8-00108-0 33-3-16
3C8-00113-0 2-19
3C8-00114-0 2-10
3C8-00121-0 2-20
3C8-01005-5 1-11
3C8-01005-5 33-3-2
3C8-01012-0 1-21
3C8-01015-0 1-22
3C8-01024-1 1-13
3C8-01024-1 33-3-3
3C8-01113-0 1-14
3C8-01215-0 1-60
3C8-01215-0 33-3-6
3C8-01291-0 1-57
3C8-01303-4 1-56
3C8-01303-4 33-3-15
3C8-01513-1 1-23
3C8-02011-0 33-2-3
3C8-02011-0 33-3-12
3C8-02104-2 3-2
3C8-02104-2 33-3-11
3C8-02302-0 1-27
3C8-02305-2 1-28
3C8-02305-2 33-3-8
3C8-02311-1 13-20
3C8-02312-2 13-22
3C8-02312-2 33-6-3
3C8-02319-0 13-21
3C8-02415-0 4-3
3C8-02417-0 4-49
3C8-02418-0 4-2
3C8-02420-0 4-1
3C8-03120-0 4-17
3C8-03121-0 4-18
3C8-03121-0 33-2-10
3C8-03123-0 4-35
3C8-03125-0 4-12
3C8-03125-0 33-2-9
3C8-03126-0 4-11
3C8-03126-0 33-2-8
3C8-03157-0 4-15
3C8-03169-0 4-9
3C8-03169-0 33-2-5
3C8-03179-1 4-14
3C8-03181-0 4-22
3C8-03181-0 33-2-12
3C8-03182-0 4-23
3C8-03182-0 33-2-13
3C8-03193-0 4-20
3C8-03193-0 33-2-11
3C8-04002-0 4-34
3C8-04004-0 4-26
3C8-04018-0 4-28
3C8-04028-0 4-33
3C8-05003-0 7-4
3C8-05004-0 7-5
3C8-05006-0 7-8
3C8-05007-0 7-6
3C8-05012-0 7-7
3C8-05013-0 7-15
3C8-05014-1 7-18

3C8-05019-0 7-16
3C8-05023-0 7-11
3C8-05029-0 7-12
3C8-05030-0 7-28
3C8-05031-0 7-29
3C8-05032-0 7-30
3C8-05033-0 7-31
3C8-05090-2 7-2
3C8-05106-0 7-3
3C8-05107-0 7-9
3C8-05108-0 7-10
3C8-05138-0 7-14
3C8-05211-0 6-32
3C8-05213-0 6-24
3C8-05216-0 7-21
3C8-05217-0 7-24
3C8-05221-0 6-28
3C8-05221-0 6-30
3C8-05223-0 6-29
3C8-05223-0 6-31
3C8-05237-0 7-22
3C8-05238-0 7-27
3C8-05252-0 7-19
3C8-05253-0 7-20
3C8-05257-0 7-25
3C8-05901-1 7-35
3C8-06049-3 10-2
3C8-06050-2 10-9
3C8-06101-1 8-1
3C8-06103-3 8-2
3C8-06105-0 9-15
3C8-06120-1 8-5
3C8-06123-1 8-7
3C8-06130-2 8-3
3C8-06133-0 7-33
3C8-06160-1 10-18
3C8-06820-0 23-38
3C8-06902-0 10-22
3C8-09081-1 1-35
3C8-09082-2 1-36
3C8-09082-2 33-3-9
3C8-60108-1 15-2
3C8-60204-0 14-30
3C8-60205-1 14-46
3C8-60213-0 14-14
3C8-60217-1 14-7
3C8-60223-0 14-23
3C8-60223-0 33-6-9
3C8-61012-2 13-15
3C8-61012-2 33-6-2
3C8-61180-0 13-23
3C8-61181-2 13-25
3C8-61181-2 33-6-4
3C8-61182-0 13-26
3C8-61184-0 13-24
3C8-61212-0 13-28
3C8-61213-0 13-29
3C8-61302-1 18-29
3C8-61321-1 18-32
3C8-61336-0 18-31
3C8-61341-0 18-45
3C8-62097-0 18-39
3C8-62098-0 22-2
3C8-62104-2 18-64
3C8-62107-0 18-66
3C8-62117-1 18-11
3C8-62120-1 18-14
3C8-62121-1 18-15
3C8-62132-0 18-9
3C8-62396-1 18-47
3C8-62421-1 19-5
3C8-63041-1 22-7
3C8-63063-0 22-13
3C8-63101-0 22-20
3C8-63102-1 22-23
3C8-63508-1 22-28
3C8-63600-1 22-26
3C8-63607-0 22-27
3C8-63621-0 23-20-1
3C8-63711-1 6-1
3C8-63722-0 8-17
3C8-63723-0 8-19
3C8-63725-0 8-18
3C8-63732-0 6-4
3C8-63733-0 6-5
3C8-63733-0 6-20
3C8-64010-1 15-4
3C8-64020-2 14-9
3C8-64027-0 14-10
3C8-64030-0 15-5
3C8-64084-0 14-22
3C8-64211-0 15-8
3C8-64215-2 . . . . . .15-9a
3C8-64217-0 15-9
3C8-64219-1 15-12
3C8-64221-0 15-11
3C8-64222-0 15-10
3C8-64223-1 15-19
3C8-64231-0 15-23
3C8-64301-0 14-13-1
3C8-64302-0 14-13-2
3C8-64303-0 14-13-3
3C8-64303-0 33-9-6
3C8-64304-0 14-13-4
3C8-64327-0 14-15
3C8-65014-0 14-20
3C8-65017-1 14-21
3C8-65021-2 14-16
3C8-65021-2 33-4-2
3C8-65021-2 33-5-2
3C8-65025-0 14-26
3C8-65025-0 33-4-6
3C8-65029-2 14-27
3C8-65029-2 33-4-7
3C8-65029-2 33-5-6
3C8-65029-2 33-6-8
3C8-65100-0 14-43-1
3C8-65110-0 14-43-2
3C8-65120-0 14-43-3
3C8-65120-0 33-9-13
3C8-65130-0 14-43-4
3C8-65239-1 33-5-5
3C8-66011-0 14-32
3C8-66012-0 14-33-1
3C8-66013-0 14-33-2
3C8-66014-0 14-33-3
3C8-66014-0 33-9-7
3C8-66015-0 14-33-4
3C8-66031-1 14-35
3C8-66032-0 14-37
3C8-66032-0 33-6-12
3C8-66112-0 23-46
3C8-66116-0 23-47
3C8-66122-1 23-41
3C8-66211-0 23-61
3C8-66225-0 23-44-1
3C8-66241-0 14-38
3C8-66308-0 6-10
3C8-66308-0 22-31
3C8-66308-0 23-13
3C8-66308-0 24-6
3C8-66313-4 19-9
3C8-66318-1 19-21
3C8-66319-1 19-10
3C8-66321-0 19-12
3C8-66331-2 19-15-2
3C8-66332-2 19-15-1
3C8-66336-0 19-22
3C8-66351-2 19-8
3C8-66352-2 19-7
3C8-67116-0 13-17
3C8-67142-1 23-11
3C8-67146-0 23-7
3C8-67151-1 23-3
3C8-67156-0 23-4
3C8-67162-1 23-17
3C8-67191-1 4-46
3C8-67192-0 4-51
3C8-67501-1 24-7
3C8-67503-0 7-32
3C8-71035-0 33-7-10
3C8-72100-1 28-12
3C8-72181-0 10-7
3C8-76007-0 33-7-5
3C8-76009-0 33-7-6
3C8-76010-1 33-7-3
3C8-76080-1 33-7-22
3C8-76110-0 33-7-18
3C8-76119-0 33-7-20
3C8-76141-1 33-7-12
3C8-76160-3 32-1
3C8-76171-0 11-25
3C8-76172-1 11-21
3C8-76300-2 33-7-1
3C8-87121-C 33-3-1
3C8H67521-1. 24-25
3C8J01021-0 1-12-2
3C8J02301-1 1-26-2
3C8J05101-0 9-19-2
3C8J06901-1 10-20-2
3C8Q01301-0. 13-16
3C8Q60090-0. 14-1-2
3C8Q60090-0. 33-9-4
3C8Q60100-0. 15-13
3C8Q60101-0. 15-14
3C8Q61110-0. 13-5
3C8Q61110-0. 33-9-2
3C8Q61120-0. 13-11-1
3C8Q61191-3. 13-1-2
3C8Q61192-3. 13-1-1
3C8Q61210-1. 13-27
3C8Q61342-0. 18-37
3C8Q61411-3. 18-30
3C8Q62112-1. 18-1
3C8Q62113-1. 18-3
3C8Q62310-3. 18-17
3C8Q62431-0. 19-1
3C8Q63003-1. 22-4
3C8Q63011-2. 22-5
3C8Q67141-0. 23-6
3C8Q76118-0. 23-69
3C8Q87314-1. 33-9-1
3E0-70270-0 25-15
3E3-02011-0 4-36
3E3-02011-0 33-2-4
3E3-02411-0 4-47-2
3E3-03141-0 4-21
3E3-03147-0 4-10-1
3E3-61301-2 18-40
3E3-61333-0 18-42
3E3-61335-0 18-44
3E3-62106-0 18-62
3E3-62436-1 19-14
3E3-63709-1 6-17
3E3-63712-0 6-8
3E3-63718-1 6-6-2
3E3-63721-0 6-12
3E3-63727-0 6-7
3E3-64333-0 4-27
3E3-66110-0 23-40
3E3J01100-0 1-1-3
3E3J02020-0 3-1-3
3E3Q62001-0. 22-1
3E3Q62010-0. 18-23
3E3Q62105-0. 18-60
3E3Q62108-0. 18-61
3E5-63715-1 6-14
3E5Q63028-1. 22-33
3F3-02423-0 4-4
3F3-60204-0 16-29
3F3-60215-0 17-1
3F3-60223-0 16-21
3F3-64010-3 17-3
3F3-64020-0 16-7
3F3-64030-0 17-5
3F3-64084-0 16-20
3F3-64215-0 17-9
3F3-65017-1 16-19
3F3-65239-2 16-24
3G2-03156-0 4-16
3GF-70250-0 25-10
3GF-70281-0 25-9
3H8-62415-0 18-27
3J2-00114-0. 2-11
3LC-00001-0 2-33-1
3LC-00004-0 2-33-2
3LC-00011-0 2-26-1
3LC-00014-0 2-26-2
3LC-00021-0 2-34
3LC-00024-0 2-35
3LC-00030-0 2-1-2
3LC-00039-0 33-10-1
3LC-00041-0 2-2-2
3LC-00041-0 33-10-3
3LC-00046-0 2-18
3LC-00046-0 33-10-4
3LC-00090-0 2-36
3LC-00090-0 33-10-2
3LC-01160-0 1-47
3LC-03200-1 4-5-3
3LC-03207-1 4-6-3
3LC-03210-1 4-25-3
3LC-04438-0 4-7-3
3LC-67534-0 24-22
3LC-87122-0 33-2-2
3LC-87123-1 2-24-1
3LC-87124-1 2-24-2
3LC-87130-0 2-32-1
3LC-87131-0 2-32-2
3LC-87801-0 24-21
3LCH67640-0. 24-24
3LCJ01091-0 1-10-2
3LCJ87090-3 33-8-2
3LD-03147-0 33-2-7
3M2-03152-0 4-8-2
3M2-06921-0 10-6
3M2-06921-0 10-13
3M2-06926-0 10-5
3M2-06926-0 10-12
3MC-05090-0 7-1
3MC-87801-0 24-20
3MCJ87090-3. 33-8-3
3MCQ87301-0 33-1-6
3MCQ87302-0 33-1-7
3MCQ87303-0 33-1-8
3N4-76142-1 10-30
3R0-66308-0 19-17
3R3-05131-0 7-17
3S7-01030-0 1-15-1
3S7-60213-0 16-11
3S7-60251-0 16-44
3S7-60252-0 16-43
3S7-64302-0 16-10
3S7-66011-0 16-31
3S7-66013-0 16-32
3S7-66225-0 23-44-2
3S7-66241-0 16-38
3S7Q60090-1. 16-1
3S7Q61110-0. 13-11-2
3S7Q87302-7. 33-1-4
3T1-01138-0 23-27
3T1-60001-1 16-39
3T5-01133-0 1-48
3T5-02100-1 3-9-2
3T5-65011-0 14-19
3T5-65011-0 33-4-4
3T5-65016-0 14-18
3T5-65018-2 14-28
3T5-65018-2 33-4-5
3T5-65018-2 33-5-4
3T5-65018-2 33-6-7
3T5-84398-0 10-4
3T5-84398-0 10-11
3T5-87321-2 33-6-1
3T5-87322-3 33-4-1
3T5-87326-0 15-22
3T5B64518-0 15-21-1
3T5B64523-0 15-21-2
3T5B64529-0 15-21-5
3T5B64532-0 15-21-6
3T5Q87304-3. 33-1-3
3V1-63035-1 22-15
3V1-63036-0 22-17
3V1-63077-0 22-16
3Z5-65231-1 33-5-1
3Z5-65238-1 33-5-3
910103-0610 1-53
910103-0610 23-25-2
910103-0612 10-31
910103-0612 23-12
910103-0614 22-29
910103-0620 11-23

910103-0625 3-4
910103-0625 6-25
910103-0625 6-33
910103-0630 1-54
910103-0630 18-58
910103-0635 6-2
910103-0640 6-9
910103-5610 5-2-2
910103-5612 23-22
910103-5616 14-31
910103-5620 1-34
910103-5620 1-61
910103-5620 10-14
910103-5620 14-8
910103-5625 3-3
910103-5625 13-18
910103-5625 23-70
910103-5635 18-5
910103-6612 13-9
910103-6612 14-41
910103-6612 33-9-11
910103-6614 33-7-11
910103-6616 1-37
910103-6616 33-7-9
910103-6630 10-28
910103-6820 33-7-7
910103-6825 9-16-1
910103-6825 9-22
910103-6825 33-7-4
910121-6616 8-22
9101E3-0612 18-2
9101E3-0625 22-18
9101E3-0630 23-58
9101E3-0830 18-22
9101E3-5612 18-49
9101E3-5612 18-51
9101E3-5612 22-14
9101E3-5620 18-38
9101E3-5625 1-18
9101E3-5820 19-4
9101E3-5835 13-10
9101E3-5835 14-42
9101E3-5835 18-46
9101E3-5835 33-9-3
9101E3-5855 14-29
9101E3-5855 33-4-8
9101F4-0610 23-48
9101F4-0625 7-36
9101F4-0818 7-38
9101F4-0835 1-24
910306-0405 4-19
910403-0612 33-7-26
910403-5612 33-7-14
9106E3-0808 1-31
915303-0825 16-5
9153E3-0825 13-12-2
9153E3-1022 22-34
916103-0685 4-37
916124-0845 1-7
9161E3-0880 16-27
9161F4-0880 13-2
9161F9-0630 1-29
921503-0438 14-47
921503-0608 16-30
921503-0610 22-32
921503-5514 10-24
921503-6510 8-13
921503-7625 32-2
921503-7625 33-7-17
921521-0406 8-9
921521-6406 8-11
921521-6516 3-10
921521-6630 8-6
9215E3-5540 13-30
921703-0305 4-30
921722-0410 4-13
921803-0525 22-12
922432-0510 7-26
922503-6410 4-24
922503-6410 33-2-14
930103-0500 4-45
930103-0500 6-16
930103-0500 6-19
930103-0500 29-5
930103-0600 1-55
930103-0600 23-23
930103-0800 5-7
930103-0800 9-18
930103-0800 13-13-1
930103-0800 13-13-2
930103-0800 18-12
930103-1000 22-25
930203-0300 4-31
930403-0400 14-48
930403-0500 13-31
930403-0600 24-5
930403-0800 16-6
930403-1200 18-35
940103-0600 4-39
940103-0600 6-26
940103-0600 6-34
940103-0600 7-37
940103-0600 18-19
940103-0600 22-30
940103-0600 23-49
940103-0800 5-8
940103-0800 7-39
940103-0800 9-17
940103-0800 16-28
940103-0800 19-18
940121-0800 1-8
940121-0800 1-25
9401E3-0600 1-30
9401E3-0600 15-3
9401E3-0800 13-3
9401E3-0800 13-14-1
9401E3-0800 18-13
9401E3-1000 22-24
9402E3-0800 13-14-2
9402E3-0800 16-40
9402E3-1000 16-42
9402E3-1000 22-3
9402E3-1200 18-36
941303-0500 29-6
941303-0600 4-38
941303-0600 6-11
941303-0600 8-21
941303-0600 11-24
941303-0600 18-59
941303-0600 23-14
941403-1200 23-43
941403-1400 23-10
945103-2500 18-28
945107-2500 2-12
945127-2800 7-13
945303-0600 19-11
951403-0310 22-10
951403-0312 14-39
951403-0312 23-62
951403-0312 33-9-12
951403-3510 16-34
951403-3514 16-33
951407-0308 2-14
951407-0312 14-34
951407-0312 33-9-8
951503-0212 19-13
951503-0325 15-27
951503-1520 7-23
951703-0800 23-45-1
9601-0-6007 15-17
965002-0803 15-20
9701-1-1009 1-51-1
98AB-50-065 3-6
98AB-50-080 4-40
98AB-50-155 3-7
98AB-50-260 23-28
98AB-50-350 5-11
98AB-50-530 5-12
98AB-701600. 25-7
98AB-70-700 25-6
98AL-40-030 1-42
98AL-40-040 1-45
98AL-40-120 1-43
98AL-40-180 1-44
98AL-40-270 1-46

Copyright © 2013 Tohatsu Corporation. All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means without the express written permission of Tohatsu Corporation.

TOHATSU

TOHATSU CORPORATION
Address : 5-4,3-chome,Azusawa,Itabashi-ku,
TOKYO,174-0051 JAPAN
Phone : TOKYO (03)3966-3117
FAX : TOKYO (03)3966-0090
Website : www.tohatsu.co.jp

2013 PARTS CATALOG

MX 50D2
MWX 50D2

Serial Number 000001AC~

002-21038X9
1301